

LAD-500
USB Downloader
(Charger compatible)



1. Specifications and Precautions	1
1) Product Construction	
2) Specification	
3) Cautions	
2. S/W Installation	2~5
1) Connecting with computer	2
2) Installing the USB driver	2
A. Windows 98/ME	3
B. Windows 2000/XP	4
3) Installing the USB downloader program.	5
3. Program overview and usage	6
1) An overview of USB downloader program	6
A. Functions of Icons on toolbar	7
B. Functions of My Computer Window	8
C. Functions of Audio card window	9
D. Status window	10
2) Usage of USB downloader program	11
A. Make the music file list that will be downloaded	11
B. Download the music file into the audio card	12
C. Delete the music file in the audio card	13
D. View the music file list in the audio card	14
E. Format the audio card memory	15
F. Display the equalizer mode setting	16
G. About USB download program	16
4. Error messages and recovery	17
5. Troubleshooting	18
Q. The communication between audio card and USB downloader(LAD-500) is not good	
Q. USB connection status is displayed 'disconnected'	
Q. The audio card status is displayed 'disconnected'	
Q. The audio card memory is '0 (zero)'	
Q. The texts in the audio card's music list are shattered.	

1. Specifications and Precautions

1) Product Construction

- USB downloader (LAD-500 charger included)
- USB cable
- Installation CD
- User's manual

2) Specification

- USB downloader
 - Support the USB protocol ver. 1.1
 - Maximum transfer rate : 0.8 Mbps
Note) this is variable according to the user's system.
 - Maximum SPI controlling signal rate : 5 Kbps
 - Audio card's power supply voltage : DC 5V

- Audio card charger
 - Li-ion/Polymer charger
 - Output voltage : DC 4.2V
 - Charging time : 2 hours, 5.5 hours continuous play.

 
3) Cautions

- Do not separate the USB cable or audio card from the USB downloader when the USB downloader program is in operation.
- Do not turn off the audio card when it is connected to the USB downloader. If so, USB downloader program may malfunction.
- Keep this product free from strong shock or water. Strong shock can cause damage to this product. If the water comes in, clean it with dry cloth and contact your dealer (A/S center).
- Do not use the USB downloader for another purposes except charging/communicating/music downloading.
- If another application programs use the PC's resources a lot, it may cause degradation of music downloading performance.

2. S/W Installation

1) Connecting with computer

To download the music files into the audio card from the PC(B), connect the PC and USB downloader(A) first with the USB cable(C).

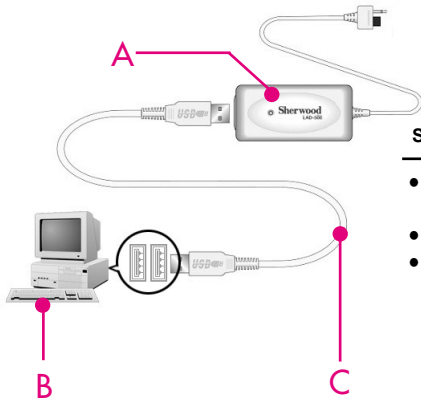

System requirements

- Computer : IBM PC compatible, 586 or more with a CD-ROM drive and USB port (USB 1.1)
- OS : Windows 98/ME/2000/XP
- Memory : 16M or more (over 32M recommended)

2) Installing the USB driver

 
 

After connecting USB downloader(A) and the PC(B) with USB cable(C), the OS requires to install the USB driver. Install the driver as follows.

2. S/W Installation

A. Windows 98/ME

Put the installation CD in the CD-ROM and set the driver's location on CD-ROM.

Note) Installation procedures are variable according to the user's OS.

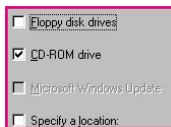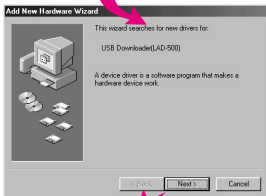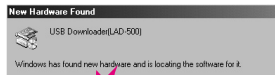


2. S/W Installation

B. Windows 2000/XP

Put the installation CD in the CD-ROM and set the driver's location on CD-ROM.

 (Note) Installation procedures are variable according to the user's OS.



2. S/W Installation

3) Installing the USB downloader program

Insert the installation CD in the CD-ROM.

Setup program is started automatically. If not, run the install.exe in the CD-ROM.

 
If the setup is started, it can be settled as follows.

After finishing the installation, SlimAudio is registered in the Windows start program group.



3. Program overview and usage

1) An overview of USB downloader program

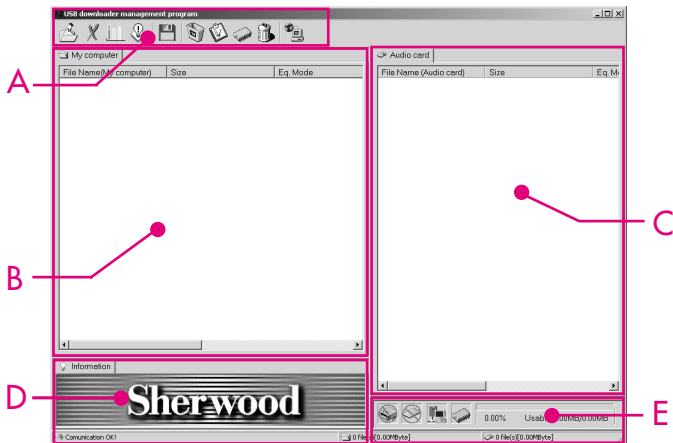

A. Icons on toolbar : for each functions of this program

B. My Computer Window : shows the list of music file that will be downloaded from user's computer to the audio card.





C. Audio Card Window : shows the list of music file that saved from user's computer to audio card.






D. Information Window : shows the information of the selected music.

E. Status Window : displays the audio card status, USB connection status and memory size.

3. Program overview and usage


A. Functions of Icons on toolbar

user's computer menus		Select the music file that will be downloaded into audio card.
		Delete the selected list of music file.
		Displays the presetting equalizer mode.
		Shows the information about this program.

audio card's menus		Download the selected music file.
		Delete the selected music file.
		Renews and displays the contents that saved in the audio card.
		Check the memory capacity of the audio card.
		Format the memory of the audio card.


3. Program overview and usage

 B. Functions of My Computer Window

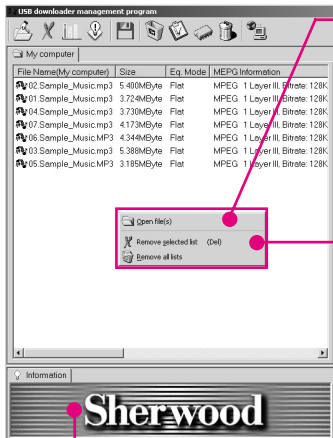


(1) Popup menus when there is(are) no selected file(s).

 - A - selects the music files that will be downloaded.
- B - deletes the selected music files.
- C - deletes the all music files on the download list.



(2) Popup menus when there is(are) selected file(s).

 - A - selects the music files that will be downloaded.
- B - downloads the file list (in A) into the audio card.
- C - deletes the selected music file(s) in the list.
- D - deletes the all listed music files.
- E - set the equalizer mode to the selected music file(s)

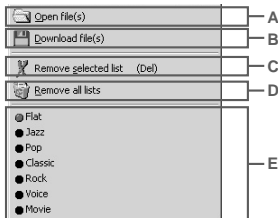


(3) File information window shows details of the selected music file.

Information	
No.	4
File Name (My computer)	07_Sample_Music.mp3
File Size	4173MByte
Equalizer Mode	Flat
MPEG Information	MPEG 1 Layer III, Bitrate: 128kbps, Sampling rate: 44100Hz
Full Path	C:\Documents and Settings\Administrator\My Computer\Sample
Date	2002/1/23(14:40:12)



3. Program overview and usage

 C. Functions of Audio card window

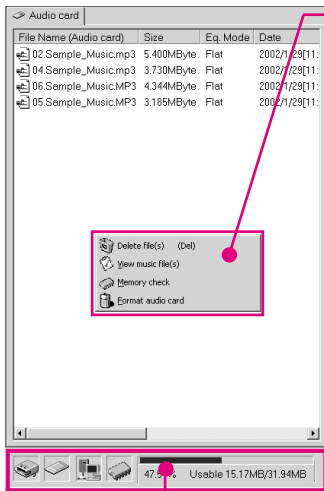

(1) Popup menus when right-clicked

  - A - deletes the selected file(s) in the list.
- B - shows the file list saved in the audio card memory.
- C - checks the memory capacity of audio card.
- D - formats the audio card memory.

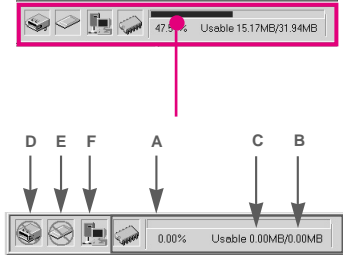


(2) Status window

- A - displays the relative things of audio card memory.
- B - displays the maximum memory capacity of the audio card.
Note) If the maximum memory size is displayed 0(zero), check the connection between downloader and audio card.
- C - displays the usable memory size of the audio card.
- D - displays the connection status between USB downloader and PC.
- E - displays the connection status between USB downloader and audio card.
- F - displays the communication status between USB downloader and audio card.



3. Program overview and usage

D. Status window


 
- (1) The status is displayed disconnection when USB downloader and audio card are not connected to PC.



  - (2) When connecting the USB downloader to PC, the connection message window is opened and the USB goes into connection status.



 
- (3) When connecting the audio card to USB downloader (connected to PC), the connection message window is opened and the audio card goes into connection status.

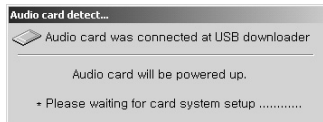


3. Program overview and usage

2) Usage of USB downloader program

 
A. Make the music file list that will be downloaded

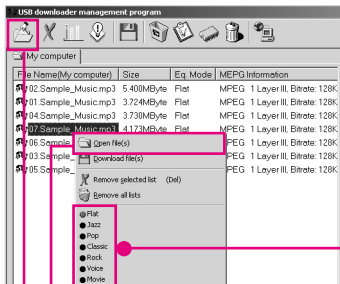

(1) Click the Open File(s) button  on the toolbar or right-click the mouse and choose the “Open file(s)” menu.

(2) After selecting in the A window(multiple selection available), click the Open button, or after making the list in B window by drag-and-drop then click the Open button.

 Note) Select the user's favorite equalizer mode before downloading the music file(s). Flat is the default mode that does not set the equalizer.

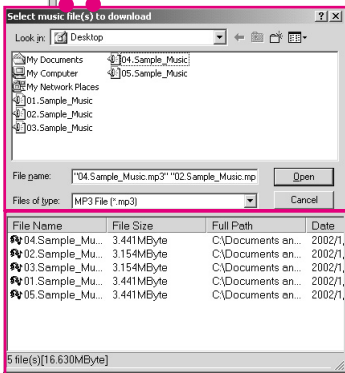


A

B

3. Program overview and usage


B. Download the music file into the audio card

 - (1) Click the Download button  on the toolbar or right-click the mouse and select the “Download file(s)” menu.

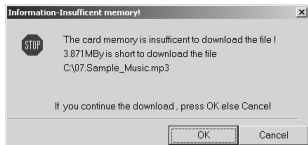

Note) When downloading the file whose size is bigger than the remained memory, caution message is opened that notices insufficient memory space. If you click the Continue button, Download is stopped when there is no more space in the audio card.

 - (2) Now downloading the files.

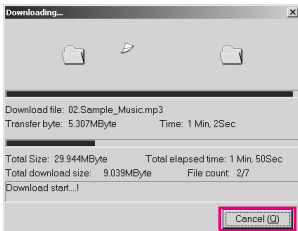

Note) It is possible that cancel the download in the course of sending procedure. But, the canceled file is cut one, so it is recommended that remove the canceled file from the audio card.

 
- (3) After finishing download, the downloaded file(s) are renewed.




3. Program overview and usage

C. Delete the music file in the audio card

- (1) Select the music file(s) in the audio card that will be deleted. (3) Now removing the selected file.

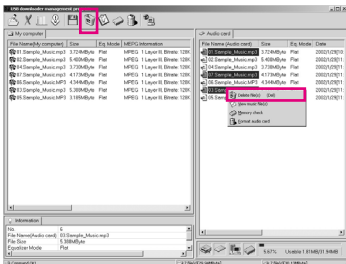


- (2) Click the Delete button  on the toolbar or right-click the mouse and select **"Delete file(s)"** menu.


- (4) After finishing deletion, the selected file(s) is(are) disappeared.



3. Program overview and usage

 D. View the music file list in the audio card

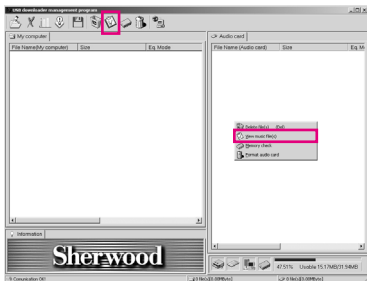

(1) Click the View Music List button  on the toolbar or right-click the mouse and select “View music file(s)” menu.

 
(2) Now bringing the music list in the audio card.




3. Program overview and usage

E. Format the audio card memory

- (1) Click the Format button  on the toolbar or right-click the mouse and select "Format audio card" menu.

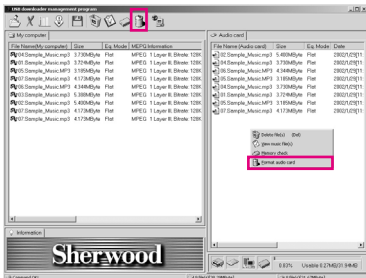

 
- (2) Now formatting the audio card memory.

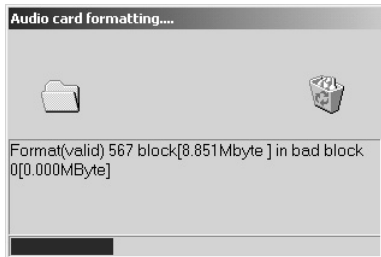

Note) If the audio card memory is formatted, all the data are removed, data formats are initialized and the write protection is marked if there is(are) unusable block(s), so that prevent music data from the write errors.

3. Program overview and usage

F. Display the equalizer mode setting

Click the Equalizer Setting button  on toolbar

 
- you can see the preset levels of equalizer mode.




G. About USB download program

Click the About USB downloader  on toolbar

- you can see the information about USB downloader program.

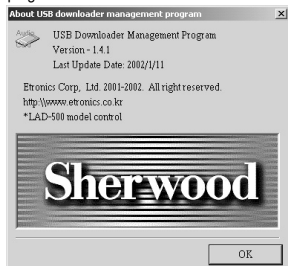

 4. Error messages and recovery

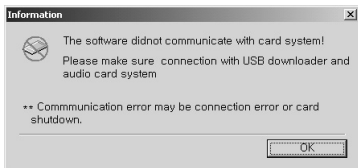

Err. When the audio card is not connected

Recvr. This is the error message that take place when doing the functions relative to audio card, while the card is not connected. In this case, check the connection.



Err. When user disconnects the USB cable from the USB downloader while program is going.

Recvr. This is the error message that take place while the download program is going. In this case, disconnect the PC, USB downloader and the audio card each other and connect them again.

5. Troubleshooting

Q. The communication between audio card and USB downloader(LAD-500) is not good.

A. Disconnect the USB downloader from the USB port of PC, then connect them again.

Q. USB connection status is displayed 'disconnected'

A. There is some trouble on the USB system of the PC. Reboot the PC please.

Still the USB is not perceived, check the USB installation of the PC. If there is no trouble, the USB downloader can have some troubles on it. In this case, contact your dealer(A/S center).

Q. The audio card status is displayed 'disconnected'

A. Check the connection between USB downloader and audio card.

Q. The audio card memory is '0(zero)'

A. Check the connection between USB downloader and audio card.

Q. The texts in the audio card's music list are shattered.

A. Use it after formatting the audio card.

FCC Certification

FCC ID: P87-ETR0002

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interferences, and (2) this device must accept any interference received.

Including interference that may cause undesired operation.