 


FORMAT:148X210MM  
 EXPLODED:592X420MM  
 ROW/COLUMN:2X4  
 PAPER:80GSM,WOODFREE,WHITE  
 PRINTING:DOUBLE-SIDE PRINTED  
 PRINTING COLOUR:BLACK

格式: 148x210mm  
 展开: 592x420mm  
 行列: 2x4  
 纸张: 胶版80克, 白色  
 印刷: 双面印刷  
 印刷颜色: 黑色

# VICTROLA

## CD MICRO SYSTEM VS-120



Instruction Manual  
 PLEASE READ THIS MANUAL CAREFULLY BEFORE USING  
 AND KEEP IT FOR FUTURE REFERENCE.

### IMPORTANT SAFETY INSTRUCTIONS

#### Safety precautions

The information you need to prevent danger to the user and other people as well as property damage is described below. "Descriptive" signs show different levels of danger or damage that may occur due to wrong handling.

#### Important notes

This book is only a guide for user's operation, not a criterion for configuration. Only use attachments/accessories specified by the manufacturer.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product enclosure, and touching the internal components may result in a risk of electric shock to persons.



The exclamation mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.



This mark indicates this unit belongs to class I laser product. The laser beam may produce radiation harm to the directly touching human body.

#### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require safety connection to electrical earth.
16. No naked flame sources, such as lighted candles, should be placed on the apparatus.
17. Attention should be drawn to environmental aspects of battery disposal.
18. The product is designed to use in moderate climates.



### IMPORTANT SAFETY INSTRUCTIONS

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20CM between the radiator & your body.

#### FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### IC warning

- English:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) L'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### FEATURES

Thanks for your purchase of our product. Please read through this manual before making connections and operating this product. Retain this manual for future reference.

● Compatible with CD, MP3, CD-R, CD-RW, etc.

● With USB Slot.

● Full function remote control.

● FM tuner.

● Line input.

Note: The player is not compatible with all discs;

Some of the disc could not read, caused by the disc is dirty, disc of poor quality, etc.

 
#### Package Contents:

User manual Remote control FM antenna




### PANEL

#### FRONT PANEL:

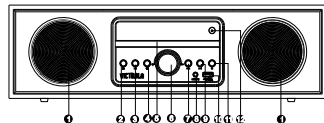

- |                   |               |
|-------------------|---------------|
| 1 SPEAKER OUTPUT  | 7 PREVIOUS    |
| 2 STANDBY         | 8 LINE IN     |
| 3 PLAY/PAUSE      | 9 NEXT        |
| 4 SOURCE SELECT   | 10 USB        |
| 5 DISC TRAY       | 11 STOP       |
| 6 VOLUME ADJUSTER | 12 OPEN/CLOSE |

#### REAR PANEL:

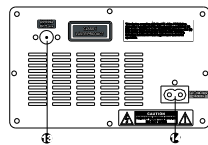 

- |               |                   |
|---------------|-------------------|
| 13 FM ANTENNA | 14 AC POWER INPUT |
|---------------|-------------------|

### CONNECTIONS

#### BLUETOOTH CONNECTION

The model of the player is VS-120, press [SOURCE] button to switch to the corresponding signal source, "BT" on the display screen flashing status is in searching Bluetooth signal status, use your smart phone to search the bluetooth signal of the player, then input the password 0000 if necessary, at this time, "BT" will keep steady status displays on the display screen and the player will synchronize to play songs on your smart phone while they connected successfully.

Bluetooth



Disconnect the bluetooth on the smart phone to switch off the bluetooth connect, the bluetooth is connected to your smart phone successfully for the first time, disconnect the bluetooth on your smart phone then reconnect it, the player will memories your smart phone and repaired automatically, Press [PLAY/PAUSE] to resume the playback.

NOTE: In bluetooth mode, [PLAY/PAUSE], [MUTE], [NEXT] and [PREVIOUS] buttons are also active.

#### LINE IN

This unit has an extra group of audio input terminal. You can input the analogue stereo audio signals from extra devices such as VCD, CD, VCR, MP3 player, etc.

Use the audio cable to connect the stereo audio output terminals of a VCD, CD, VCR player to the input terminal [LINE IN] of this unit. Its corresponding signal source is LINE IN which can be available by pressing [SOURCE] on the remote control.

### REMOTE CONTROL

#### REMOTE CONTROL OPERATION

Insert the batteries into the remote control. Point the remote control at the remote sensor on the front panel. The remote control works within a distance of about 8 metres from the sensor and within an angle of about 30 degrees from the left and right side.

#### Battery Installation



- 1 Remove the battery compartment cover on the back of the remote control.



- 2 Load one AAA/1.5V battery into the battery compartment making sure that the batteries have been inserted with the correct polarities matching the symbols +, - as indicated inside the battery compartment.

 


- 3 Replace the cover.

#### Note:

- Remove the batteries when you do not intend to use the remote control for a long time.
- Do not mix new and used batteries, or different types of batteries.
- Weak batteries can leak and severely damage the remote control.
- The batteries must not be exposed to excessive heat source, such as sunshine, fire or any other things like that.
- Be environmentally friendly and dispose of batteries according to your government regulations.

### REMOTE CONTROL

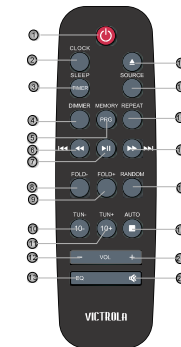

- |                         |
|-------------------------|
| 1 STANDBY               |
| 2 CLOCK                 |
| 3 SLEEP/TIMER           |
| 4 DIMMER                |
| 5 MEMORY/PROG           |
| 6 FAST REWIND/ PREVIOUS |
| 7 PLAY/PAUSE            |
| 8 FOLD-                 |
| 9 FOLD+                 |
| 10 TUNE-/10-            |
| 11 TUNE+/10+            |
| 12 VOLUME-              |
| 13 EQ                   |
| 14 OPEN/CLOSE           |
| 15 SOURCE               |
| 16 REPEAT               |
| 17 FAST FORWARD/NEXT    |
| 18 RANDOM               |
| 19 AUTO                 |
| 20 VOLUME+              |
| 21 MUTE                 |

## BASIC PLAYBACK

### CD Operation

- STANDBY** Press to switch on the unit. Press it again to put the unit in standby mode.
- OPEN/CLOSE** Press to open or close the disc tray.
- SLEEP** Press repeatedly to select a sleep time and choose option **S-00** to disable the sleep function, after which the unit will go into standby mode automatically. Then press [STANDBY] to wake it up.  
In standby mode, press and hold to enter into alarm timer setting mode, then make sure that you have set the clock correctly by pressing [▲] [▼] keys, press it again to confirm and set the volume value by the same method.
- DIMMER** Press repeatedly to adjust the display brightness of the display screen.
- CLOCK** In standby mode, press this button enter into clock set mode, press [▲] [▼] button to select 12H or 24H clock display, press clock button to confirm, then use [▲] [▼] button to set the clock time, press it again to confirm it.  
Note: it only available in standby mode.
- SOURCE** Press repeatedly to switch among CD, LINE IN, BLUETOOTH, USB and FM mode.
- AUTO** Press to stop a playback.
- PAUSE** Press to temporarily pause a playback. Press it again to resume the playback.  
Hold down this button for 3 seconds to disconnect bluetooth.
- FF** Press to skip to the next track.
- FF** Hold down for fast forward playback.
- REW** Press to return to the previous track.
- REW** Hold down for fast rewind playback.
- VOL+** Press [VOLUME+] to turn up the volume.
- VOL-** Press [VOLUME-] to turn down the volume.
- MEMORY** In stop mode, place a CD and press [PROGRAM] to access to the program mode. Press the arrows [◀] [▶] to select the desired track and press once again [PROGRAM] to confirm your selection. Press [▶] to start program playback.  
Note: Up to 20 tracks can be stored in the playlist
- MUTE** Press to temporarily switch off the sound. Press it again to switch it on.

## BASIC PLAYBACK

- RANDOM** Press to switch the RANDOM play mode.
- REPEAT** Press repeatedly to switch the repeat modes.
- TUNE+** Press this button for each time to increase ten tracks.
- TUNE-** Press this button for each time to decrease ten tracks.
- FOLDER+** Press to skip the next folder.
- FOLDER-** Press to return to the previous folder.
- EQ** Press to switch the equalizer modes: flat, rock, pop, jazz or classic.

### FM tuner Operation

The following buttons are used in tuner mode. Press [SOURCE] to select FM tuner mode.

- TUNE+** TUNE+: press to fine tune (increase) the frequency;  
TUNE-: press to fine tune (decrease) the frequency.  
Hold down [TUNE+/-] to increase/decrease the frequency continuously.
- MEMORY** After tuning in a new frequency, press [MEMORY], then select a preferred station by pressing [◀] or [▶] button, press it again to save it as a preset station.
- AUTO** Hold down to do auto scanning for the broadcasting radio channels, press it again to stop auto scanning.
- PRESET** Press to skip to the next preset station.
- PRESET** Press to skip to the previous preset station.

**NOTE:** In tuner mode, [VOLUME+/-], [MUTE] buttons are also active. For details, please refer to the introduction of the **CD operation** in this chapter.

## TROUBLESHOOTING

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
<b>No Power</b>	<ul style="list-style-type: none"> <li>The AC power cord is not connected to the power supply or is not connected to a power supply securely.</li> </ul>	<ul style="list-style-type: none"> <li>Please check that the AC power cord is connected securely.</li> </ul>
<b>Sound</b> There is no sound or the sound is distorted.	<ul style="list-style-type: none"> <li>The audio cables aren't connected securely.</li> <li>The volume is set to the minimum level.</li> <li>The sound is switched off.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cables securely.</li> <li>Turn up the volume.</li> <li>Press [MUTE] on the remote control to switch on the sound.</li> <li>Press [PLAY/PAUSE].</li> </ul>
<b>Unable to play a disc</b>	<ul style="list-style-type: none"> <li>The disc is placed in the disc tray in a wrong way.</li> <li>The unit isn't compatible with the disc.</li> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Check that the disc is placed in the disc tray with its label side upwards.</li> <li>Clean the disc.</li> </ul>
<b>The player stops when a USB drive is inserted into the player.</b>	<ul style="list-style-type: none"> <li>The connected USB drive is probably not a certified one.</li> </ul>	<ul style="list-style-type: none"> <li>The player cannot play any uncertified USB drives.</li> <li>In case the player breaks down, turn it off, disconnect the power cord from the AC outlet and unplug the USB drive from the player. Then, power on the player again. The player will resume the normal functions.</li> </ul>
<b>The buttons on the unit do not work</b>	<ul style="list-style-type: none"> <li>The unit is being interfered with static electricity etc.</li> </ul>	<ul style="list-style-type: none"> <li>Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.</li> </ul>
<b>The remote control does not function.</b>	<ul style="list-style-type: none"> <li>There is no battery in the remote control.</li> <li>The batteries are out of charge.</li> <li>The remote control isn't pointed to the remote sensor.</li> <li>The remote control is out of its operating area.</li> <li>The unit is shut down.</li> </ul>	<ul style="list-style-type: none"> <li>Install one AAA/1.5V battery in the remote.</li> <li>Replace the batteries with new ones.</li> <li>Make sure that the remote control is pointed to the remote control sensor.</li> <li>Make sure the remote control is within the operating area.</li> <li>Switch off the unit and disconnect it from the AC outlet. Then power on the unit again.</li> </ul>

## SPECIFICATIONS

Power supply		AC ~100-240V,50/60Hz
Power consumption		30W
Working environment	Temperature	-10 ~ +35°C
	Relative humidity	5% ~ 90%
Disc output	S/N(A weight)	>80dB(1kHz)
	Dynamic Range	>70dB(1kHz)
	THD+NOISE	<= -60dB(1kHz)
Tuner	WOW FLUTTER	Below the limit of apparatus measure
	FM band Range	87.5MHz ~ 108MHz
Power output (Max)		15Wx2
Frequency response		±3dB(20Hz ~ 20kHz)

## WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.  
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at [www.thomeproducts.com](http://www.thomeproducts.com) to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:  
 • USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)  
 • USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)  
 • USD \$15.00, for items \$100.00 and up. (Price Paid Per Unit)  
 • Shipping fees are non-refundable.

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website [www.thomeproducts.com/support](http://www.thomeproducts.com/support).

Innovative Technology Electronics LLC,  
1 Channel Drive  
Port Washington, NY 11050  
Toll free: 1-877-483-2497  
Website for support: [www.thomeproducts.com/support](http://www.thomeproducts.com/support)

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.