


Congratulations on your purchase of an Insignia 5-Disc CD player. Your CD player represents the state of the art in CD player design and is designed for reliable and trouble-free performance. See your *User Guide* for more information on your CD player.

Package contents


- 5-Disc CD Player
- Remote control with two AAA batteries
- RCA stereo audio cable (6 ft./1.8 m)
- *User Guide*
- *Quick Setup Guide*

Features

Front view

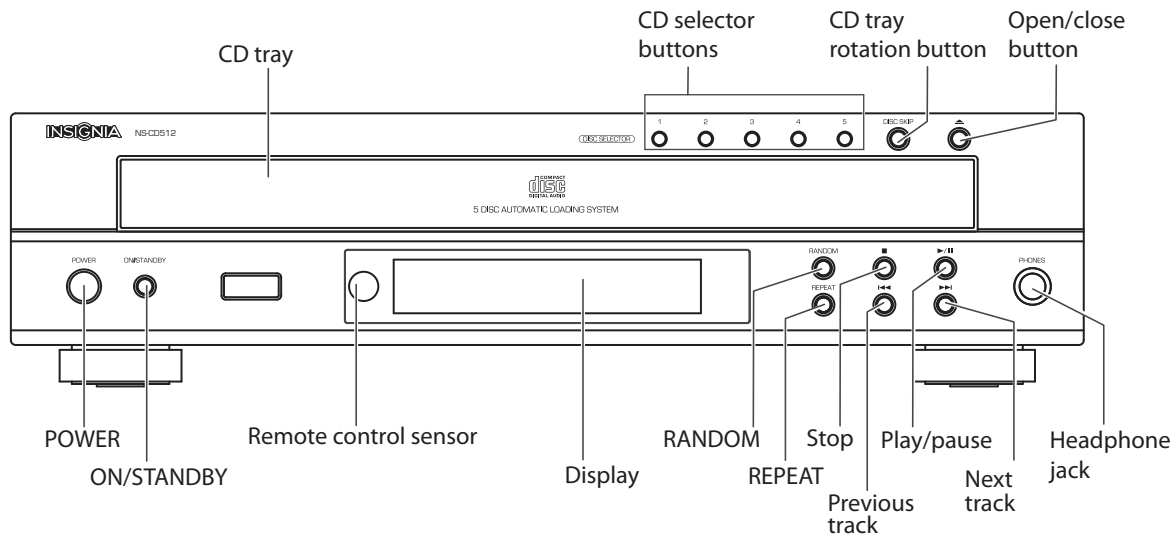


Back view

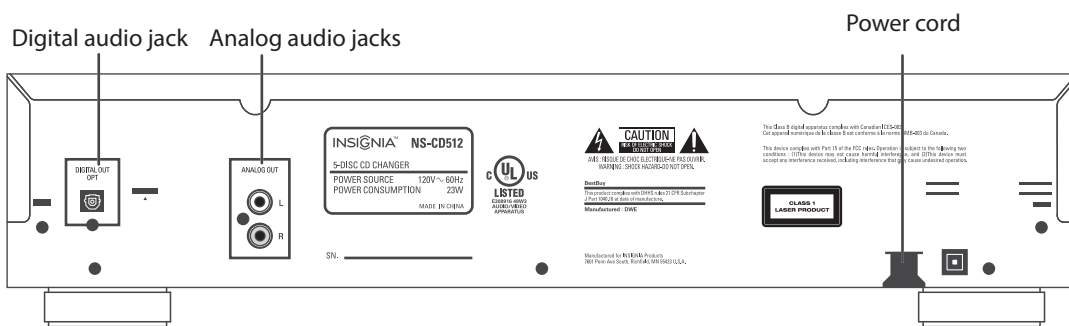


Positioning your CD player

Make sure that your CD player has room for ventilation.

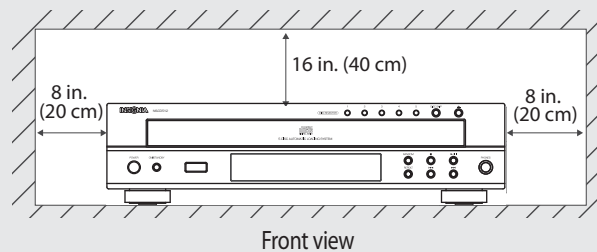


Remote control

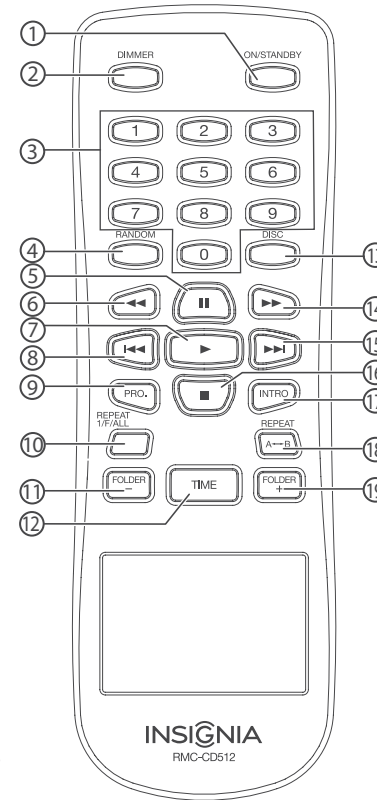

- | | |
|---------------------|--|
| ① ON/STANDBY | Press to turn your CD player on or off (standby mode). |
| ② DIMMER | Press to adjust the brightness of the display. |
| ③ Numbers | Press to select a track for playing or programming. |
| ④ RANDOM | Press to play CDs in random order. |
| ⑤ (pause) | Press to pause playback. When playback is paused, the indicator lights on the LCD. Press ▶ (play) to resume playback. |
| ⑥ ◀◀ (fast reverse) | Press to fast reverse on a CD. |
| ⑦ ▶ (play) | Press to start playing a CD. |
| ⑧ ◀◀ (previous) | Press to go to the beginning of the current track or to go to the previous track. |
| ⑨ PRO. | Press to program a playlist or to view the tracks in a playlist. |
| ⑩ REPEAT 1/F/ALL | Press to repeat the current track or file, all the tracks or files on a CD, or all the loaded CDs. |
| ⑪ FOLDER - | Press to select the previous folder on a CD containing music files. |
| ⑫ TIME | (Audio CD only) Press to display the elapsed track time, remaining track time, or remaining CD time. |
| ⑬ DISC | Press this button, then press a number button to select the CD you want to play. |
| ⑭ ▶▶ (fast forward) | Press to fast forward on a CD. |
| ⑮ ▶▶ (next) | Press to go to the next track. |
| ⑯ ■ (stop) | Press to stop playback. |
| ⑰ INTRO | Press to play the first 10 seconds of each track or file. |
| ⑱ REPEAT A ↔ B | Press to create a playback loop. |
| ⑲ FOLDER + | Press to select the next folder on a CD containing music files. |

Display

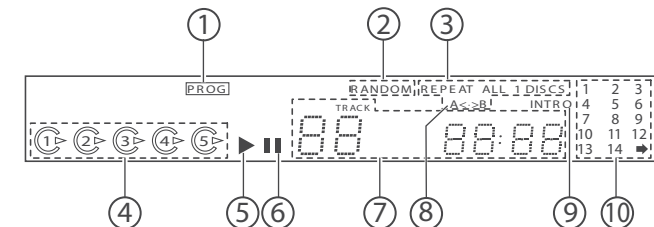

- | | |
|---|--|
| ① Program | Lights when your CD player is in program mode. |
| ② Random play | Lights when your CD player is in random mode. |
| ③ Repeat play | Lights when your CD player is in repeat mode. |
| ④ CD trays | 1-5 are the CD tray numbers.
◉ lights when a CD is in the related CD tray slot.
▷ lights when the CD in the related CD tray slot is playing. |
| ⑤ Play | Lights when your CD player is playing a CD. |
| ⑥ Pause | Lights when CD playback is paused. |
| ⑦ Track or file number, playing time, and operating information | Displays the currently playing track or file number, elapsed playing time, and other operating information. |
| ⑧ A ↔ B | Lights when a playback loop is active. |
| ⑨ Intro play | Lights when your CD player in Intro mode. |
| ⑩ Music calendar | Displays the number of files on the CD. |


Setting up your CD player

1. Installing remote control batteries

- 1 Remove the battery compartment cover.
- 2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
- 3 Replace the cover.


2. Connect cables

Connecting digital audio

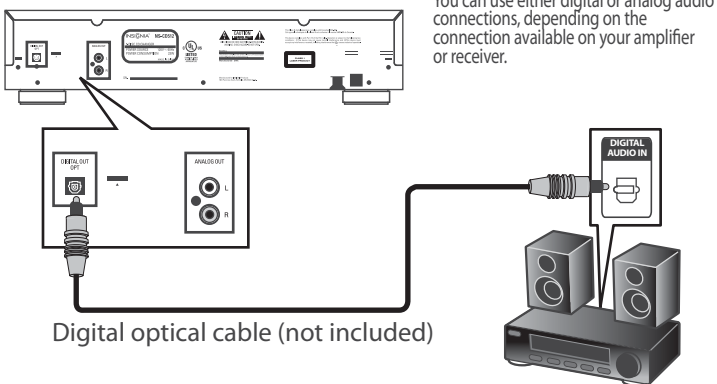


Digital optical cable (not included)

Connecting analog audio

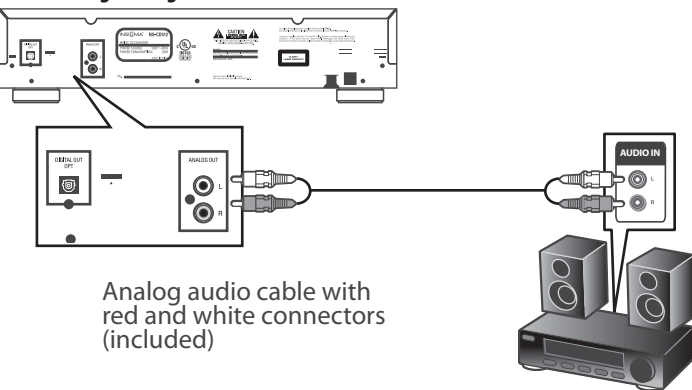


Analog audio cable with red and white connectors (included)

3. Connecting power

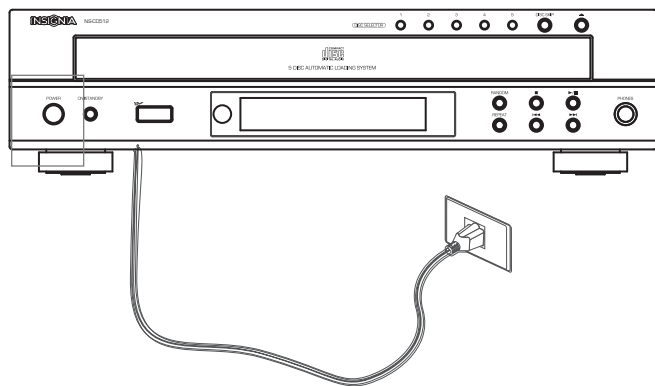

Inserting discs

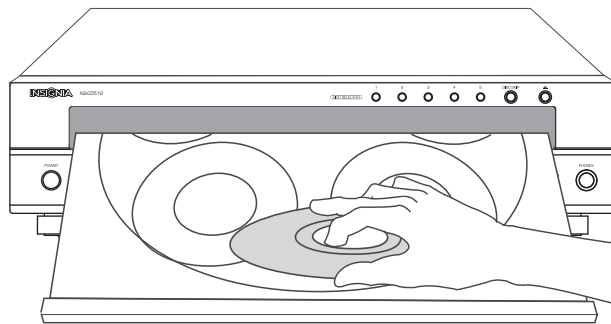

- 1 Press **▲ OPEN/CLOSE** to open the CD tray.
- 2 Place a CD in the tray, label side up.
- 3 Press **DISC SKIP** to rotate the CD tray clockwise one position.
- 4 Place a CD in the next tray. You can place five CDs in the tray.
- 5 Press **▲ OPEN/CLOSE** to close the CD tray.

Playing a CD

- 1 Insert a CD in the CD tray.
- 2 Press **▶ (play)**.
- 3 To control CD playback:
 - Press **⏸ (pause)** to pause playback. Press **▶ (play)** to resume playback.
 - Press **■ (stop)** to stop playback.
 - Press **⏮** to fast reverse.
 - Press **⏭** to fast forward.
 - Press **⏪ (previous)** to go to the beginning of the currently playing track or to the previous track.
 - Press **⏩** to go to the next track.
 - Press **INTRO** on the remote control to play the first 10 seconds of each track.
 - Press **DISC** on the remote control, then press a number (1–5) to select a different disc.
 - Press **A ↔ B** on the remote control to mark the beginning of a playback loop. Press **A ↔ B** again to mark the end of a playback loop. The loop plays. Press **A ↔ B** to resume normal playback.
 - Press **1/F/ALL REPEAT** on the remote control once to play the current track repeatedly. Press again to play the current CD repeatedly. Press a third time to play all the CDs repeatedly. Press a fourth time to cancel repeat mode.

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your **User Guide!** This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2012 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc.
Registered in some countries. All other products and brand names are trademarks of their respective owners.