

Congratulations on your purchase of a high-quality Insignia product. Your 10" Portable DVD Player is designed for reliable and trouble-free performance. Use this guide for initial setup. See your *User Guide* for more information.

Package contents

- 10" DVD player
- Remote control with battery
- AC to DC adapter (for wall outlet)
- Car adapter
- A/V cable
- Quick Setup Guide


Features

Front




1	IR sensor	Receives signals from the remote control. Do not block.
2	POWER indicator	Lights green when your player is turned on. Blinks green when the battery needs charging.

Side

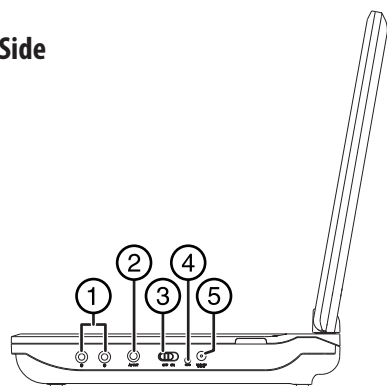

1	Headphone jacks	Plug headphones into either jack. Note: When headphones are plugged in the internal speakers are muted.
2	AV OUT jack	Connect a remote monitor, TV, or amplifier to this jack using the supplied A/V cable and an RCA cable (not supplied).
3	On/Off switch	Slide to turn your DVD player on or off.
4	Charge indicator	Lights red when the battery is charging. Turns off when the battery is charged.
5	DC IN jack	Connect the AC to DC adapter or car adapter to this jack.

Top

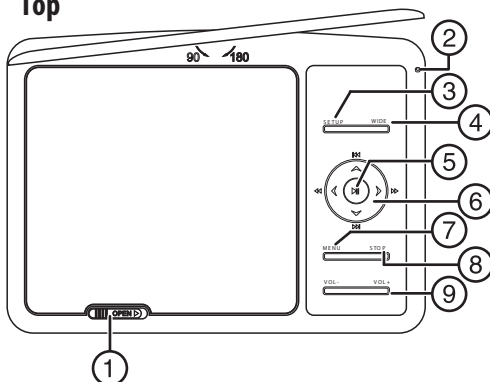


1	OPEN switch	Slide to the right to open the disc tray.
2	LCD screen switch	Press to turn LCD screen off.
3	SETUP button	Press to open or close the Setup menu.
4	WIDE button	Press to switch between a 16:9 and 4:3 picture size (aspect ratio).
5	▶ (play/pause) button	In menu mode, press to confirm a selection. In playback mode, press to play or pause a disc.
6	◀◀ (fast rev)/◀ (left) button	Press to fast reverse or move left on a menu.
	▶▶ (fast fwd)/▶ (right) button	Press to fast forward or move right on a menu.
	◀◀ (prev)/▲ (up) button	Press to go to the previous chapter, track, or scene during playback, or to navigate up on a menu.
	▶▶ (next)/▼ (down) button	Press to go to the next chapter, track, or scene during playback, or to navigate down on a menu.
7	MENU button	Press to open the root or title menu on a disc.
8	STOP button	Press to stop disc playback.
9	VOL- / + button	Press to adjust the volume.

Setting up your player

Connecting to AC power

To connect to AC power:


- Plug one end of the AC to DC power adapter into the **DC IN** jack on the side of your player, and the other end into an AC outlet.

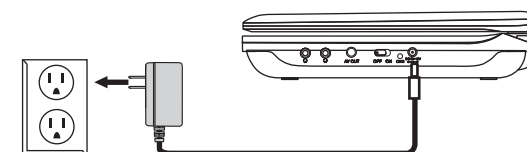

Connecting to a 12V car power outlet

To connect to a 12V car power outlet:

- 1 Plug one end of the car power adapter into the **DC IN** jack on the side of your player.

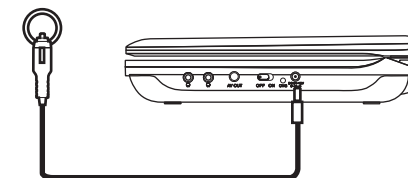


- 2 Plug the other end of the adapter into a 12V car power outlet or car cigarette lighter socket.


Charging and using the built-in battery

To charge and use the built-in battery:

- 1 Connect the supplied AC power adapter or car power adapter to the DC input jack on the player, then plug the adapter into an AC power outlet or car power outlet. When the battery is charging, the charge indicator LED turns red. When the battery is fully charged, the indicator turns off.
- 2 Unplug the power adapter when the battery is fully charged, then you can use your player by using the built-in battery.

Note

During playback, an icon  appears on the screen, and the power indicator LED flashes green, which means the battery has low power and you should recharge the built-in battery now.

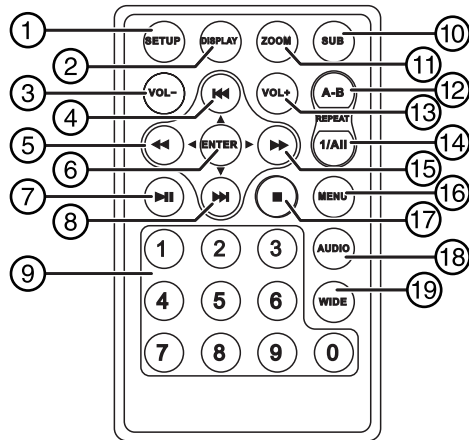

Note:


The first time you use the remote control, you must remove the film between the battery and the compartment cover to activate the remote control.

Connecting a TV or monitor

You can connect your player to a TV or monitor so you can watch DVDs or view photos on the TV or monitor.

To connect a TV or monitor:

- 1 Plug the end of the supplied AV cable that has one black connector into the **AV** jack on your player.

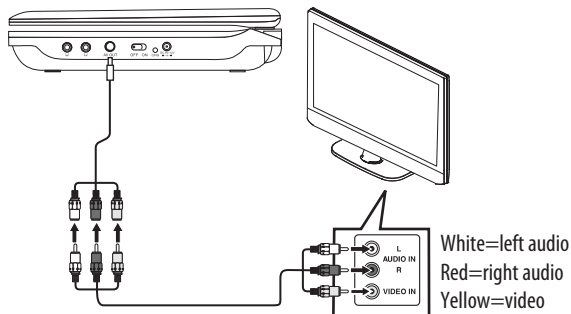

- 2 Plug the connectors on an RCA cable (not included) into the connectors on the other end of the supplied AV cable. Make sure that the colors on the connectors match.
- 3 Plug the other end of the RCA cable into the AV jacks on the TV or monitor. Match the white connector to the left audio jack, the red connector to the right audio jack, and the yellow connector to the video jack.

1	SETUP	Press to open or close the Setup menu.
2	DISPLAY	Press to display information about the disc, such as title, chapter number, track number, and time.
3	VOL-	Press to decrease the volume.
4	⏮ (previous) / ▲ (up)	Press to go to the previous chapter or scene on a DVD, or track on a CD. Press to navigate up in a menu.
5	⏪ (reverse) / ◀ (left)	Press to scan backward on the disc. Each time you press this button, the fast-reverse speed increases from 2, to 4, to 8, to 16, to 32 times the normal speed. In menu mode, press to navigate left on a menu.
6	ENTER	Press to execute or confirm a selection.
7	⏸ (play/pause)	Press to start playback. When a disc is playing, press to pause playback. Press again to resume playback.
8	⏭ (next) / ▼ (down)	Press to skip forward to the next chapter or scene on a DVD, or track on a CD. Press to navigate down in a menu.
9	Numbers	Press to select menu items or to enter the password.
10	SUB (Subtitle)	Press to turn subtitles on and off, or press to select the subtitle language. This option works only if the DVD has subtitles.
11	ZOOM	Press to enlarge the display image. You can enlarge the image 2, 3, or 4 times the normal size.
12	A-B (repeat)	Press to repeat a specific portion (from point A to point B) of a disc.
13	VOL+	Press to increase the volume.
14	1/ALL REPEAT	Press to repeat the current title, chapter, or track.
15	⏭ (fast forward) / ▶ (right)	Press to fast-forward on the disc. Each time you press this button, the fast-forward speed increases from 2, to 4, to 8, to 16, to 32 times the normal speed. In menu mode, press to navigate right on a menu.
16	MENU	Press once to open the main DVD menu. This option works only if the DVD has a main menu. Press twice to open the DVD title menu or hold the button down for three seconds. This option works only if the DVD has a title menu.
17	STOP	Press once to stop playback. Your player remembers where you stopped. If you press (play/pause), your player starts playing at the point where you stopped. Press twice to stop playback. If you press (play/pause), your player starts playing at the beginning of the disc. Note: When playing an audio CD, press STOP once to stop playback and return the player to the beginning of the CD.
18	AUDIO	Press to select the DVD audio language. This option works only if the DVD has multiple audio languages.
19	WIDE	Press to switch between a 16:9 and 4:3 picture size (aspect ratio).

Using your player

Playing a DVD or audio CD

To play a disc:

- 1 Make sure that your player is connected to power.
- 2 Slide the **POWER** switch to the **ON** position.
- 3 Slide the **OPEN** switch to the right. The disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

Controlling DVD or audio CD playback

To control disc playback:

- Press **■ (STOP)** once to stop playback. Your player remembers where you stopped. If you press **⏸**, your player starts playing at the point where you stopped.
- Press **■ (STOP)** twice to stop playback. If you press **⏸**, your player starts playing at the beginning of the disc.
- Press **⏸** to pause playback. Press this button again to resume playback.
- Press **⏭** to fast-forward on the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.
- Press **⏪** to fast-reverse on the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 16 to 32 times the normal speed.

- Press **⏭ (NEXT)** to go to the next title, chapter, or track.
- Press **⏪ (PREV)** to go to the previous title, chapter, or track.

Note

Most DVDs and your player have region codes that help control illegal distribution of DVDs. The region code for your player is 1. You can only play DVDs with a region code of 1 or ALL. The region code for a DVD is printed on the DVD or the DVD packaging.

Note

When playing an audio CD, press **STOP** once to stop playback and return the player to the beginning of the CD.

Adjusting the volume

To adjust the volume:

- Press the **VOL+** or **VOL-** button on the top of your player.

1-year limited warranty. Visit www.insigniaproducts.com for details.

For customer service, call: 877-467-4289 (U.S./Canada markets).

We're here for you at www.insigniaproducts.com

© 2011 BBY Solutions, Inc., Inc. All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.