

# 2.4G X-BOX RF

## WIRELESS CONTROLLER INSTRUCTIONS

### Wireless Controller For Ultimate Gaming!

- ★ Use 4 AAA Batteries (Not included). Battery life lasts up to 100 Hours.
- ★ Operation frequency: 2.44Ghz.
- ★ Controller Features 6 Digital Action Buttons & 2 Trigger Buttons
- ★ Ergonomic joystick & Digital Pad For Superior Control
- ★ Rubberized Grip For Comfortable Handling
- ★ Works With 4 Player Compatible Games

This lazer Wireless controller uses state of the art technology for a better gaming experience. The Dual-mode (Digital & Analog) allows for more controlled gaming action. The lazer Wireless Controller allows you feel the action of the game when played with 'VIBRATION COMPATIBLE' software. you will feel vibration in the controller grips as a result of the specific game actions. This can be turned on & off in the game "options" menu. The Turbo feature allows for auto repeat (auto-fire) functions. The ergonomically designed grips combine functionality as well as comfort.

In most cases the software used for game play will dictate the functions of the controller buttons.

See 'Controller Set up' in the software game menu.

Prior to using the controller, you should move the Analog Sticks in a circular motion.

**START BUTTON:** Use to start and pause game activity

**BACK BUTTON:** Use to go backwards in the menu screens

**DIRECTIONAL PAD:** Use to move objects or game characters in desired direction, up, down, right, and left. Can also be used to simulate Analog Stick action for 8-way directional control.

**ACTION BUTTONS(A, B, X, Y, WHITE & BLACK BUTTONS):** These buttons have specific functions.(as dictated by the software in use)

**LEFT & RIGHT TRIGGER:** Can be used as fire buttons or may have additional functions. (as dictated by the software in use)

**ANALOG STICK:** Use to move objects or game characters in desired direction with more accurate control over your movements.

**CHANNEL SETTING:** Use the channel switches on the back of the receiver to set the desired positions. Set the switches inside the controller battery compartment to match the switch positions on the receiver unit.

**POWER ON/OFF SWITCH:** Power switch must be set to OFF position when controller is not used.

1. Install 4 AAA batteries into the battery compartment at the back of the controller (making sure to match the batteries with the +and - polarity symbols marked in the battery compartment). Then replace cover.
2. Make sure that console is turned off, then insert the RF(Radio Frequency) receiver into the xbox® console controller port.
3. To test the receiver, insert the receiver unit into port 1 or 2 of xbox® console. The LED ON the receiver will illuminate. To function properly , the wireless controller should be within 30 ft.
4. Turn off controller when not in use to save battery power .Set POWER switch to OFF position.

#### **IMPORTANT NOTE:**

When the power switch is turned on ,but the controller is not in use (for approximately 45 seconds) it will go into a 'sleep' mode to save power. To 'wake up' (or activate) the controller

simply press any of the action buttons.

<b>TROUBLESHOOTING</b>	
Not vibrating	Check software for vibration compatibility.
Not working	Make sure Power switch on controller is ON Make sure Receiver is plugged in properly Make sure Batteries are inserted properly Check that Batteries have power Check that Receiver is properly plugged in Check that signal from controller to Receiver is unobstructed
Not performing functions properly	Turn power to console OFF, then remove & re-insert Receiver. Make sure correct play mode is selected, Check for correct setting for both receiver & controller

**WARNING:**

Read ,follow & understand all warnings & advisory notes in this manual ,your video game system instruction manual & video software for safety ,health & other information

Do not submerge in water

Do not disassemble any part of controller & receiver

DO not place heavy objects on top of controller & receiver

Do not allow small children to play with controller & receiver unsupervised

Do not use this controller in any other way than its intended use

Do not unplug controller cable while the console is turned on

Keep away from areas where dirt or liquid can get into controller & receiver

Keep away from extreme temperatures

Store in areas away from dust and humidity

Turn off or discontinue use of Vibration function if you have any hand or wrist ailments or if you have any injury's to which the vibration creates discomfort to you in any way

**FCC INFORMATION**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception, Which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

\_Reorient or relocate the receiving antenna.

\_Increase the separation between the equipment and receiver.

\_Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

\_Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

The antenna(s) used for this transmitter must be installed to provide a separating distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.