

TROUBLESHOOTING	
Not working	Make sure controller plug is properly plugged in
Not performing functions correctly	Turn power off, disconnect & reconnect, check software instructions.

WARNING:

- Discontinue use of this mat if you experience any pain
- Do not use this mat in an area near objects that may hamper your ability to move
- Do not use shoes on this mat
- Do not submerge in water
- Do not touch metal parts of controller plug
- Do not disassemble any part of dance mat controller housing
- Do not place heavy objects on top of dance mat controller housing
- Do not allow small children to play unsupervised
- Do not use this dance mat in any other way than its intended use
- Keep away from areas where dirt or liquid can get into dance mat controller housing or plug
- Keep away from extreme temperatures
- Store in areas away from dust and humidity
- Store in a safe place when not in use so that cord cannot be tripped over
- Do not store dance mat under heavy objects

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.

FCC INFORMATION


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

PlayStation®, PSone® & PlayStation® 2 are registered trademarks of Sony® Computer Entertainment Inc.
 This item is produced by Intec and is not manufactured, sponsored, endorsed or distributed by Sony® Computer Entertainment Inc.



For PlayStation®2
 ITEM NO. G6251

WIRELESS DANCEMAT

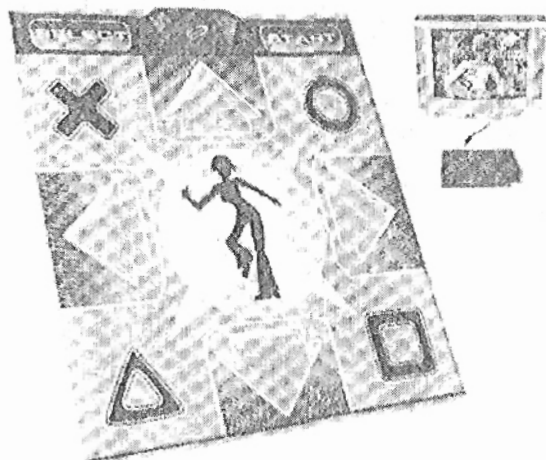

Receiver Included

1. Place Wireless Dance mat, with design side up, on a flat surface in front of the game screen viewing area, and away from obstructions and with plenty of space to move around freely.
2. Insert the receiver into one of the controller ports on the PlayStation® 2.
3. Install four AA size batteries into the Dance Mat and turn the power Switch to its ON position. Connection will establish automatically.
4. LED light on receiver will be blinking before connection is established and stays on once it's established.
5. Turn on the power to the PlayStation® 2.
6. Insert Game Software.
7. Game play should be done in bare feet to avoid slipping.



QUESTIONS OR COMMENTS:
 Visit us at www.inteclink.com
 CUSTOMER SERVICE CONTACT: 1-800-93-INTEC

Start Button: Use to Start Game Play

Select Button: Use to make your selections during game play.

Directional Arrows: Used to Step: Up, Down, Right and Left.

Note: This mat can be used as a simple controller. In most cases the software being used for game play will dictate the functions of the mat directional arrows.

(See controller set up in the software game menu).

Low Battery Warning:

When Battery voltage is lower than 3.7V, LED light on the Dance mat will be blinking.

Dance Mat will enter lower consumption mode (IDLE MODE) under two conditions:

1. When dance mat power switch is ON, but the receiver is not connected to the console within 15 seconds.
2. When the Dance Mat is connected but no buttons are pressed for 3 minutes during this mode LED on the receiver will be blinking.

To Reactivate Dance Mat:

1. Step onto the dance mat Start Button, at this point the LED light on the receiver will be blinking.

Designated Function:

Step on the "SELECT and RIGHT ARROW" on the dance mat, simultaneously while pressing the "FC" button on any receiver you like to connect within 15 seconds or reverse the step to activate this function.

This function is designed to avoid crosstalk if there are two Intec Wireless Dance mats being used at the same time.

Features and Function description:

1. This dance mat is compatible with PlayStation® 2/PS®one/PlayStation® 2.
2. Supports all dance software in the market for PlayStation®/PS® one/PlayStation® 2
3. Can work properly with different consoles made for U.S.A., Japan, and Europe.
4. The RF 2.4G Hz can accommodate up to 20 players at the same time and same place in effective range without interference.
5. Frequency Range 2.4G Hz ~ 2.5G Hz, ISM Frequency 2.4G Hz.
6. Maximum RF transmission range up to 15.24 meters.
7. Normal working voltage 4V~7V (USE FOUR AA SIZE BATTERIES)
8. Has Ten function keys.
9. Low battery warning:
When battery voltage is lower than 3.7V, LED light on dance mat will begin BLINKING.
10. Dance mat will enter low power consumption mode (IDLE MODE) under two conditions:
 - 1) When dance mat power switch is ON, but the receiver is not plugged into the console within 15 seconds.
 - 2) When connected, but no buttons are pressed for 3 minutes. During this move LED on receiver will be blinking.

This device can be expected to comply with Part 15 of the FCC Rules provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation .

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:

Discontinue use of this mat if you experience any pain

Do not use this mat in an area near object that may hamper you ability to move

Do not use shoes on this mat

Do not submerge in weater

Do not touch metal parts of controller plug

Do not disassemble any part of dance mat controller housing

Do not place heavy objects on top of dance mat controller housing

Do not allow small children to play unsupervised

Do not use this dance mat in any other way than its intended use

Keep away from areas where dirt or liquid can get into dance mat controller housing or plug

Keep away from extreme temperatures

Store in areas away from dust and humidity

Store in a safe place when not in use so that cord cannot be tripped over

Do not store dance mat under heavy objects