

# Manual

## Connect the PS2 Wireless guitar

1. Make sure the PS2 system is OFF.
2. Insert the receiver into controller port#1 on the PS2console. Note: Always connect to controller port #1 for single player games.
3. The receiver has green connection indicator and 4 red power indicators located on the top of it. One of the red LED's will illuminate indicating the receiver is plugged into the console successfully. The green LED will illuminate indicating a proper connection has been made. If no connection, the green LED will begin to flash indicating the receiver is searching for the guitar controller.
4. Turn the power ON/OFF switch to the ON position. The LED indicator on the Guitar controller and receiver have successfully synchronized, the LED on the controller will turn OFF and on the receiver will turn solid green.
5. The LED indicator on the Controller will start to flash when the battery level is low. Replace the batteries. Refer to "To Insert the Batteries into the Guitar Controller" for further instructions.

## Connect the PS2 Wireless guitar

1. Make sure the PS3 system is OFF.
2. Insert the receiver cable connector into one of the controller ports on the PS3 console.
3. Turn on the PS3 console, The receiver has a green connection indicator located at the top of it, Another four red port indicators are located beside it ,The green LED will illuminate indicating a proper connection has been made. If no connection, it will begin to flash indicating the receiver is searching for the guitar controller.
4. Turn the power ON/OFF switch to the ON position. The LED indicator on the Guitar controller and receiver have successfully synchronized, the LED on the controller will turn OFF and on the receiver will turn solid green.
5. The LED indicator on the Controller will start to flash when the battery level is low. Replace the batteries. Refer to "To Insert the Batteries into the Guitar Controller" for further instructions.

## Battery safety

Incorrect use of batteries may result in battery leakage, overheating or explosion.

When using batteries, be sure to follow these instructions:

- . Make sure the positive(+) and negative(-) ends of the batteries are inserted in the correct directions.
- . Keep batteries out of reach of children
- . Do not mix old and new or different types of batteries. Use only AA type batteries.
- . remove the batteries when the product will not be used for on extended period of time.
- . If the battery has leaked, be sure to carefully remove all fluid and dry residues with a paper towel before inserting new batteries, Take care to keep all leaked fluid from touching your skin or clothes, If fluid comes into contact with the skin, flush with water immediately.
- . Dispose of batteries in accordance with local and national disposal regulations.

**To insert the Batteries into the Guitar controller:**

1. Remove screw from the locking tab on the battery compartment cover.
2. Remove the battery compartment cover by pressing in the locking tab and lifting the cover up and off the unit.
3. Insert 4\*AA battery cells. Make sure that the batteries are inserted as indicated by the schematic inside the battery compartment to avoid potential damage.
4. Replace the battery compartment cover back into place on the Guitar controller and replace the screw back into the locking tab.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER ' S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation