

THE INSTRUCTION FOR XBOX LIVE+GAMEPAD

I . Feature:

1. High technology of CMOS.
2. Working Voltage: 3.5V-6V(3 AAA or 4 AAA valid battery).
3. Working Current: 100mA(the VOICE is on),70mA(the VOICE is off).
4. Wireless transmit frequency: 2.4G.
5. Wireless transmit agreement: Blue Tooth
6. The valid operation distance: 7M.
7. 12-bit ADC inside.
8. Supporting dual-vibration mode.
9. Have “Turbo” function(can’t adjust the speed).
10. The battery lifetime(1800mAh battery): up to 5 hours during vibration, up to 8 hours during no-vibration.
11. The vibration can be exchanged into three levels.
12. 4 LED display on transmitter: Link,Turbo,Mute. 1 LED display on receiver: Link.

II . Operating instructions:

1. Turn on the TV&XBOX console.
2. Place the XBOX game CD into the XBOX console.
3. Open the battery cover at the back of controller&put 3 AAA batteries into it, insert the headset into the headset jack, turn on the power switch, then CONNECT LED on the controller will flash.
4. Insert the signal cable on the receiver into the relative game port, the CONNECT LED on the receiver will flash.
5. After several minutes, if the CONNECT LED on the transmitter&receiver turn to illuminate, which shows the connection is OK, and you can start to play the game.
6. If the CONNECT LED on the transmitter&receiver still flash after a long time ,which means the connection is lost, pls restart the above process.

III. Function instruction:

(I) LIVE function

1. Effect: if the played game have the LIVE function, also already connected with another console through network, so you can turn on the voice function while you play with your partner.
2. Operation and instruction: press&hold the MUTE key for above 3 minutes, then the voice function is on, so the MUTE LED will turn to green; restart to press and hold the MUTE key, the voice function is off and MUTE LED is off.

(II) MUTE function

1. Effect: when start the VOICE function, if you don’t want your partner to hear your sound, you can turn off the mike through the MUTE function.
2. Operation&instruction: while the VOICE is on, press the MUTE key, then the green MUTE LED turn to red, the mike function is off; press the MUTE key again, The red MUTE LED turn to green, the mike function is on.

(III) HEADSET volume adjust function

You can adjust the HEADSET sound volume by VOLUME button

(IV) VIBRATION function

1. Operation: you can set up the intensity both for vibration and non-vibration through VIB SW, the intensity (from left to right) is: non-vibration----the left&right motor will vibrate by 50%

intension----the left&right motor will vibrate by 100% intension.

(V) TURBO function

Total have A.B.X.Y.BLACK.WHITE.LT.RT 8 keys to be set into TURBO function.

1. Operation&instruction:

- a. Press&hold TURBO key, then press the keys to be set up, so the keys will have TURBO function, TURBO LED will flash, un-press this key, the TURBO LED will illuminate, press again TURBO key, and the TURBO function is deleted.
- b. Can set up several keys into TURBO function at same time.
- c. When the pressed keys have been already set into TURBO function, so the keys will fire ceaselessly, the TURBO LED will flash at the speed of 16HZ.
- d. If any keys are to be set into TURBO function when you have not pressed any keys, so the TURBO LED will illuminate, otherwise it will be off.

2. Adjust the speed.

The fixed speed is 16HZ.

WARNING :

- 1.Do not submerge in water.
- 2.Do not disassociate any part of Gamepad & Host
- 3.Do not place heavy objects on top of Gamepad & Host
- 4.Do not allow small children to play with Gamepad & Host unsupervised.
- 5.Do not use this controller in any other way than its intended use.
- 6.Do not unplug Host while the console is turned on.
- 7.Keep away from areas where dirt or liquid can get into Gamepad & Host
- 8.Keep away from extreme temperatures
- 9.Store in areas away from dust and humidity
- 10.Turn off or discontinue use of Vibration function if you have anyhand or wrist ailments or if you have any injury ' s to which the vibration creates discomfort to you in anyway.

The users manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation