

User Manual

1. Power : Turn I- Drive On/OFF
2. Scan : Tunes in the desired FM Frequency
3. Memory : Set and Stores up to 9 Preset FM Frequencies
4. + or - : *Scan buttons to fine tune the frequency
*Press and hold the + or – scan buttons to increment frequency at a faster frequencies
5. Memory :
 - *Use the + or - Scan Buttons to set a frequency you want to save as a preset
 - *Press and hold the memory button for 3 sec to activate the preset saving mode (flashing M)
 - *To cancel preset saving mode wait 10 seconds for flashing “M” to disappear
 - *Use the + or – Scan Buttons to select a preset number 1 through 9 to be assigned
 - *press the memory button one last time to save the preset

Caution:changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment