

EXHIBIT 7
INSTRUCTION MANUAL

 
Cobra® CP-9105

Cobra®

Cobra Electronics Corporation
6500 West Cortland Street
Chicago IL, 60707

Operating Instructions
for your Cobra CP-9105

900 MHz Cordless Telephone

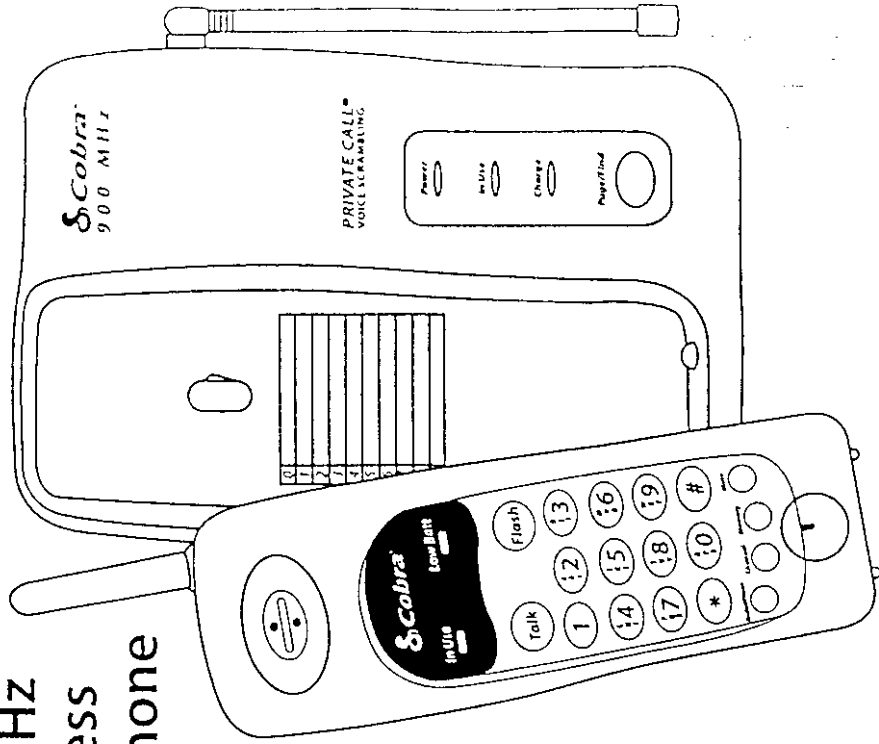


"Ingenious Products for Easier Communication."

Cobra Electronics Corp. © 1998
Printed in China
Part No. 480-242-P-001

FCC Information

 Included Accessories

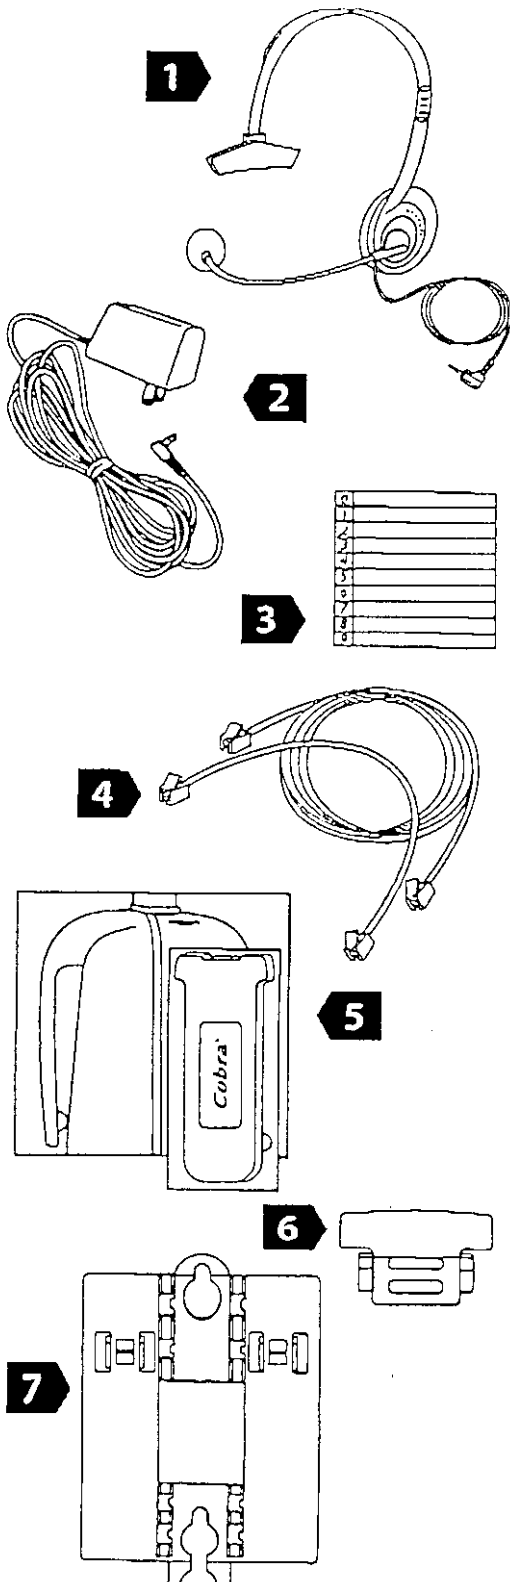

Registered with The FCC

Please note: This cordless phone operates under part 15 and part 68 of FCC rules. Operation is subject to two conditions:

1. It may not interfere with radio communications, and 2. It must accept any interference received, including that which may cause undesirable operation. See the Operational Features section of this manual for ways to reduce interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Your telephone company is required by the Federal Communications Commission to allow you to connect FCC registered telephones to their lines.

The FCC requires you to provide information, if requested by the local telephone company, about the connection of an FCC registered telephone to their lines. They may ask you for the FCC registration number and ringer equivalence number (REN), both of which are on the bottom of the base. They may also ask for the Universal Service Order Code (USOC) number which is RJ-11C. It is illegal to use this phone on a party line or to connect it to a coin-operated telephone.

The REN is used to determine the quantity of devices you may connect to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most areas the sum of RENs should not exceed 5.0. To be sure, contact the local telephone company.

If your equipment causes harm to the telephone network, the telephone company will notify you in advance (if possible) of a temporary discontinuance of service. Also, you will be advised of your right to file a complaint with the FCC.

The telephone company may make changes in its facilities, equipment or procedures that could affect the operation of your equipment. The telephone company will provide advance notice to help you maintain uninterrupted service.

What's Included with Your CP-9105

1. Headset
2. AC/DC Power Adapter
3. Memory Label
4. Line Cords (6" and 6')
5. Belt Clip
6. Belt Clip Slot Cover
7. Wall Mount Bracket

 
 
Controls and Indicators

Base:

1. Power - On/Off
2. In Use Indicator
3. Charge Indicator
4. Page/Find Button
5. Pulse/Tone Switch
6. Ringer - On/Off

Handset:

7. In Use Indicator
8. Low Battery Indicator
9. Volume - High/Low
10. Redial/Pulse
11. Channel Button
12. Memory Store
13. Mute Button

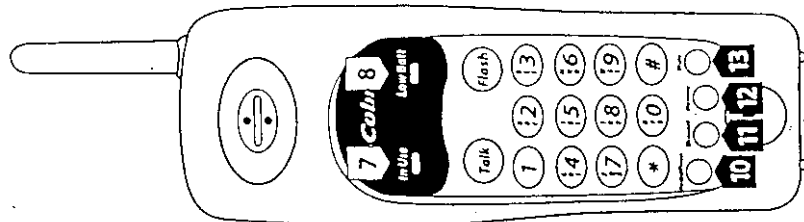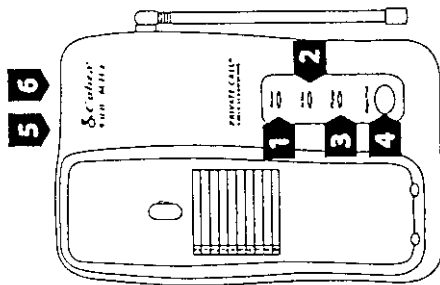

Thank you for purchasing the Cobra CP-9105 cordless phone. Properly used, this Cobra product will give you many years of reliable service.

Customer Support

Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra Customer Service at 773.889.3087.

Cobra Customer Service
Live operators are available
M-F 8:00 am - 8:00 pm CST at:
773.889.3087

Automated Technical Assistance
available 24 hours a day, seven
days a week. Email questions to:
productinfo@cobraelec.com

Cobra on the World Wide Web:
Frequently Asked Questions (FAQ)
can be found on-line at:
www.cobraelec.com

How to Use Your Cobra CP-9105 900 MHz Cordless Telephone

Contents	
Features	1
FCC Information/Included Accessories	A1
Controls & Indicators	A2
Our Thanks to You	A3
Customer Support	
Safety Instructions	2
Installation	
Quick Set-Up Guide	3
Wall Mounting Instructions	6
Operating Your CP-9105	
Answering/Placing Calls from Base	8
Answering/Placing Calls Away from Base	10
Battery Saver	11
Mute Button	11
Channel Selection	12
Flash	13
Secur-Loc™	13
Volume	14
Hearing Aid Compatibility	14
Last Number Redial	15
Memory Dialing Storage	16
Memory Dialing Recall	18
Page/Find	19
Ringer Switch	20
Handset Battery Information	20
Private Call™ Scrambling	22
Pulse/Tone	22
Replacing Handset Battery	23
Disposal of The Battery	23
Headset Operation	24
Cleaning The Charging Contacts	25
Troubleshooting	26
Frequently Asked Questions	27
Limited One-Year Warranty	31
Accessories	32

Features of This Product

- Pulse/Tone Switch on Base
- Nine (10) Number Memory
- 65,000 Security Codes
- Auto Answer
- Auto Stand-By
- Hearing Aid Compatible
- Seven (7) Day Stand-By
- Audible Battery Low Indicator
- Replaceable Handset Battery
- Page/Find
- Private Call™ Voice Scrambling - Base and Handset
- Jack on Handset for Microphone/Ear Piece Headset
- Detachable Belt Clip
- Wall Mountable
- Handset Volume Control
- Mute Button

Important Safety Instructions

 
When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not locate base unit near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the bottom or back are provided for ventilation, to protect it from overheating; these openings must not be blocked or covered. The openings should never be blocked by placing the product in the bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to qualified servicemen when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Avoid using telephones (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.
14. Unplug this product from the outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
15. Never install telephone wiring during a lightning storm.
16. Never install telephone jacks in wet locations unless jack is specifically designed for wet locations.
17. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions:

- A. Use only the battery pack supplied with the unit or identical replacement.
- B. Do not dispose of battery pack in a fire. The cells may explode. Check with local codes for possible disposal instruction.
- C. Since released electrolyte is corrosive and may cause damage to eyes or skin and may be toxic if swallowed:
 - C1. Do not open or mutilate battery pack.
 - C2. Always replace the entire battery pack rather than reusing one or more cells.
 - C3. Do not expose batteries to heat or flame.
- D. Exercise care in handling the battery pack in order not to "short" the battery contacts with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.



Important Safety Instructions (continued)

Installation

CAUTION (continued):

- E. Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- F. Observe proper polarity orientation between the battery and battery charger.

Save These Instructions

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGER TO THE PRODUCT

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

 
 
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (IF APPLICABLE). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL




THE EXPLANATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGER TO THE PRODUCT

SEE MARKING ON BOTTOM BACK OF PRODUCT


Quick Set-Up Guide

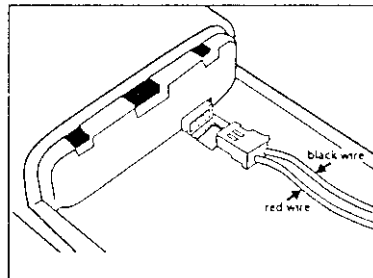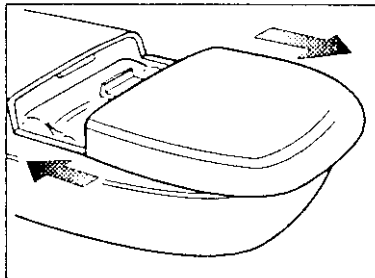

 - 1 Install Ni-Cad battery in the handset. To remove the battery door, press and slide downward. Observe connection orientation, connect the battery and replace the door. The **Low Batt** LOW BATTERY indicator will blink until the handset is placed in the base and power is applied to the base.

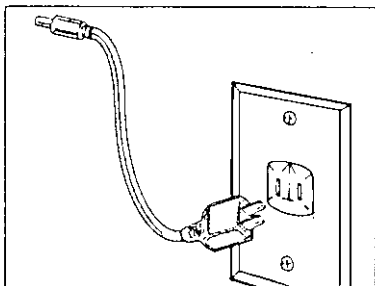

- 2 Connect power adapter in outlet.

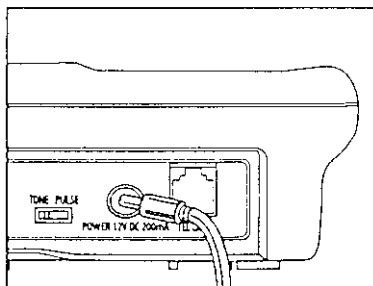 

- 3 Connect round connector into power jack on base.

Quick Set-Up Guide

Note

 
The battery must be charged at least 12 hours before use.

Replacement batteries are available direct from Cobra. See Accessories section on page 32.


Use only with Class 2 Power Source 12 VDC 200mA

continued on next page



Quick Set-Up Guide continued

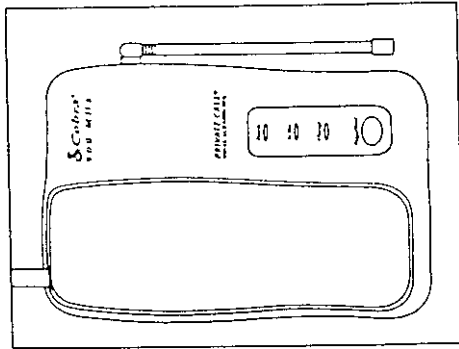

 
3 Place handset on base so **CHARGE** indicator lights.

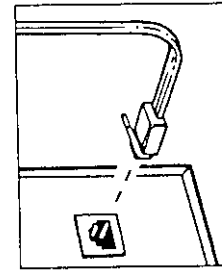

  4 Plug phone cord into wall jack and base of phone.

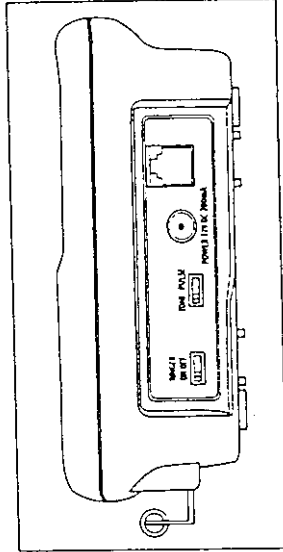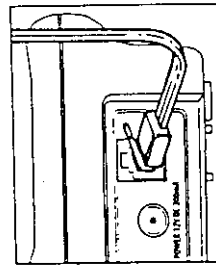

5 Turn on RINGER switch.

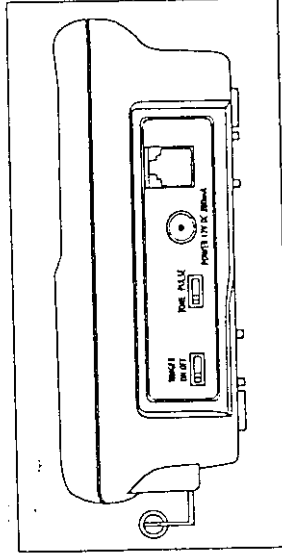 


6 Switch PULSE/TONE on base for proper operation.

For tone dialing-switch PULSE/TONE on base to TONE.

For pulse dialing-switch PULSE/TONE on base to PULSE.


Installation

 Wall Mounting Instructions

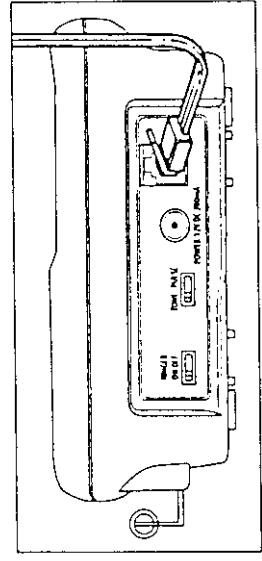


1 Plug 6" phone cord into jack on rear of base.

 Note
If you do not have a wall mount, contact your local phone company for installation of phone line and wall mount.

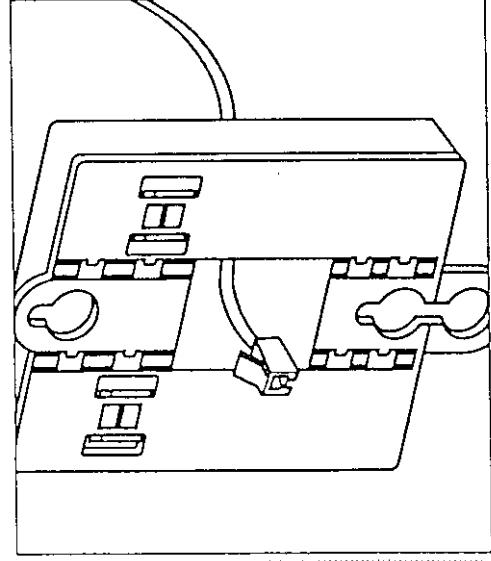


2 Thread cord through center of wall mount bracket.

 Installation

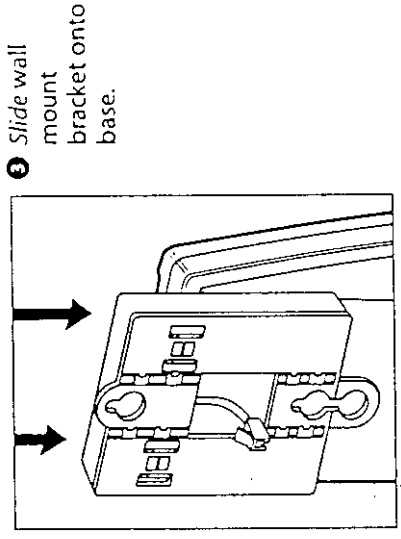

3 Slide wall mount bracket onto base.

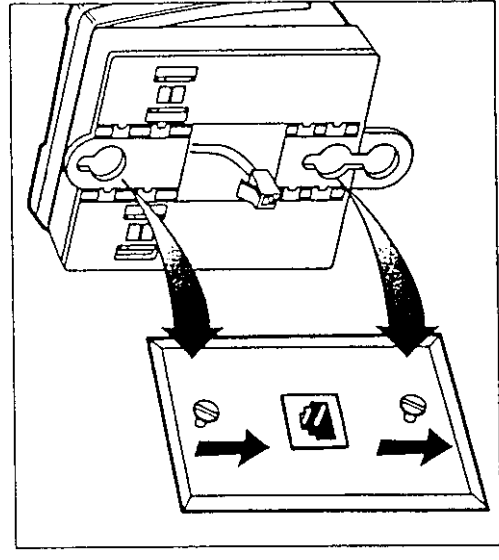 

4 Plug phone cord into wall jack.

5 Slide base down on wall plate.

 
Answering And Placing Calls When The Handset Is On The Base

Note

When placing or answering a call, the **IN USE** indicator will come on. It will climb while the connection is being made and will stay on during the call.


Answering And Placing Calls When The Handset Is On The Base

To answer a call:

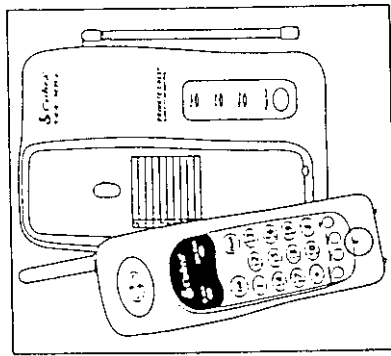

Pick up handset. Just talk.

 
When call is completed:

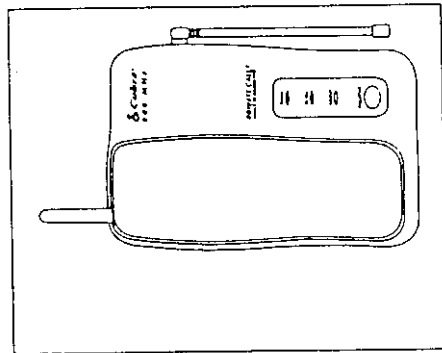

Return handset to base.

Phone automatically disconnects.

 To place a call:

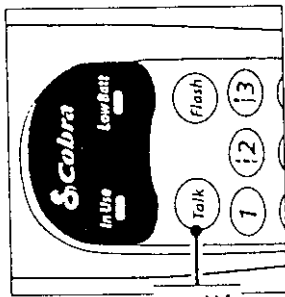

PUSH & RELEASE

Pick up handset, Push and release **TALK** button.

Wait for dial tone and place your call.

Note

 
Use the **STAR** button to temporarily change from PULSE to TONE dialing.



Operation


Answering And Placing Calls When Handset Is Away from Base

To answer a call:
When phone rings, push and release **TALK** button to receive calls.

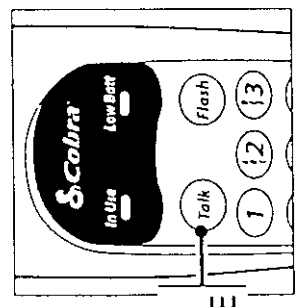

PUSH & RELEASE

 To place a call:
When completed, push and release **TALK** button again to reconnect the microphone.

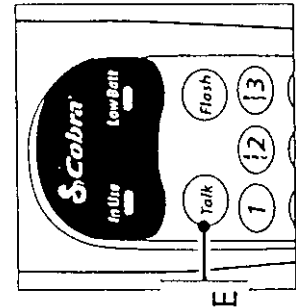

PUSH & RELEASE

- 1 Push and release **TALK** button, wait for dial tone and place call.
- 2 When completed, push and release **TALK** button again.

Battery Saver
Handset may, in "off" position, remain away from base for up to seven days.

 
Duration of battery charge depends upon actual use of phone.

Battery Saver

Note

Warning beep tone will sound and the **Low Batt** Indicator will flash when the handset needs recharging.

Mute Button
Push and release **MUTE** button to temporarily prevent the other party from hearing you.

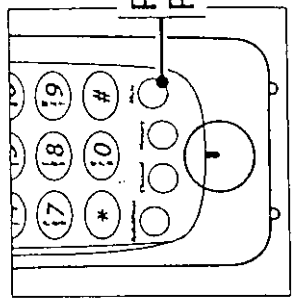

PUSH & RELEASE

 
Press and release **MUTE** button again to reconnect the microphone.

Mute Button



Channel Selection

Should you experience interference:

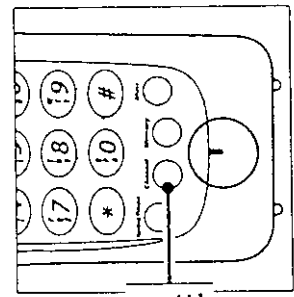


PUSH & RELEASE

Note

 
Please also refer to questions 3, 5 and 6 in the *Frequently Asked Questions* section on page 27.

Push and release  CHANNEL button. You will hear one beep.


The phone will scan for and advance to the next clear channel.

- A second beep will indicate a successful channel change.
- After five seconds, the channel change was not successful. Move closer to base and press and release  CHANNEL button again.

Flash

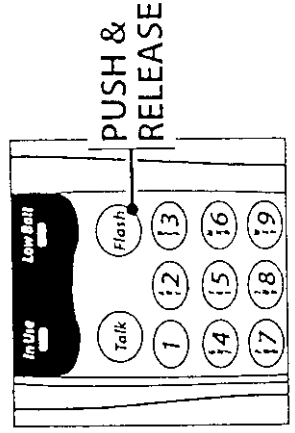

PUSH & RELEASE

Push and release  FLASH button to interrupt the phone line to access:

 
- "Call Waiting"
 - "Three Way Calling"
- that might be offered by your phone company.

Secur-Loc™

An exclusive security measure to protect your phone from being accessed by another cordless phone. Secur-Loc™ activates automatically every time your handset is placed in the base.

Volume

Volume

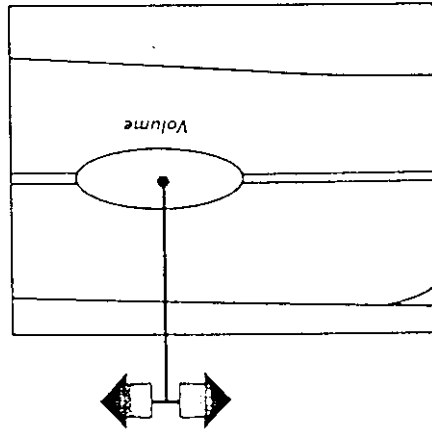

Volume is controlled by the  HIGH/LOW toggle switch.

 
Hearing Aid Compatibility


Hearing Aid Compatibility


The CP-9105 handset is compatible with inductively coupled hearing aids (HAC).


Last Number Redial


Each time you dial a number, that number is stored in the redial memory. Up to 16 digits can be stored. To recall the number after receiving a busy signal:

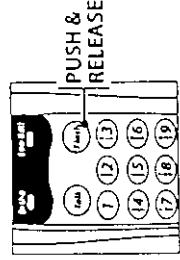


- 1 Push and release  FLASH button.
- 2 Listen for dial tone.

 If steps 1, 2 and 3 still result in a busy signal, hang up. If you would like to try again in a few minutes, push and release  TALK button for dial tone, then:

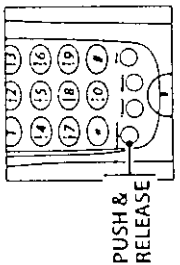

 
- 3 Push and release  REDIAL/PAUSE button.

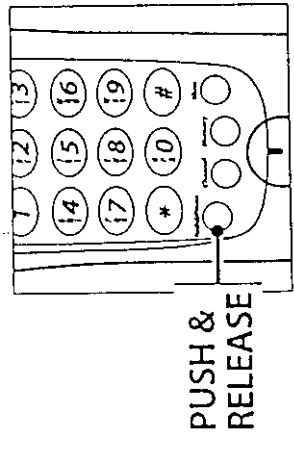

- 4 Push and release  REDIAL/PAUSE button. The number will be redialed.


Memory Number Storage

 The CP-9105 will store up to 10 frequently called numbers. With the handset OFF:

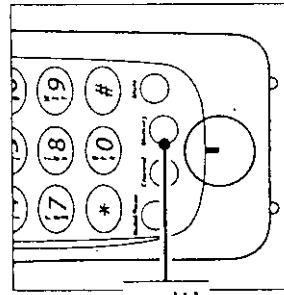


PUSH & RELEASE

 - 1 Push and release MEMORY button once.

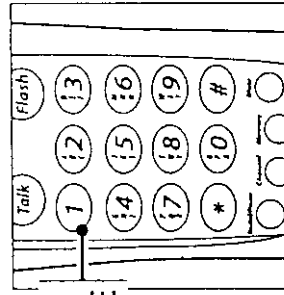


PUSH & RELEASE

 - 2 Enter digits of number to be stored (up to 16).

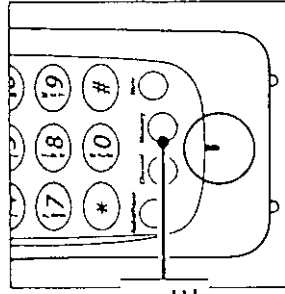

PUSH & RELEASE

 - 3 Push and release MEMORY button again.

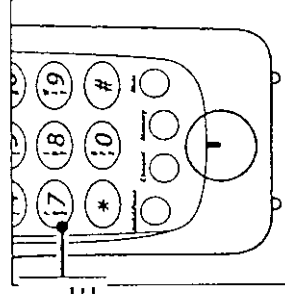

PUSH & RELEASE

- 4 Assign memory position by entering keypad number from 0 to 9. There will be a two tone confirmation beep. Repeat for additional numbers to be stored in memory.

Note

 
- 1. You may also use the STAR button in memory to rapidly change from pulse tone dialing.
- 2. The PAUSE button in memory enters a 3 second delay.

Operation

Operation


Memory Number Dialing

Memory Number Dialing

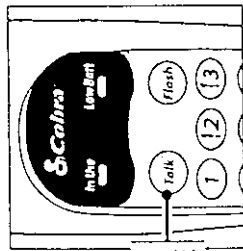


PUSH & RELEASE

 - 1 Push and release **TALK** button.

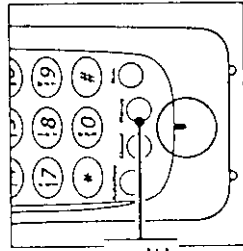

PUSH & RELEASE

 - 2 Push and release **MEMORY** button once.

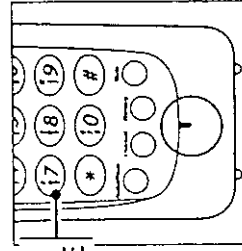


PUSH & RELEASE

- 3 Push and release keypad number you assigned for that phone number. The phone will dial that number automatically.

Page/Find

 
The handset can be located when it's away from the base. To locate the handset:

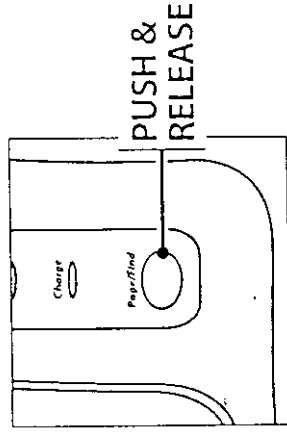

PUSH & RELEASE

- 1 Push and release **PAGE/FIND** button.

 The handset will beep for 30 seconds, allowing time to locate the handset.

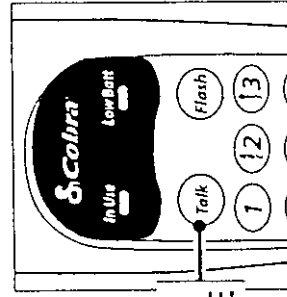

PUSH & RELEASE

- 2 Push and release **TALK** to eliminate PAGE signal.

 
Note

If you wish to stop beep tones push and release **TALK**, wait 2 seconds, push and release again.

Ringer Switch

Ringer Switch

OFF/ON switch (on base) controls the handset ringer.

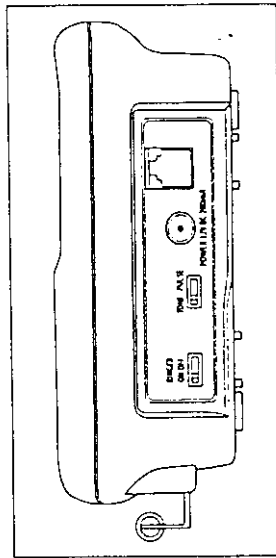


When set on OFF, no ring will sound.

Handset Battery Information

When the handset battery needs recharging, there are a number of warnings:

 
Phase I

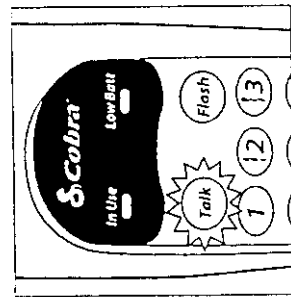

LOW BATTERY on handset flashes.


Note

 Replacement batteries are available from Cobra. See Accessories section on page 31.

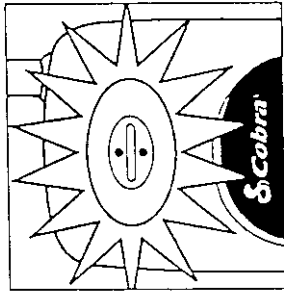

Two beeps will sound when using the phone.

 Phase-II

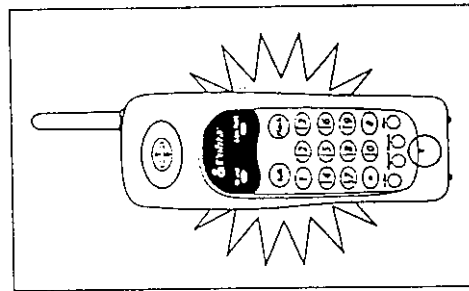

Handset will beep at thirty second intervals for five minutes.

No dial tone.

Return to base for recharging.

 
Operation

Private Call™ Scrambling

Private Call™ prevents other cordless phones, scanners or baby monitors from picking up your conversations.

Pulse/Tone


The CP-9105 can be used either as pulse or tone, depending upon your phone service.

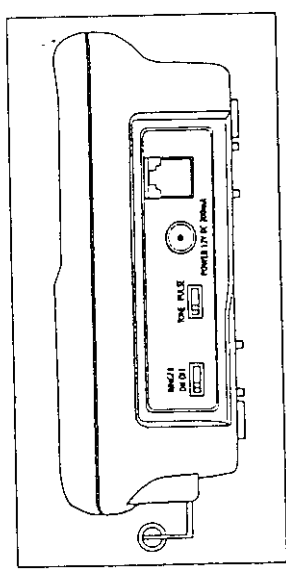

Operation

Replacing Handset Batteries

 The rechargeable NiCad battery in your cordless phone may need to be replaced if the handset will not function when the TALK button is pressed after recharging for 12 hours.

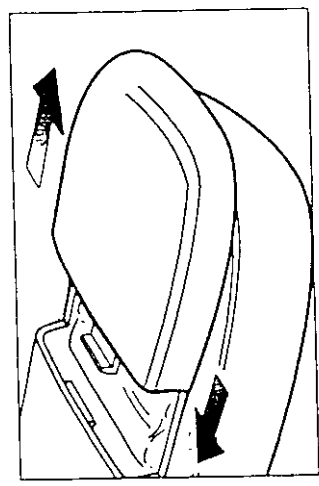

Note
Replacement batteries are available direct from Cobia. See Accessories section on page 31.

- 1 To remove the battery door, press and slide downward.
- 2 Carefully disconnect the battery pack and dispose of it properly. See Battery Disposal below.
- 3 To replace, observe connection orientation and connect the new battery and replace the door. Return the handset to the base and charge the battery overnight (at least 12 hours).

Disposal of Batteries

The rechargeable NiCad battery in this product must be recycled or disposed of properly. Contact your waste removal authority for instructions.

Operation

Headset Operation

 
 
Note

The headset must use a three conductor 2.5mm plug for pro per operation with the Radio Shack model HS-151. (If you may order the Cobra model, please see Accessories page 31.)


Headset Operation

The headset jack allows use of a headset with an ear-speaker and boom microphone.

- 1 Position the headset comfortably on your head and adjust the microphone so it is located near, but not touching, your mouth.

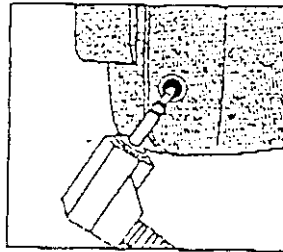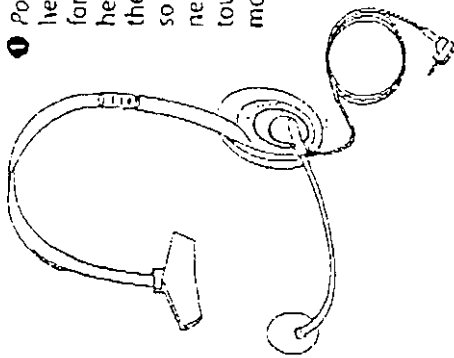

 - 2 Plug the headset into the CP-9105 handset.

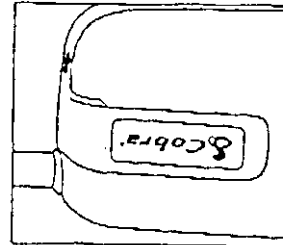


- 3 Use the belt clip for convenience.


Operation

Cleaning The Charging Contacts

 Clean the two metal charging contacts on both base and handset with a soft dry cloth on a regular basis.

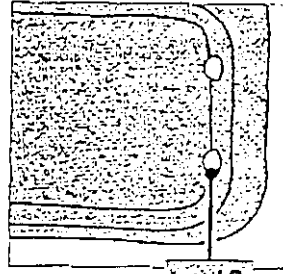

- 1 Clean base contacts.

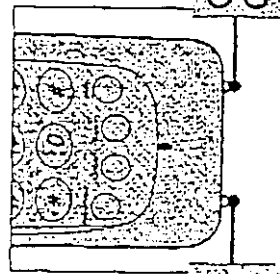 

- 2 Clean handset contacts.

Note

Isopropyl alcohol may be used for more thorough cleaning.

Troubleshooting

Troubleshooting

Phone is dead

Are power adapter and phone cord connected?

Handset beeps during call or away from base

Batteries need recharging; return handset to base.

Handset disconnects, loses performance and beeps three times when in use away from base

Out of range or batteries need recharging.
Move closer to base or recharge batteries.

Unable to make call because of interference

Select a new channel.

Handset won't work after power outage or disconnecting from AC power & reconnecting

Return handset to base for thirty seconds to automatically match security coding.

Handset seems "dead"

Battery power has run out; return handset to base and charge for at least 12 hours. If handset still seems dead, unplug handset battery for 15 seconds and plug back in. Then place handset back on base for at least 5 minutes.

Memory dialing not working

Frequently Asked Questions

1. How long should the handset battery be charged?

Typically leaving the handset on the base overnight will charge the battery sufficiently.

2. How long can a battery last after a twelve hour charge?

After a twelve hour charge, the handset has typically 8 hours of continuous talk time, or 7 days in standby mode (when the phone is out of the base but not in use).

3. What is the range of my cordless phone?

There is no way to easily answer this question as many factors affect the range of a cordless phone. In an open field, under ideal conditions, a 900 MHz cordless phone can have an effective range of about 1200 feet.

Unfortunately, most cordless phones are used under conditions that are anything but ideal. The effective range of a cordless phone varies because of environmental and other conditions. Cordless phones and other 900 MHz devices may cause interference which may limit the effective range of your cordless phone. Changing the channel may help.

Aluminum siding can also have a dramatic effect on range. Try using your cordless phone in many locations in and around your home. Each situation presents different conditions under which the phone must work.

Cobra Customer Service

Live operators are available
M-F 8:00 am - 8:00 pm CST at:
773.889.3087

Automated Technical Assistance
available 24 hours a day, seven
days a week. Email questions to:
productinfo@cobralelec.com

Cobra on the World Wide Web
Frequently Asked Questions (FAQ)
can be found on-line at:
www.cobralelec.com

Frequently Asked Questions

4. *Why do I sometimes have difficulty making a connection even though I'm close to the base?*
There are several possible causes for this condition. Please try the following solutions to see where your problem lies.

First, make sure the base unit power adapter is connected to a working AC outlet. Make sure that you are within range of the base unit when pressing the TALK button. This will ensure that you are within range. If this works, then you were to access the base from too great a distance.

Other cordless phones in your house could be causing interference. Two or more cordless phones may interfere with each other's security codes. If you have two or more cordless phones in your house please disconnect all but the phone which is giving you the Out of Range signal. You can then reset the security codes by using the following procedure.

To reset the security code, remove the handset from the base. Remove the power cord from the base for 30 seconds. Replace the power cord to the base and replace the handset, making sure the charge light comes on. Wait another 30 seconds and the security code should be reset. Try the phone after resetting the security code—it should work fine. Your other cordless phones can still be used but they should be moved further apart or you may experience this problem again.

28

Frequently Asked Questions

5. *Why do I have static on my cordless phone?*
Your cordless phone works as a miniature radio transmitter and receiver. As such, it will pick up stray signals caused by other nearby appliances which emit radio signals and thus become a source of interference.

Some sources in a home that may cause noise and interference on a cordless phone are:

- other cordless phones
- fluorescent fixtures
- home appliances such as televisions, refrigerators, microwave ovens, home computers and baby monitors

In order to eliminate some of this interference it may be necessary to relocate the base unit of the cordless phone to a different location in your house. This solves two problems. First, you are further from the source of interference and secondly the power adapter for the cordless phone will be plugged into an outlet, which most likely is on a different line, that the appliance which is causing the interference.

If the noise persists after relocating the base, move closer to the base unit when talking on the phone. If the noise disappears, then it is most likely local interference being generated by a source outside your home, or a source inside your home strong enough to blanket your entire house such as a baby monitor. If you find that the noise and interference are equally strong throughout your house, your cordless phone may require service.

29

Cobra Customer Service
Live operators are available
M-F 8:00 am - 8:00 pm CST at:
773 889 3087

Automated Technical Assistance
available 24 hours a day, seven
days a week. Email questions to
productinfo@cobraelec.com

Cobra on the World Wide Web:
Frequently Asked Questions (FAQ)
can be found on-line at:
www.cobraelec.com

Frequently Asked Questions

6. Will more than one cordless phone work in the house?

Whether or not you are able to use two or more cordless phones in your house varies, depending on how many cordless phones you have in your house and how close the cordless phones are to each other. Problems you could experience include:

- intermittent ringing
- cross talk
- interference
- inability of the handset to access the base

Changing the channel on one may help. Relocating one of the bases may also help.

8. How can I find a replacement battery?

Batteries are typically available locally at Radio Shack, Walmart, K-Mart or anywhere cordless phone accessories are sold. You must match the voltage, milliamp hours (mAh) and the connector of your current battery exactly to the new one to ensure proper operation of your cordless phone. You should take the original battery with you to the store to match these features. Or order the battery from Cobra.

Limited One Year Warranty

Cobra warrants that its cordless telephone products, and the component parts thereof, will be free from defects in workmanship and materials for a period of one (1) year from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

Cobra, without charge, will repair, or replace, at its option, defective cordless telephone products or component parts upon delivery to Cobra factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service. The return charges will be at Cobra's expense if the product is repaired or replaced under warranty. For further details see the Owner's Manual.

Exclusions: This limited warranty does not apply 1) to any product damaged by accident, improper line voltage or weather related circumstances; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) to non-defective original equipment Nickel Cadmium rechargeable batteries; 4) if the serial number has been altered, defaced or removed; or 5) if the owner of the product resides outside of the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

Cobra shall not be liable for any incidental, consequential or other damages, including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Cobra Electronics
Corporation
6500 West Corland Street
Chicago, Illinois 60707

Accessory Order Form

Accessories

Nickel-Cadmium Battery Pack
Assembly with Connector
For use with model CP-9105
 213-021-N (XX) \$15.00

AC Power Adapter
For use with model CP-9105
 768-031-N (XX) \$15.00

Charge Cradle
For use with model CP-9105
 CR-900 \$10.00

Headset
For use with model CP-9105
 H-900 \$15.00

Item	Part No.	Cost Ea.	Qty	Amount
Nickel-Cadmium Battery Pack w/connector	213-021-N00-1	\$15.00		
AC Power Adapter	768-031-N00-1	\$15.00		
Charge Cradle	CR-900	\$10.00		
Headset	H-900	\$15.00		

Tax Table
 Illinois residents add 7%
 Cook Co residents add 7.5% (7.5% local)
 Chicago residents add 7% (6.5% local)
 Indiana residents add 5%
 Michigan residents add 4%
 Minnesota residents add 6%
 Ohio residents add 6%
 Wisconsin residents add 5%

Amount (Tax if applicable)
 Shipping/handling \$3.75
Total

For credit card orders fill out order form and fax to: 1.773.622.2269 or call 1.773.889.3087
 Make check or money order (no stamps) payable to: Cobra Accessories Dept. 6500 West Cortland St. Chicago, IL 60707

Please print clearly

Name _____
 Address (No P.O. Box) _____ State _____
 City _____
 Zip _____
 Credit Card No. _____ Exp. Date _____
 Customer Signature _____
 Circle One: Visa MasterCard Discover

Allow 4 to 6 weeks for delivery Offer valid in Continental U.S. only

How to Use Your Cobra CP-9105 900 MHz Cordless Telephone

Contents	
Features	1
FCC Information/Included Accessories	A1
Controls & Indicators	A2
Our Thanks to You	A3
Customer Support	
Safety Instructions	2
Installation	
Quick Set-Up Guide	3
Wall Mounting Instructions	6
Operating Your CP-9105	
Answering/Placing Calls from Base	8
Answering/Placing Calls Away from Base	10
Battery Saver	11
Mute Button	11
Channel Selection	12
Flash	13
Secur-Loc™	13
Volume	14
Hearing Aid Compatibility	14
Last Number Redial	15
Memory Dialing Storage	16
Memory Dialing Recall	18
Page/Find	19
Ringer Switch	20
Handset Battery Information	20
Private Call™ Scrambling	22
Pulse/Tone	22
Replacing Handset Battery	23
Disposal of The Battery	23
Headset Operation	24
Cleaning The Charging Contacts	25
Troubleshooting	26
Frequently Asked Questions	27
Limited One-Year Warranty	31
Accessories	32

Features of This Product

- Pulse/Tone Switch on Base
- Nine (10) Number Memory
- 65,000 Security Codes
- Auto Answer
- Auto Stand-By
- Hearing Aid Compatible
- Seven (7) Day Stand-By
- Audible Battery Low Indicator
- Replaceable Handset Battery
- Page/Find
- Private Call™ Voice Scrambling - Base and Handset
- Jack on Handset for Microphone/Ear Piece Headset
- Detachable Belt Clip
- Wall Mountable
- Handset Volume Control
- Mute Button

 
Channel Selection

Note


Please also refer to questions 3, 5 and 6 in the *Frequently Asked Questions* section on page 27.

Channel Selection


Should you experience interference:

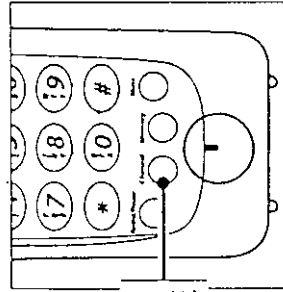


PUSH & RELEASE

 Push and release  CHANNEL button. You will hear one beep.

 
The phone will scan for and advance to the next clear channel.

- A second beep will indicate a successful channel change.
- After five seconds, the channel change was not successful. Move closer to base and press and release  CHANNEL button again.

 Flash

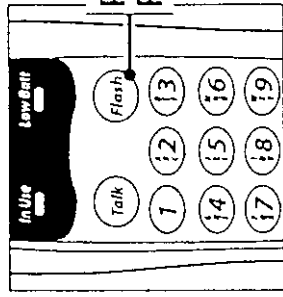

PUSH & RELEASE

Push and release  FLASH button to interrupt the phone line to access:

- "Call Waiting"
 - "Three Way Calling"
- that might be offered by your phone company.

Flash

Secur-Loc™

An exclusive security measure to protect your phone from being accessed by another cordless phone. Secur-Loc™ activates automatically every time your handset is placed in the base.

Secur-Loc™