TM




# FM Stereo Transmitter



Model no. FT10 FM Stereo Transmitter

Now you can listen to your favorite tunes through any FM stereo receiver. The FM Stereo Transmitter wirelessly connects portable music players to your car or home stereo quickly and easily. Just plug the FM Stereo Transmitter into the headphone jack of any audio source including your PDA, MP3, CD, or Cassette player; or connect it to your PC or Laptop computer. Tune your car stereo or receiver to the clearest FM frequency, and enjoy your digital music with full sound and convenience.

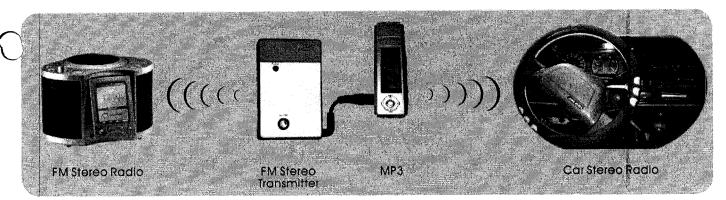

#### **Features**


- Ultralight for portability
- · High-clarity, full-stereo sound
- Power light and LED indicator

### Specifications

Model Numi	ber 📑	Abe FT 10
Frequency Band	3	106.7, 107.1, 107.5 or 107.9 Mhz
Operating Rang	jθ (÷ jil)	up to 10-30 feet (open area)
Battery		2 x AAA
Weight		45 g (W/O Battey)
Dimensions (LxWxH)		80 x 51 x 18 mm
Operating Temperature		0°C~50°C

## **Package Contents**

- 1X FT10 FM Stereo Transmitter / 2 X AAA Alkaline Batteries / Blister
- 1X Smart Travel Case

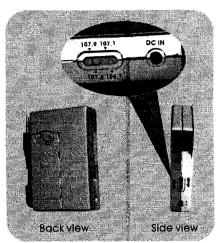



Smart Travel Case

In-Tech Electronics Ltd. is an ISO 9001: 2000, ISO 14001:1996, ISO / TS 16949: 2002 and ISO 13485: 2003 certified company.



In-Tech Electronics Ltd 精速電子有限公司




Unit 207-210, 2/F, Century Centre 44-46 Hung To Road, Kwun Tong, Kowloon, Hong Kong

Tel: (852) 2191 8899 Fax: (852) 2191 7788 www.in-tech.com.hk www.abe-hk.com E-Mail:abe@in-tech.com.hk

All names are trademarks or registered trademarks of their respective companies. © 2004 in Tech Electronics Ltd., All rights reserved.

FCC ID: NV6-CS4033

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

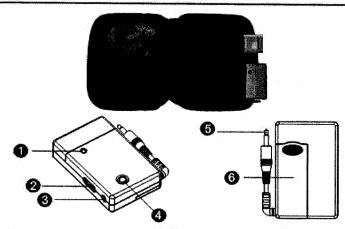

- 1. Power On LED 2. Channel selector
- 3. DC Socket 4. On/Off Key
- 5. Audio input wire 6. Battery cover

#### **USER MANUAL**

- Open the battery cover 6 to install two pieces of AAA batteries provided in the package.
- Connect the Audio input wire 6 to your audio devices such as MP3, MD, CD, or others.
- Press the On/Off Key once, the Power on LED owill light up. If it does not, please check batteries.
- Keep the FM Transmitter within 10 feet or 3 meters from the antenna of your radio.
- Tune your FM radio receiver to one of the four channels provided (106.7, 107.1, 107.5 and 107.9) then select the clearest channel by adjusting the channel selector .
- Press the On/Off Key @ once when the FM Transmitter is 'On' to turn it off. The Power on LED will go off.

power supply via the DC Socket @



FM Stereo **Transmitter** 



NOTE: This equipment has been ested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Recrient or relocate the receiving antenna:

\* Recrient or relocate the receiving antenna:

\* Increase the separation between the equipment and receiver.

\* Connect the equipment into an eutlet on a circuit different from that to which the receiver is needed.

\* Consult the dealer or an experienced radio/TV technician for help