 


Cobra® microTALK₁

The Family Radio Service Story

Operating Instructions for your
Cobra MicroTalk FRS 100A

Family Radio Service 2 Way Radio

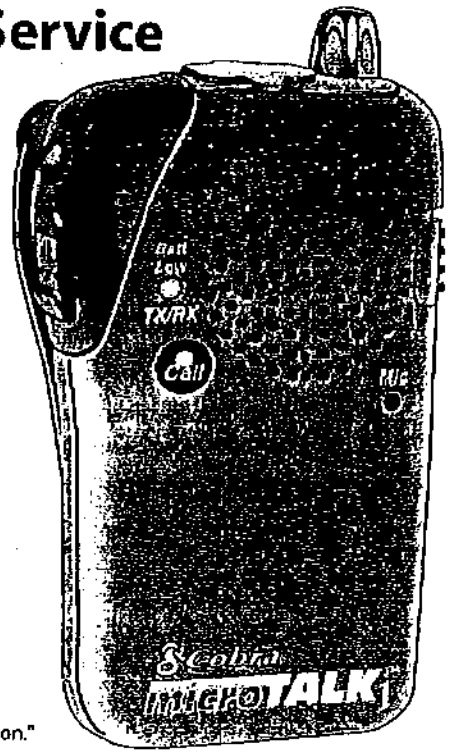

1



2

The Family Radio Service Story

Ever wish you could talk to someone who wasn't within earshot? Like contacting ski partners back at the lodge? Or letting a friend know how to find you in a busy mall? Cobra's MicroTalk FRS 100 is a great way for friends or family to increase their fun—and safety—by staying in touch while on the go.

The FCC (Federal Communications Commission) has created 14 license free frequency bands, or channels, called Family Radio Service (FRS) frequencies. Two of these 14 channels (channel 8 and 13) are easily accessed on your Cobra FRS radio. These channels are in the UHF (Ultra High Frequency) band which means great penetration through buildings, thick forests, hills, and other dense structures. They are also FM (Frequency Modulation) signals which means crystal clear reception even in crowded noisy environments.

FCC Warnings

Adjustment, replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra, may cause a violation of the technical regulations of part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

Included with your MicroTalk

- 1 Removable Belt Clip
- 2 Wrist Strap

A1

Desk which can assist
your Cobra products.

ugh this same number
'ay, CST.
aked Questions (FAQ) section
@cobrazele.com

rst before sending your unit in.

ecessary to furnish the follow-

s as a mechanical reproduction
not be returned.

a typed or clearly print name

e original packing material.
ited Parcel Service (UPS) or First
Electronics Corporation, 6500

 
repaired or exchanged
s before contacting us for
nt informing you of the
ease call 1.773.889.3087 for



"Ingenious Products for Easier Communication."

Controls and Indicators

- **1** Retractable Antenna
- **2** Belt Clip
- **3** On/Off Volume Control
- **4** Microphone Jack
- **5** Speaker Jack
- **6** Battery Charge Pads
- **7** TX (talk)/Batt Low (batteries are low) Indicator
- **8** Call/Ring Button
- **9** Channel Select Button
- **10** Microphone
- **11** Maximum Range Extender Button
- **12** PTT (Push To Talk) Key
- **13** Battery Chamber

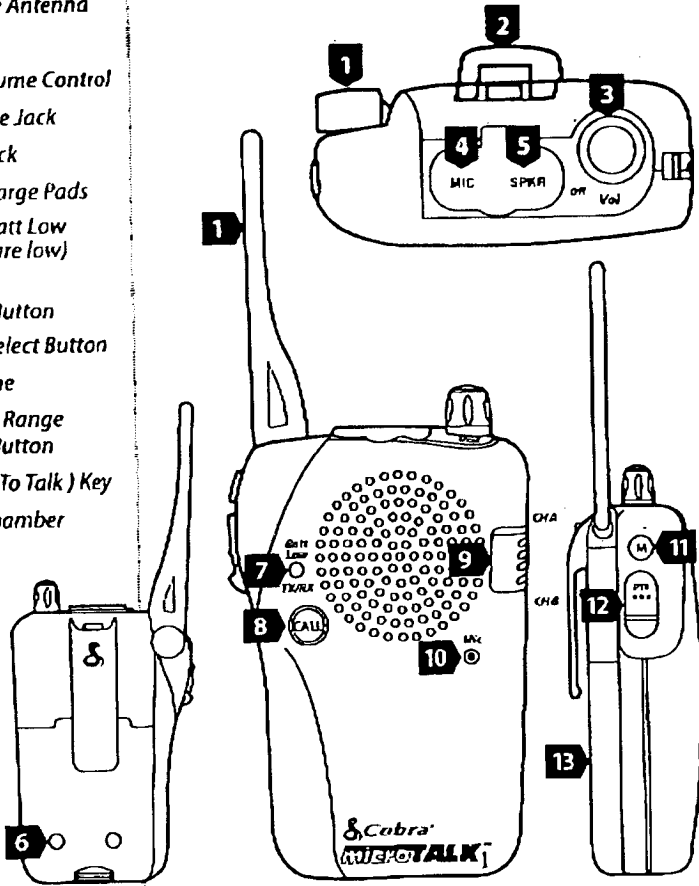

Thank you for purchasing the Cobra FRS 100 2-way Radio. Properly used, this Cobra product will give you many years of reliable service.

Customer Support

Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra Customer Service at 773.889.3087.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Cobra Customer Service

Live operators are available
M-F 8:00 am - 8:00 pm CST
at: 773.889.3087

Automated Technical Assistance available 24 hours a day, seven days a week.

E-mail questions to:
productinfo@cobraelec.com

Cobra on the World Wide Web:

Frequently Asked Questions (FAQ) can be found on-line at: www.cobraelec.com

A2

A3

Contents

Features	
The FRS Story	
FCC Warnings	
Included Accessories	
Controls & Indicator:	
Our Thanks to You	Customer Support.
Operating your Micro	
Battery Installation	
Turning On	
Auto Squelch	
Maximum Range E	
Select Channel	
Auto Battery Save	
Calling Another Pa	
Talking To Another	
Talk Confirmation	
Listening For Anotl	
MicroTalk Range ...	
Making Life Easier	
External Micropho	
Frequency Ranges	
Caring for Your Mici	
MicroTalk Specifica	
Limited Two Year W	
Optional Accessori	
Order Form	
If You Think You Ne	

How to Use Your Cobra **microTALK™** 2-Way Radio

Contents

Features	1
The FRS Story	A1
FCC Warnings	
Included Accessories	
Controls & Indicators	A2
Our Thanks to You	A3
Customer Support	A3
Operating your MicroTalk	
Battery Installation	2
Turning On	4
Auto Squelch	4
Maximum Range Extender	4
Select Channel	5
Auto Battery Save	5
Calling Another Party	6
Talking To Another Party	7
Talk Confirmation Tone	8
Listening For Another Party	8
MicroTalk Range	9
Making Life Easier And Safer	10
External Microphone/Speaker Jack	12
Frequency Ranges	13
Caring for Your MicroTalk	14
MicroTalk Specifications	16
Limited Two Year Warranty	18
Optional Accessories	19
Order Form	20
If You Think You Need Service	Back Cover

Features of This Product

- UHF FM Frequencies
- No License Required
- No Air Time Fees
- Up To 2 Mile Range
- 2 User Selectable Channels
- Talk Confirmation Tone
- Call/Ring Button
- Recharging Pads
- Retractable Antenna
- Battery Saver Circuitry
- Auto Squelch
- Wrist Strap/Belt Clip

Operation

 
 
Operation

Battery Installation


Note
Batteries not included with
Microtalk 2-way radio.

Install Batteries


1 Clear antenna.

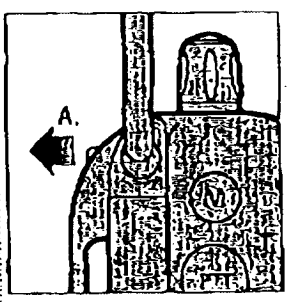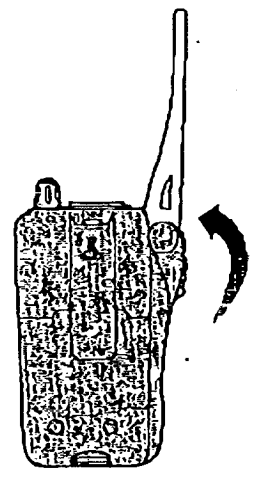

 
2 Remove belt clip by (A.) pulling tab out and (B.) Sliding belt clip up and off unit.

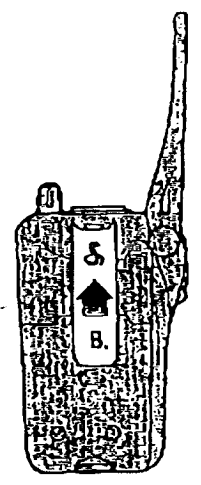

 3 Pull lock tab down to remove battery cover.

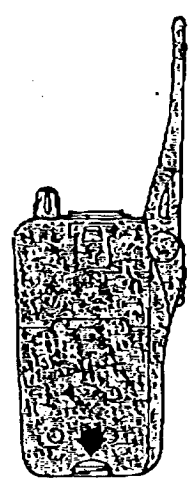

 4 Insert four "AAA" batteries. Position batteries according to polarity markings.

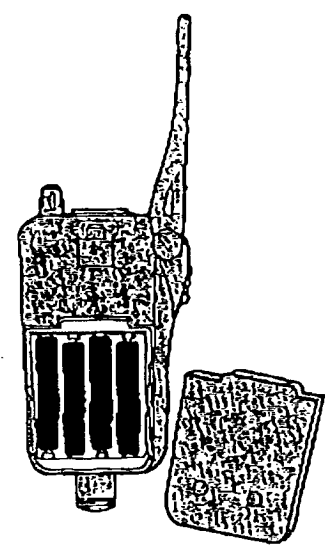


Note
Always use high quality
alkaline or NiMH batteries.

*Incorrect positioning can
damage both the batteries
and the unit.*

*Only the Cobra NiMH
battery (Part# FA-BP)
pack can be recharged.*

 *See Accessories on page 19.
Charge ports for recharging
NiMH (Nickel Metal Hydride)
battery pack are
located on back of unit.*

Note
When batteries are low or
need charging the  BATT LOW Indicator will
blink Green. Replace alkaline
batteries or recharge NiMH
battery pack.

Operation

Turning On Your MicroTalk

Note
Whenever the unit is on you can receive communications.


Auto Squelch

 
Maximum Range Extender

Note
To learn more about the range of your MicroTalk, see page 9.

Range is dependent on battery condition and geographic territory.

Turning On Your MicroTalk


Rotate ON - OFF Volume Control  clockwise. An audible "tone" will indicate the unit is on and the TX/RX indicator on the front of the unit will illuminate green.

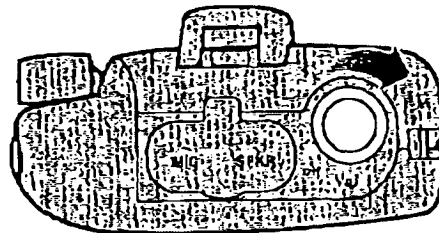


Auto Squelch


Your MicroTalk is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise due to terrain conditions or if you have reached your range limit.

Maximum Range Extender

 Auto squelch can be temporarily removed to allow all signals to enter by pressing the  M button (Maximum Range Extender).

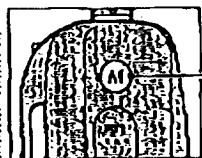


PUSH & HOLD

1 Push and hold the  M/RANGE EXTENDER button to allow all signals to enter.

Select Channel

 1 Turn on the MicroTalk 2-Way Radio.

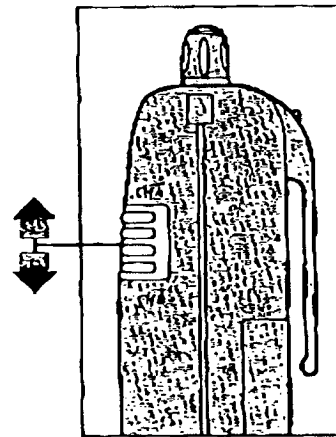

2 Select channel by moving the channel button up or down. Select either Channel A or B for optimum clarity.

Auto Battery Save

Your FRS 100 has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the unit will automatically switch to battery save mode.

Operation

Select Channel

Note
Units must be on same channel to communicate. Choose Channel A or B.

Note
You can also communicate with other 2-way radios (some have as many as fourteen channels).

Channel A = Channel 8 on other units
Frequency is 467.5625

Channel B = Channel 12 on other units
Frequency is 467.6625

Auto Battery Save

Note
The Auto Battery Save Circuit does not effect the unit's ability to receive incoming transmissions.

Operation

Operation

Calling Another Party

Note
Units must be on same channel to communicate. Choose Channel A or B.

 
Note
You can also communicate with other 2-way FHS radios (some have as many as fourteen channels) like the MicroTalk 250 or 300.

Channel A = Channel 8 on other units
Frequency is 467.5625


Channel B = Channel 12 on other units
Frequency is 467.6625

Calling Another Party

To alert another party that you wish to communicate:

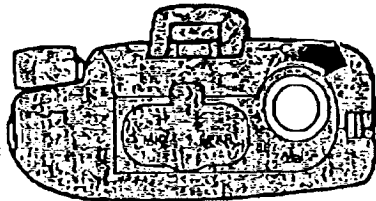


 - 1 Turn on your MicroTalk 2-way radio. An audible "tone" will indicate the unit is on and the TX/RX Indicator on the front of the unit will illuminate green.

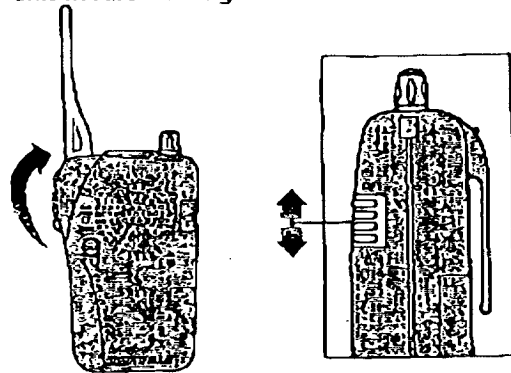

- 2 Place antenna in full upright position.
- 3 Select Channel A or Channel B by moving the CHANNEL button up or down.

 
6

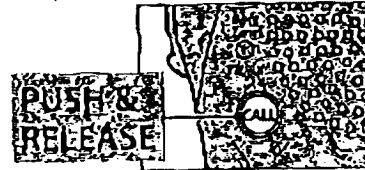



- 1 Push and release CALL button. The unit you are calling will hear a two second ring/tone.

Talking To Another Party

 To send your outgoing message:

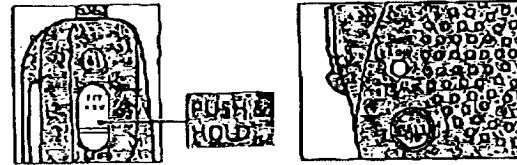

  - 1 Push and hold PTT button.
- 2 The TX/RX indicator will illuminate red.

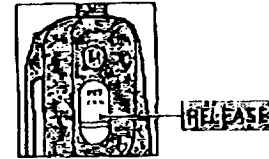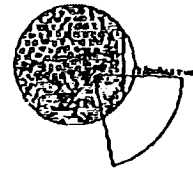

- 3 Hold mic about 2 inches from mouth. Speak in a normal voice.
- 4 Release PTT button and listen for response.

Note
Your incoming "Call" signal level is dependent on your unit volume setting.

Talking To Another Party

Note
While PTT button is depressed you cannot receive incoming calls.

7

Operation

Operation

Talk Confirmation Tone

Talk Confirmation Tone



 
Your listener will hear an audible tone when you release the PTT button.

This alerts the other party that you are finished talking and it's OK for them to begin talking.

Listening For Another Party

Listening For Another Party

When finished talking:

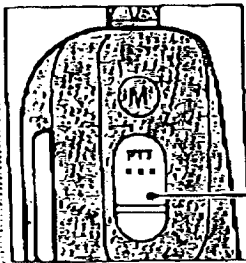


RELEASE

- 1 Release PTT button to receive incoming transmissions.


Your MicroTalk is always in listening mode when the PTT button is not pressed.

MicroTalk Range

 
Your MicroTalk Radio has a range of up to 2 miles. This effective range can be shortened under some conditions.

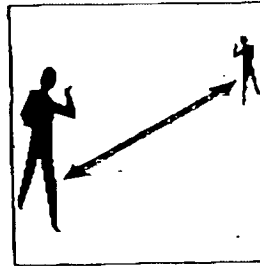

 1. Under flat, open conditions you will experience the MicroTalk's maximum range.

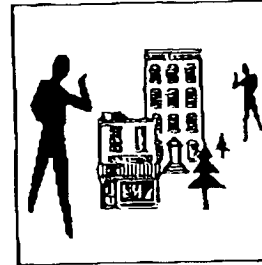

 2. Range can be reduced by buildings and foliage in the path of the signal.

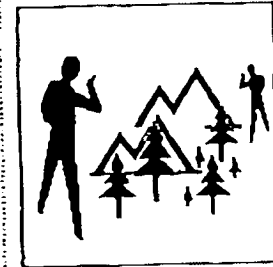

3. Range will be further reduced by dense foliage and hilly terrain.

To achieve maximum range the auto squelch can be overridden. Refer to Maximum Range Extender section on page 4.

Making Life Easier and Safer

MicroTalk 2-Way Radio Can Make Life Easier and Safer


MicroTalk 2-Way Radio Can Make Life Easier and Safer

As you become familiar with your MicroTalk Radio you will find many of your own uses for the unit.


Some suggestions include:



 
1. Talking with fellow hikers.

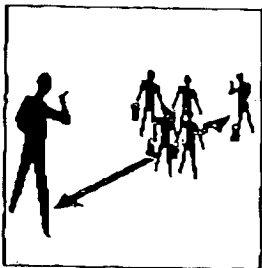

 
2. Keeping track of the kids in a shopping mall.

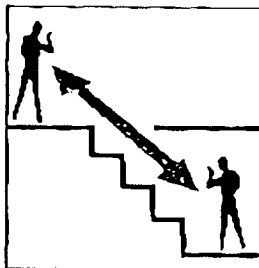

 3. Communicating between basement and first, second or third floor.

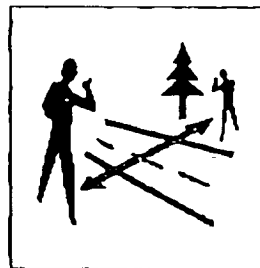

 4. Talking to a neighbor or a friend.

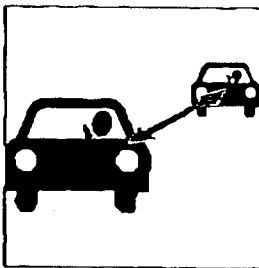

5. Checking on traveling companions in another car.



6. Agree on a meeting spot after an event.

External Microphone/Speaker Jack

Frequency Range

 
External Microphone/Speaker Jack

External Microphone/Speaker Jack


Your MicroTalk 2-Way Radio can be fitted with an external microphone/speaker, (not included) freeing your hands for other tasks.

To attach the external microphone/speaker:

Note
External microphone/speaker is not included with the unit. See Accessories on page 19 for available units.

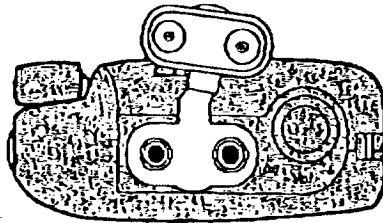

❶ Open MIC/SPKR tab on top of unit.

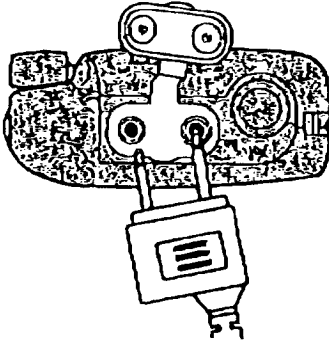 

❷ Insert jack into the MIC/SPKR ports.

The MicroTalk unit represents one of the most advanced FM two-way radios used.

Channel	FRS Channel	Channel Frequency In MHz
A	8	467.5625
B	12	467.6625

Frequency Ranges

12

13

Caring for Your *microTALK* Radio

Caring for Your MicroTalk Radio

Note

Modifying or tampering with the radio's internal components can cause malfunction and will invalidate the warranty. If your radio is not performing as it should, please call Cobra at 773.889.3087. Do not return the unit to the retailer.

 
Caring for Your MicroTalk Radio

The MicroTalk 2 Way Radio will give you years of service if cared for properly.

Here are some suggestions:



1. Handle unit gently.

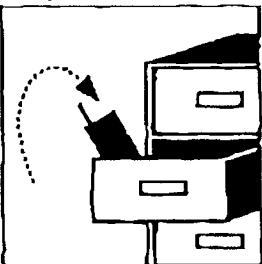

2. Keep away from dust.



3. Never place the unit in water or in a moist place.



4. Avoid exposure to extreme temperatures.

microTALK_i Specifications

microTALK_i Specifications

I. GENERAL SPECIFICATIONS

A. FREQUENCY

CH-2 CHANNELS: 467.5625 MHz and 467.6625 MHz CH 12

B. RECEIVER

	UNIT	NOMINAL
1. SENSITIVITY FOR 12 DB SINAD FOR CALL SIG. DETECTION	uV	0.25 0.2
2. MAX. AUDIO OUTPUT @ 10% THD	MW	100
3. MAX. S/N RATIO @ 1mV RF INPUT	dB	45
4. SQUELCH		
a) SENS.	uV	0.2
b) ATTACK TIME	mS	120
c) CLOSING TIME	mS	200
5. AUDIO FREQUENCY RESP.		
@ 300 HZ	dB	-6
@ 3000 HZ	dB	-6
6. SIGNAL DISPLACEMENT BW	+/- KHZ	5
7. ADJACENT CH. REJECTION	dB	55
8. INTERMODULATION REJECTION	dB	55
9. SPURIOUS RESPONSE REJECTION	dB	65

C. TRANSMITTER

	UNIT	NOMINAL
1. EFFECTIVE RADIATED POWER	mW	500
2. CARRIER FREQ. STABILITY	Hz	500
3. MODULATION LIMITING	KHz	3.0
4. CARRIER ATTACK TIME	mS	80
5. AUDIO FREQUENCY RESPONSE		
@ 300 HZ	dB	-6
@ 3000 HZ	dB	-6
6. AUDIO DISTORTION	%	1
7. HUIA NOISE	dB	45
8. TRANSIENT FREQ. BEHAVIOR		
a) TX ON	mS	30
b) TX OFF	mS	5

D. POWER SUPPLY

1. BATTERY LIFE (1:1:0 RATIO)	HR	24
2. BATTERY, AAA x 4	V	4.0 - 6.0

26-MAR-1999 06:16

773 794 1930

P.13

26-MAR-1999 19:20

+ 852 2191 7788

99%

P.14

26-MAR-1999 19:26

FROM IN-TECH ELECTRONIC LTD

TO 27855487

P.14/17

Limited Two Year Warranty

Optional Accessories

COBRA ELECTRONICS CORPORATION warrants that its COBRA 2-Way FRS Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

COBRA will, without charge, repair or replace, at its option, defective 2-Way FRS radios, products or component parts upon delivery to the COBRA factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

 
Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.



Cobra Electronics Corporation
6500 West Carland Street
Chicago, Illinois 60707

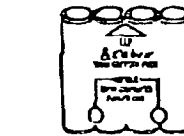

(1) NIMH Rechargeable Battery Pack

High performance Nickel Metal Hydride battery pack for multiple recharging
FA-HP \$29.95



 
2 Post Desktop Charger

Charges your MicroTalk Radio and (1) NIMH battery pack
FA-CH \$29.95




Camouflage Cover Carrying Case

Durable nylon case perfectly fits your FRS radio
FA-CC \$19.95

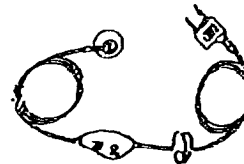


Ear Bud Mic with PTT

 Integrated speaker/mic adapter that fits in your ear. Includes shirt clip.
1AA-EBM \$29.95

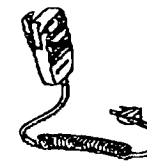


Lapel Microphone

 Remote microphone/speaker connection.
CA-40 \$25.95



Replacement Belt Clip

 FA-BC \$4.95

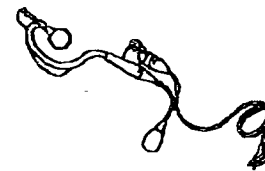

Vox Mic

VOX (Voice Operated Transmitter) adapter allows you hands-free operation.
MA-VOX \$49.95

You Can Find These Fine Accessories At Your Local Cobra Dealer

If you wish, you can order directly from Cobra.

Order by phone
Call 1.773.889.3087
(Press 1 from the main menu) 8 a.m.-8 p.m. M-F CST.)

Order by mail or fax
Please fill out order form on next page, and mail/fax directly to Cobra.

Accessory Order Form

Item #	Description	Cost Ea.	Qty.	Amount
FA-BP	NSAM Rechargeable Battery Pack	\$29.95		
MA-EBM	Ear Bud Mic with PTT	\$29.95		
MA-VOX	Vox Mic	\$49.95		
FA-CH	2 Port Desktop Charger	\$29.95		
CA-40	Lapel Microphone	\$25.95		
FA-CC	Camouflage Cover Carrying Case	\$19.95		
FA-BC	Replacement Belt Clip	\$4.95		

Prices subject to change without notice.

Part 916
 Illinois residents add 7%
 Cook Co. residents add 7.25% (7.25% total)
 Chicago residents add 7.1% (7.25% total)
 Indiana residents add 5%
 Michigan residents add 6%
 Minnesota residents add 6%
 Ohio residents add 6%
 Wisconsin residents add 5%

Subtotal _____
 (Tax if applicable) _____
 Shipping/handling **\$4.00**
 Total _____

For credit card orders fill out order form and fax to: 1.773.622.2269 or call 1.773.889.3687 (Press 1 from the main menu) 8:00 am - 8:00 pm, M-F, CST.

Make check or money order (no stamps) payable to: Cobra Accessories Dept. 6500 West Cortland St. Chicago, IL 60707

Please print clearly

Name _____

Address (No P.O. Box) _____

City _____ State _____

Zip _____

Telephone (____) _____

Credit Card No. _____ Exp. Date _____

Customer Signature _____

Circle One: Visa MasterCard Discover

Allow 4 to 6 weeks for delivery. Offer valid in Continental U.S. only.



Cobra Electronics Corporation
6500 West Cordland Street
Chicago, IL 60707

If You Think You Need Service

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

(773) 889-3087

24 hours a day, 7 days a week.

A Consumer Service Representative can be reached through this same number 8:00 am - 8:00 pm, Monday through Friday, CST.

Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section at www.cobraelec.com or by e-mail to productinfo@cobraelec.com

If you think you need service call 1.773.889.3087

"If your product should require factory service please call Cobra first before sending your unit in. This will ensure the fastest turn-around time on your repair."

You may be asked to send your unit to the Cobra factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair Include some form of proof-of-purchase, such as a mechanical reproduction or carbon or a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly print name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail to avoid loss in transit to: Cobra Factory Service, Cobra Electronics Corporation, 6500 W. Cordland St., Chicago, IL 60707.
6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 1.773.889.3087 for assistance.

Cobra Electronics Corp. © 1998
Printed in Thailand

Part No. 490-278-P-001

Part No.: 937442