

Field Notes



Concord 4 Programming Chart

Tier 2 Menus

SYSTEM PROGRAMMING	SECURITY	PHONES
Demo Kit On Off Partition 1 Copy Clear Memory Exit Programming #	GLOBAL Downloader Code 12345 (0000) Installer Code 4321 (0001) Dealer Code **** (0002) Access Code Lock On Off (0003) Ptn Security On Off (0004) Multi Ptn Arm None (0005) Keychain TP Ptn (0006)	PARTITION Account Number 00000 (0010 - 0060) Quick Arm On Off (0011 - 0061) Quick Exit On Off (0012 - 0062) Exit Extension On Off (0013 - 0063) Keyswitch Sensor None (0014 - 0064) Keyswitch Style Transition State (0015 - 0065) Duress Code **** (0016 - 0066)
	CS PHONE 1 Phone Number None (01000) High Lvl Rpts On Off (01001) Low Lvl Rpts On Off (01002) Exception Rpts On Off (01003) Open/Close Rpts On Off (01004) Backup On Off (01005) Reporting Format SIA CID (01006) Cellular Backup On Off (01007)	CS PHONE 2 Phone Number None (01010) High Lvl Rpts On Off (01011) Low Lvl Rpts On Off (01012) Exception Rpts On Off (01013) Open/Close Rpts On Off (01014) Backup On Off (01015) Reporting Format SIA CID (01016) Cellular Backup On Off (01017)
	CS PHONE 3 Phone Number None (01020) High Lvl Rpts On Off (01021) Low Lvl Rpts On Off (01022) Exception Rpts On Off (01023) Open/Close Rpts On Off (01024) Backup On Off (01025) Reporting Format SIA CID (01026) Cellular Backup On Off (01027)	

PHONES (cont.)



#▼ ▲*	PAGER 1	PAGER 2	PAGER 3	PAGER 4	PAGER 5	DOWNLOADER PHONE
#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*
	Phone Number None (01030)	Phone Number None (01040)	Phone Number None (01050)	Phone Number None (01060)	Phone Number None (01070)	Phone Number None 01090
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	High Lvl Rpts On Off (01031)	High Lvl Rpts On Off (01041)	High Lvl Rpts On Off (01051)	High Lvl Rpts On Off (01061)	High Lvl Rpts On Off (01071)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Low Lvl Rpts On Off (01032)	Low Lvl Rpts On Off (01042)	Low Lvl Rpts On Off (01052)	Low Lvl Rpts On Off (01062)	Low Lvl Rpts On Off (01072)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Exception Rpts On Off (01033)	Exception Rpts On Off (01043)	Exception Rpts On Off (01053)	Exception Rpts On Off (01063)	Exception Rpts On Off (01073)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Open/Close Rpts On Off (01034)	Open/Close Rpts On Off (01044)	Open/Close Rpts On Off (01054)	Open/Close Rpts On Off (01064)	Open/Close Rpts On Off (01074)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Latchkey Rpts On Off (01035)	Latchkey Rpts On Off (01045)	Latchkey Rpts On Off (01055)	Latchkey Rpts On Off (01065)	Latchkey Rpts On Off (01075)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Streamlining On Off (01036)	Streamlining On Off (01046)	Streamlining On Off (01056)	Streamlining On Off (01066)	Streamlining On Off (01076)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
	Ptn Assignment 1 2 3 4 5 6 (01037)	Ptn Assignment 1 2 3 4 5 6 (01047)	Ptn Assignment 1 2 3 4 5 6 (01057)	Ptn Assignment 1 2 3 4 5 6 (01067)	Ptn Assignment 1 2 3 4 5 6 (01077)	

PHONE OPTIONS		TIMERS		LIGHT CONTROL
GLOBAL	PARTITION	GLOBAL	PARTITION	PARTITION
Phone Test On Off (02000)	Local Phone Ctrl On Off (0210 - 0260)	Supervisory Time 1:00 - 4:00 (Random) (0300)	Entry Delay 30 sec (30-240) (0310 - 0360)	Entry Lights None (3-9) (0400 - 0450)
Auto Phone Test On Off (02001)	Remote Access On Off (0211 - 0261)	RF Tx Timeout 12 hours (2-24) (0302)	Exit Delay 60 sec (45-184) (0011 - 0061)	House Code 1B 2C 3D 4E 5F 6G (0401 - 0451)
Auto Test Reset On Off (02002)	Ring/Hang/Ring On Off (0212 - 0262)	Phone Test Freq. 7 days (1-255) (0303)	Extended Delay 4 min (1-8) (0312 - 0362)	
Comm Failure On Off (02003)	Line Fail Delay None (10-240 sec) (0213—Ptn 1 only)	Next Phone test 7 days (1-255) (0304)	Siren Timeout 4 min (1-30) (0313 - 0363)	
DTMF Dialing On Off (02004)	Toll Saver On Off (0214 - 0264)	Output Trip Time 4 sec (1-12) (0305)	Sleep Time 22:00 (00:00-23:50) (0314 - 0364)	
Dial Abort Delay 30 sec (15-45) (02006)	Phone Panic On Off (0215 - 0265)	Activity Timeout 24 hours (1-42) (0306)	No Usage time none (2-255 min) (0315 - 0365)	
Cancel Message On Off (02007)	Phone ACC Key # * (0216 - 0266)	Daylight Saving On Off (0307)		
Pager Delay 15 sec (0-30) (02008)				
Call Wait Cancel On Off (02009)				
Dial Tone Detect On Off (02010)				

B▶
◀A

**TOUCHPAD
OPTIONS**

#▼ ▲*

GLOBAL B▶
◀A

#▼ ▲*

Latchkey Zones
None (1-96)
(0500)

PARTITION

#▼ ▲*

Fire Panic
On Off
(0510 - 0560)
B▼ ▲A

Auxiliary Panic
On Off
(0511 - 0561)
B▼ ▲A

Police Panic
On Off
(0512 - 0562)
B▼ ▲A

Keychain TP Arm
On Off
(0513 - 0563)
B▼ ▲A

Star is No Delay
On Off
(0514 - 0564)

B▶
◀A

REPORTING

#▼ ▲*

GLOBAL B▶
◀A

#▼ ▲*

24-Hour Tamper
On Off
(06000)
B▼ ▲A

PARTITION

#▼ ▲*

Opening Reports
On Off
(06100 - 06600)
B▼ ▲A

Antenna Tamper
On Off
(06001)
B▼ ▲A

Buffer Control
On Off
(06002)
B▼ ▲A

Back In Service
On Off
(06003)
B▼ ▲A

Bypass Reports
On Off
(06004)
B▼ ▲A

Low CPU Battery
On Off
(06005)
B▼ ▲A

Battery Restoral
On Off
(06006)
B▼ ▲A

Buffer Full Report
On Off
(06007)
B▼ ▲A

Zone Restorals
On Off
(06008)
B▼ ▲A

Two Trip Error
On Off
(06009)
B▼ ▲A

TP Panic Rpt Fmt
On Off
(06010)
B▼ ▲A

AC Failure
On Off
(06011)
B▼ ▲A

Receiver Failure
On Off
(06012)
B▼ ▲

Closing Reports
On Off
(06101 - 06601)
B▼ ▲A

No Activity
On Off
(06102 - 06602)
B▼ ▲A

Duress Option
On Off
(06103 - 06603)
B▼ ▲A

Force Armed
On Off
(06104 - 06604)
B▼ ▲A

Latchkey Format
On Off
(06105 - 06605)
B▼ ▲A

Freeze Alarm
On Off
(06106 - 06606)
B▼ ▲A

Freeze Temp
42 (40-90)
(06107 - 06607)
B▼ ▲A

Alarm Verify
On Off
(06108 - 06608)
B▼ ▲A

System Tamper
On Off
(06109 - 06609)
B▼ ▲A

Report Confirm
On Off
(06111 - 06611)

Bypass Reports
On Off
(06004)
B▼ ▲A

Low CPU Battery
On Off
(06005)
B▼ ▲A

Battery Restoral
On Off
(06006)
B▼ ▲A

Buffer Full Report
On Off
(06007)
B▼ ▲A

Zone Restorals
On Off
(06008)
B▼ ▲A

Two Trip Error
On Off
(06009)
B▼ ▲A

TP Panic Rpt Fmt
On Off
(06010)
B▼ ▲A

AC Failure
On Off
(06011)
B▼ ▲A

Receiver Failure
On Off
(06012)
B▼ ▲

Force Armed
On Off
(06104 - 06604)
B▼ ▲A

Latchkey Format
On Off
(06105 - 06605)
B▼ ▲A

Freeze Alarm
On Off
(06106 - 06606)
B▼ ▲A

Freeze Temp
42 (40-90)
(06107 - 06607)
B▼ ▲A

Alarm Verify
On Off
(06108 - 06608)
B▼ ▲A

System Tamper
On Off
(06109 - 06609)
B▼ ▲A

Report Confirm
On Off
(06111 - 06611)

RF Low Bat Rpt
Daily Weekly
(06013)
B▶
◀A

Swinger Limit
1 (1-2)
(06015)
B▶
◀A

RF Supv Rpt
Daily Weekly
(06014)
B▶
◀A

Aux Power Fail
On Off
(06016)

Ground Fault
On Off
(06017)
B▼ ▲A

B▶
◀A

SIREN OPTIONS

#▼ ▲*

GLOBAL

#▼ ▲*

Immediate Beeps
On Off
(0700)

B▼ ▲A

Disable Trbl Beeps
On Off
(0701)

B▼ ▲A

UL 98 Options
On Off
(0702)

B▼ ▲A

Global Fire
On Off
(0703)

B▼ ▲A

Silent Panic
On Off
(0704)

PARTITION

#▼ ▲*

Siren Verify
On Off
(0710—Ptn 1 only)

B▶
◀A

SENSORS

#▼ ▲*

LEARN SENSORS (080)

#▼ ▲*

Sensor Partition
1 2 3 4 5 6

#▼ ▲*

Sensor Group
0

#▼ ▲*

Trip Sensor
n

SENSOR TEXT (081)

#▼ ▲*

Text for Sensor
n

#▼ ▲*

Sensor n Item 0
0 -

#▼ ▲*

DELETE SENSORS (082)

#▼ ▲*

Delete Sensor
n

#▼ ▲*A

Delete Sensor n
Done

EDIT SENSORS (083)

#▼ ▲*


Sn P1 Gnn
NC/NO/TP
RF/HW

#▼ ▲*

Sensor Partition
n

#▼ ▲*

Sensor Group
n

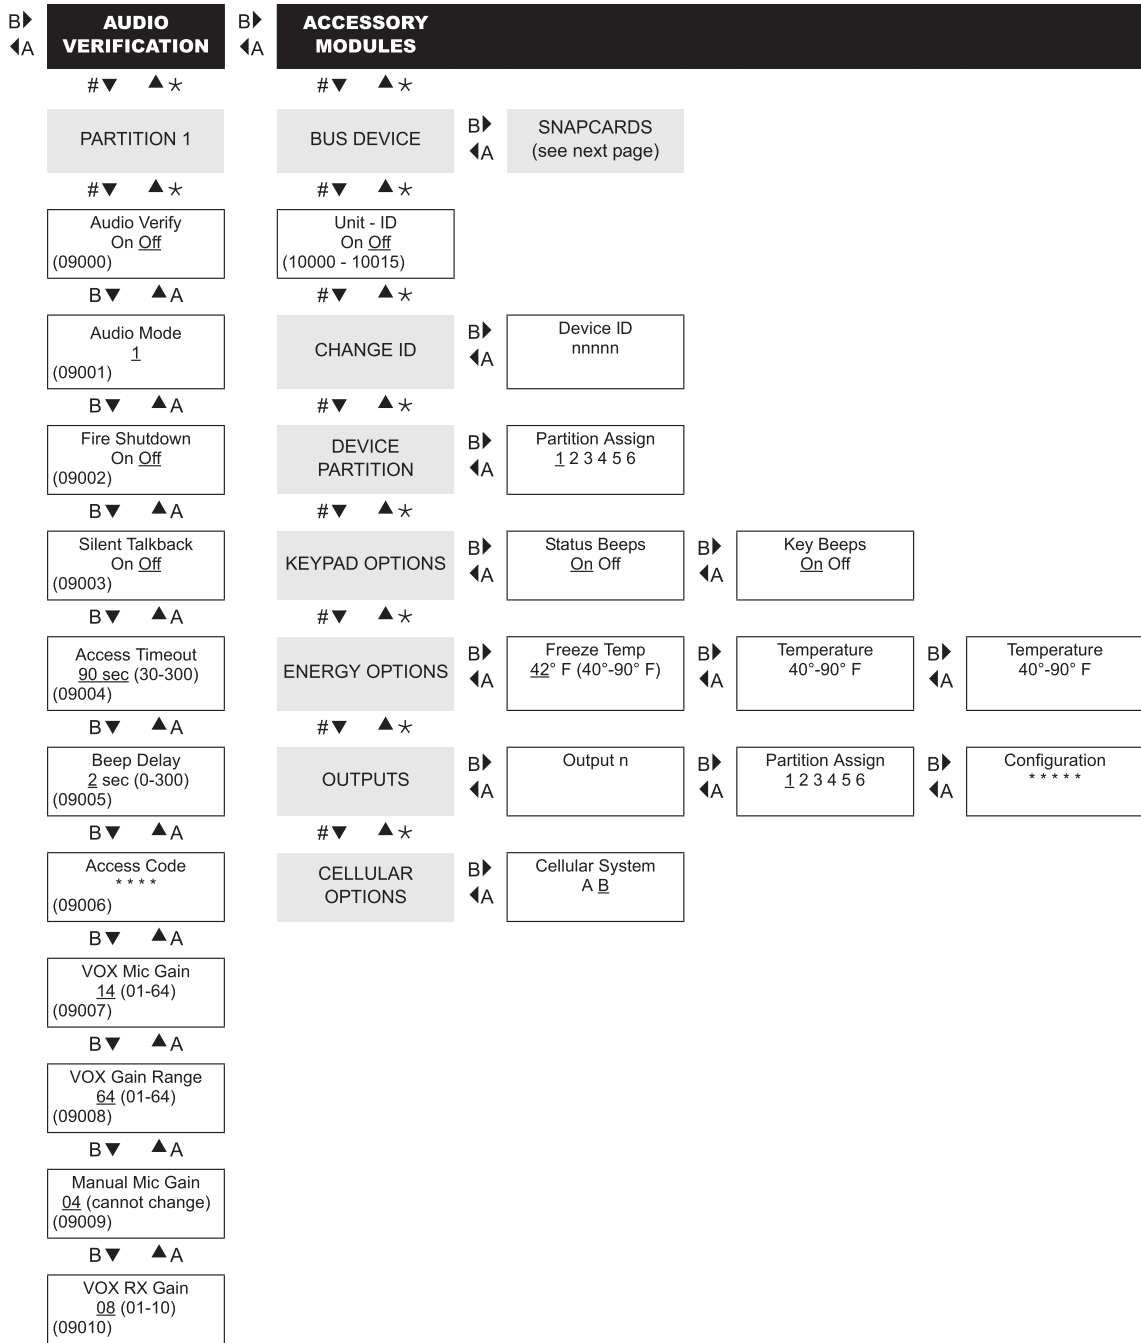

ACCESSORY MODULES (cont.)

B ▶ SNAPCARDS
◀ A

