

Model No. 403XX
Operation Instruction

Preparation

1. Battery used on Transmitter is 6 pcs of Alkaline 'AA' batteries. Open the battery cover on the Transmitter, insert 6 pcs 'AA' Alkaline batteries inside the battery compartment and cover the battery door.
2. Screw in the antenna on the Transmitter
3. The battery on the helicopter is rechargeable battery, which is charge by a charging connector coming out from the Transmitter.

Charging the helicopter battery

Connect the charge connector on the Transmitter to the charge connector at the bottom of the helicopter.

2. Slide the switch on the Transmitter to the upper position and the light on the transmitter will turn red while charging battery. The charging time requires about 20 minutes but the charger circuit inside the Transmitter can prevent it from overcharging.

Flying the Helicopter

1. Please find an indoor place which has as few obstacle as possible
2. Please try to close all windows so that there is no wind or moving air
3. Switch on the micro switch at the bottom p1 the helicopter (slide the switch to the back)
4. Place the helicopter carefully on the ground
5. Extend the antenna on the Transmitter to full length
6. Slide the switch on the Transmitter to the upper position, the light will turn green.
7. The left stick control the helicopter move up and down, firstly reset the left stick to the lowest position. Then 2radually move the stick up, you will see both rotor start to accelerate and up to a certain speed, the helicopter will start to go up. Then you can continue to move the stick up or down carefully to keep the helicopter at certain height. Try to avoid moving the stick too quickly.
8. The right stick control the helicopter move forward/backward and also turn left/right. The control is as follow:
 - If the right stick is pushed up from middle to the top, the helicopter will start to go forward.
 - If the right stick is pushed down from middle to the bottom, the helicopter will start to go backward.
 - If the right stick is pushed to the right side, the helicopter will start to turn right.
 - If the right stick is pushed to the left side, the helicopter will start to turn left.
9. If you feel you can no longer keep the height of the helicopter, that means the battery on the helicopter is running out and you need to re-charge the battery again.

10. After landing, please switch off the helicopter (slide the micro switch at the bottom of helicopter to the front).

INSTRUCTION TO THE USER

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.