

PLEASE! DO NOT RETURN THIS PRODUCT TO ANY RETAIL STORE!

FURTHER INQUIRIES OR PROBLEMS

For further inquiries please contact us
via email at info@interactivetoy.com
or via telephone, toll-free inside North America 1-866-214-2220
or outside North America (416)-444-6873 ext 220

Our mailing address is

Interactive Toy Concepts, Ltd., 17 Vulcan Street, Toronto, Ontario, Canada, M9W 1L3

Web site: www.interactivetoy.com

WARNING: CHOKING HAZARD - SMALL PARTS! NOT FOR CHILDREN UNDER 3!

ADDITIONAL TROUBLESHOOTING INFORMATION

If your particular issue is not covered by any of the preceding troubleshooting tips, you will find the most up-to-date solutions at www.interactivetoy.com.

REPLACEMENT PARTS

To order replacement parts directly from Interactive Toy Concepts, Ltd., visit www.interactivetoy.com, click on the Customer Support Tab, click on Order Parts on-line.

IMPORTANT SAFETY INFORMATION

Do not modify your B-2® Spirit RC plane! Any changes or modifications to this product are strictly prohibited and will void product warranty. Do not attempt to charge the B-2® Spirit RC plane from any other source other than the charger provided to charge the lithium polymer battery or you will void the warranty! Any attempts at charging other products with the charger are strictly prohibited and will void the warranty! The lithium polymer battery is permanently built-in to the B-2® Spirit RC plane. Any attempts to tamper with or remove the lithium polymer battery inside the B-2® Spirit RC plane are strictly prohibited and will void the warranty. Do not point the controller's antenna directly at the plane! Use the B-2® Spirit RC plane outdoors only. Do not use in strong winds, use only in VERY mild conditions! Do not use in rain, snow or around heavy debris! Do not use near electrical lines or high voltage wires or other sources of electricity! Do not use around smoke or flames! Do not use around water and other liquids! Do not use in crowded areas! Do not use around air conditioning or air vents! Do not use around large obstacles! Do not use in very small outdoor spaces! Do be conscious of changes in your area! Keep spinning propellers away from eyes, hands, hair and loose clothing. Always turn off your B-2® Spirit RC plane, controller, and charger when not in use. Always remove the batteries from the controller and charger during storage. Always use new and fresh alkaline batteries in the controller and charger for optimal performance. Battery performance will greatly influence flight characteristics. Keep your B-2® Spirit RC plane instruction manual in a safe place for future reference. We reserve the right to make improvements to the design of the plane. Thus, your aircraft and charger may vary slightly from that depicted in the photographs in this manual or the packaging. Parental supervision required.


IMPORTANT BATTERY INFORMATION

Use only batteries recommended in this instruction manual. Do not mix old and new batteries. Do not mix alkaline, standard, lithium, rechargeable, or different types of batteries. Do not use rechargeable batteries. Be careful to install the batteries with the correct polarity, as indicated. Battery should be replaced by adults. Rechargeable batteries are only to be charged under adult supervision. Never leave a battery unattended while it is being charged. Never leave a battery unattended in the presence of children. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Do not throw batteries into the fire. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. B-2® Spirit RC Plane charging time will increase with usage as the condition of the C cells diminish. The B-2® Spirit RC Plane set takes one 9V battery and 4 "C" size batteries (not included).

Limited 30-day Warranty

Product is warranted by Interactive Toy Concepts, Ltd. against manufacturing defects in material and workmanship under normal use for thirty (30) days from the date of purchase.

Warranty is validated upon receipt of proof of purchase and confirmation of UPC code.

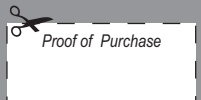

INDUSTRY CANADA NOTICE: CANADA ONLY

This radio communication device complies with all the requirements of Industry Canada Standard RSS-310. Operation is subject to the following two conditions:
1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.
Field Strength and measurement distance: 27.145MHz - 61.35 dBµV/m at 3 meter.
49.800MHz - 53.00 dBµV/m at 3 meter.

FCC NOTE: U.S. ONLY

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna - increase the separation between the equipment and receiver - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.



Manufactured under license from Northrop Grumman Systems Corporation. B-2® is a registered trademark of Northrop Grumman Corporation. Manufactured by and distributed by Interactive Toy Concepts Ltd. Conforms to Safety Standards ASTM F963 Regulatory Requirements. Products and colors may vary. MADE IN CHINA.

4

WARNING!

The B-2® Spirit RC plane is a delicate machine. Before removing it from the packaging please read the instructions. Even experienced pilots should read the full contents of this manual carefully to get the most out of the flying experience.

Look for these **TIP!** symbols for extra help!



AGE 12+

INSTRUCTION MANUAL



Congratulations on the purchase of your new B-2® Spirit Bomber RC Plane from Interactive Toy Concepts! The B-2® Spirit is the world's premier bomber. It is the only bomber capable of carrying large air-to-surface standoff weapons while under stealth configuration. Your RC version of the B-2® Spirit is designed for easy flight with a short learning curve! The B-2® Spirit RC plane is available in two frequencies, 27MHz and 49MHz. Before taking to the air with your new B-2® Spirit RC plane from Interactive Toy Concepts, please read through the instructions outlined in this manual.

GET IN THE AIR FAST!

To fly your new B-2® Spirit RC plane just follow these basic quick start instructions. A more in-depth explanation of your B-2® Spirit's operation is included elsewhere in this manual.


1 CHARGE YOUR B-2® SPIRIT

Before flying, you will need to charge your plane. Turn off your plane and the charger. Plug in the charger (with 4 C-size batteries) into the bottom of your plane and turn it on. Charging will start immediately. Let your plane charge until the green light on the charger goes out. It will take 30 to 60 minutes.



2 FLYING YOUR B-2® SPIRIT

Once fully charged your plane will be ready to fly outdoors in a safe grassy area with very moderate conditions or a gentle breeze. Make sure your controller has the antenna screwed in and fully extended, and the 9-Volt battery correctly installed. Turn on your plane and the controller. Hold the plane firmly in one hand, and move the left stick all the way up and down to initialize the throttle control. Move the left stick (throttle) up and down again to make sure that both propellers are working. Once you are sure that the plane is working correctly, move the left stick up to the maximum position and gently toss the plane into the wind. Way to go! You are now flying!

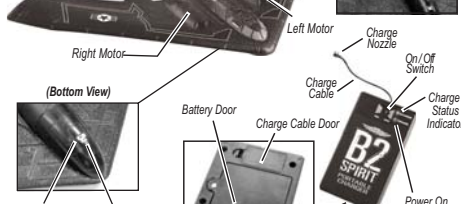

3 SPEED AND ALTITUDE CONTROL


To increase speed and altitude as desired, add more throttle with the left stick. To slow down and land, gently reduce the throttle input with the left stick.

4 LEFT AND RIGHT TURNS

To turn left and right, move the right stick from sideways left or right.

TIP! TRIMMING YOUR B-2® SPIRIT

If you find that your plane is veering to the left or to the right without any steering inputs, you can compensate for this by rotating the trim knob to the left or right as needed.

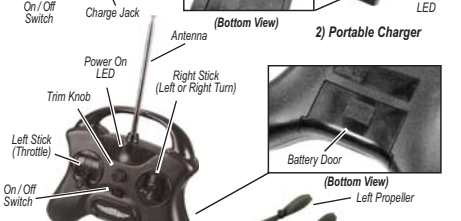

UNPACKING YOUR B-2® SPIRIT RC PLANE

To prevent damage during shipping the B-2® Spirit is securely fastened in the package. Please ensure that all of the fastening locations are released before attempting to remove the B-2® Spirit. Be very careful when removing the B-2® Spirit to prevent damaging it. While it is a state of the art precision instrument, it is also a delicate device.

3) Controller with detachable antenna

- COMPLETE PACKAGE CONTENTS AND COMPONENT BREAKDOWN:**
- 1) 1 x B-2® Spirit plane
 - 2) 1 x Instruction Manual
 - 3) 1 x Portable Charger
 - 4) 1 x B-2® Spirit plane
 - 5) 1 pair x Extra Propellers

PLEASE DO NOT RETURN THIS PRODUCT TO ANY RETAIL STORE!

1

INS-44070-101215-US