

Press I/O to turn on the CK30.

When you turn on the CK30, the screen turns on.
If the screen does not turn on, install a charged battery.




Check the battery level.




If the battery is empty, change it.

- 1 Press down on the latch and lift the battery out of the CK30.
- 2 Insert the tabs on the new battery into the bottom of the opening.
- 3 Press the battery in place to snap the latch.

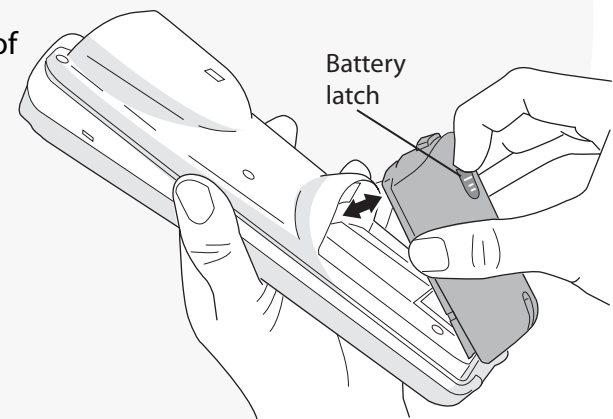


Press to turn on the backlight.

The backlight makes the screen easier to see in dark areas.

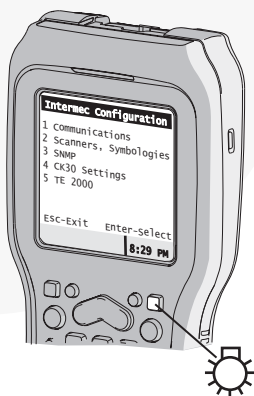

Change the contrast.



Press and release the **Orange** key and then press and release  to change the contrast.



Scan a bar code.


- 1 Point the CK30 at the bar code.
- 2 Press the Scan button or pull the trigger. A red aiming beam appears near the bar code.
- 3 Move the CK30 so the aiming beam lies across the bar code. When the CK30 beeps, the bar code has been scanned.

Scan button

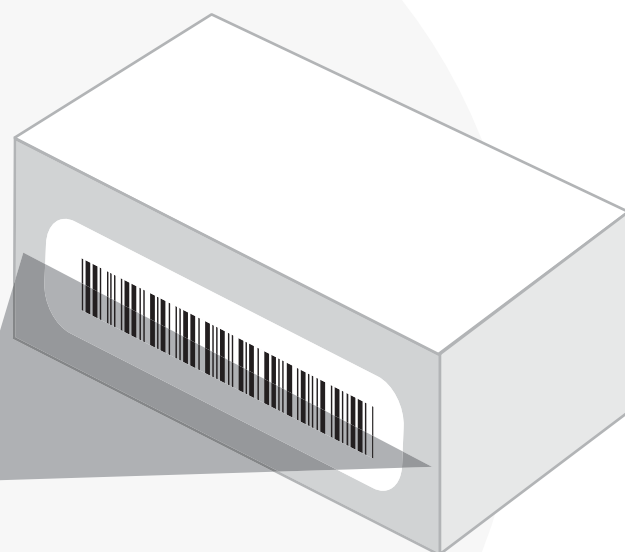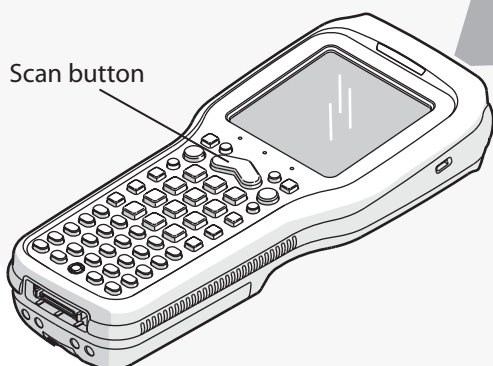

Depending on the kind of scanner your CK30 has, you may need to move the CK30 closer to or farther from the bar code.

Change the beep volume.

Press and release the **Green** key and then press and release  to change the beep volume.

