

INTEX® OWNER'S MANUAL

FastFill™ Electric Pump

English

20
POModel **AP619DA 110V – 120V ~ 60Hz 0.9A**

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

 


WARNING



Babies Can Suffocate

To prevent suffocation and death, never place a baby 15 months old or younger on this product.

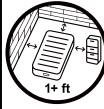

Child Entrapment Hazard

Always position product 1ft (30cm) or more away from objects such as walls and dressers to prevent a child from being entrapped.

Keep product fully inflated when in use.


To reduce the risk of burns, fire, electric shock, or injury to **persons**:

- **Never** introduce any flammable substance into the inflatable **air bed**, SUCH AS AEROSOL TIRE REPAIR PRODUCTS, as it may ignite or explode.
- For indoor household use only.
- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disable persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- This is not a toy. Children must not be left unattended when using the **air bed**.
- If a storage bag is included, keep the storage bag away from babies and children. The storage bag is not a toy. When not in use, fold the bag and put it away out of the reach of children.
- Do not walk, stand on or jump on or use the **air bed** as a trampoline.
- Do not use on or near water. This is not a raft.
- Do not set up bed near stairs, doors, sharp edges or breakable objects. Provide adequate space between bed and objects to avoid entrapment.
- Make sure the area is flat, smooth, free of sharp objects that could puncture the bed and keep away from ledges.
- Keep pets away from the **air bed**. Pets may puncture the surface of the bed.
- Avoid sleeping on the edge of the **air bed**. Edges produce less support than the middle of the bed.
- Do not operate air pump for more than 5 minutes at a time. Let pump cool at least 15 minutes between use.
- Unplug electrical power cord when not in use. To disconnect, turn all controls to the off position, then remove plug from outlet.
- Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like. Never drop or insert object into any opening.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and / or repair.
- If the AC supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. Keep the cord away from heated surfaces.

 
FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID SUFFOCATION, PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

 
READ AND SAVE THESE INSTRUCTIONS

SERVICING OF A DOUBLE-INSULATED PRODUCT:

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing of a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to those parts in the product. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED" and with the symbol .

OPERATING INSTRUCTIONS**General**

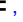- The air pump can also be controlled via the Intex Air Mattress Remote App from your mobile device, see "Intex Air Mattress Remote App" section for details.
- The USB power socket is suitable for charging mobile devices such as smartphones and tablets. Output rating: 5 V , 2.0 A.
- Air beds are designed for temporary use and are NOT designed to be a replacement for a traditional mattress.
- Make sure the area is flat, level, clean and free from sharp objects, and within reach of an electrical outlet.
- The appliance must be positioned so that the plug is accessible.
- To prevent puncture or damage to the air bed, never drag the air bed across the floor. Lift the inflated air bed when moving or changing location.
- No air pump maintenance is required.
- For cleaning use only clean cloth with mild soapy solution. Do not use any chemicals.
- In case of repairs, use only common PVC repair glue and patches. For flocked surfaces: rub away the flocking material with an eraser first before applying the glue and/or patch.

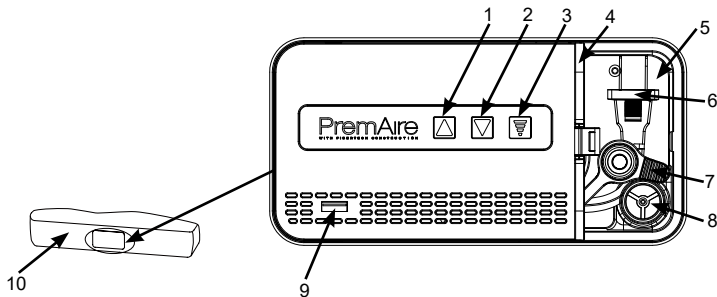PARTS REFERENCE**Part Descriptions:**

- | | |
|--|---|
| 1. Inflation button () | 5. AC line cord |
| 2. Deflation button () | 7. Manual inflation port cap |
| 3. Deflation adjustment button () | 8. Manual inflation port |
| 4. Cord compartment cover | 9. USB power socket (5 V  , 2.0 A) |
| 5. Cord compartment | 10. Air bed front |

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale. Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual, without notice.

READ AND SAVE THESE INSTRUCTIONS

INFLATION

1. Open cord compartment cover and remove power cord. See Fig (1).

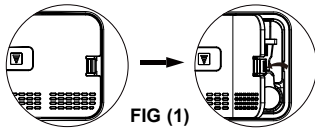 


FIG (1)

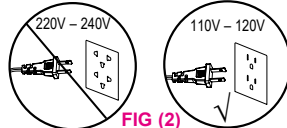 


FIG (2)



2. Plug in the AC power cord into an AC electrical outlet. See Fig (2).
3. Press the inflation button () to inflate. See Fig (3).
4. When the air bed is inflated to the desired firmness, press "  " again to switch OFF.
Note: The pump will automatically switch OFF after about five and half minutes of operation when the pump is left unattended or when air bed is fully inflated.




FIG (3)






FIG (4)



FIG (5)

5. Lie down on the **air bed** to test the firmness.
6. If the air bed feels too firm, adjust the firmness by pressing the deflation button () to deflate. See Fig (4).

NOTE: This will start deflating the air bed **quickly**, press "  " again to switch OFF after a second or so. **Test the firmness and repeat for a second at a time until you have reached the desired firmness.**

Alternatively, you can do this process by pressing the deflation adjust button "  ", which will allow air to be released slowly and short. See Fig (5). It will automatically return to the closed state after completion, press "  " again to repeat deflating until the air bed reaches the desired firmness.

IMPORTANT NOTE


Proper inflation of the **air bed**.

 
The ambient temperatures of air have an effect on the **air bed** internal pressure. At low ambient temperature the air will contract within the **air bed** and the **air bed** will feel softer: add air as necessary. At high ambient temperature the air within the **air bed** will expand significantly and the **air bed** will become hard and may burst: release air to avoid damage to the **air bed** or to soften the feel. Do not expose the **air bed** to extreme temperatures (hot or cold). Stretching is a natural characteristic of new vinyl. During initial use, the **air bed** may become soft and require additional inflation to maintain desired firmness. This is normal for the first few days of use. Dimensions shown are approximate and will vary due to the vinyl temperature and the air temperature.


In no event shall Intex, their authorized agents or employees be liable for damages (such as pin holes) to the **air bed caused by negligence, ordinary wear and tear, abuse and carelessness, or external forces.**

READ AND SAVE THESE INSTRUCTIONS

DEFLATION

1. Plug in the AC power cord into an AC electrical outlet. See Fig (2).
2. Press the deflation button () to deflate. See Fig (6).

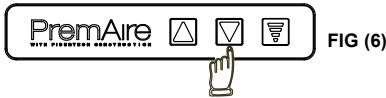

 
3. When all the air is removed from the **air bed**, press "  " again to switch OFF.
Note: The pump will automatically switch OFF after about five and half minutes of operation when the pump is left unattended.
4. With the **air bed** fully deflated begin rolling the **air bed** from the end opposite of the pump towards the end where the pump is located. See Fig (7).
5. Disconnect the AC power cord from the electrical outlet, coil the line cord and place it inside the cord compartment, then close the cover. Make sure the power cord is free of twists, kinks or knots.

MANUAL INFLATION OPTION

If electrical power is not available, a conventional foot, manual, or battery-operated air pump can be used by connecting it to the manual inflation port located inside the line cord compartment. See Fig (8). Follow these steps:

1. Open line cord compartment cover.
2. Remove the cap from the manual inflation port and insert the nozzle of the pump into the port. Inflate the airbed to desired firmness.

NOTE: Do not overinflate. The firmness should be approximately the same as the level achieved with the internal electric pump.

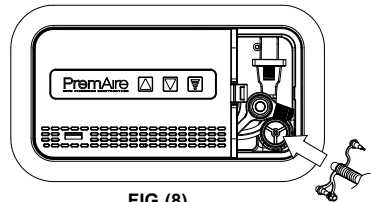

3. Remove nozzle from manual inflation port and close the cap and the line cord cover.

STORAGE INSTRUCTIONS

1. Deflate the **air bed** following the "DEFLATION" instructions.
2. Make sure the **air bed** is clean and dry.
3. Lay the **air bed** flat with the sleeping surface facing upwards and follow the folding steps on Figs (9 - 13). Fold the **air bed** loosely and avoid sharp bends, corners and creases which can damage the **air bed**.



FIG (9)



FIG (10)



FIG (11)

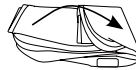 


FIG (12)



FIG (13)

4. Place the **air bed** inside the storage bag and store in a dry place.

READ AND SAVE THESE INSTRUCTIONS

Intex® Air Mattress Remote App Setup User Guide



APP QR Code

The App allows you to operate and control the electric air pump via Bluetooth from a mobile device. Follow below steps to install and use the App:

- 1) Activate the Bluetooth function on the mobile device and ensure the air pump is plugged into an electrical outlet and the interface panel light is on. **NOTE:** Keep the mobile device within 5m (16ft) range of the air bed to ensure good signal and connectivity.
- 2) Scan the App QR code located on the pump panel or on this manual to install the App. You may also download the "Intex Air Mattress Remote App" from your App store.
- 3) Open the App and select the **air bed** to be connected from the "Add Product" list. Tap on the **air bed** name to rename it for easy identification. You can only connect to one **air bed** at a time.

NOTE: On mobile devices with older operating system, you may be prompted to allow the App to access your device's location and information. If so, please allow the app to access the location and information of the device in order to achieve a successful connection between the device and the electric air pump of the air bed.

4) App control interface operation:

- **INFLATE (^)**: Touch this button to activate the inflation function. When the inflation is completed, touch the " □ " button to stop the pump.
- **STOP (□)**: Touch this button to stop the pump at any time.
- **ADJUST (≡)**: Touch this button to release a small and short amount of air at a time.
- **DEFLATE (v)**: Touch this button to activate the deflation function. When the deflation is completed, touch the " □ " button to stop the pump.

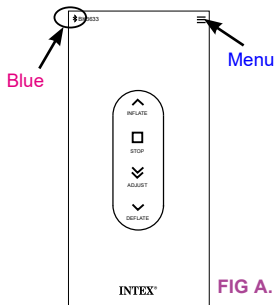 


FIG A.

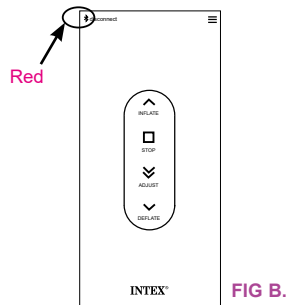 


FIG B.

1. Touch the menu icon on the top right corner and select language to change the App control interface language. See Fig A.
2. A blue Bluetooth icon means a successful connection, while a red icon means a failed connection. See Fig A - B. Refer to the "App Troubleshooting" section for details.

READ AND SAVE THESE INSTRUCTIONS

APP TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Bluetooth connection failed	<ul style="list-style-type: none"> Mobile device Bluetooth not activated. Out of range. The pump is not powered on. The connected Bluetooth is not the current pump Bluetooth. 	<ul style="list-style-type: none"> Activate the Bluetooth function on the mobile device. Make sure the mobile device is within 5 m (16 ft) of the product to be connected. Make sure the pump is powered on. Make sure that the pump Bluetooth connection correspond to the pump on the air bed to be connected with. Close the App, re-launch the App and try to connect the air bed with your mobile device again.
App does not work or respond	<ul style="list-style-type: none"> The App does not load. 	<ul style="list-style-type: none"> Force-quit the App, re-launch the App and try to connect the air bed with your mobile device again. Uninstall the App and reinstall it again.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-005 (B)/NMB-005 (B)

©2022 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/ a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Ettenseweg 46, 4706 PB Roosendaal - The Netherlands • Distributed in the UK by Uniflex Service (UK) Limited, 21 Holborn Viaduct, London EC1A 2DY, UK.

www.intexcorp.com

INTEX®

READ AND SAVE THESE INSTRUCTIONS