

**MANUAL FOR INSTALLATION
AND OPERATING INSTRUCTION**

USER'S MANUAL

 **INTRON CO., LTD.**

◆ CONTENTS

• Introduction	3
• Structure & controls	4
• Function Description/Display Indicators	5
• Turning Your Pager On/Off	7
• Receiving and Reading Message	11
• Message Continuation	12
• Message Full	13
• No Read	14
• No Page	15
• No Information Message	16
• Duplicate Message	17

1

• Emergency Message	18
• Message Hold	18
• Setting the Incoming Message Alert	19
• Setting the Alert Time	23
• Protecting and Unprotecting Your Message	25
• Erasing Message	28
• Erasing All Message	31
• Setting the Time and Date	32
• Setting the Alarm	34
• Automatic On/Off	37
• Back - Up	41
• Back Light	43
• Battery Information	44

2

◆ INTRODUCTION

Congratulations on your purchasing Numeric Display Pager.
This manual describes how to operate all standard features of your pager.
Please read this manual carefully before you use your pager.
For information on available options, please contact your service provider.

 
◆ Precautions

- Do not attempt to the pager.
- Keep your pager from any kind of liquids. If the product is wet in the water, serious damage may result.
- Do not drop the pager.

This device complies with PART 15 of FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

3

◆ STRUCTURE & CONTROLS

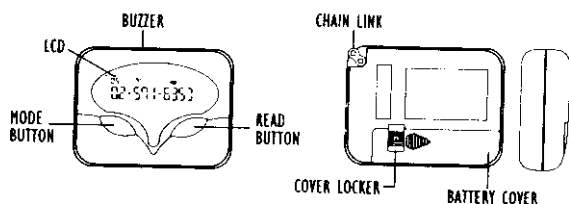

4

◆ FUNCTION DESCRIPTION/DISPLAY INDICATORS

- 🔒 : Protected Message - Message can be protected so they are not erased.
- 🏠 : Home Area - Not used
- 📶 : Service Area Indicator - Display the antenna symbol to show the pager is within the active service area.
- 🔄 : Duplicated Message - If a message is received that is exactly the same as a message already in memory, 🔄 is displayed while reading the message.
- ⏰ : Automatic Power On/Off - Allow setting the pager to turn ON or OFF automatically at user-selected time.

5

🔔 : Personal Alarm - You can set your pager to alert with either an audible alert.

🔔 🔄 : Alert Mode - You can set your pager to alert with a chirp alert (short beep 🔔), an audio alert (audio with pleasing alert 🔄), or a vibrating alert (vibration with no alert tone 🔄)

🔋 : Low - Battery - When the battery level is low, the low-battery symbol 🔋 is displayed.

➡ : Message Continuation
When the message is longer than 12 characters, ➡ is displayed.

 
6

◆ Turning Your Pager On/Off

1. Self Test

When you put battery in the battery compartment, your pager starts self test with alert tone and vibration.


2. Pager on from off screen




[Off Screen]

7

 In the pager off screen, press any button more than 2 second to turn your pager on.



[Start-Up Screen]

 


[Standby Screen]

8

A start-up screen is momentarily displayed and your pager activates with a short beep alert. While the pager is on, the standby screen is displayed.

 
3. Turning Your Pager Off

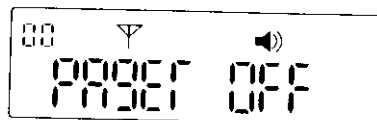

[Off Prompt]

9

 - 1) From the standby screen, press and release mode button until "PAGER OFF" is displayed.
- 2) Press read button to turn the pager off. The off screen is displayed without any icons.




[The pager is off]

◆ Receiving and Reading Message

Your pager can receive up to twenty 20-character numeric message. When a message is received, Your pager alerts(vibration, audio, or chirp) for eight seconds. A message indicator (for example 01, 02 etc.) in the upper left-hand corner of the standby screen lets you know how many message you have received.

 1. Press any button to stop the alert.
2. Press read button display the message.
3. Press read button again to display the second screen of the message.




[Received message]

10

11

◆ Message Continuation

 When the message is longer than 12 characters, the reminder of the message is displayed on one or more additional screen.




Example of a message screen with message continuation indicator.

Press read button to display the received message. The long message indicator "➔" appears in the upper right-hand corner of the message screen. Press again read button to display the remaining numbers.


◆ Message Full

 When your pager receives up to 20 messages, "--FULL--" is displayed in 4 seconds. The new message replaces the oldest read, unlocked message.




◆ No Read

 If message are left the pager gives a reminder alert 4 times every 5 minutes and "UNREAD" displays with the number of unread message (for example 01, 02, 03)




◆ No Page

 If there is no message received, "NO PAGES" is displayed when you press read button.




◆ No information message

 If a caller pages you without sending a message, the pager displayed "TONE ONLY"




16

 ◆ Duplicate Message

If a message is received that is exactly the same as a message already in memory,  is displayed in the upper portion of the screen while reading the message.

 The original message is updated with the timestamp of the newest message.



17

◆ Emergency Message

When the caller want to leave emergency message, the caller press 999 at first and the number to be contacted. Your pager recognize the emergency message and give audio alert which is different from set alerts.

◆ Message Hold

When you need to display the message longer than standard time(8 seconds), press the read button over 4 seconds. Your pager hold over 30 seconds.

18

◆ Setting the incoming message alert

 
You can set pager to alert with tone alert (5 different short beep chirp), an audible melody (5 different pleasing alert), motor alert (vibration with no alert tone), or silent (no alert)

1. Setting the tone alerts


You can set your pager to alert with one of five chirp tones.

- 1) From the standby screen, press and release mode button until "ALERT TONE" is displayed.

19



[Standby Screen]

 


[Alert Tone]

- 2) Press read button until "TONE" is displayed.

20

 - 3) Press and release mode button until your choice of TONE 1, TONE 2, TONE 3, TONE 4, TONE 5 is displayed. The pager gives a sample of each tone alert.
- 4) Press read button twice to activate your selection and return to the standby screen.



[TONE]

21

2. Setting the pleasing melody alerts

You can set your pager to alert with one of 5 pleasing melody alerts. Follow the tone-setting instructions to set the pleasing melody alert.

3. Setting the vibrating(motor)alert

- 1) From the standby screen, press mode button until "ALERT TONE" is displayed.
- 2) Press and release read button until "MOTOR" is displayed.
- 3) Press mode button to activate your selection and return to the standby screen.

4. Setting the silent

Follow the vibrating(motor)alert-setting instructions.

 
22

◆ Setting the alert time


You can set your pager how long it alert when the message is coming.

- 1) From the standby screen, press and release until "ALERT TIME" is displayed.
- 2) Press and release until your choice of 8-SEC, 12-SEC, or 4-SEC is displayed.
- 3) Press mode button to activate your selection and return to the standby screen.

23



[Standby Screen]

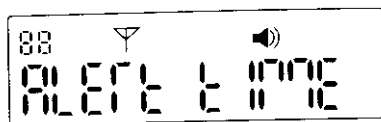 

[Alert Time Screen]

 
◆ Protecting and Unprotecting your messages

You can protect up to 10 messages so they are not erased or replaced by new messages.

To protect message :

While the message is displayed, press mode button until the lock icon "🔒" is displayed on the screen.

When reading a protected message, the icon "🔒" is displayed.




Example of a protected message.

To unprotect message :

While the protected message is displayed with lock "🔒", press mode button.

The lock icon "🔒" is no longer displayed.

 
When you have protected 10 messages. "LOC FULL" is displayed.



◆ Erasing message

Erasing individual Message :

 1. From the standby screen, press and release mode button until "ERASE" is displayed

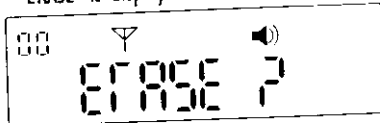


2. Press and release until "ERASE" is displayed.

28




 3. Press mode button to select the message to be erased.
4. Press read button and then "SURE" is displayed.



29

 5. Press mode button and then "ERASED" is displayed.

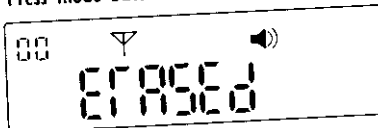

The selected message is completely erased.
All remaining messages are moved to the next available message slot.

30

 
◆ Erasing All message

1. Follow the above erasing individual message instructions and select "ERASE ALL" instead of "ERASE ONE"
2. Press mode button and "SURE" is displayed.
3. Press read button and "COMPLETED" is displayed.


All read and unprotected message are erased from memory.

31

◆ Setting the time and date

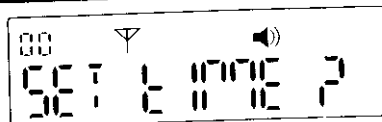

[Set Time Screen]

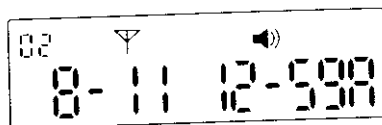 

[Set Time/Date Screen]

32

1. From the standby screen, press and release mode button until "SET TIME" is displayed.
2. Press read button. The month digits begin to flash.
3. Press and release read button to set the month digits.
4. Press mode button. The day digits begin to flash.
5. Press and release read button to set the date digits.
6. Press mode button. The hour digits begin to flash.

 
Follow the same instructions step 3 and step 4 to set the hour, minute and A(for AM), P(for PM).

33


◆ Setting the alarm

To enable the alarm :

1. From the standby screen press and release mode button until "SET ALARM" is displayed.

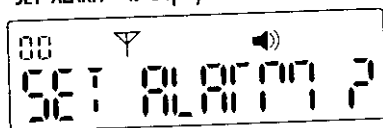

[Set Alarm]

 

[Alarm On]

2. Press read button until "ALARM ON" is displayed with icon ☘
3. Press mode button and then the hour digit flashes

Follow the time/date-setting instructions on page to set the time for the alarm to occur.

35

34

To disable the alarm :

1. Press and release mode button until "SET ALARM" is displayed.
2. Press read button until "ALARM OFF" is displayed.



3. Press and release mode button
4. Allow the pager to automatically return to the standby screen.

 
36

◆ Automatic ON/OFF


You can set your pager to turn on or turn off at a selected time of day.

To enable automatic on/off

1. Press and release mode button "AUTO POWER" is displayed.

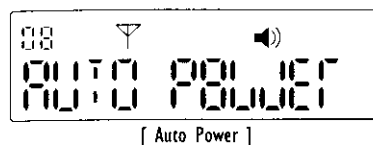


37

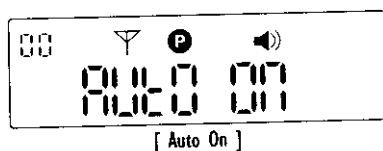 

2. Press read button until "AUTO ON" is displayed with icon **P**
3. Press mode button and then the hour digit flashes.
Follow the time/date-setting instructions on page to set the on/off time.
4. Press mode button to set time and hour digit flashes.

 38




Follow the above on time setting instructions.

To disable automatic on/off

1. Press and release mode button until "AUTO POWER" is displayed.
2. Press read button until "AUTO OFF" is displayed.

 39



[Auto Off]

 
3. Press and release mode button.
4. Allow the pager to automatically return to the standby screen.

◆ Back -up

All protected messages, time/date, alarm, on/off time and all alerts remain in memory.

When the pager is off and while the battery is being replaced.

1. Press and release mode button until "BAC-UP?" is displayed.



[Bac-Up?]



[Completed]

2. Press read button and then "COMPLETED" is momentarily displayed and return to the standby screen.

◆ BACK LIGHT


In low-light conditions, the backlight makes the screen easy to read.

 
Press and hold any button over 2 seconds to activate the LCD screen backlight.

The backlight remains on for 8 seconds and then return to the standby screen.

◆ Battery information

Your pager operates with one AAA-size alkaline battery.

When the battery is low, "LOW BATT" is displayed with icon "  "




[Low Batt]

Your pager alerts (short beep) 4 times every 5 minutes, prompting you to change the battery.

Caution : Any changes or modifications in construction of this device with are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MANUFACTURED BY:

 INTRON CO., LTD.
CHUNG BONG BLDG 2
POL-DONG, KANGNAM
TEL : 82-2) 571-4352
FAX : 82-2) 572-9403