

## Inventec Mercury 619 User Manual

SW Version 0.2.2

(AKU 3.3.0)

December 11<sup>th</sup>, 2006

**Copyright © 2006 Inventec Corp. All Rights Reserved.**

No part of this manual, including the product and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without prior written permission from Inventec Corp.

Inventec Corp. provides this publication "as is" without warranty of any kind. This information could include technical inaccuracies or typographical errors. Inventec Corp. may make improvements and/or changes in the product. Information and specifications contained in this document are subject to change at any time without notice.

The information contained in this document does not affect or change the product specifications or warranties. Inventec Corp. is not liable for any damages resulting from the use of this product.

**IMPORTANT SAFETY INFORMATION**

Please read the following information carefully before you start using the Inventec Mercury 619 to avoid any damages caused by improper usage:

- The device is not charged when you take it out of the box. The battery should be charged for at least 8 hours before first use. Do not remove the battery while charging.
- Do not use batteries, which have not been specified by the manufacturer, as this may cause leakage or rupture.
- Do not charge the battery with an unspecified AC Adapter, as this may cause damage to both the device and the battery.
- When discarding the batteries, dispose of them in a proper manner, according to the battery manufacturer's instructions and your local laws.
- Power off the device and remove the battery before inserting SIM card. Make sure the SIM card snaps correctly into the SIM socket.
- Do not open or tamper with the device cover, as it will void your warranty.
- Do not press hard on this product, as it may cause damage to the screen or the internal components.
- Do not use the device at gas or refuelling stations, chemical plants, and places containing explosives or flammable materials.
- Do not strike, shake, or heat the device in a way which may cause battery leakage or rupture and damage to the device.
- Use only manufacturer specified stylus. Do not scratch the screen with hard objects.
- Do not clean the screen with chemical detergents. Only use cloths, specifically designed for cleaning liquid displays, to wipe the device screen.

- Do not expose the device to direct sunlight, or leave the device in a humid environment, for extended periods of time, as this may cause damage to the device and battery.
- Do not immerse the device in water.
- The device may interfere with the navigation and/or communication systems on aircraft. The use of the device on aircraft is prohibited by laws in most countries.
- Use hands-free devices, if you need to use the telephony services, while driving a vehicle.

### **FCC Regulations**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **RF Exposure Information (SAR)**

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless devices employs a unit of measurement known as the

Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

### SAR Information

- 0.27W/Kg @1g FCC (head)
- 0.396W/Kg @1g FCC (body)
- 0.712W/Kg @10g (CE)

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **DGIBC0153AAA000**.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

### Interference with Medical Equipment Functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

### Nonionizing Radiation

This product should be operated in the suggested normal condition only to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

**Trademark Information**

Microsoft, MS-DOS, Windows, Windows NT, Windows Server, Windows Mobile, ActiveSync, Excel, Internet Explorer, MSN, Outlook, PowerPoint, and Word are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

## Table of Contents

Copyright © 2006 Inventec Corp. All Rights Reserved. ....	2
<b>IMPORTANT SAFETY INFORMATION .....</b>	<b>2</b>
FCC Regulations.....	3
RF Exposure Information (SAR) .....	3
Interference with Medical Equipment Functions.....	4
Nonionizing Radiation .....	4
Trademark Information .....	5
<b>Chapter 1. Knowing Your Device .....</b>	<b>12</b>
<b>1.1 Introduction.....</b>	<b>13</b>
Views of the Device .....	13
The Stylus.....	16
<b>1.2 Accessories.....</b>	<b>17</b>
<b>1.3 Install SIM card and Battery .....</b>	<b>17</b>
Installing the SIM Card.....	17
Installing the Battery .....	18
Reducing Risk of Fire or Burns.....	18
Checking the Battery Power .....	19
Optimizing the Power Performance .....	19
Managing a Low Battery.....	19
Charging the Battery.....	19
<b>1.5 Mini-SD Cards.....</b>	<b>20</b>
Inserting a Mini-SD Card into the Device .....	20
Removing a Mini-SD Card from the Device .....	20
<b>Chapter 2. Basic Operations .....</b>	<b>21</b>
<b>2.1 Getting Started .....</b>	<b>22</b>
Powering On/Off the Device.....	22
Calibrating Your Device .....	22
Locking/Unlocking the Device .....	23
<b>2.2 Input Methods .....</b>	<b>24</b>
Keyboard .....	25
Letter Recognizer .....	25
Block Recognizer .....	26
Transcriber.....	26
<b>2.3 Today Screen Components.....</b>	<b>27</b>

Today Screen.....	27
Icon Indicators.....	27
2.4 The Start Menu .....	28
List of All Programs .....	29
2.5 Settings .....	30
Personal .....	30
System.....	31
Connections.....	32
2.6 Using Calendar.....	32
Scheduling an Appointment .....	33
Deleting an Appointment .....	34
Changing the Reminder Time .....	35
Changing Calendar Views .....	36
Changing the Display of the Work Week.....	38
2.7 Using Notes.....	39
Setting the Default Input Mode.....	39
Creating a Note .....	40
Creating a Stand-alone Voice Recording.....	41
Switching between Typing/Writing Modes.....	41
Editing a Handwritten Note.....	42
Adding a Voice Recording to a Note.....	44
Deleting a Note .....	45
Creating a Default Template.....	46
2.8 Using Tasks .....	47
Deleting a Task.....	50
Changing Task Priority.....	50
Sorting/Filtering Your Tasks.....	51
Setting Tasks Options.....	51
Viewing Task Details.....	52
<b>Charter 3. Phone Features .....</b>	<b>53</b>
3.1 Using the Phone .....	54
The Phone Screen.....	54
Activating PIN Security.....	54
Setting Ring Tones.....	54
3.2 Making a Call      Making a Call by Entering a Phone Number .....	55

Making a Call from Call History.....	56
Making a Call from Contacts.....	56
Making a Call from Speed Dial.....	57
Receiving/Rejecting a Call.....	58
<b>3.3 In-Call options.....</b>	<b>59</b>
Turning On/Off the Speakerphone.....	63
Muting the microphone.....	63
<b>3.4 Blocking Unwanted Phone Calls.....</b>	<b>63</b>
Barring Withheld Numbers.....	63
Adding a Phone Number to the Blacklist.....	64
Removing a Phone Number from the Blacklist.....	64
<b>3.5 SIM Manager.....</b>	<b>64</b>
Adding a Phonebook Entry to SIM Card.....	64
Deleting Phonebook Entries from SIM Card.....	65
Saving Phonebook Entries to Contacts.....	65
<b>Chapter 4. Synchronizing Information.....</b>	<b>67</b>
4.1 Installing and setting up ActiveSync.....	68
4.2 Synchronizing Information.....	69
Starting and Stopping Synchronization Manually.....	69
Changing Which Information is Synchronized.....	69
4.3 Changing Settings for an Information Type.....	70
4.4 Synchronizing with Exchange Server.....	70
4.5 Synchronizing via Infrared and Bluetooth.....	71
Connecting to a PC Using Infrared.....	71
Connecting to a PC Using Bluetooth.....	71
<b>Chapter 5. Bluetooth/Infrared Connections.....</b>	<b>72</b>
5.1 Overview of Bluetooth.....	73
Bluetooth Modes.....	73
Turning Bluetooth On or Off.....	73
Making Your Device Visible.....	74
5.2 Bluetooth Partnership (Bonding).....	75
Creating a Bluetooth Partnership.....	75
5.3 Beaming Information (Bluetooth & Infrared).....	77
Receiving Beamed Information.....	77
Beaming an Item.....	79
<b>Chapter 6. Transferring Files To and From Your Device ...</b>	<b>80</b>



6.1 Using ActiveSync.....	81
6.2 Transferring from Memory Cards .....	82
6.3 Using Infrared.....	83
6.4 Using Bluetooth.....	84
6.5 Transferring to a PC or Other Devices .....	84
<b>Chapter 7. Connecting to the Internet .....</b>	<b>85</b>
7.1 Setting up Internet connections.....	86
Creating a GPRS Connection.....	86
Creating a Proxy Connection .....	88
Deleting a Connection .....	89
7.2 Using Internet Explorer Mobile .....	90
Browsing the Internet.....	90
Adding a Web Page to the Favorite List.....	91
Deleting a Favorite .....	91
Changing the Size of Text on Web Pages.....	91
Showing or Hiding Pictures on Web Pages .....	92
Changing Web Page Display Options.....	92
Clearing History, Cookies, or Temporary Files .....	92
Viewing a Page in Full Screen Mode .....	92
7.3 Using Wireless Manager.....	92
7.4 Using Wi-Fi Connection .....	94
Connecting to a Wi-Fi Network.....	94
<b>Chapter 8. Messaging &amp; Contacts .....</b>	<b>96</b>
8.1 Text Messaging.....	97
Creating a Text Message .....	97
Using Preset Text Messages.....	97
Reading a Text Message.....	98
Changing Message Options .....	98
8.2 Multimedia Messaging Service .....	99
Accessing MMS.....	99
Composing a MMS Message .....	99
Reading a MMS Message .....	100
Previewing a MMS Message .....	100
Configuring MMS Settings .....	101
8.3 E-mail .....	101
Setting Up an Internet E-mail Account Manually .....	101

Composing an E-mail Message.....	102
Reading an E-mail Message .....	103
Message Options .....	103
<b>8.4 Changing Messaging Account Options.....</b>	<b>103</b>
<b>8.5 Using Contacts .....</b>	<b>103</b>
Creating a New Contact .....	104
Adding a Picture to a Contact .....	104
Assigning a Ring Tone to a Contact.....	105
Finding a Contact .....	105
Sending an E-mail to a Contact.....	105
Sending a Text Message to a Contact.....	105
Creating a SIM Contact .....	105
<b>8.6 Using Photo Contact .....</b>	<b>106</b>
Transferring Photographs to Your Device .....	106
Adding a New Photo Contact .....	106
Adding a Photograph to a SIM Contact .....	107
Calling a Photo Contact.....	108
Deleting the Photograph of a Photo Contact.....	109
<b>Chapter 9. Camera .....</b>	<b>110</b>
9.1 Taking a Photo .....	111
9.2 Recording a Video Clip.....	111
<b>Chapter 10. Other Applications.....</b>	<b>112</b>
<b>10.1 Word Mobile .....</b>	<b>113</b>
Creating a Document .....	113
Word Mobile Formatting Toolbar .....	113
<b>10.2 Excel Mobile .....</b>	<b>114</b>
Creating a New Spreadsheet .....	114
Excel Mobile Formatting Toolbar.....	114
<b>10.3 PowerPoint Mobile.....</b>	<b>115</b>
Starting a PowerPoint Presentation .....	115
Stopping a PowerPoint Presentation.....	115
Navigating Between Slides.....	115
<b>10.4 Pocket MSN Messenger.....</b>	<b>116</b>
Signing In/Out MSN Messenger .....	116
Adding/Deleting a MSN Messenger Contact.....	116
Sending an Instant Message.....	117

<b>Changing MSN Messenger Display Name.....</b>	<b>117</b>
<b>Blocking/Unblocking a Contact .....</b>	<b>117</b>
<b>Changing MSN Messenger Settings.....</b>	<b>117</b>
<b>10.5 ClearVue PDF .....</b>	<b>117</b>
<b>Opening a PDF File.....</b>	<b>117</b>
<b>Viewing the Contents of a Document .....</b>	<b>118</b>
<b>Zooming the Contents of a Document.....</b>	<b>118</b>

## Chapter 1. Knowing Your Device

## 1.1 Introduction

### Views of the Device




<b>1</b>	Camera Key *	Press to launch the camera; press to record a voice note if the camera is not equipped with your device.
<b>2</b>	Scroll Wheel	Scroll up/down to move through menus and Programs; short press it to launch a selected item or application. During a call, scroll up/down to adjust the volume. Incoming calls can be muted by scroll down the wheel. In camera mode: scroll up/down to zoom-in and zoom-out in camera preview and playback.
<b>3</b>	Mini-SD card slot	Insert a mini-SD card to expand device memory
<b>4</b>	Accesskey A*	Short press to carry out OK/Close functions.
<b>5</b>	Accesskey B*	Short press to launch the Wireless Manager; long press to open GPS Test.
<b>6</b>	IrDA Port	Transfer information with other device through infrared.

<b>7</b>	Power Key	Power on or off the device.
<b>8</b>	Stylus	Write, draw, or make selection on the touch screen.
<b>9</b>	Bluetooth LED	Indicates Bluetooth status. Blue light flashes every 3 seconds when Bluetooth is connected.
<b>10</b>	Telephone Receiver	Listen to a phone call here.
<b>11</b>	Battery/GSM LED	Indicates battery/GSM status. LED displays solid red or green light when the battery is under charge or the battery is full charged. Green light flashes every 3 seconds when GSM is on.
<b>12</b>	Display	2.8-inch TFT LCD with touch screen.
<b>13</b>	Talk Key	Press this key to dial or answer a call.
<b>14</b>	Soft key 1	Performs the command shown in the label above the button.
<b>15</b>	Start Key	Pull down the Start menu.
<b>16</b>	4-way navigation and action input key	Press this button up, down, left, or right to move through menus; carry out the selection by pressing it down.
<b>17</b>	OK Key	Press OK key to make a selection.
<b>18</b>	Soft Key 2	Performs the command shown in the label above the button.
<b>19</b>	End Key	End a call or close Phone application.
<b>20</b>	Light Sensor **	Adjust backlight brightness of the keypad automatically according to the environment brightness.
<b>21</b>	Microphone	Speak into the microphone when talking on the phone or recording a voice note.
<b>22</b>	Earphone Jack	Connect a 2.5 mm Earphone.
<b>23</b>	Mini-USB Connector	Mini-USB connector for PC sync and battery charging.
<b>24</b>	Reset button	Press the Reset button to soft-reset your device.
<b>25</b>	GPS Antenna Connector	Connect your device to an antenna for better reception quality if necessary.
<b>26</b>	Camera Len	Takes photos or records video clips.
<b>27</b>	Self-Portrait Mirror	Reflects the image while taking a self-portrait shot.
<b>28</b>	Battery Cover	Recover it to insert battery and SIM card.
<b>29</b>	Speaker	Listen to audio media or listen to a phone call hands-free

\* You can change the default of these three acceskeys. To assign new programs for them, tap

 > **Settings** > **Buttons**.

\*\* To activate light sensor, tap  > **Settings** > **Brightness** and select **Keypad brightness auto detect**.



Be sure to press the Power button to switch the device to sleep mode before resetting the device or replacing the battery, otherwise unsaved work or settings may be lost.



### Hardware Keyboard

Other than the on-screen keyboard, this device is equipped with a hardware keyboard.






To enter capital letters/numbers, or to delete/back by using the hardware keyboard:




The "Fn" key is used to access the symbols in blue and numbers on the keypad. Press this key once to enter unsticky Fn mode (an icon  shows on the screen in this mode), the next character you enter will be a symbol or number. Pressing this key twice to enter sticky Fn mode ( shows), you can then enter numbers and symbols constantly. Press the key again to return to enter letters. You can also hold down the "Fn" key and press another key at the same time to enter its corresponding symbol.



Press this key once the first letter you enter is capitalized (an icon  shows in this mode). Pressing this key twice shows an  icon (this can also be done by pressing this key and the "Fn" key at the same time); all letters you enter will be


	capitalized. Press this key again to enter lower case letters. Also, you can hold down this key and press another key at the same time to enter capital letters.
	Press this key to erase the letter in the left side of the cursor. Press the "Fn" key once then press this key to delete the first letter in the right side of the cursor. To delete letters constantly, hold down the "Fn" key and press this key at the same time.

### The Stylus

- Use the stylus to tap a selection, to drag-and-drop an item, to write, or to draw on the touch screen.
- Tap and hold the stylus on the screen,  icon is displayed and then a pop-up submenu is displayed.



**1.2 Accessories**

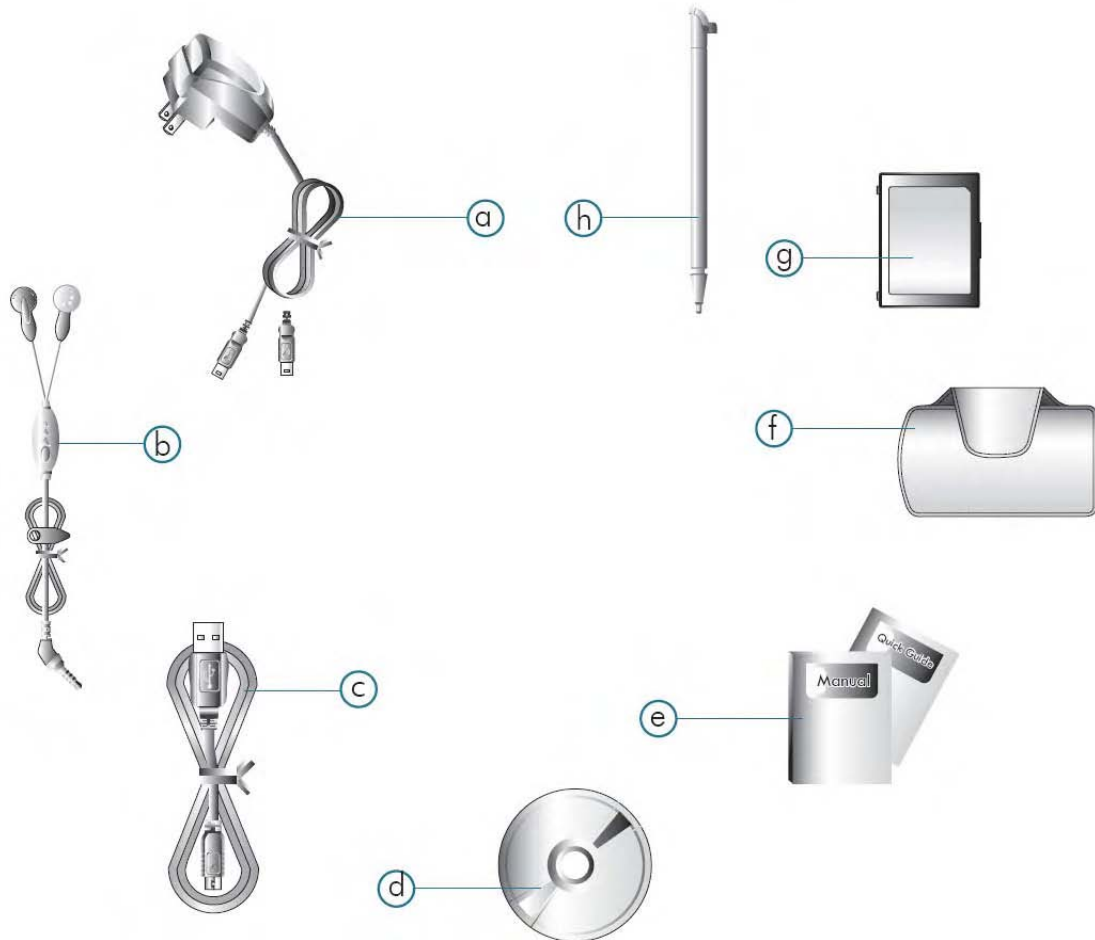

<b>A</b>	AC Adapter	Recharge the device battery
<b>B</b>	Stereo headset	Listen to a phone conversation hands-free
<b>C</b>	USB Cable	Connect the device to a PC
<b>D</b>	Getting Started CD	Windows Mobile™ Getting Started Disc
<b>E</b>	User Manual/Quick Guide	Provide instructions of device functions
<b>F</b>	Pouch	Protect the device
<b>G</b>	Battery	Rechargeable Li-ion polymer battery
<b>H</b>	Stylus	Write, draw, or make selection on the touch screen

**1.3 Install SIM card and Battery**

**Installing the SIM Card**

If you want to use phone features, you must install a GSM SIM card.

- Push the back cover down and slide it open.
- Place the SIM card in the SIM card slot with the gold contacts facing down. The SIM

card's cut-off corner should match the cut-off corner in the SIM card slot.

### Installing the Battery

- Place the battery in position by pressing its protrusions on the side of the battery against the sockets inside the battery slot.
- Press the battery down into the battery slot and close the back cover.



The device contains a rechargeable Li-ion polymer battery completely discharged and should be charged for at least 8 hours before first use. Use only manufacturer-specified original batteries. Damages caused by using batteries not specified by manufacturer are not covered under warranty.



Please follow normal power off procedure to remove the battery or reboot the device, otherwise unsaved data may be lost.

## 1.4 Battery Information

Battery performance depends on many factors, including your wireless service provider's network configuration, signal strength, the temperature of the environment in which you operate your phone, the features and/or settings you select and use, items attached to your phone's connecting ports, and your voice, data, and other program usage patterns.

Battery life estimates (approximations):


- Talk time: 4 hours
- Standby time: 150-200 hours

### Reducing Risk of Fire or Burns


- Do not attempt to open, disassemble, or service the battery pack.
- Do not crush, puncture, short external contacts, or dispose of in fire or water.
- Do not expose to temperatures above 60°C (140°F).
- Replace only with the battery pack designated for this product.
- Recycle or dispose of used battery as stipulated by local regulation.


### Checking the Battery Power

- Tap  > **Settings** > **System** tab > **Power**.

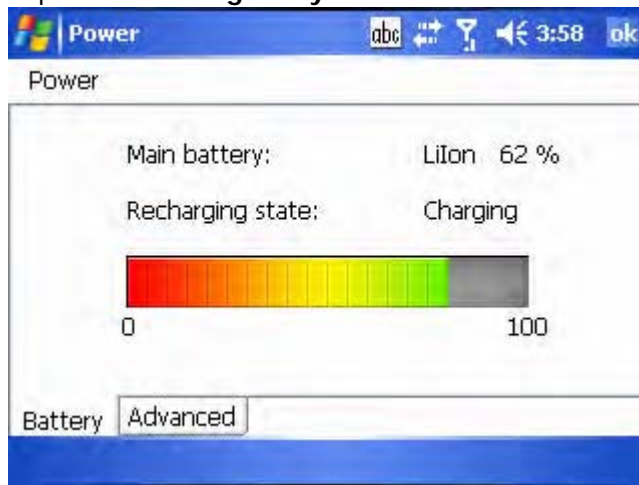

### Optimizing the Power Performance

- Tap  > **Settings** > **System** tab > **Power** > **Advanced**, and adjust the time for turning off the device if it is not in use.

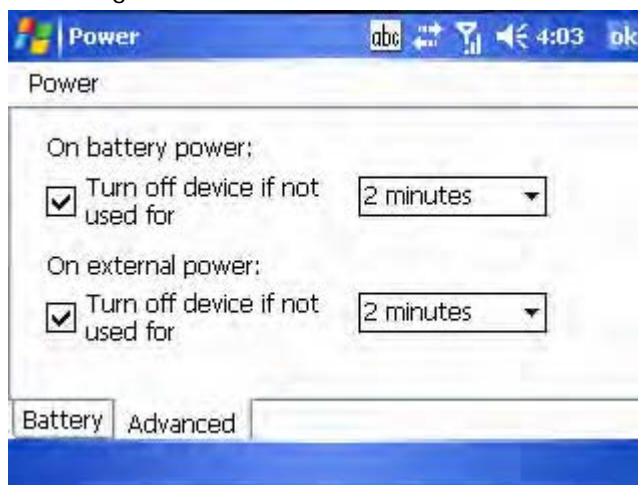

### Managing a Low Battery

When the low-battery warning appears, do the following:

1. Immediately save your current data.
2. Start charging the battery or turn off your phone.

### Charging the Battery

1. To charge the battery, place the battery into the battery slot correctly. See previous section for how to install the battery.
2. Do one of the following:

- Connect the device with the AC adapter and plug the AC adapter into a power outlet.
- Connect the device to a PC with the USB cable.



To charge the device with the USB cable, you must connect the device to a functioning USB port on a PC that is powered on.



When the battery power is exhausted, the device will turn off automatically after a short beep warning. If the device turns on in an extremely low battery condition, it will turn off automatically after a series of rapid beeps lasting for one second.

## 1.5 Mini-SD Cards

Mini-SD is one of the most popular formats for mobile devices. Your device contains a mini-SD card slot in which you can expand the device's memory up to 1GB. Mini-SD provides functions such as built-in security for copyrighted content along with great performance for storing music, video, and photographs.

### Inserting a Mini-SD Card into the Device

Insert the mini-SD card with the logo side up and push into place until it clicks down and is held in place. Please notice that mini-SD cards can only be inserted in one direction. Inserting the card in the wrong direction by force can cause damage to the card and the card slot.

### Removing a Mini-SD Card from the Device

1. Gently press the mini-SD card inward and the card will eject itself.
2. Take out the mini-SD card from the card slot by hand.

## Chapter 2. Basic Operations

## 2.1 Getting Started


### Powering On/Off the Device


Press the POWER button to turn on the device. The POWER button is located on the top side of the device. When you power on the device for the first time, you are asked to calibrate the device. Please refer to the "Calibrating your device" section in this chapter for calibration steps. Press the POWER button again to switch the device to sleep mode. You can still receive phone calls and messages when the device is operating on sleep mode. To power off the device completely, press and hold the POWER button for 10 seconds and the system will prompt you to power off the device.



### Calibrating Your Device

Calibrating the device ensures the tapped item is activated. To calibrate your device, tap the centre of the cross with the stylus as the cross moves around the screen. If you would like to re-calibrate the device, follow the steps below:

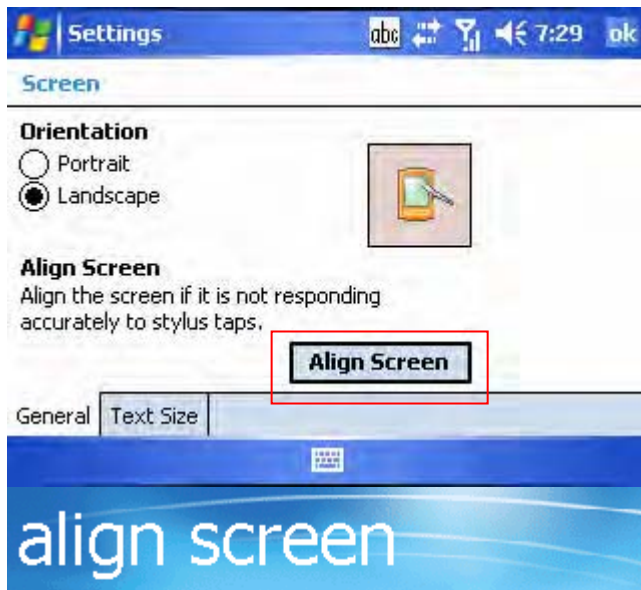

1. Tap  > **Settings** > **System** tab > **Screen** .
2. Tap the **Align Screen** button and follow the on-screen instructions.




Tap the target firmly and accurately at each location on the screen. The target will continue to move until the screen is aligned.



### Locking/Unlocking the Device


Locking the device turns off keyboard functionality. This is a helpful feature if, for example, the device is turned on and in your pocket, and you want to prevent accidental key presses.

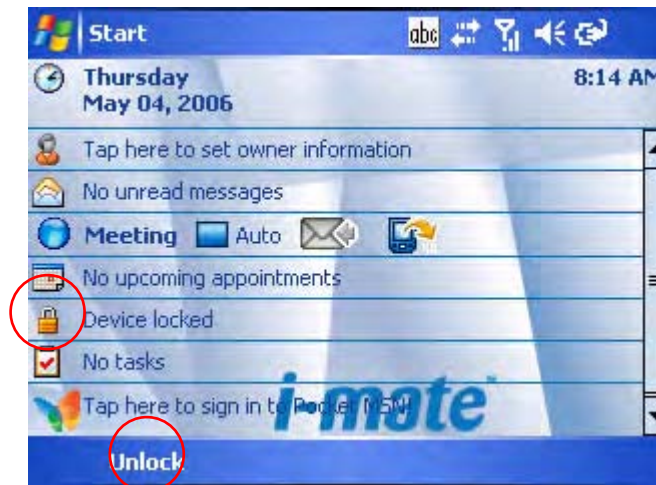- To lock the device, press the Function Key once to enter the unsticky Fn mode (1~ shows on the screen), then press the Enter key . You can also tap on the  icon on the Today Screen to lock the device. Once the device is locked, the left soft key label changes to **Unlock**.



- Repeat the same steps as above (device-locking steps) will unlock the device.

Alternatively, tap **Unlock** on the Today Screen, then press  and  or tap the **Unlock** button on the screen.

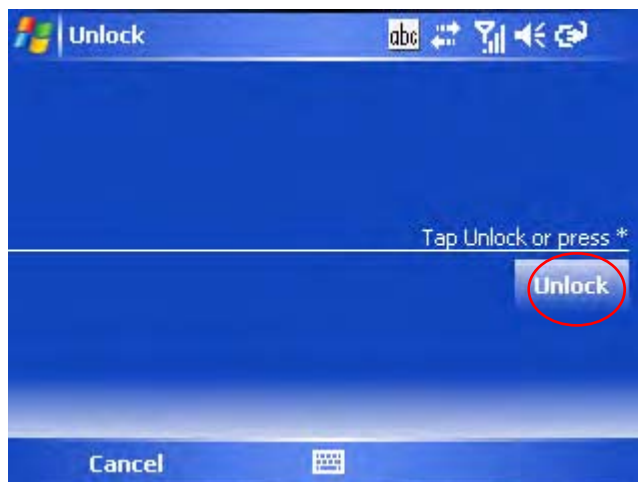




You can still receive calls and make emergency calls when the keypad is locked.


## 2.2 Input Methods

The device contains 4 different input methods: Keyboard, Letter Recognizer, Block Recognizer, and Transcriber.



Icon	Input Method
	Keyboard
	Letter/Block Recognizer
	Transcriber

**Keyboard**

- Tap  to launch the on-screen keyboard. If Keyboard is not the selected input method, tap the input method selector arrow (the upward arrow next to the input method icon) and select **Keyboard**.
- To enter text, tap the keys on the on-screen keyboard.




- Tap the CAP key on the on-screen keyboard to enter capital letters and/or symbols.



**Letter Recognizer**

Letter Recognizer recognizes one letter, number, or symbol at a time.


- To launch Letter Recognizer, tap the input method selector arrow (the upward arrow next to the input method icon) and select **Letter Recognizer**.
- Write uppercase letters in the left recognition area (the ABC box).
- Write lowercase letters in the middle recognition area (the abc box).
- Write numbers and symbols in the right recognition area (the 123 box).

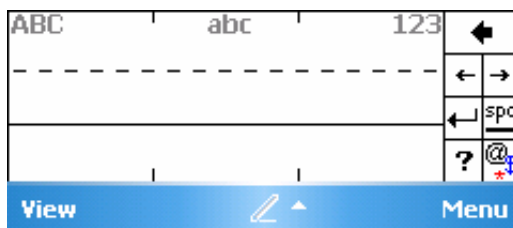

### Block Recognizer

Block Recognizer recognizes letters written in one stroke.

- To launch Block Recognizer, tap the input method selector arrow (the upward arrow next to the input method icon) and select **Block Recognizer**.
- Write lowercase letters in the text recognition area (the abc box).
- Write numbers and symbols in the numeric recognition area (the 123 box).
- To input symbols, tap any recognition area, text or numeric, once and write symbols.

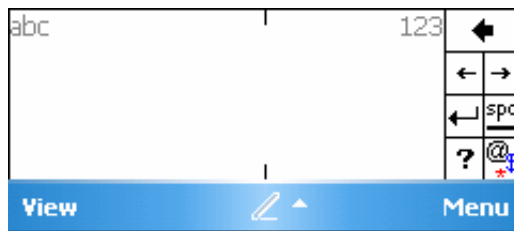

Tap ? in Letter or Block Recognizer to see a demo on how to write recognizable characters.

### Transcriber

Transcriber recognizes handwritings in cursive and/or print. It uses the full screen as its recognition area. It interprets the movement of the stylus on the screen as you write.

- To launch Transcriber, tap the input method selector arrow (the upward arrow next to the input method icon) and select **Transcriber**.
- Write anywhere on the screen.




The Transcriber comes with a detailed help. Tap ? if you need further assistance.

## 2.3 Today Screen Components

### Today Screen

The Today Screen is usually the first screen that appears when you turn on the device for the first time each day. It displays a summary of information for the day, shows you the system status and contains a list of shortcuts to programs. The Today screen looks like this:

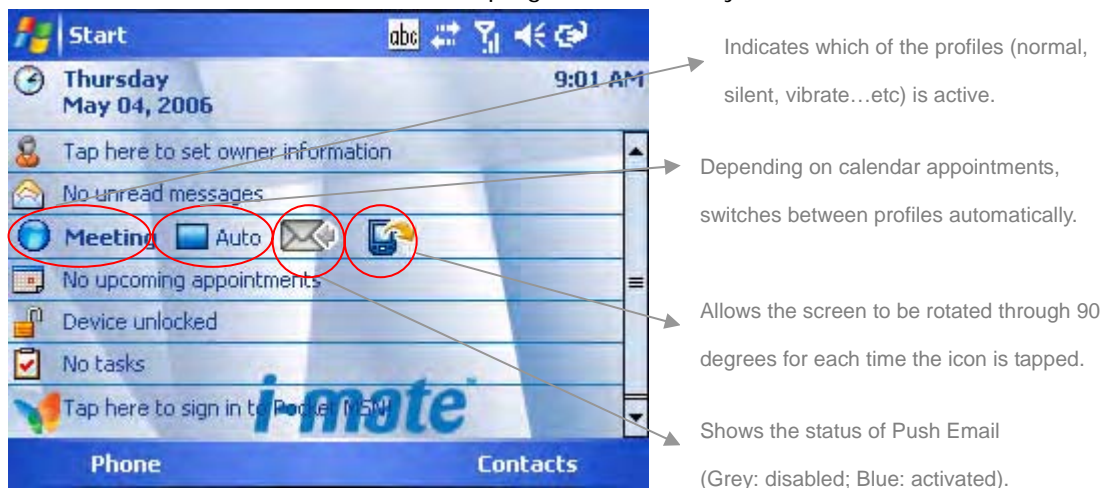


1	Date and time
2	Owner information
3	Unread messages including text messages, MMS messages, and e-mails
4	Profile Plug-in
5	Upcoming appointments
6	Device lock status
7	Active tasks
8	Sign in to Pocket MSN



You can also access the Today screen by selecting **Today** from the Start menu.



To change the items showed in the Today screen, tap  > **Settings** > **Today** > **Items** tab.

### Icon Indicators

Status indicators appear at the top of the screen and on the Today screen. The following table lists common status indicators and their meanings.

	New e-mail or text message (SMS)		Ringer on
	New voice mail		Ringer off
	New instant message		Ringer in vibration mode
	Voice call		No Voice mail
	Voice call in progress		Voice mail Lines 1
	Data call in progress		Call Forwarding Lines 1
	Calls are forwarded		GPRS available
	Call on hold		GRPS in use
	Missed call		No SIM card installed
	Battery level 1		Bluetooth bonding in progress
	Battery level 2		Wi-Fi connection in progress
	Low battery		Normal input mode
	Extremely low battery		Unsticky Caps mode *
	Battery charging		Sticky Caps mode **
	Signal strength		Unsticky Fn mode ***
	No signal		Sticky Fn mode ****
	Flight mode		Connection is active
	No service		Connection is not active
	Roaming		Synchronization in progress
	Alarm		Synchronization error

\* Only the next character you input is uppercase.

\*\*\* To enter a single symbol or number.

\*\* All characters you input is uppercase.

\*\*\*\* To enter symbols or numbers constantly.

## 2.4 The Start Menu













The Start menu is divided into 3 groups as described in the following:


















1	Recently accessed applications
2	Commonly used items
3	List of all programs, device settings, and system help

### List of All Programs











The following table lists icons of the programs that are already installed on your device.

	<b>ActiveSync</b>	Synchronizes information between your device and a PC. See "Chapter 4. Synchronizing Information" for details.
	<b>Backup</b>	Allows you to wirelessly backup mobile data to home or office PC's while traveling and restore those files to erased or new Windows Mobile® devices.
	<b>Blacklist</b>	Lets you set up a list of phone numbers to block.
	<b>CA Install</b>	Enables you to install the eTrust™ Antivirus software onto your device. eTrust™ Antivirus software provides protection from the perimeter to the PDA, safeguarding your device from viruses and malicious codes.
	<b>Calculator</b>	Performs basic arithmetic and calculations such as addition, subtraction, multiplication, and division.
	<b>ClearVue PDF</b>	Lets you read files stored in the Portable Document Format. See "10.5 ClearVue PDF" for details.
	<b>Club i-mate email</b>	Configures your device to access your free i-mate™ email account.
	<b>Download Agent</b>	Lets you download Windows Mobile updates.
	<b>Excel Mobile</b>	See "10.2 Excel Mobile" for details.
	<b>File Explorer</b>	Lets you organize and manage the files on your device.
	<b>Games</b>	Five games are installed on your device: Bubble Breaker, i-mate Blackjack, i-mate JAM-JAMMY, i-mate Pool and Solitaire.
	<b>GPS Test</b>	Tests satellite signal strength and shows received data flow.
	<b>i-mate Configurator</b>	Lets you configure GPRS and MMS settings.






 
	<b>Internet Sharing</b>	Lets you use your device as an external modem for a PC, connecting through an USB port and Bluetooth.
	<b>Notes</b>	See "2.7 Notes" for details
	<b>Photo Contacts</b>	See "8.6 Using Photo Contacts" for details.
	<b>Pictures &amp; Video</b>	Collects, organizes, and sorts picture and video files in the My Pictures folder on your device or on a storage card.
	<b>Pocket MSN</b>	Lets you send and receive instant messages with your MSN Messenger contacts.
	<b>PowerPoint Mobile</b>	See "10.3 PowerPoint Mobile" for details.
	<b>SD Format</b>	Formats the inserted mini-SD card.
	<b>Search</b>	Searches the data stored in your device.
	<b>SIM Manager</b>	Lets you manage your SIM card.
	<b>SIM Toolkit</b>	A software toolkit comes with the SIM card.
	<b>Tasks</b>	Keeps track of your tasks. See "2.8 Tasks" for details
	<b>Terminal Services Client</b>	Allows you to log on to a PC running Terminal Services or Remote Desktop.
	<b>Word Mobile</b>	See "10.1 Word Mobile" for details.
	<b>MIDlet Manager</b>	Enables you to install Java applications from files or Network.
	<b>1-View</b>	Allows you to use a Windows Mobile® 5.0 device to access any file on any PC, anytime, anywhere. Even decide which files to share with other mobile users.










## 2.5 Settings

### Personal






	<b>Buttons</b>	Configure the device's buttons.
	<b>Input</b>	Input method configurations.
	<b>Lock</b>	Set a password to unlock the device.
	<b>Menus</b>	Configure the Start menu.
	<b>MSN Options</b>	Configure MSN services.
	<b>Owner Information</b>	Enter information about the owner of the device.
	<b>Phone</b>	Configure the Phone features. See "Chapter 3 Phone Features" for details.
	<b>Profile Controller</b>	Lets you set different profiles for the phone in different situations.
	<b>Sounds &amp; Notifications</b>	Configure program and event sounds.
	<b>Today</b>	Configure the Today screen items and theme.

### System

	<b>About</b>	Windows Mobile information and device name.
	<b>Backlight</b>	Configure the display backlight.
	<b>Brightness</b>	Lets you adjust brightness of display and keypad.
	<b>Certificates</b>	Manage personal and root certificates.
	<b>Clock &amp; Alarms</b>	Set time and alarms.
	<b>Error Reporting</b>	Enable or disable Microsoft product error reporting.

	<b>Factory Reset</b>	Lets you reset all settings to manufacturer default.
	<b>GPS</b>	GPS configuration.
	<b>Key Config</b>	Enable/Disable the functions of LCD auto lock and DEL key...etc.
	<b>Memory</b>	Memory and process management.
	<b>Power</b>	Power management settings.
	<b>Regional Settings</b>	Configure the device's locale.
	<b>Remove Programs</b>	Remove an install application.
	<b>Screen</b>	Lets you align the screen. See "Calibrating Your Device" of Chapter 2 for details.
	<b>System Version</b>	Display the device software version.

### Connections

	<b>Beam</b>	Turn on/off the beam feature.
	<b>Bluetooth</b>	Configure Bluetooth settings. See "Chapter 5 Bluetooth/Infrared Connections" for detail.
	<b>Connections</b>	Configure the device's connections.
	<b>Network Cards</b>	Configure Network adapter.
	<b>Wireless Manager</b>	Turn on/off wireless and phone features with the Wireless Manager.

## 2.6 Using Calendar


Use Calendar to schedule appointments, including meetings and other events. Your appointments for the day can be displayed on the Today screen. If you use Outlook on your PC,





you can synchronize appointments between your device and PC. You can also set Calendar to remind you of appointments with a sound or flashing light, for example.


You can look at your appointments in several different views (Day, Week, Month, and Agenda). To see detailed appointment information in any view, tap the appointment. For information about changing the Calendar view, see Change views in Calendar.

### Scheduling an Appointment


1. Either tap  > **Calendar** or tap the appointment reminder on the Today Screen.

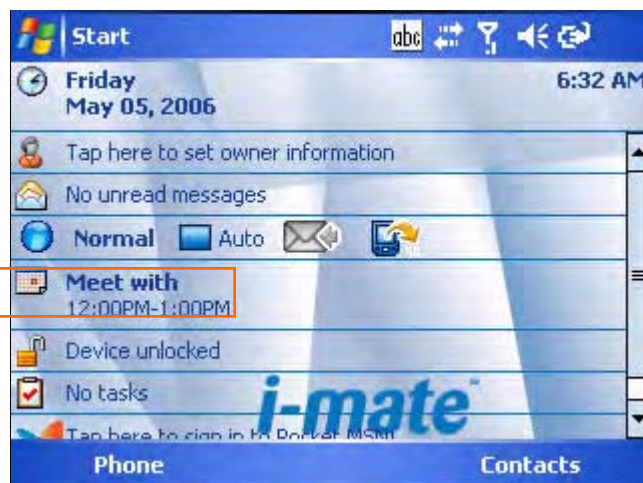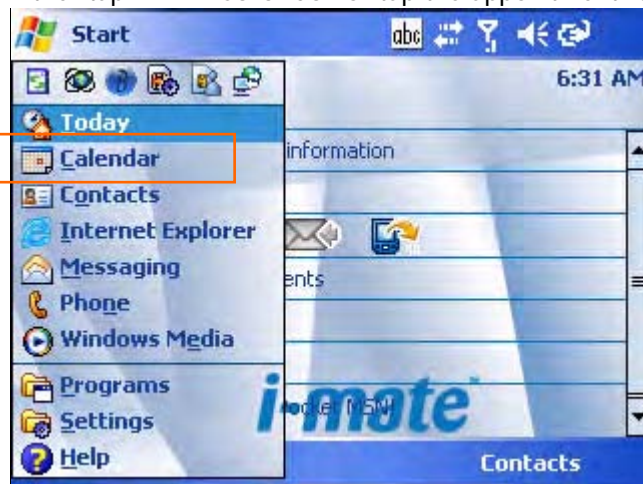

2. Tap **Menu** > **New Appointment**.
3. Enter information about the appointment.
4. To schedule an all-day event, under **All Day**, select **Yes**.

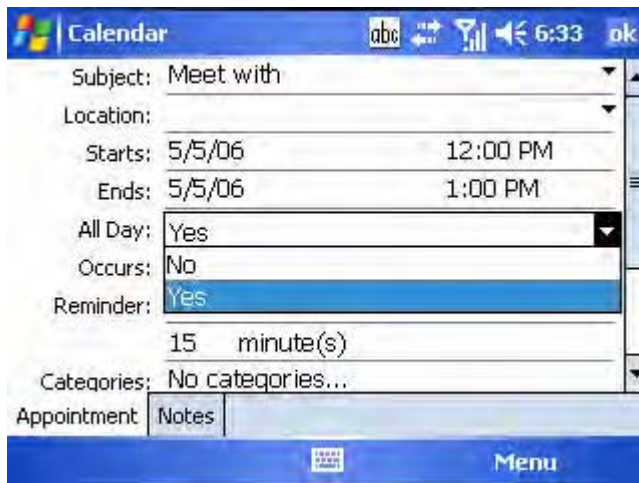

5. Select categories and attendees.

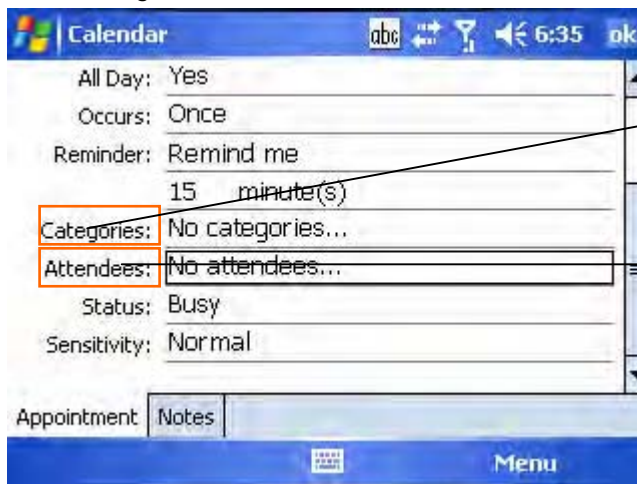

Categories: Business, Holiday,  
Personal, Seasonal


Add attendees to the meeting.

6. Tap **ok**.




All-day events do not occupy blocks of time in Calendar; instead, they appear in banners at the top of the calendar.


### Deleting an Appointment


1. Tap  > **Calendar**.
2. In Agenda view, select the appointment to delete.
3. Tap **Menu** > **Delete Appointment**.



4. If the appointment is recurring, tap **Yes** to delete the series, or tap **No** to delete only the current occurrence.

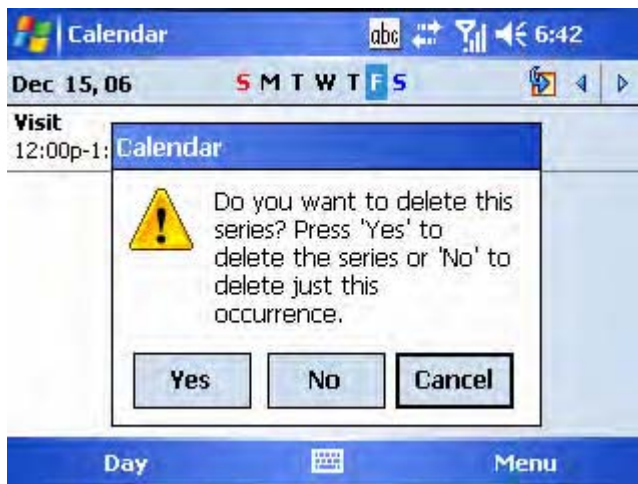


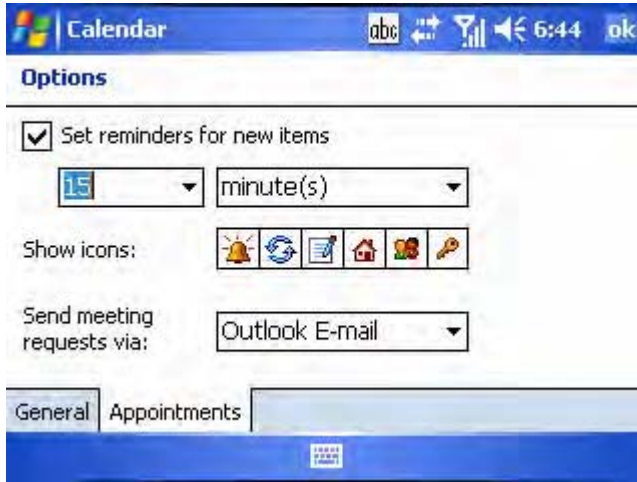
 When you delete an appointment in Calendar on your phone, it is also deleted on your PC the next time you synchronize. If the appointment has not been synchronized with a PC, it will be deleted only from the phone.

 Calendar items can be deleted only from Agenda view or from an open calendar appointment. To delete from other views, open the appointment, and Tap **Menu** > **Delete**.

### Changing the Reminder Time

By default, the reminder time is set 15 minutes prior to an appointment.


1. Tap  > **Calendar**.
2. Tap **Menu** > **Options**.
3. Tap **Appointment** tab and change the time.






4. Tap **ok**.

**Changing Calendar Views**

You can look at your appointments in Agenda, Day, Week, or Month view. To see detailed appointment information in any view, tap the appointment. To see a list of available actions for an appointment, tap and hold the appointment.

1. Tap  > **Calendar**.
2. Tap **Menu** > **View** and select the view you want.

View	See	Screen
Agenda	Your current day's activities at a glance. Upcoming appointments are bold; past appointments are dimmed.	

<p>Day</p>	<p>Your schedule for a single day in a day-planner layout. Free and busy times in time slots of 1/2 hour or 1 hour.</p>	
<p>Week</p>	<p>Your schedule for the whole week.</p>	
<p>Month</p>	<p>Your free and booked days for a month:</p> <p><span style="border: 1px solid red; display: inline-block; width: 15px; height: 15px; vertical-align: middle;"></span> : Current day</p> <p><span style="color: blue;">▴</span> : morning appointment</p> <p><span style="color: blue;">▾</span> : afternoon appointment</p> <p><span style="color: blue;">■</span> : morning and afternoon appointments</p> <p><span style="border: 1px solid blue; display: inline-block; width: 15px; height: 15px; vertical-align: middle;"></span> : all-day event with time not marked free</p>	

Year	A calendar for the entire year.	
------	---------------------------------	--



In Month view, a date will appear in red when the Holiday category is assigned to any appointment for that day.




You can also change the view by tapping Agenda, Day, Week, Month, or Year on the menu bar.




To quickly see your appointments for the current day, tap **Start** > **Today**.

### Changing the Display of the Work Week

1. Tap > **Calendar**.
2. Tap **Menu** > **Options** and do one of the following:
  - To specify the first day of the week, in **First day of week**, tap **Sunday** or **Monday**.

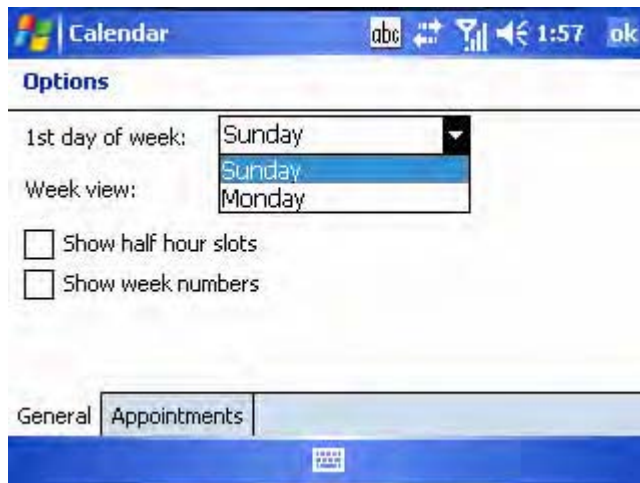

- To specify the number of days you want to appear in a week, in **Week view**, tap **5-day week**, **6-day week**, or **7-day week**.

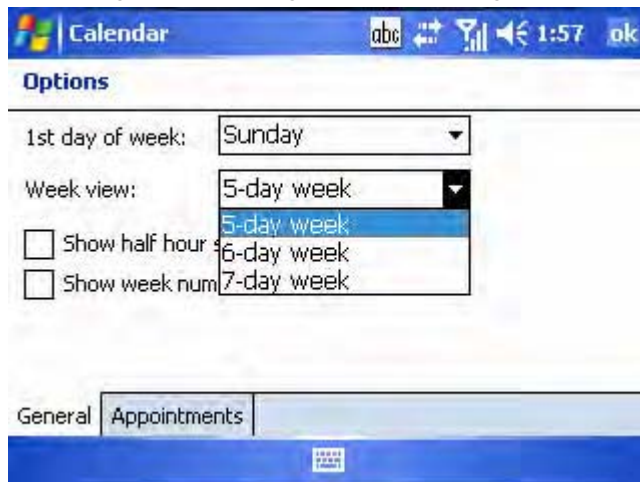


3. Tap **ok**.


## 2.7 Using Notes

Notes helps you to quickly capture thoughts, questions, reminders, to-do lists, and meeting notes. You can create handwritten and typed notes, record voice notes, convert handwritten notes to text for easy readability, and send notes to others.

Your notes and recordings are displayed in the note list. If you have a long list, tap the sort list (labeled Name by default), and select the option you want. To open a note or play a recording, tap it. To see a list of available actions for a note or recording, tap and hold the note or recording.


### Setting the Default Input Mode

1. Tap  > **Programs** > **Notes**.
2. Tap **Menu** > **Options**.
3. Select one of the following modes in **Default mode**:
  - Select **Writing** if you prefer your notes to be handwritten.
  - Select **Typing** if you would like your notes to be typed.

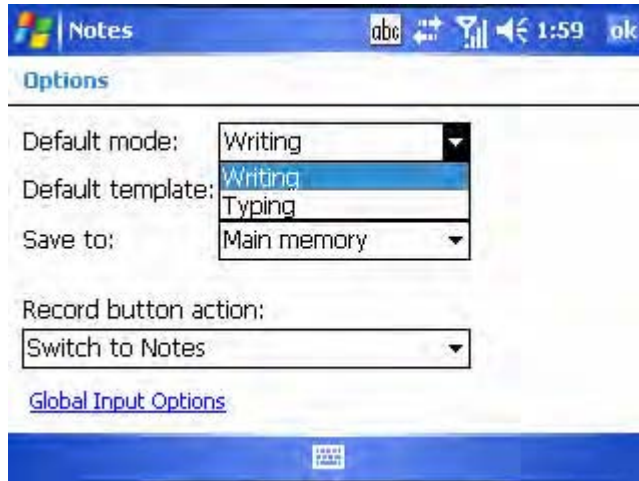

4. Tap .

### Creating a Note


1. Either tap  > **Programs** > **Notes** or press the Voice Record button on the left side of the device.



Press the Voice Record button on the left side to launch Notes.

2. Tap **New** and enter text.




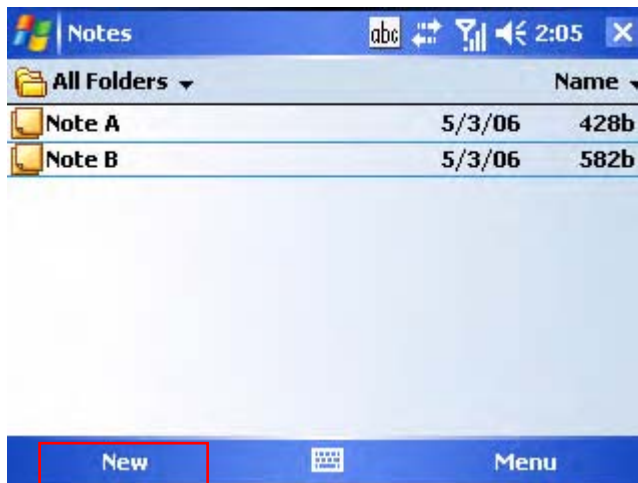

3. Tap **ok** to save your note.

### Creating a Stand-alone Voice Recording

1. Tap > **Programs** > **Notes**.
2. If the recording toolbar is not shown, tap **Menu** > **View Recording Toolbar**.
3. Tap the RECORD button on the recording toolbar and speak to the device's microphone to record your voice in the notes list.
4. Tap the STOP button on the recording toolbar when finished.
5. Tap **ok** to return to the notes list. In the notes list a stand-alone voice recording is listed with a icon.

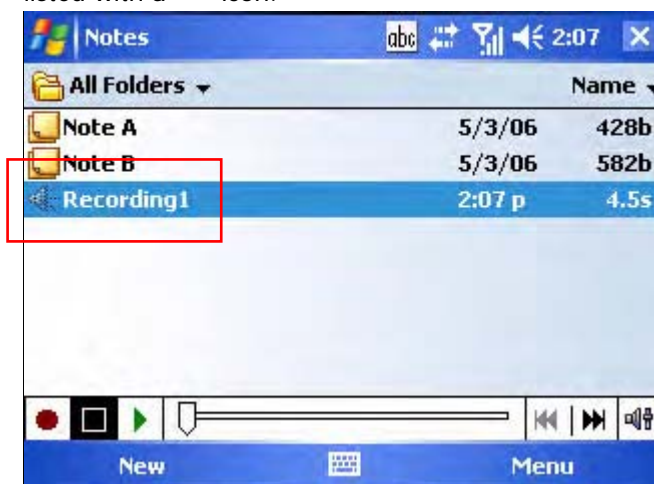

### Switching between Typing/Writing Modes

1. Tap > **Programs** > **Notes**.

2. Create a new note or open an existing note from the notes list.
3. Tap **Menu** > **Draw** to switch to a different mode.




While in typing mode, tap Draw to switch to writing mode



While in writing mode, tap Draw to switch to typing mode

### Editing a Handwritten Note


- Undo Ink/Redo

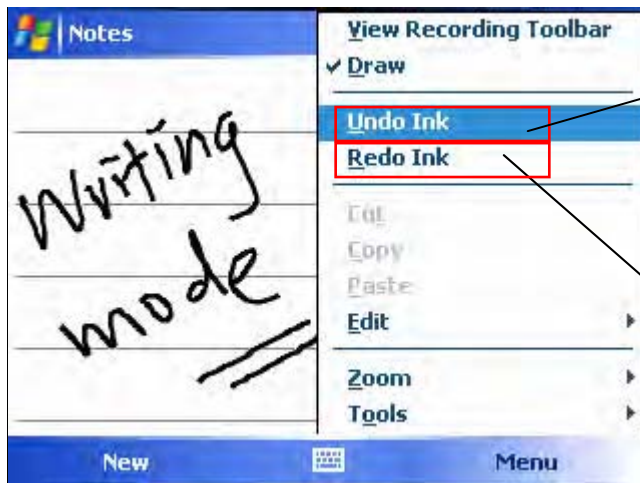

Tap **Undo Ink** to cancel or reverse an action.

Re-execute an undone action by tapping **Redo**.

- Select All/Clear

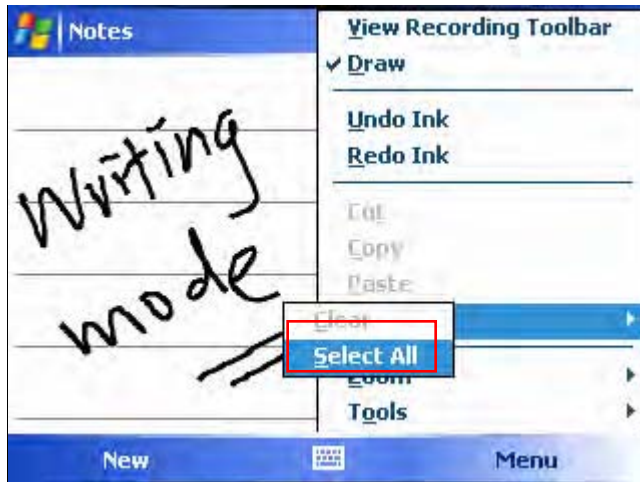


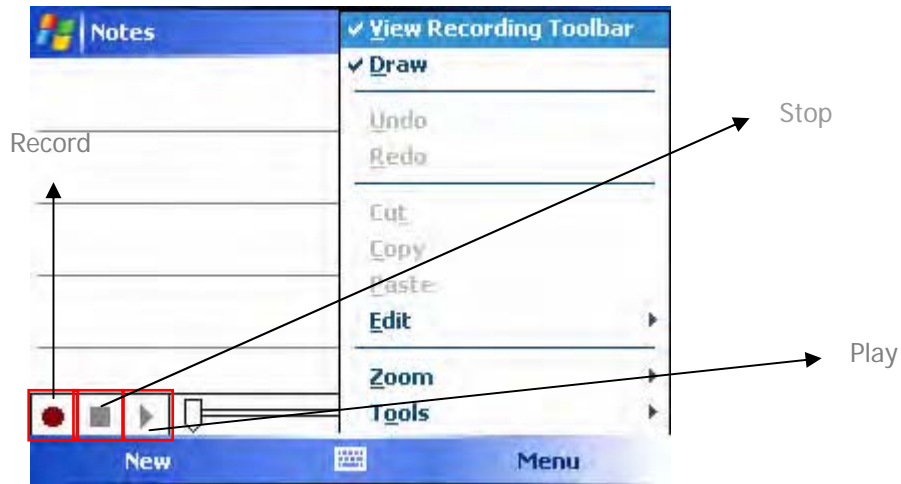
Tap **Select All** to select all handwriting





Tap **Clear** to clear selected handwriting

**Adding a Voice Recording to a Note**


1. Tap  > **Programs** > **Notes**.
2. Create a new note or open an existing note from the notes list.
3. If the recording toolbar is not shown, tap **Menu** > **View Recording Toolbar**.



4. Tap the **RECORD**  button on the recording toolbar and speak to the device's microphone.
5. Tap the **STOP**  button on the recording toolbar when finished.
6. Tap **ok** to return to the notes list if you are adding a voice recording to a note.




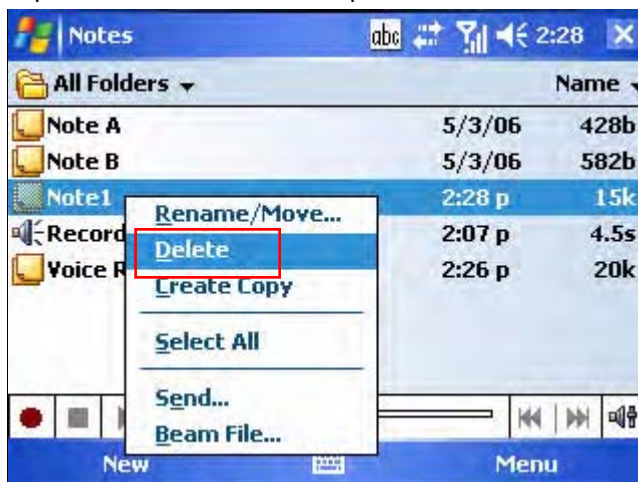
Add a voice recording to a note in typing mode

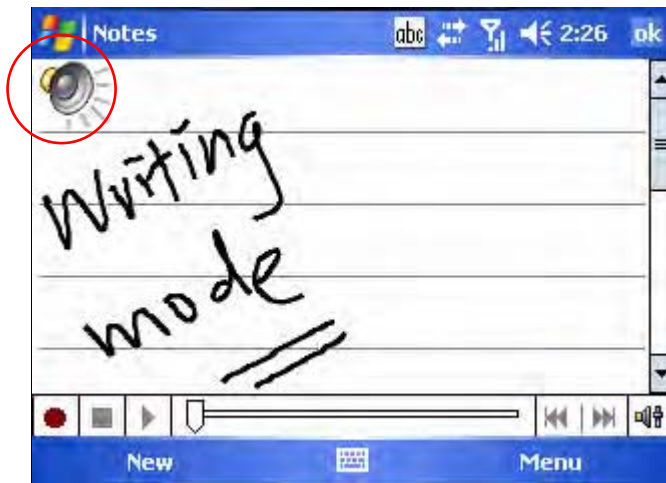


Add a voice recording to a note in writing mode

### Deleting a Note


1. Tap  > **Programs** > **Notes**.
2. Tap and hold the note and tap **Delete**.




3. Tap the **Yes** button to delete the selected note.

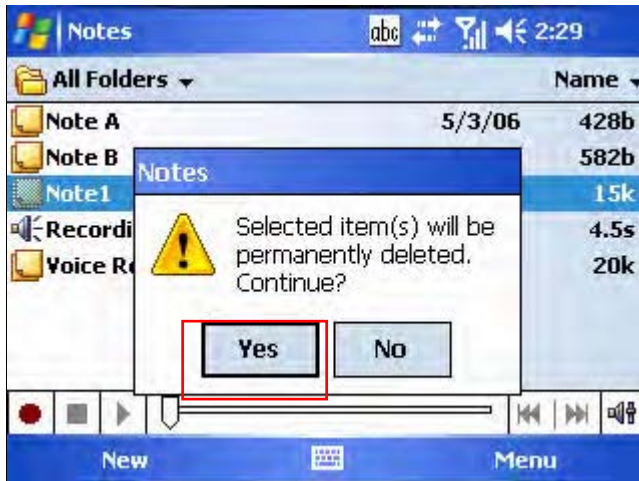


### Creating a Default Template

1. Tap  > **Programs** > **Notes**.
2. Tap **Menu** > **Options**.

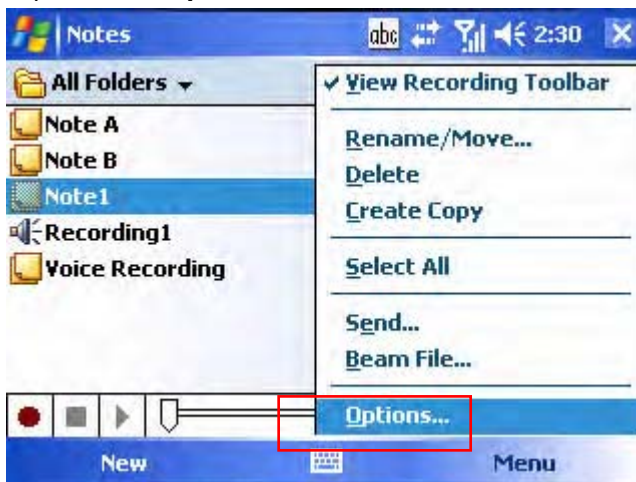

3. Select a template from Default template.

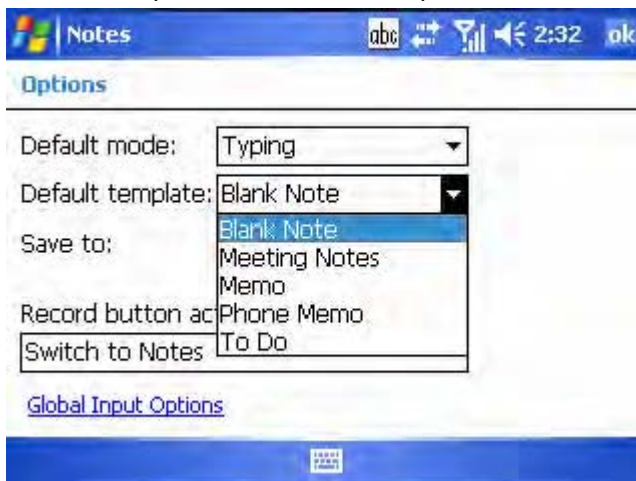

4. Tap **ok** to save your settings.

## 2.8 Using Tasks

Use Tasks to keep track of things you need to do. A task can occur once or repeatedly (recurring). You can set reminders for your tasks and you can organize them by using categories.


Your tasks are displayed in a task list. Overdue tasks are displayed in red.


If you use Outlook on your PC, you can synchronize tasks between your device and PC so that tasks you create or update on your PC will also be updated on your device and vice versa.



To quickly see the number of active tasks you have, tap **Start > Today**.

### Creating a Task

1. Tap  > **Programs > Tasks**.
2. Do one of the following:
  - In the **Tap here to add a new task** box enter the task name and press ENTER key.
  - Tap **Menu > New Task** and enter details about the new task.

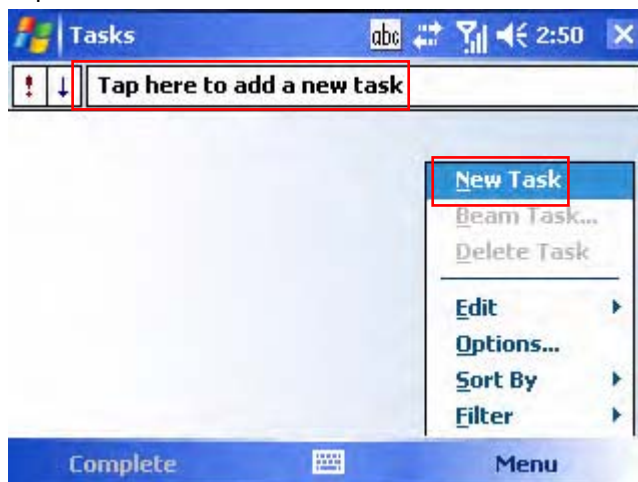

1. Enter or select a subject.

The screenshot shows the 'Tasks' form with the following fields and values:

- Subject: [Empty]
- Priority: Normal
- Status: Not Completed
- Starts: None
- Due: None
- Occurs: Once
- Reminder: None
- Categories: No categories...

At the bottom, there are tabs for 'Task' and 'Notes', and a 'Menu' button.

2. Select a completion status.

The screenshot shows the 'Tasks' form with the 'Status' dropdown menu open. The options are:

- Not Completed
- Not Completed
- Completed

The 'Not Completed' option is highlighted. A red box highlights the dropdown menu area.


3. Pick the start and due time.

The screenshot shows the 'Tasks' form with a calendar view for December 2006. The calendar is displayed in a grid format with days of the week (S, M, T, W, T, F, S) and dates (1-31). The 15th is selected for both the 'Starts' and 'Due' fields. A red box highlights the calendar area.


Today: 12/15/06

4. Set a reminder date/time and pick a task category.



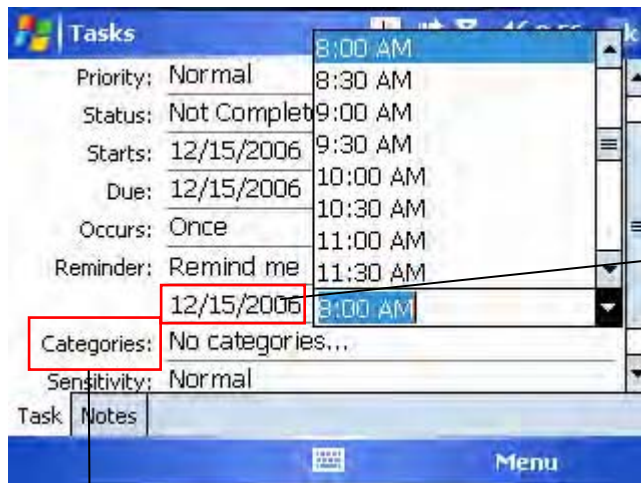



Set reminder date and time.

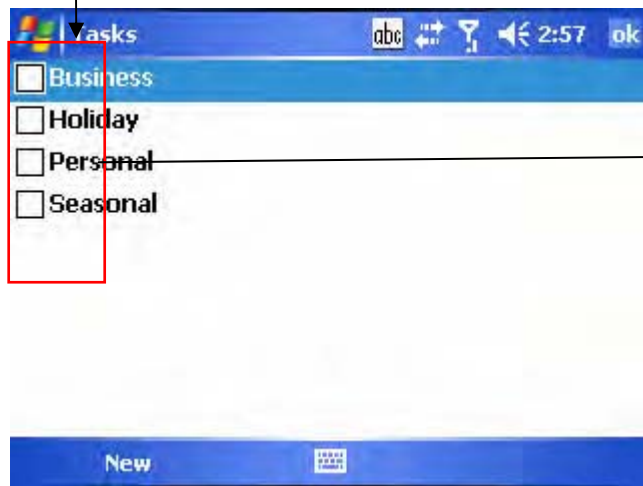


Multi-selection


5. Select task sensitivity.

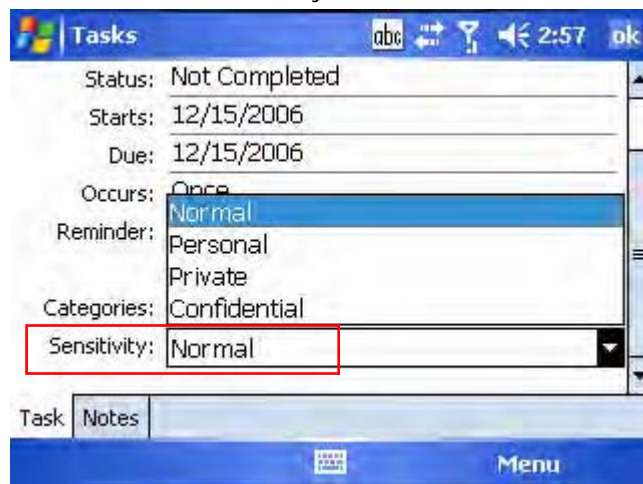


 You can synchronize information on your phone with your PC to keep your task list up to date in both locations.


 If you create a new task with a reminder on your PC and then synchronize tasks with your phone, the reminder will play at the time it was set on your PC.


### Deleting a Task

1. Tap  > **Programs** > **Tasks**.
2. Select the task, and tap **Menu** > **Delete Task**.

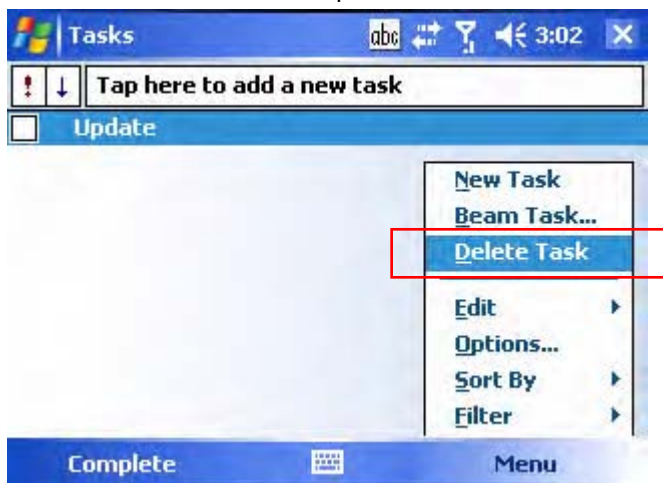


### Changing Task Priority


1. Tap  > **Programs** > **Tasks**.
2. Select the task, and tap **Edit**.

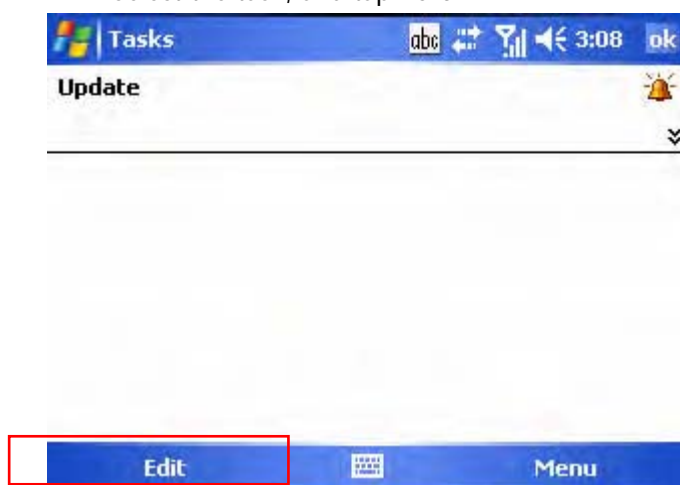


3. In the **Priority** box, select a priority.

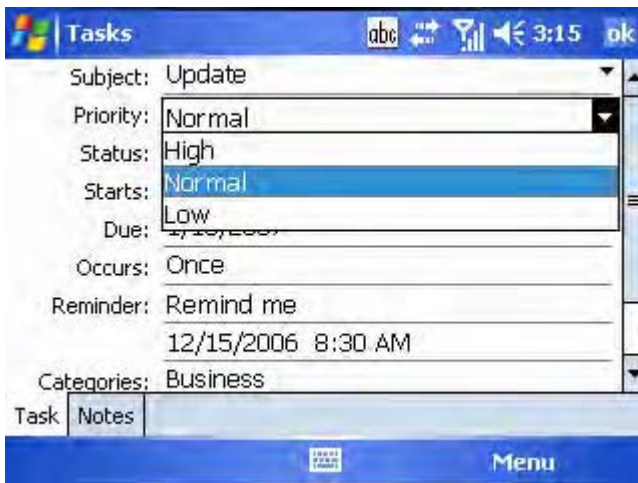


### Sorting/Filtering Your Tasks


1. Tap  > **Programs** > **Tasks**.
2. Do one of the following:
  - To sort the tasks, tap **Menu** > **Sort by** and select a sorting option.
  - To filter the tasks by category, tap **Menu** > **Filter** and select a category to display.

### Setting Tasks Options

1. Tap  > **Programs** > **Tasks**.
2. Tap **Menu** > **Options**, there are 3 options you can set:
  - Set reminders for new items
  - Show start and due dates
  - Show Tasks entry bar

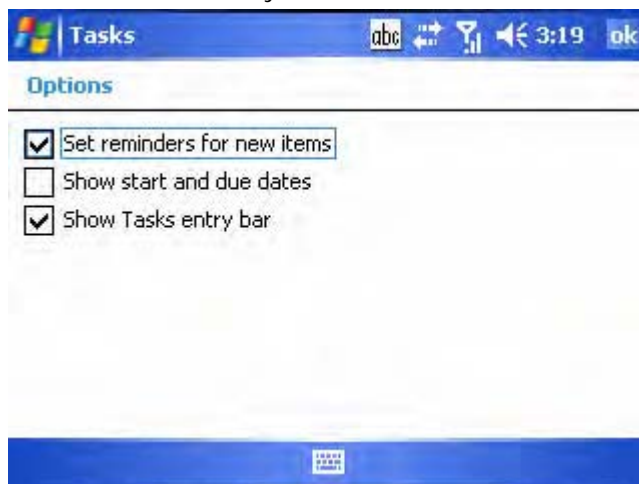

**Viewing Task Details**

1. Tap  > **Programs** > **Tasks**.
2. Tap twice on a task to view the details.





### Charter 3. Phone Features

### 3.1 Using the Phone

You can use your phone to make, receive, and keep track of calls, and send text messages (SMS, Short Message Service) and MMS (Multimedia Messaging Service) messages. You can also dial a phone number directly from Contacts, and easily copy SIM contacts to Contacts on the phone.


#### The Phone Screen

From the Phone screen, you can open, call, or find a contact, and even save a new number in Contacts. To access the Phone screen, do any of the following:

- Press Talk (.
- Tap  > **Phone**.

#### Activating PIN Security

Most Subscriber Identity Module (SIM) cards are preset with a personal identification number (PIN) that is provided by your wireless service provider. When PIN Security is activated, you need to enter the PIN whenever you use your phone.

1. Tap  > **Settings** > **Phone** > Select **Require PIN when phone is used**.
2. Enter the preset PIN provided by your wireless service provider.
3. Tap **Enter**.





If your PIN is entered incorrectly three times, the SIM card will be blocked. If this happens, you can unblock it with the PIN Unblocking Key (PUK) obtained from your wireless service provider.

#### Setting Ring Tones

You can choose how to be notified for incoming calls, reminders, new messages, alarms, and more.

To set a ring tone for incoming calls:

1. Tap  > **Settings** > **Phone**.
2. In the Ring tone list, select a ring tone.
3. Tap .







To adjust the earpiece volume during a call, press the VOLUME control on the phone side panel. Adjusting the volume at any other time can affect the ring, notification, and MP3 sound levels.

### 3.2 Making a Call



To have a phone call via GSM and to connect to Wi-Fi simultaneously on this device is not feasible. Wi-Fi will be disconnected automatically while you make a call.

#### Making a Call by Entering a Phone Number


1. On the Phone screen, begin entering the phone number.
2. Do one of the following:
  - If you see the number or contact name to call, select it, then tap  Talk on the screen or press the TALK (  ) key.
  - If you do not see the number or contact name, finish entering the number, then tap  Talk or press the TALK (  ) key.



### Making a Call from Call History

Call History displays calls you have made, received, and missed.

1. On the Phone screen, tap the **Call History** button on the Phone keypad.

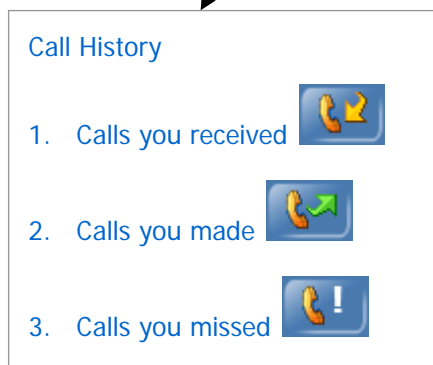

2. Select the name or phone number to call.
3. Tap **Call** or press the TALK (📞) key.

### Making a Call from Contacts

1. On the Phone screen, tap **Contacts**.
2. Tap the desired contact and tap **Call** or press the TALK (📞) key to dial.



You can tap on the desired contact in the list and tap on the number you want to dial.



You can also tap and hold the desired contact in the list and select **Call Work**, **Call Home**, or **Call Mobile** from the pop-up submenu.




### Making a Call from Speed Dial


You can create speed dial entries for frequently-called numbers or frequently-accessed items so you can dial a number by pressing a single key. For example, if you assign location 2 to a contact in Speed Dial, you can simply press and hold 2 on the Phone keypad to dial the contact's number. Speed dials can be created only for numbers that are stored in Contacts.

#### To create a speed dial entry for a contact

1. On the Phone keypad screen, tap **Contacts**.
2. Tap the contact for whom to create a speed dial.
3. Select the phone number for which to create a speed dial.
4. Tap **Menu > Add to Speed Dial**.

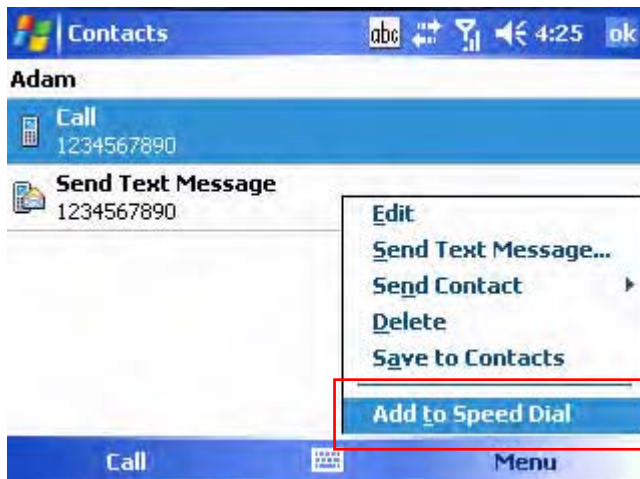

5. In **Location**, select the speed dial number to use.

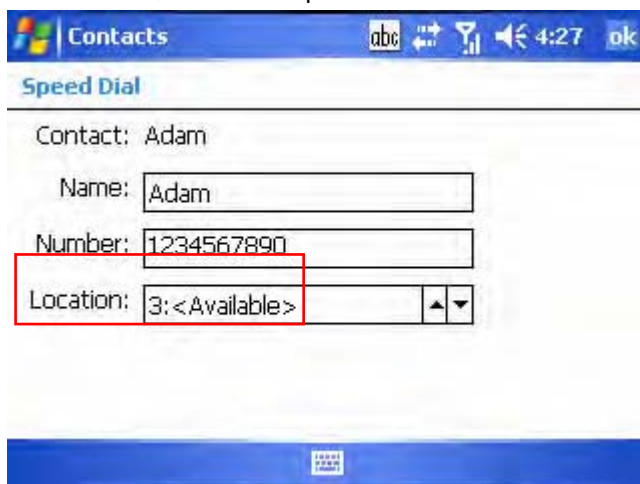

6. Tap **ok** when finished.

Tap **Speed Dial** button on the phone screen to check the success of creating a Speed Dial entry.



The first speed dial location is generally reserved for your voice mail. Speed Dial uses the next available location by default. If you want to place a number in a location that is already used, the new number replaces the existing number.

#### To retrieve a voice mail message

- On the Today screen, press and hold 1 to access your voice mailbox, and follow the prompts to retrieve your messages.

#### To delete a speed dial entry

- In the Speed Dial list, tap **Menu** > **Delete**.


### Receiving/Rejecting a Call

When you receive a phone call, you have the option to answer it or ignore it.

#### To receive a call


- Tap **Answer** or press TALK () to accept an incoming call.

#### To end a call

- Tap **Ignore** or press END () to hang up a call.


#### To block incoming or outgoing calls

You will not be able to receive or make calls according to the options you choose.

1. Tap  > **Settings** > **Personal** tab > **Phone** > **Services** tab.
2. Tap **Call Barring** > **Get Settings**.



3. Choose the calls you want to block, and tap **ok**.
  - Block incoming calls: All calls, When roaming, Off.
  - Block outgoing calls: All calls, International, International except to home country, Off.

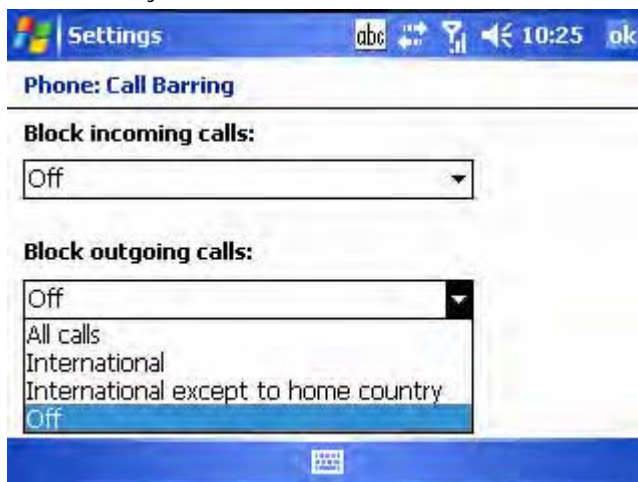

### 3.3 In-Call options

Your phone provides various options for managing multiple calls at the same time. You are notified when you have another incoming call, and you have the choice of ignoring or accepting the call. If you are already on a call and accept the new call, you can choose to switch between the two callers, or set up a conference call between all three parties.



In-Call Options

### Conference Call

1. Either put a call on hold and dial a second number; or accept a second incoming call when you have one in progress.



2. Tap **Menu** and select **Conference**.





If the conference connection is successful, the word "Conference" will appear at the top of the screen. To add additional persons to your conference call, tap **Hold**, enter the phone number, and then tap **Swap** to return and continue.




Not all service providers support conference calling. Contact your service provider for details.

### Call waiting


To turn call waiting notifications on and off

When you are in another call, you will be notified of an incoming call if this option is selected.

1. Tap  > **Settings** > **Phone** > **Services** tab > **Call Waiting** > **Get Settings**.

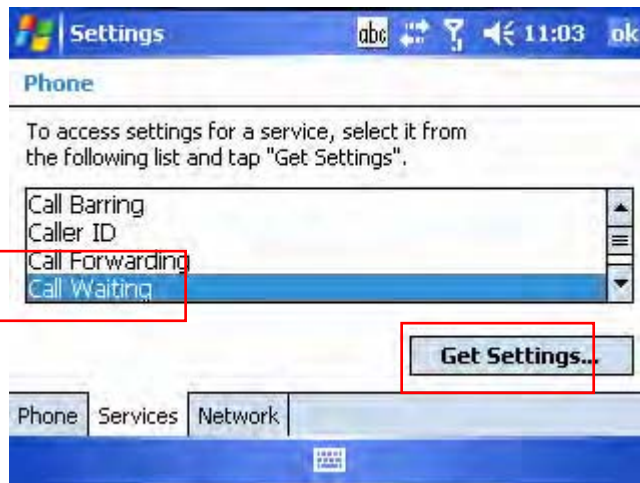

2. Select **Notify me** or **Do not notify me**, and tap **ok**.

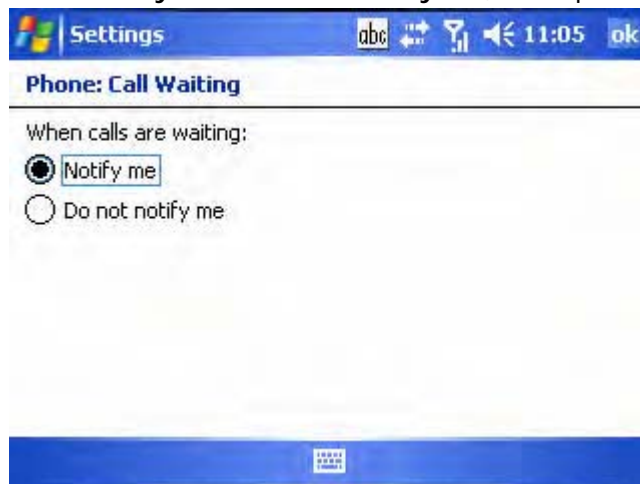

### To answer another call

1. Click **Answer** to take the second call and put the first call on hold.
2. To end the second call and return to the first call, press END (📞).

### To switch between calls

- To switch between two calls, click **Swap**.



### Turning On/Off the Speakerphone

Talk hands-free or let others hear your conversation with the built-in speakerphone in your device.

- Tap **Speaker On** during a call to turn the speaker on.
- Tap **Speaker Off** to turn the speaker off.



To avoid damage to your hearing, do not hold your phone against your ear when the Speakerphone is turned on.

### Muting the microphone


The device's microphone can be turned off during a call. If you turn off the microphone the caller cannot hear you. However, you can still hear the caller.

- Tap **Mute** during a call to turn the microphone off.
- Tap **Unmute** to turn the microphone on.


## 3.4 Blocking Unwanted Phone Calls


You can set up a blacklist to block incoming calls from certain phone numbers. If a call is received from a blacklisted number, your phone will not ring or vibrate. Instead, this call will be locked automatically.

### Barring Withheld Numbers

1. Tap  > **Programs** > **Blacklist**.
2. Tap **On** or **Off** to enable or disable the feature.
3. Tap **ok**.


**Adding a Phone Number to the Blacklist**

1. Tap  > **Programs** > **Blacklist**.
2. Tap **Add** and do one of the following:
  - Tap **Contact** and select a contact to add to the blacklist.
  - Tap **Number** to add a phone number directly.

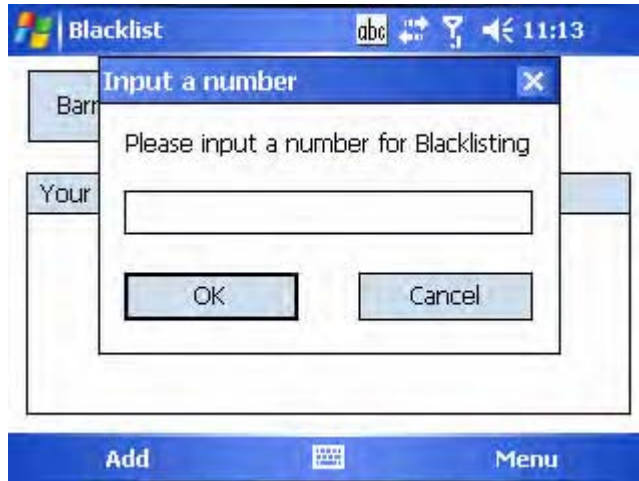

3. Tap **ok**.


**Removing a Phone Number from the Blacklist**

1. Tap  > **Programs** > **Blacklist**.
2. Select the number you want to remove from the blacklist.
3. Tap **Menu** > **Delete**.
4. Tap **ok**.


**3.5 SIM Manager**

The SIM Manager helps you to manage the phonebook in your SIM card. Using the SIM Manager, you can easily transfer phonebook entries from your SIM card to Contacts.


**Adding a Phonebook Entry to SIM Card**

1. Tap  > **Programs** > **SIM Manager**.
2. Tap **Add** and enter the name and phone number you want to add.



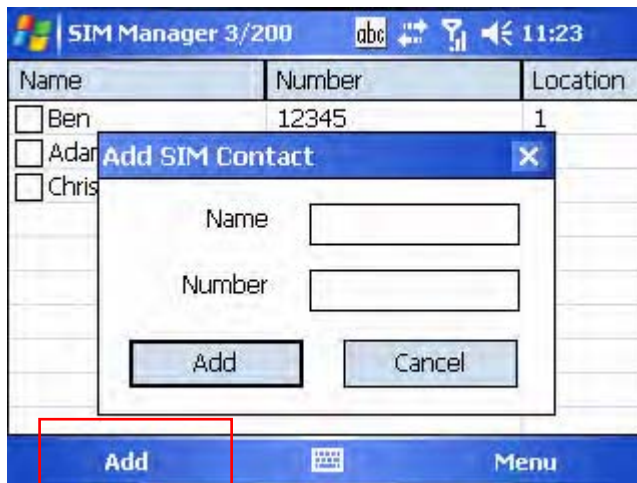

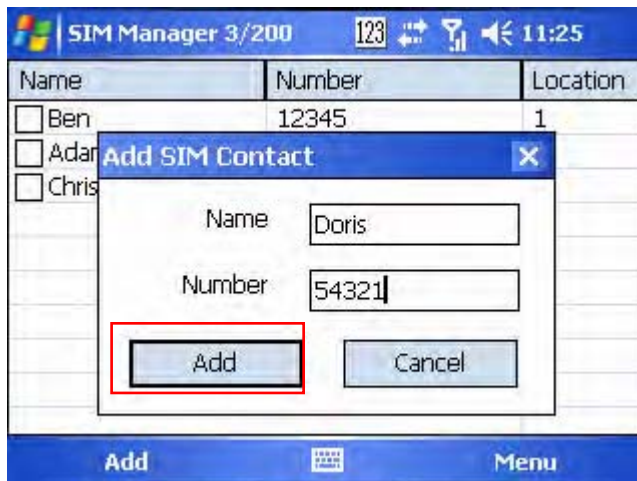


3. Tap the **Add** button.




### Deleting Phonebook Entries from SIM Card

1. Tap  > **Programs** > **SIM Manager**.
2. Select the entries you want to delete by checking the checkboxes in front.
3. Tap **Menu** > **Delete**.

### Saving Phonebook Entries to Contacts

1. Tap  > **Programs** > **SIM Manager**.
2. Select the entries you want to save to Contacts by checking the checkboxes in front.
3. Tap **Menu** > **Save to Contact**.
4. Tap  to close the notification dialog box.

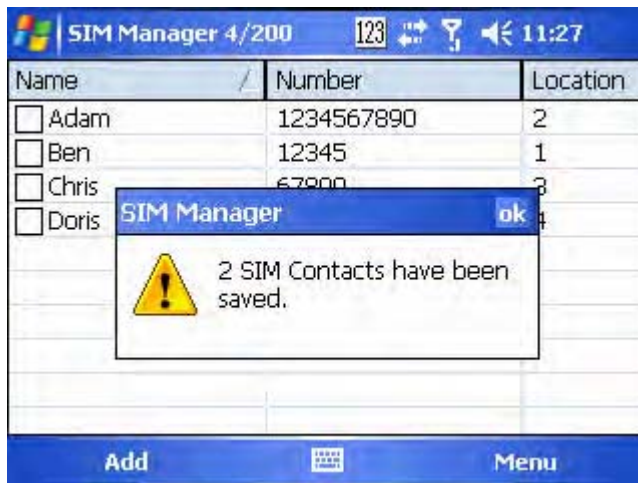

## Chapter 4. Synchronizing Information

ActiveSync synchronizes information on your phone with information on your PC such as Outlook content. ActiveSync can also synchronize over a wireless or cellular network with Exchange Server, if your company or service provider is running Exchange Server with Exchange ActiveSync.

Specifically, you can use ActiveSync to:

- Synchronize information such as Outlook e-mail, contacts, calendar, or tasks information on your phone with your PC, as well as pictures, video, and music.
- Synchronize Outlook e-mail, contacts, calendar appointments, and tasks on your phone directly with Exchange Server so that you can stay up to date even when your PC is turned off.
- Copy files between your phone and your PC without synchronizing.
- Select which types of information are synchronized and specify how much information is synchronized. For example, you can choose how many weeks of past calendar appointments to synchronize.

#### 4.1 Installing and setting up ActiveSync

1. Install ActiveSync on your PC, as described on the Windows Mobile™ Getting Started Disc. After Setup completes, the Synchronization Setup Wizard automatically starts when you connect your device to the PC.
2. Follow the instructions on the screen to complete the wizard. In the Sync Setup Wizard, you can:
  - Create a synchronization relationship between your PC and the device.
  - Configure an Exchange Server connection to synchronize directly with Exchange Server. To synchronize your device with Exchange Server, obtain the name of the Exchange Server, your user name, password, and domain name from your administrator before completing the wizard.
  - Choose information types to synchronize.




When you finish the wizard, ActiveSync synchronizes your phone automatically. Once synchronization completes, you can disconnect your phone from your PC.

## 4.2 Synchronizing Information

To synchronize using ActiveSync, you must install ActiveSync on your PC before connecting your device to the PC.

### Starting and Stopping Synchronization Manually

1. Turn on the device.
2. Connect your device to your PC using a serial cable, USB cable, Bluetooth, or infrared connection. For more detailed information, see "Connecting a mobile device to a PC" in ActiveSync Help on your PC.
3. On your device, tap  > **Programs** > **ActiveSync**.
4. To start synchronization, tap **Sync**.
5. To stop synchronizing, tap **Stop**.



You can start and stop synchronization only if your device already has a sync relationship with a PC or Exchange Server.



Some Anti-Virus software may conflict with ActiveSync.

ActiveSync synchronizes a limited amount of information by default to save storage space on your phone. You can change the amount of information that is synchronized by performing the following steps.

### Changing Which Information is Synchronized

1. On the Today screen, click **Start** > **Programs** > **ActiveSync**.
2. Tap **Menu** > **Options**.
3. Do one or more of the following:
  - Select the check box for the items you want to synchronize. If you cannot select a check box, you might have to clear the check box for the same information type elsewhere in the list.
  - Clear the check box for any items you want to exclude.
  - To customize synchronization of a computer, select the computer name then click **Settings**.
  - To customize synchronization of particular information, select the information type then click **Settings**.
  - To stop synchronizing with one computer completely, select the computer name and click **Delete**.




Outlook e-mail can be synchronized with only one computer.

### 4.3 Changing Settings for an Information Type



Before changing settings for an information type on the device, disconnect it from your PC.


1. Tap  > **Programs** > **ActiveSync** > **Menu** > **Options**.
2. Select one of the information types.
3. Do one of the following:
  - To view or change settings for an information type (when available), tap **Settings**.
  - To view or change settings for a computer or Exchange Server, tap **Settings**.
4. Change the amount of information to be synchronized or other settings.
5. Tap **ok** (or **Finish** in the Exchange Server settings wizard).

### 4.4 Synchronizing with Exchange Server

To set up your device to synchronize directly with Exchange Server, you will need to get the name of the server and the server domain name from your service provider or system administrator. You must also know your Exchange user name and password.



Before changing synchronization settings on the device, disconnect it from your PC.

1. On your device screen, tap  > **Programs** > **ActiveSync** > **Menu** > **Configure Server**. If you have not yet set up sync with Exchange Server, this will say **Add Server Source**.
2. In **Server address**, enter the name of the server running Exchange Server, and tap **Next**.
3. Enter your user name, password, and domain name, and tap **Next**.
4. If you want the device to save your password so that you will not need to enter it again when connecting, select the **Save password** check box.


5. Select the check boxes for the types of information items that you want to synchronize with Exchange Server.
6. To change available synchronization settings, select the type of information, and tap **Settings**.
7. To change the rules for resolving synchronization conflicts, tap **Advanced**.
8. Tap **Finish**.




You can also use the Sync Setup Wizard to set up the phone to synchronize remotely with the Exchange Server. This wizard is started when you connect your phone to your PC after installing ActiveSync on the PC.

## 4.5 Synchronizing via Infrared and Bluetooth

### Connecting to a PC Using Infrared

1. Follow the instructions in ActiveSync Help on the PC for setting up your PC to receive infrared beams.
2. Line up the infrared (IR) ports so that they are unobstructed and within close range.
3. Tap  > **Program** > **ActiveSync**.
4. Tap **Menu** > **Connect via IR**.
5. Tap **Sync**.

### Connecting to a PC Using Bluetooth

1. Follow the instructions in ActiveSync Help on the PC for configuring Bluetooth on your PC to support ActiveSync.
2. Tap  > **Programs** > **ActiveSync**.
3. Tap **Menu** > **Connect via Bluetooth**. Ensure that the device and PC are within close range.
4. If this is the first time you have connected to this PC via Bluetooth, you must complete the Bluetooth wizard on the phone and set up a Bluetooth partnership with the PC before synchronizing.
5. Tap **Sync**.
6. When finished, tap **Menu** > **Disconnect Bluetooth**.



To preserve battery power, turn off Bluetooth.

## Chapter 5. Bluetooth/Infrared Connections



## 5.1 Overview of Bluetooth

Bluetooth is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 metres without requiring a physical connection. You can even beam information to a device in a different room, as long as it is within range.

The software included with your phone allows you to use Bluetooth in the following ways:

- Beam information, such as files, appointments, tasks, and contact cards, between devices that have Bluetooth capabilities.
- Create a connection between your device and a Bluetooth phone to use the phone as a modem.

### Bluetooth Modes

Bluetooth on your phone operates in three different modes:

1. **On.** Bluetooth is turned on and you can use Bluetooth features.
2. **Off.** Bluetooth is turned off. In this mode, you can neither send nor receive information using Bluetooth. You might want to turn off the radio at times to conserve battery power, or in situations where radio use is prohibited, such as onboard an aircraft and in hospitals.
3. **Vibible.** Bluetooth is turned on, and all other Bluetooth-enabled devices within a range of 10 metres can detect your phone.




By default, Bluetooth is turned off. If you turn it on, and then turn off your phone, Bluetooth also turns off. When you turn on your phone again, Bluetooth automatically turns on.

### Turning Bluetooth On or Off

1. Tap  > **Settings** > **Connections** tab > **Bluetooth**.




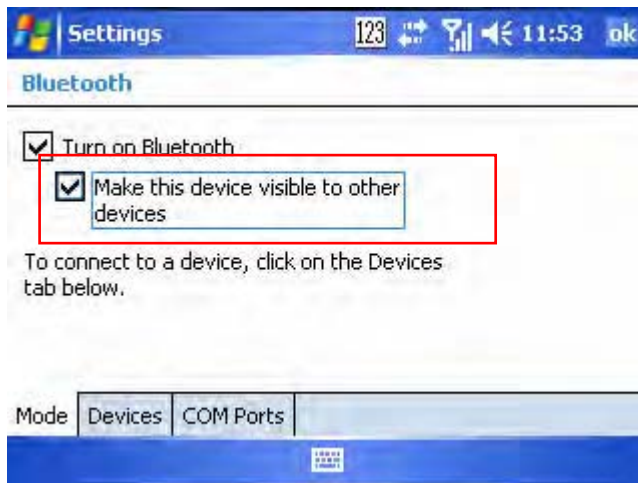
2. Check or uncheck the checkbox in front of **Turn on Bluetooth** to turn on or off Bluetooth.

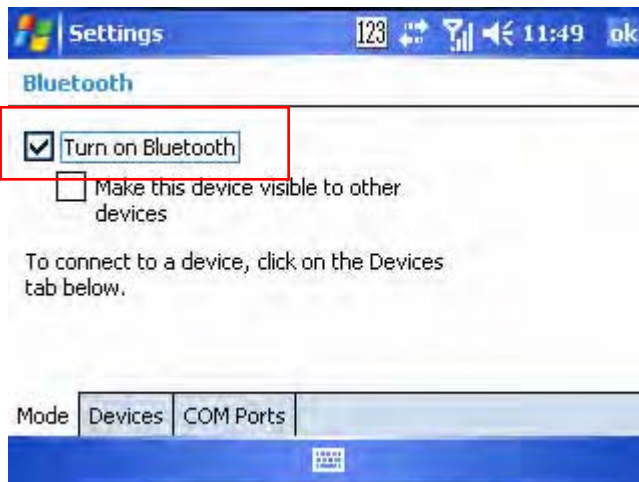

### Making Your Device Visible


To receive beamed information, beaming devices or computers must be able to detect your device.

1. Tap  > **Settings** > **Connections** tab > **Bluetooth**.
2. Select **Make this device Visible to other devices**, and tap .



Other Bluetooth-enabled devices can now detect your phone and attempt to beam information to it, establish a Bluetooth partnership, or use a Bluetooth service.


 Selecting **Visible** also turns on Bluetooth.

 Turning off Bluetooth will make your device not visible, and it will also prevent you from sending a Bluetooth beam.

## 5.2 Bluetooth Partnership (Bonding)


A Bluetooth partnership is a relationship that you create between your phone and another Bluetooth-enabled device in order to exchange information in a secure manner. Creating a partnership between two devices involves entering the same personal identification number (PIN) on both devices, and this is a one-time process. Once a partnership is created, the devices can recognize the partnership and exchange information without entering a PIN again. Make sure the two devices are within a range of 10 meters, and Bluetooth is turned on and in discoverable mode.

### Creating a Bluetooth Partnership

1. Tap  > **Settings** > **Connections** tab > **Bluetooth** > **Devices** tab.
2. Tap **Add new device**. Your device searches for other Bluetooth-enabled devices and displays them in the list.



3. Select the device with which you want to create a Bluetooth partnership, and tap **Next**.

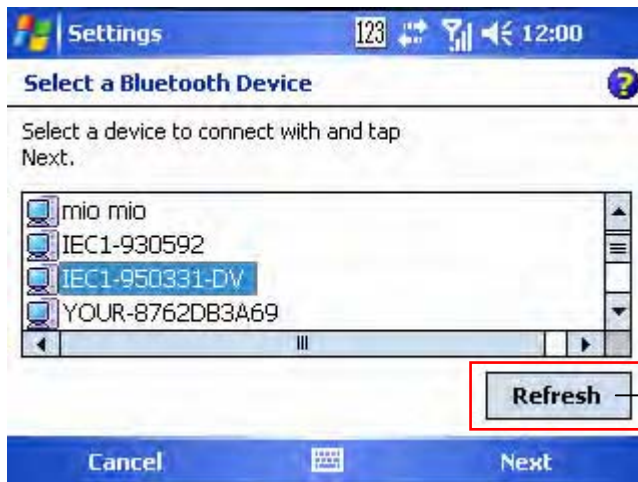


Tap the **Refresh** button if the device you want to connect is not listed.

4. In **Passcode**, if you want to use a passcode (recommended for enhanced security), enter an alphanumeric passcode between 1 and 16 characters, and tap **Next**. Otherwise, leave the passcode blank.




5. Enter the same passcode on the other device
6. Select the service to use from the device, and tap **Finish**.

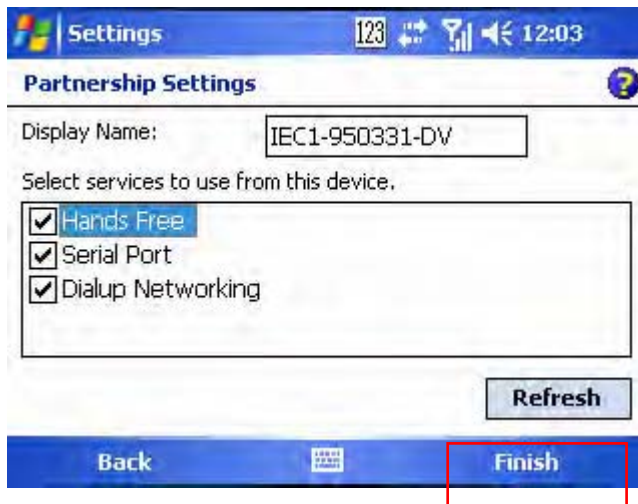

Once you create a partnership, the Bluetooth-enabled devices don't need to be discoverable to beam information between them; Bluetooth needs only to be turned on.


### 5.3 Beaming Information (Bluetooth & Infrared)

#### Receiving Beamed Information

1. Tap  > **Settings** > **Connections** tab > **Beam**.



2. Select **Receive all incoming beams**.

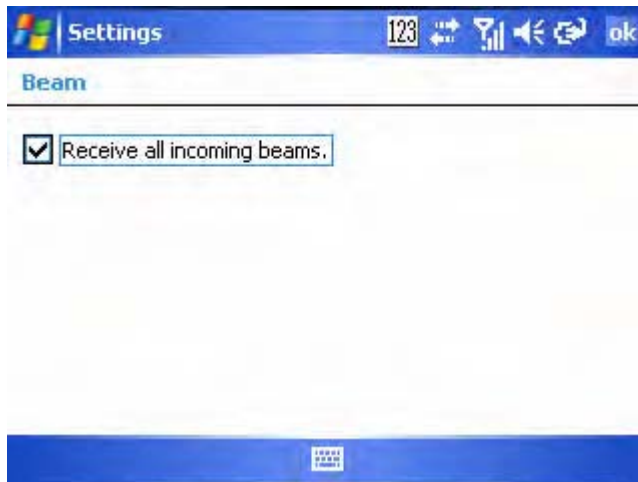

3. Do one of the following:
- To receive beams by using infrared, align the infrared (IR) ports so that they are unobstructed and within close range of each other.
  - To receive beams by using Bluetooth, ensure Bluetooth is turned on and that your phone is discoverable and within close range.
4. Tap **ok**.



Once you select Receive incoming beams, your phone automatically receives beams until you clear this check box.



Your phone can receive all types of beamed files, but you may not be able to view all types of files on the phone. You may need to copy some files to a PC for viewing.

### Beaming an Item

In the Calendar, Contacts, Notes, Tasks, and Pictures programs, you can beam files and information to other devices using Bluetooth or infrared.

1. From the program, select the item you want to beam, such as an appointment in Calendar, a task in Tasks, a contact card in Contacts, a picture in Pictures, a file in File Explorer. In Calendar, for example, first open the appointment in Agenda view.
2. Tap **Menu > Beam [type of item]**.
3. Do one of the following:
  - If using Bluetooth, select the device to which you want to send the item.
  - If using infrared, align the infrared (IR) ports at close range until the target device name appears, and then select the device to which you want to send the item.



When using Bluetooth, if the device that you want to beam to doesn't appear in the list, ensure that the device is turned on, visible, and within close range of your phone. Also, ensure that Bluetooth is turned on.

## Chapter 6. Transferring Files To and From Your Device




You may need to transfer application data such as Word documents, Excel spreadsheets, PowerPoint slides, and/or media files from your PC to your device. This section describes different methods to transfer files from a PC to your device.

## 6.1 Using ActiveSync



To transfer files from PC to your device with ActiveSync, you must install Microsoft ActiveSync on the PC first. Please refer to Chapter 4 Synchronizing Information for detail on how to install and set up ActiveSync.

1. Connect your device to the PC with the USB cable. Microsoft ActiveSync should be automatically launched on the PC if it is set up correctly.
2. Select an information type under Synchronization Options in the Synchronization Setup Wizard by checking the checkbox in front of it.
3. Click the **Settings** button and add the files you want to transfer. Click the **OK** button when you finish.
4. Click **Next**, and then click **Finish** to start the synchronization process.
5. On your device, tap > **Programs** > **File Explorer**. The files should be saved to **My Documents**. Check to see if the files have been transferred to your device successfully.

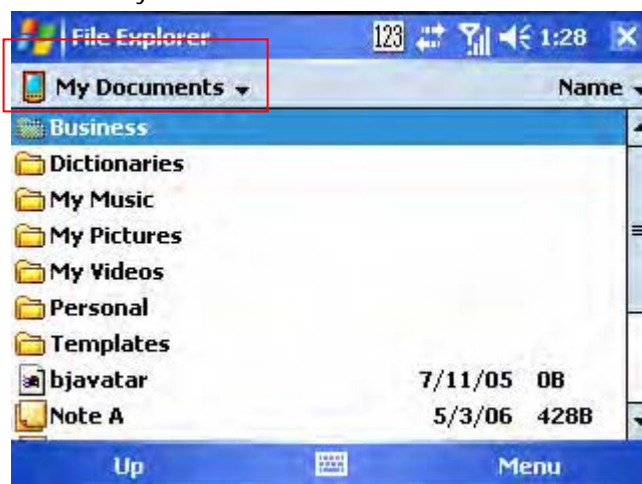


## 6.2 Transferring from Memory Cards

1. Insert your memory card into the device's mini-SD card slot. (See "1.5 Mini-SD cards" for details.)


2. Tap  > **Programs** > **File Explorer**.




3. In the Show list, select **Storage Card**.

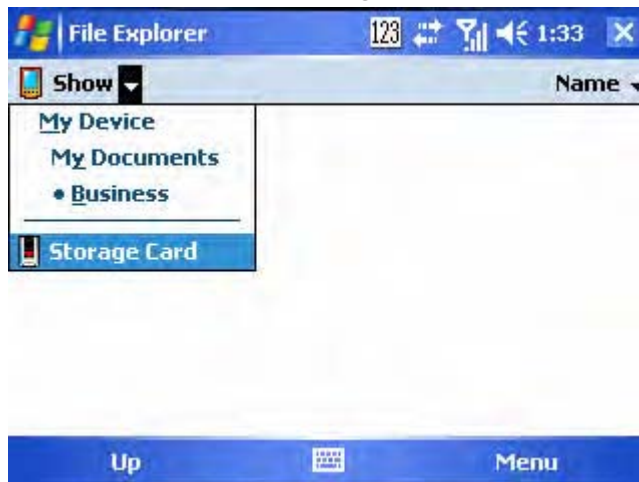

4. File Explorer should display all the files stored in your memory card. Tap and hold the file you want to transfer, and select **Copy**.

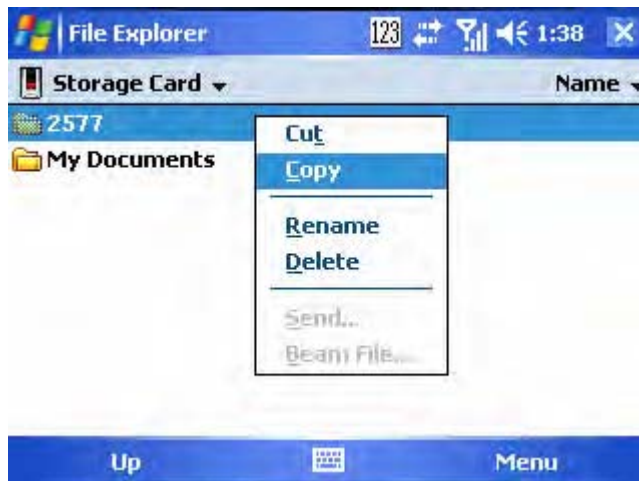


5. From the Show list in File Explorer, go to destination folder. (For example, **My Device** > **My Documents**.)
6. Tap **Menu** > **Edit** > **Paste**.

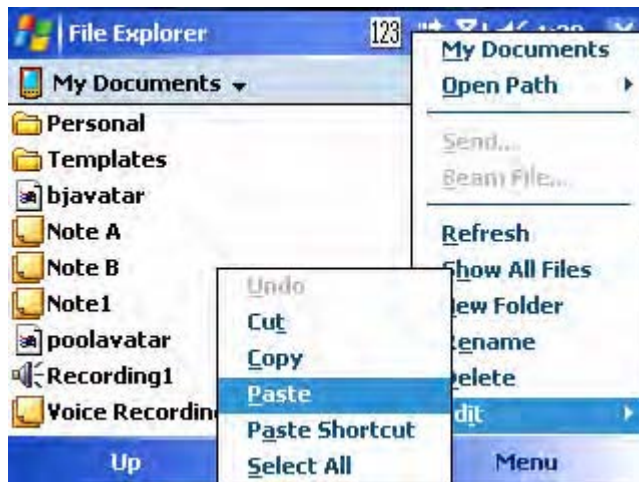

### 6.3 Using Infrared



Before receiving files, you must make your device capable of receiving incoming beams by tapping  > **Settings** > **Connections** tab > **Beam** and check the checkbox in front of **Receive all incoming beams**.

1. Align the infrared port on your device with the infrared port on your PC so that they are unobstructed and within close range.
2. After your PC detects a new infrared connection, select a file to send to your device and click the **Send** button.

3. Tap **Yes** when your device prompts about receiving a file.
4. On your PC, you can see the file transmission information such as the filename and percentage.
5. After the transmission process is finished, the file should be saved in your device under My Documents in the File Explorer.

## 6.4 Using Bluetooth



Before receiving files, you must turn Bluetooth on and establish a Bluetooth partnership between your PC and your device. (See "Chapter 5. Bluetooth/Infrared Connections" for details.)

1. On your PC, locate the file you want to send using Bluetooth with Windows Explorer.
2. Right-click the file and select the device you want to transfer the file to under "to Bluetooth."
3. Tap **Yes** when your device prompts about receiving a file.
4. After the transmission process is finished, the file should be saved in your device under My Documents in the File Explorer.

## 6.5 Transferring to a PC or Other Devices

Please refer to Section 5.3 "Beaming Information (Bluetooth & Infrared)" for details.

## Chapter 7. Connecting to the Internet

## 7.1 Setting up Internet connections

Your device's powerful networking capabilities allow you to access the Internet or your corporate network at work through wireless and conventional connections. Specifically, you can configure your device to establish a connection via GPRS or Proxy.

With an active connection on your device, you can browse the Web, download e-mails, or use MSN Messenger. Check with your service provider to see if a connection has already been set up for you, and if over-the-air configuration is supported.

If you need to manually set up a connection, it is important that you obtain the following information from your Internet Service Provider (ISP) or the company whose intranet you are trying to access:

- User name
- Password
- Access point name (required for GPRS connection)
- Domain name (required for accessing a corporate network or an intranet)


### Creating a GPRS Connection

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

1. Tap  > **Settings** > **Connections** tab > **Connections**.




2. Tap **Add a new modem connection**.

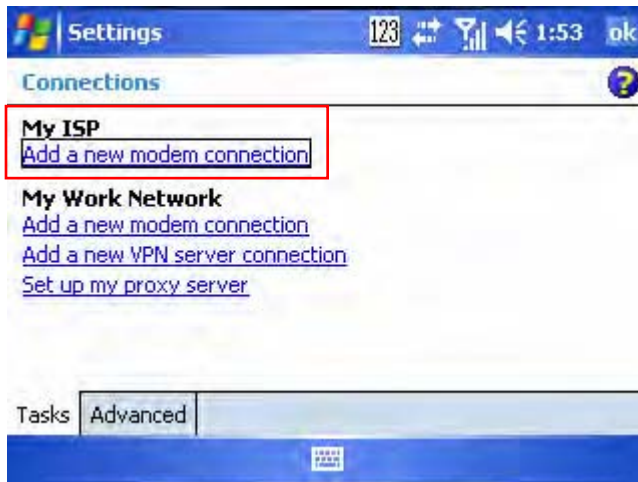


3. Enter the following information (you may or may not need to enter all of the following information), and tap **Finish**.


- Enter a name for the connection.
- In **Select a modem**, select **Cellular Line (GPRS)**.

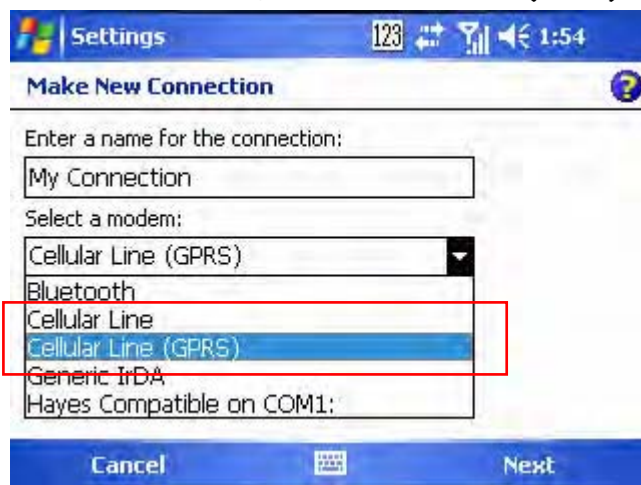

- In **Access point name**, enter the access point name.

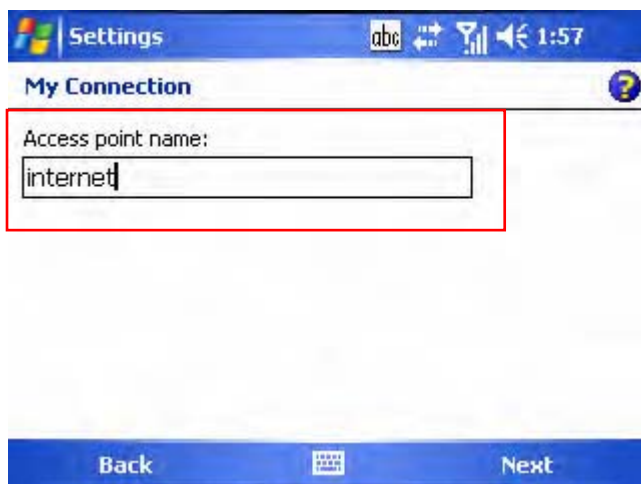

- In **User name**, enter your user name for the GPRS network, if required.
- In **Password**, enter your password, if required.

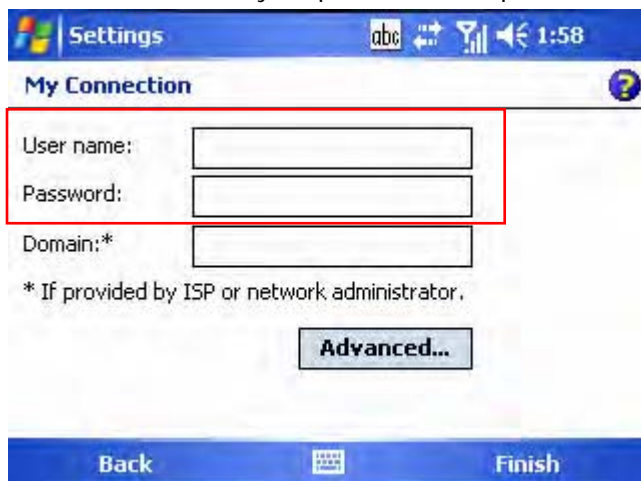

- Tap **Advanced** > **Servers** tab. In **DNS**, enter the primary Domain Name System (DNS) address, if required.
- In **Alt DNS**, enter the secondary DNS address, if required.
- Tap **TCP/IP** tab. In **Use specific IP address**, enter the Internet Protocol (IP) address for the device, if required.

The phone uses this connection when you open a program that connects to the Internet.

### Creating a Proxy Connection

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

1. Tap  > **Settings** > **Connections** tab > **Connections**.



2. Tap **Set up my proxy server**.




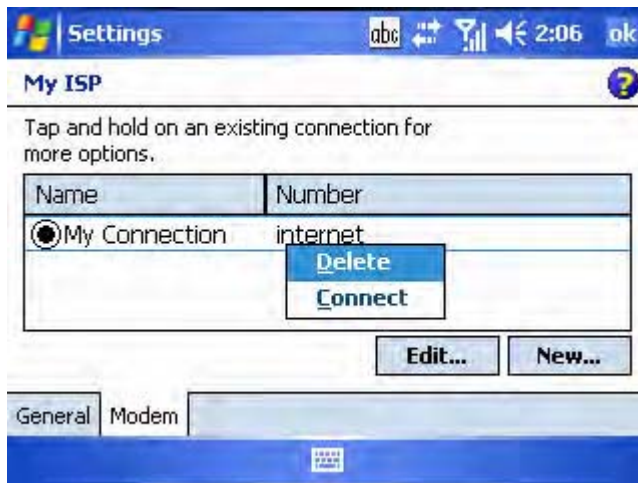
3. Check the checkbox in front of **This network connects to the Internet**.
4. Check the checkbox in front of **This network uses a proxy server to connect to the Internet**.
5. Under **Proxy server**, enter the proxy server name.



6. If the proxy server uses a different port or requires a username and password tap **Advanced**, select the proxy type to change its settings, then enter username, password and/or port number in the proper fields.
7. Tap **ok**.

### Deleting a Connection

1. Tap  > **Settings** > **Connections** tab > **connections**..
2. Tap **Manage existing connections**.
3. Tap and hold on the connection you want to delete and select **Delete**.





The device can not connect to a PC through ActiveSync while connecting to the Internet using GPRS.

## 7.2 Using Internet Explorer Mobile


Internet Explorer Mobile is a full-featured Web browser, optimized for use on your phone. You can use Internet Explorer Mobile to browse the Internet once you have set up your Internet connection (if you haven't done so, please read the previous chapter before continuing).


### Browsing the Internet

1. To browse the Internet you must have a valid connection established.
2. Tap  > **Internet Explorer**.
3. Do either of the following:
  - Enter the address in the address bar, and tap .
  - Tap **Favorites** then select a Web Page.




### Adding a Web Page to the Favorite List


1. Tap  > **Internet Explorer**.
2. To go to the page you want to add, tap **Menu** > **Add to Favorites**.
3. Confirm or change the name and Web page address.
4. In **Create in**, select a folder for this favorite.
5. Tap **Add**.

 A quick way to add favorites to your phone is to synchronize with your PC using ActiveSync. For more information, see ActiveSync Help on your PC.


### Deleting a Favorite

1. Tap  > **Internet Explorer**.
2. Tap **Favorites**.
3. Tap **Add / Delete** tab.
4. Select the favorite to delete.
5. Tap the **Delete** button.
6. Tap **Yes** to confirm the deletion.

### Changing the Size of Text on Web Pages


1. Tap  > **Internet Explorer**.
2. Tap **Menu** > **Zoom** and select the size you want.  
There are five zoom options you can select: Largest / Larger / Medium / Smaller / Smallest.

### Showing or Hiding Pictures on Web Pages


1. Tap  > **Internet Explorer**.
2. Tap **Menu** > **View** > **Show Pictures**.

A check mark next to Show Pictures indicates that pictures will be displayed.

### Changing Web Page Display Options

1. Tap  > **Internet Explorer**.
2. Tap **Menu** > **View**.
3. Select one of the following:
  - **One Column**. Arranges the content into one column that is as wide as the screen. This means that you will rarely have to scroll horizontally.
  - **Default**. Maintains a layout similar to what you see on a desktop computer, but makes items smaller and arranges the content so that you can see most of it without having to scroll horizontally.
  - **Desktop**. Keeps the same layout and size as on a desktop computer, which will require both horizontal and vertical scrolling.

### Clearing History, Cookies, or Temporary Files

1. Tap  > **Internet Explorer**.
2. Tap **Menu** > **Tools** > **Options**.
3. Tap **Memory** tab.
4. Select the type of memory to clear.
5. Tap **Clear History** or **Delete Files**, then tap **ok**.

### Viewing a Page in Full Screen Mode

1. Tap  > **Internet Explorer**.
2. Tap **Menu** > **View** > **Full Screen**.



To exit full screen mode, press either SOFT KEY, and then tap **Menu** > **View** > **Full Screen** to cancel the selection.

## 7.3 Using Wireless Manager

Wireless Manager is an application that allows you to conveniently turn on/off phone features,

Bluetooth and Wi-Fi connection.

### Opening Wireless Manager

To open the Wireless Manager, do one of the following:

- Tap the signal strength icon (📶) at the top of the screen, and tap **Wireless Manager**.



- Tap **Settings > Connections tab > Wireless Manager**.



### Enabling and Disabling a Feature

There are four buttons in the Wireless Manager:



1. Tap the first button to toggle between enabling or disabling the phone.
2. Tap the second button to toggle between turning on or off Bluetooth.
3. Tap the third button to toggle between turning on or off Wi-Fi.
4. Tap the fourth button to enable/disable above three features.


## 7.4 Using Wi-Fi Connection

Wi-Fi is an enabling technology that allows you to quickly access e-mail, the internet, and broadband multimedia content. When your device encounters a hotspot (a place where you can access Wi-Fi networks), it can then connect to that network wirelessly. While some hotspots are free, the most robust public Wi-Fi networks are provided by private internet service providers (ISPs) that charge a fee for users to connect to the internet.


### Connecting to a Wi-Fi Network



It is not feasible to have a phone call via GSM and to connect to Wi-Fi simultaneously on this device. Phone features will be disabled automatically when your device connects to a Wi-Fi Network

1. Tap  > **Settings** > **Connections** tab > **Wireless Manager**.
2. Tap the third button to turn on Wi-Fi connection.



3. Follow the prompts to finish related settings. When Wi-Fi connection is active, the  icon shows at the top of the Today screen. Meanwhile, the phone is disabled automatically.



## Chapter 8. Messaging & Contacts




Messaging is the unified point of access for all message types within your device. With Messaging, you can send and receive text messages, e-mails, and MMS messages.


Contacts helps you to manage your contact information. Using Contacts you can quickly communicate with people.

This section describes the procedure on sending and receiving different kinds of messages, and using Contacts to manage addresses and phone numbers.

## 8.1 Text Messaging

### Creating a Text Message

1. Tap  > **Messaging**.
2. In the message list, tap **Menu** > **Go To** > **Text Messages**.
3. Tap **New**.
4. Enter the recipient's text message number in the **To** field. Insert a semicolon (;) between multiple text message numbers.

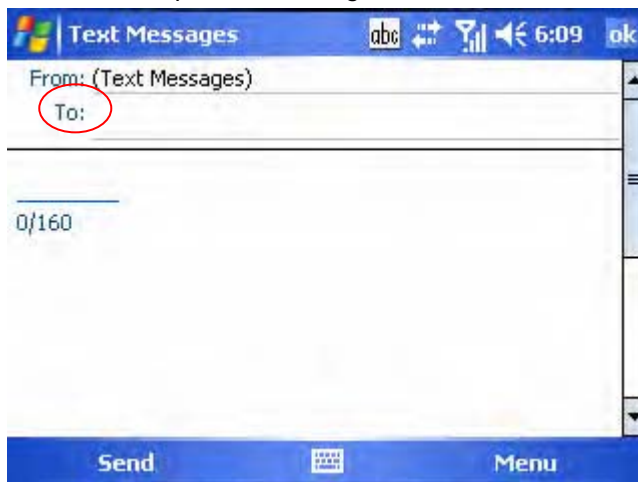

5. Enter your message and tap **Send**. Text messages are sent immediately.




You can quickly enter text message numbers from your contact cards. In **To**, press ENTER and select a recipient from the list. Then, select the recipient's phone number.

### Using Preset Text Messages

You can quickly insert preset or frequently used messages into your text message. While


composing a message, tap **Menu** > **My Text** and select a preset message to insert.

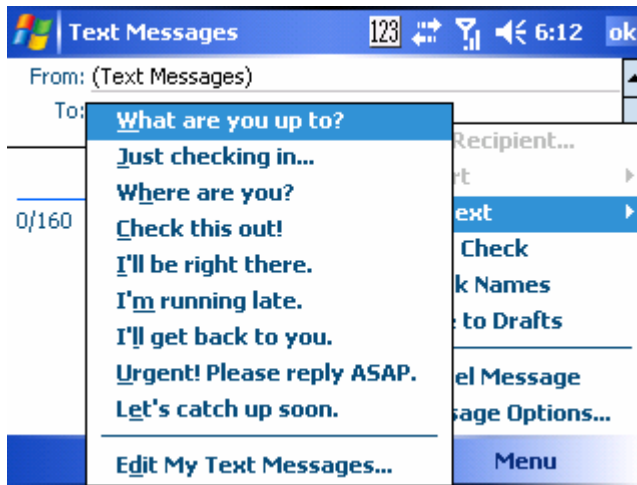


To edit a preset message:


1. While composing a message, tap **Menu** > **My Text** > **Edit My Text Messages**.
2. Select a message and edit.
3. Tap **ok**.

### Reading a Text Message

1. Tap  > **Messaging**.
2. Tap **Inbox** ▼ and select Inbox under Text Messages.
3. In the message list, tap the text message you want to read.

### Changing Message Options

1. Tap  > **Messaging**, and select **Text Messages** account.
2. Tap **New**.
3. Tap **Menu** > **Message Options**.
4. Select this check box to request a message delivery notification.

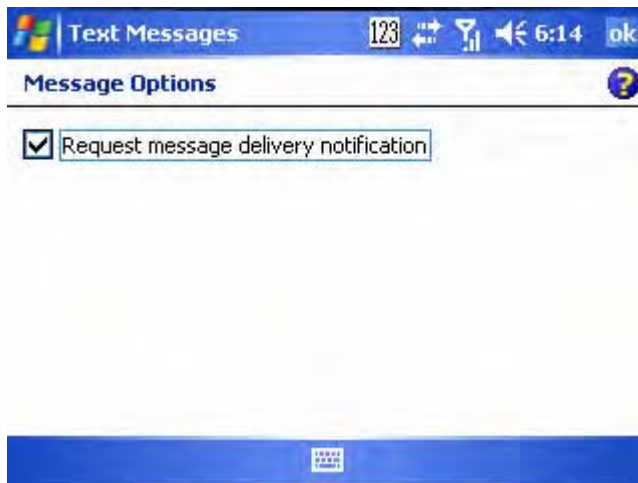

5. Tap **ok**.

## 8.2 Multimedia Messaging Service


Creating and sending Multimedia Message Service (MMS) messages to your friends and family is fun and easy. You can include or capture photos or video clips, include or record audio, add text, then send them along with your MMS message.

### Accessing MMS



1. Tap  > **Messaging**.
2. Tap **Menu** > **Go To** > **MMS**.

### Composing a MMS Message

MMS messages can be composed in a combination of various slides where each slides can be any combinations of audio or video clip, an image, and/or text.

1. Tap  > **Messaging**.
2. Tap **Menu** > **Go To** > **MMS**.
3. Tap **New**.
4. In **To**, **Cc**, and/or **Bcc**, enter recipient e-mail addresses. Insert a semicolon (;) between multiple addresses.




5. In **Subject**, enter a subject.
6. To create a slide, do any combinations of the following:
  - Tap **Insert Picture/Video** and select a picture or video clip.
  - Tap **Insert Audio** and select an audio clip.
  - Tap **Insert Text** and enter a message.
  - Tap **Menu > Insert > Sound Recorder** and tap RECORD (  ) button to record a new audio clip. Tap STOP (  ) button to stop recording.
  - Tap **Menu > Options > Background Color** and select a background color for the slide.
7. Tap **Send**.



After the first slide is filled with content, you can tap **Menu > Slides > Insert** to add another slide to your MMS message.

### Reading a MMS Message



1. Tap  > **Messaging**.
2. Tap **Inbox** and select Inbox under MMS.
3. In the message list, tap the MMS message you want to read.

### Previewing a MMS Message

You can preview a MMS message before sending it.

1. To preview your MMS message, tap **Menu > Preview** after you composed your message.
2. Tap **Done** or **Replay**.

### Configuring MMS Settings

1. Tap  > **Messaging**.
2. Tap **Menu** > **Go To** > **MMS**.
3. Tap **Menu** > **MMS Settings**.
4. Select the type of options to change.
5. Tap .

## 8.3 E-mail


### Setting Up an Internet E-mail Account Manually

Before you set up your Internet e-mail account, please ensure that you have the necessary information.

Setting	Description
User name	Usually the first part of your e-mail address, which appears before the "at" sign (@).
Password	Choose a strong password. You will have the option to save your password, so that you do not need to enter it each time you connect to your e-mail server.
Domain	The domain name. This may be required.
Server type	The type of e-mail server that hosts your mailbox (POP3 or IMAP4).
Account name	A name for this account. You must use a different name for each account that you set up.
Network	The type of network your e-mail server connects to.
Incoming mail server	The name of your e-mail server (POP3 or IMAP4).
Require SSL connection	Select this to ensure you always receive e-mail for this account using an SSL connection. This enables you to receive personal information more securely. Please note that if you select this and your ISP does not support an SSL connection, you will not be able to connect to receive e-mail.
Outgoing mail server	The name of your outgoing e-mail server (SMTP).
Outgoing server requires authentication	Your outgoing e-mail server (SMTP) may require authentication. Note: Your user name and password from above will be used.
Outgoing server settings	Your outgoing e-mail server may require different authentication settings than your incoming e-mail server.
Use different user name for outgoing	A check box that lets you enter separate settings for your outgoing e-mail server.

server	
User name	Your user name for the outgoing e-mail server.
Password	Your password for the outgoing e-mail server.
Domain	The domain name of the outgoing e-mail server.
Require SSL connection (Outgoing mail server only)	A connection that enables you to send personal information more securely. Note that if you select this and your ISP does not support an SSL connection, you will not be able to send e-mail.

Now you are ready to set up your account

1. Tap  > **Messaging**.
2. Tap **Menu** > **Tools** > **New Account**.
3. Select your e-mail provider then tap **Next**.
4. Enter your e-mail address and tap **Next**.
5. On the **Auto configuration** setup page, tap **Next**. Auto configuration attempts to obtain necessary e-mail server settings from your service provider.
6. If auto configuration was successful, the **Your name** and **User name** is automatically filled out for you. Tap **Next** and then tap **Finish** to complete the account setup. If auto configuration was not successful, enter information above appropriate until setup is complete.




Enter a name that you want to display when you send e-mail in the **Your name** field.



If you save your password and then lose your phone, someone finding your phone might be able to gain access to your e-mail.

### Composing an E-mail Message


1. Tap  > **Messaging**.
2. Select an e-mail account.
3. Tap **New**.
4. In **To**, **Cc** and/or **Bcc**, enter recipient e-mail addresses. Insert a semicolon (;) between multiple addresses.
5. In **Subject**, enter a subject.
6. Enter a message.
7. Tap **Send**. E-mail messages are stored in Outbox and are sent to recipients the next

time you synchronize or connect to your e-mail server and send and receive mail.




You can quickly enter e-mail addresses from your contact cards. In **To**, press ENTER and select a recipient from the list. Then, select the recipient's e-mail address.


### Reading an E-mail Message

1. Tap  > **Messaging**.
2. Tap **Inbox**▼ and select an Inbox under an e-mail account.
3. In the message list, tap the e-mail message you want to read.

### Message Options

1. Tap  > **Messaging**, and select an e-mail account.
2. Tap **New**.
3. Tap **Menu** > **Message Options**.
4. Select the type of options to change.
5. Tap **ok**.

## 8.4 Changing Messaging Account Options

1. Tap  > **Messaging**, and select the Messaging account you want to change options for.
2. Tap **Menu** > **Tools** > **Options**.
3. Select the type of options to change.
4. Tap **ok**.



## 8.5 Using Contacts

Contacts is your address book and information storage for the people and businesses you communicate with. Stores phone numbers, e-mail addresses, home addresses, and any other information that relates to a contact, such as a birthday or an anniversary date. You can also add a picture or assign a ring tone to a contact.

From the contact list, you can quickly communicate with people. Click a contact in the list for a summary of contact information. From there, you can call or send a message.

If you use Outlook on your PC, you can synchronize contacts between your phone and PC.

### Creating a New Contact

1. Tap  > **Contacts** > **New**.
2. Enter information for the new contact.
3. Tap .





If someone who isn't in your list of contacts calls you or sends you a message, you can create a contact from Call History or from the message by tapping **Menu** > **Save to Contacts**.




To save an existing contact to your SIM, open the contact and tap **Menu** > **Save to SIM**.

### Viewing and Editing Contact Information

1. Tap  > **Contacts**.
2. Tap the contact whose information you want to view.
3. To edit the information, tap **Menu** > **Edit**.
4. When finished making changes, tap .

### Adding a Picture to a Contact

1. Tap  > **Contacts**.
2. Tap the contact you want to add a picture to.
3. Tap **Menu** > **Edit**.
4. Tap **Picture**.




5. Tap the picture you want to add.



### Assigning a Ring Tone to a Contact


To easily identify who is calling you by the ring tone, you can assign a custom ring tone to each contact.

1. Tap  > **Contacts**.
2. Tap the contact you want to assign a ring tone to.
3. Tap **Menu** > **Edit**.
4. Tap **Ring tone** and select the ring tone you want.




5. Tap .


### Finding a Contact

1. Tap  > **Contacts**.
2. Begin entering the name or phone number of the contact until the contact is displayed.

### Sending an E-mail to a Contact


1. Tap  > **Contacts**.
2. Tap the contact you want to send an e-mail to.
3. Tap the e-mail address.
4. Select the e-mail account to use.
5. Enter a subject, compose your message, and then tap **Send**.

### Sending a Text Message to a Contact

1. Tap  > **Contacts**.
2. Tap the contact you want to send a text message to, and tap **Menu** > **Send Text Message**.
3. Compose your message, and tap **Send**.

### Creating a SIM Contact

Contacts can be created and stored on a subscriber identity module (SIM.) If you move the SIM to another phone, your SIM contacts are moved as well.

1. Tap  > **Contacts**.
2. Tap **Menu** > **New SIM Contact**.
3. Enter the name and phone number of the contact and tap **ok** .



SIM contacts appear at the bottom of the contacts listed in alphabetical order.

## 8.6 Using Photo Contact

Other than using Contacts, you can also use Photo Contact to add a new contact. With Photo Contact, you can add a picture to each contact. You can dial contacts by selecting their photograph; when someone calls you, you will easily see his or her photo on the device's screen before you choose to answer.


### Transferring Photographs to Your Device

Before you can add a photograph to a contact, you must transfer the photograph from your PC to your device. Please read "Chapter 6. Transferring Files To and From Your Device" for different methods to transfer files from a PC to your device.

### Adding a New Photo Contact



When you launch Photo Contacts, it will automatically list those contacts that already have pictures.

1. Tap  > **Programs** > **Photo Contact**.
2. Tap **Menu** > **Add**.





3. Tap **New** and enter information for the new contact. (Make sure you select a picture for the new contact since Photo Contact only recognizes contacts with pictures.)
4. Tap **ok** to create the new contact.
5. Tap **X** to return to Photo Contact.

#### Adding a Photograph to a SIM Contact



SIM contacts must be saved to Contacts before you can add a photograph to it.

1. Tap  > **Programs** > **Photo Contact**.
2. Tap **Menu** > **Add**.
3. Select a SIM contact to add. (SIM contacts are listed in Contacts with a  icon.)




After you select the SIM contact you want to add, his or her information is displayed.

4. Tap **Menu** > **Save to Contact**.



5. Tap **Select a picture** and select a picture for the contact.

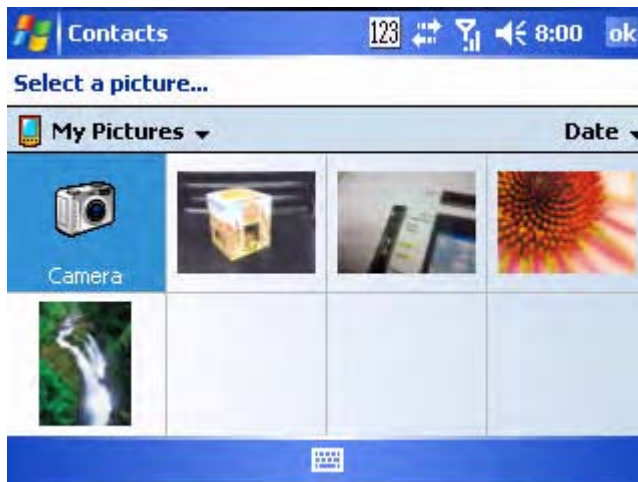

You can also assign a ring tone to the contact. To do so, tap **Ring tone** and select a ring tone for the contact.

6. Tap **ok** to save the contact in Contacts.
7. Tap **X** to return to Photo Contacts.


### Calling a Photo Contact

1. Tap **Windows** > **Programs** > **Photo Contact**.
2. Select the contact you want to call by tapping on its photograph.
3. Tap **Call**.



If multiple phone numbers are stored under the same contact's name, Photo Contact will list all the phone numbers of the contact. You can then select the phone number you want to dial.

### Deleting the Photograph of a Photo Contact

1. Tap  > **Programs** > **Photo Contact**.
2. Select the contact you want to delete its photograph.
3. Tap **Menu** > **Delete**.



When you select **Delete** or **Delete All**, Photo Contact will not delete any contacts for you. Instead, Photo Contact will only remove the photograph(s) to prevent the contact(s) from being listed in the program.


## Chapter 9. Camera

Camera application allows you to use the camera /microphone to capture video and images.

Available functions are listed below:

- Capture single image
- Capture multiple image in one click (multi-shot)
- Timer based image capture (timer-shot)
- Record video with audio
- Record video only
- Configure the quality, size and file format for the image, video capture
- Add special effects, white balance and frame overlays on video and images
- Control camera options such as zoom, flash, scene, brightness, contrast etc.
- Control Recording duration for video by time.

## 9.1 Taking a Photo

1. Tap  > **Programs** > **Hipcam**. There are three options for capturing still image: Normal, Multi-Shot and Timer-shot.
2. Point the camera lens at the photo object you would like to shoot. A preview will show on the screen.
3. Zoom In and Out the photo to your desired composition.
4. Choose your preferred Flash mode and White balance mode.
5. Press the Camera Key or the joystick to take a photo.

## 9.2 Recording a Video Clip

1. Tap the corresponding icon for video to put the camera in the camcorder mode. There are three options for capturing video content: Video with Audio, Video without Audio and normal/full screen view.
2. Tap **Menu** > **Effects** to adjust the Brightness/Contrast
3. Tap **Menu** > **White Balance** to toggle between White Balance mode.
4. Tap the record icon to start recording a video clip.
5. Tap **Done** to stop the video recording.



You can also activate the camera by pressing the Camera Key on the side of this device.

## Chapter 10. Other Applications



Your device comes with a variety of useful companion applications. This chapter describes the procedure on how to utilize these applications.


### 10.1 Word Mobile

With Word Mobile, you can create and edit Microsoft Word documents and templates, plain text files, and/or rich text format files.



Unlike Microsoft Word, you can only have one document open at a time in Word Mobile.

#### Creating a Document

1. Do one of the following:
  - Tap  > **Programs** > **Word Mobile**.
  - Tap on the Word Mobile icon in the program shortcut of the Today screen.
2. Tap **New** , if a new document is not opened by itself.
3. Enter text as desired.
4. Tap **Menu** > **File** > **Save As**.
5. Enter a name for the document and tap the **Save** button.



You can also tap **Ok** to save a document after you finish entering text. This way, the first few words of the document is being used as the filename.








#### Word Mobile Formatting Toolbar

The Formatting toolbar in Word Mobile provides a quick way to apply common formatting such as bold type, bulleted or numbered lists, and paragraph indentation to your text.

- In a Word Mobile document, tap **View** > **Toolbar**.

A check mark appears next to **Toolbar** when the toolbar is visible.

Tap	To
<b>B</b>	Make the selected text bold
<i><b>I</b></i>	Make the selected text italic
<u><b>U</b></u>	Underline the selected text

	Align text to the left
	Center the text
	Align text to the right
	Add or remove a numbered list in the selected text
	Add or remove bullets in the selected text
	Increase the indent of numbered or bulleted list text one tab stop to the right
	Decrease the indent of numbered or bulleted list text one tab stop to the left


## 10.2 Excel Mobile

With Excel Mobile, you can create and view spreadsheet on you device.



Unlike Microsoft Excel, you can only have one document open at a time in Excel Word Mobile.

### Creating a New Spreadsheet

1. Do one of the following:
  - Tap  > **Programs** > **Excel Mobile**.
  - Tap on the Excel Mobile icon in the program shortcut of the Today screen.
2. Enter text, numbers, and formulas as desired.
3. Tap **Menu** > **File** > **Save As**.
4. Enter a name for the document and tap the **Save** button.












You can also tap **Ok** to save a spreadsheet and Excel Mobile gives it a name automatically.

### Excel Mobile Formatting Toolbar

The formatting toolbar in Excel Mobile provides a quick way to apply common functions such as create a chart or align text to the left.

- In an Excel Mobile workbook, tap **View** > **Toolbar**.

A check mark appears next to Toolbar when the toolbar is visible.

Tap	To
	Create a chart from the selected cells
	Align text to the left
	Center the selected text
	Align text to the right
	Add all contiguous numbers in a column or row
	Add a currency symbol
	Add the default thousands separator
	Add a decimal point
	Increase and decrease the magnification



### 10.3 PowerPoint Mobile

With PowerPoint Mobile, you can view PowerPoint slides on you device.




PowerPoint Mobile only supports slides in .ppt and .pps formats.

 


#### Starting a PowerPoint Presentation

- Do one of the following:
  - Tap  > **Programs** > **PowerPoint Mobile**.
  - Tap on the PowerPoint Mobile icon in the program shortcut of the Today screen.
- Tap the slide show you want to view in the presentation list.
- Tap the current slide to advance to the next slide if slides don't advance automatically.
- Tap **Menu** > **Rename/Move** .
- Enter a name for the document and tap  .

#### Stopping a PowerPoint Presentation

- In a slide show, tap  > **End Show**.

#### Navigating Between Slides

- Tap  > **Next** to go to the next slide.
- Tap  > **Previous** to go back to the previous slide.
- To jump to any slide in the slide show, tap  > **Go to Slide** and tap on the slide

you want to view.

## 10.4 Pocket MSN Messenger

You can send instant messages with MSN Messenger.



Your device must be connected to the Internet before you can start using MSN Messenger.


### Signing In/Out MSN Messenger

With MSN Messenger, you can send and receive instant messages from other MSN Messenger users.



You must have a valid Microsoft .NET Passport or Hotmail account before you can sign in to MSN Messenger.

#### To sign in MSN Messenger

1. Tap  > **Programs** > **Pocket MSN**.
2. Tap **MSN Messenger**.
3. Tap **Sign In**, anywhere on the MSN Messenger screen, or **Menu** > **Sign In** to sign in MSN Messenger.
4. Enter your e-mail and password and tap **Sign In**.

#### To sign out MSN Messenger

- Tap **Menu** > **Sign out**.

#### Adding/Deleting a MSN Messenger Contact

1. Sign in MSN Messenger.
2. Do any of the following:
  - To add a contact, tap **Menu** > **Add a Contact**, and follow the on-screen instructions.
  - To delete a contact, tap and hold the contact name in the MSN contact list, then tap **Delete Contact**.

### Sending an Instant Message

1. Sign in MSN Messenger.
2. Tap the contact's name to whom you want to send a message to.
3. Enter a message and tap Send.



To add a preset message, tap **Menu > My Text** and select a preset message.

### Changing MSN Messenger Display Name

1. Sign in MSN Messenger.
2. Tap **Menu > Options > Messenger** tab.
3. Enter a new display name and tap **ok**.

### Blocking/Unblocking a Contact

- To block a contact from seeing you on-line, tap and hold the contact's name and select **Block**.
- To unblock a contact, tap and hold the contact's name and select **Unblock**.

### Changing MSN Messenger Settings

1. Sign in MSN Messenger.
2. Tap **Menu > Options**.
3. Select the type of options to change.
4. Tap **ok**.

## 10.5 ClearVue PDF

ClearVue PDF is a must for anyone who downloads Adobe Acrobat or PDF files over the Internet. With ClearVue PDF you can quickly view datasheets, product brochures and user manuals all from your Pocket PC. This section contains more information about the features and limitations of ClearVue PDF.

Documentation is available on your device by selecting the "Help" menu option located under the "Start" menu while ClearVue PDF is running.

### Opening a PDF File

To open a file in ClearVue simply tap on the filename in File Explorer, or use the file open dialog

after launching ClearVue PDF. You can open files with the extension “.pdf” with ClearVue PDF.

#### **Viewing the Contents of a Document**

After opening a file with ClearVue PDF, you will see the contents of the document displayed at page width. You can navigate through the document using the stylus or jog dial controls on your device. Navigation is also available using the scrollbars at the right and bottom of the document window.

#### **Zooming the Contents of a Document**

You can zoom the contents of a document by selecting the “Zoom” menu. Any percentage in the range from 25% to 200% is a valid magnification setting. You can also select “Page Width” to display the entire width of the page, “Whole Page” to display the entire page, and “Custom” to choose your desired percentage of magnification.