

Copyright © 2008 Inventec Corp. All Rights Reserved.

No part of this manual, including the product and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without prior written permission from Inventec Corp.

Inventec Corp. provides this publication "as is" without warranty of any kind. This information could include technical inaccuracies or typographical errors. Inventec Corp. may make improvements and/or changes in the product. Information and specifications contained in this document are subject to change at any time without notice.

The information contained in this document does not affect or change the product specifications or warranties. Inventec Corp. is not liable for any damages resulting from the use of this product.

IMPORTANT SAFETY INFORMATION

Please read the following information carefully before you start using the Inventec Minerva 3107 to avoid any damages caused by improper usage:

- Do not open or tamper with the device cover, as it will void your warranty.
- Do not press hard on this product, as it may cause damage to the internal components.
- Do not strike, shake, or heat the device in a way which may cause damage to the device.
- Do not expose the device to direct sunlight, or leave the device in a humid environment, for extended periods of time, as this may cause damage to the device.
- Do not immerse the device in water.
- The device may interfere with the navigation and/or communication systems on aircraft.
 The use of the device on aircraft is prohibited by laws in most countries.

Interference with Medical Equipment Functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

Nonionizing Radiation

This product should be operated in the suggested normal condition only to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates,

uses and can radiated radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or

transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for anuncontrolled

environment. End users must follow the specific operatinginstructions for satisfying RF

exposure compliance. To maintain compliance with FCC RF exposure compliance

requirements, please follow operation instruction asdocumented in this manual.

FCC Body SAR Max. 0.067 W/kg

GSM850:


GSM1900:

3

Table of Contents

Copyright © 2008 Inventec Corp. All Rights Reserved	2
IMPORTANT SAFETY INFORMATION	2
Interference with Medical Equipment Functions	2
Nonionizing Radiation	2
FCC Regulations	3
Chapter 1. Knowing Your Device	6
1.1 Introduction	7
Views of the Device	7
1.2 Installing SIM Card	7
Chapter 2. Getting Ready	9
2.1 System and OS Requirements	10
2.2 Software Installation	10
2.3 Launching Mobile Connect	10
Chapter 3. Using Mobile Connect	11
3.1 Main Screen	12
Main Function Bar	12
System Button Bar	12
Functional Display	12
MENU Button	13
SETTING Button	13
3.2 Messaging	13
Writing New Text Messages	14
Replying Messages	15
Forwarding Messages	15
Deleting Messages	15
3.3 Accessing the Internet	16
Sending/Receiving E-mails	16
3.4 Managing Your Phonebook	17
Adding Entries	17
Editing Entries	17
Deleting Entries	18
Searching Contacts	18
Sending Messages	18
3.5 Changing Settings	19
Internet settings	19
Setting PIN Security	
Changing PIN code	20

 SMS Settings	21
Chapter 4. Quitting and Uninstalling	23
4.1 Quitting and Removing	24
Quitting Mobile Connect	24
Removing the Wireless Device from your PC	24
4.2 Uninstalling Mobile Connect	24
Appendix	25
A.1 Specifications	26
A.2 Troubleshooting	26



1.1 Introduction

Views of the Device



Notification LED

The notification LED indicates the status of your device:

LED Color/Status	Meaning
Solid green	In service.
Solid red	The device is out of service.

 
1.2 Installing SIM Card

A valid SIM (Subscriber Identity Module) card is required to use your wireless device.

- Pull the SIM card tray outward.
- Place the SIM card with the logo side up and then push the SIM card tray back.



SIM cards can only be installed in one direction. Inserting the card in the wrong direction by force can cause damage to the card and the card slot.



2.1 System and OS Requirements

To use your wireless device, the following are required for your computer:

- 10 MB free hard disk space or above
- 32MB RAM or above
- Screen resolution 800x600 pixels or above
- · Color quality 16 bits or higher
- Free USB slot
- Microsoft Windows 2000
- Microsoft Windows XP
- Microsoft Windows Vista 32 bit / 64 bit
- · Administrator rights on your PC to install and use a new software

2.2 Software Installation

Your wireless device comes with an application software named Mobile Connect which helps you to manage your wireless device and monitor your connection. Simply connect your wireless device to a free USB port on your PC and follow the steps of the install wizard, the installation

will be run automatically. Once the installation is completed, a shortcut icon shows on the desktop.

2.3 Launching Mobile Connect

 
You can start to use Mobile Connect after the installation described above is completed.



Please turn off Bluetooth on your PC, or it may conflict with the Mobile Connect.

- Plug in the wireless device containing a valid SIM card into one of the USB ports in your PC.
- 2. Do one of the following to launch Mobile Connect.
 - Select Start > Programs > Data Card > Mobile Connect.
 - Double-click the shortcut icon on the desktop.
- 3. Once Mobile Connect is launched, an icon for Mobile Connect appears in your computer's taskbar.

If you have activated PIN (Personal Identity Number) security on your SIM card, the system will prompt you to input a PIN code.



Mobile Connect allows you to use the following features:

- Sending/receiving text messages and E-mails
- Getting connected/disconnected
- Using phonebook
- Browsing the Internet
- Changing system settings

3.1 Main Screen

The initial screen of Mobile Connect is as follow:



Main function bar

Main Function Bar

There are five items in the main function bar: SMS, Phonebook, Connect/Disconnect, Brower and Email. Simply click one of them to active its function.

System Button Bar

Item	Description
×	Close: click the item to close Mobile Connect.
	Minimize: click the item to minimize Mobile Connect.
About: click the item to show software information.	
?	Help: click the item to show the user manual.

Functional Display

Item	Description
Chunghwa	Shows the information about the network operator.
Network UMTS/HSDPA	Shows the network type that you are connecting to, e.g.
	HSDPA, UMTS, WCDMA, GPRS, EDGE etc.
Status: Connect	Shows connected or disconnected status.
Volume: 000000 KB	Shows the volume information for the current
	connection.
Duration: 00:00:00	Shows the duration of an active connection.
3	Shows the number of unread text messages in real time.
Signal:	Shows the signal strength.

MENU Button


A drop-down menu shows up when you click on the Menu button. Apart from the functions listed in the main function bar, you can quickly enable/disable PIN security, select languages, read/create short messages and search/add contacts in this menu as well.

SETTING Button

To set APN information, PIN security status and maximum SMS length limitation, click this button and make changes. Please refer to chapter 3.5 for more details.

3.2 Messaging


To start using various functions of SMS, launch Mobile Connect and click **SMS** () in the main screen of Mobile Connect. The SMS screen as below displays:

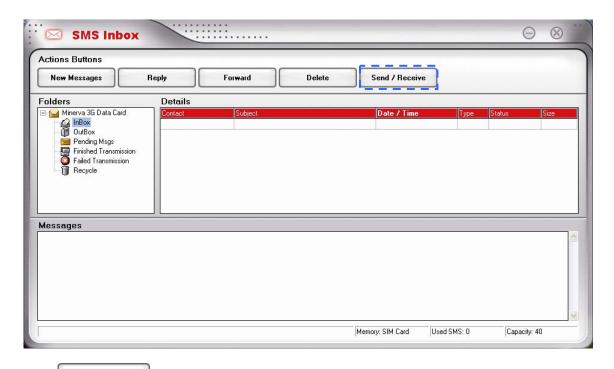

Click Send / Receive to check if there are any new messages. You can see the abstracts of received massages in the InBox folder. The detailed content of the massage you select is shown on the lower-half of the SMS screen. You can double-click a massage to view its detailed content as well.

Writing New Text Messages

- 1. Click New Messages in the SMS screen, a New Message screen will be shown.
- 2. Enter a phone number directly in the blank field behind to show the phonebook and then select a contact. Double-click on the desired contact to select it or press **Ctrl** to make multi-selection.

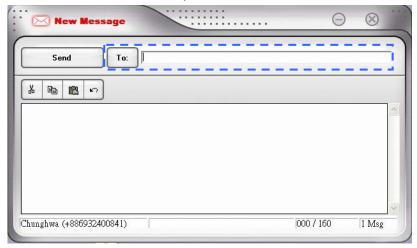


- 3. Input the text message.
- 4. Click when you complete the text message. This message is saved automatically to the **Finished Transmission** folder after it is sent out.

Your text message is sent as one message if it contains less than 160 characters. If this number is exceeded, the message is divided into several messages and sent one by one.

Replying Messages

To reply to a sender directly, do as the following:

- 1. Select a message and then click Reply
- 2. A Reply Message screen with the sender's phone number automatically filled in will be shown.

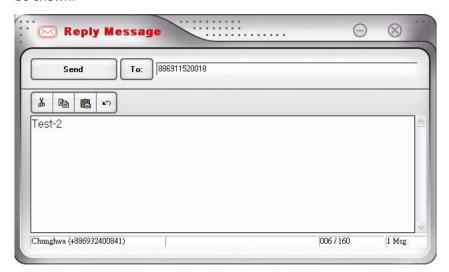

- 3. Input the content for the massage you want to reply.
- 4. Click Send to reply.

Forwarding Messages

To forward massages, do as the following:

- 1. Select a massage and then click Forward
- 2. A Forward Message screen will be shown, enter the phone number you want to forward to or click to select the phone number.
- 3. The content of the original message appears in the screen automatically, you can edit it if needed.
- 4. Click send to forward the message.

Deleting Messages

To delete the messages you have received, do as the following:

1. Select one or more massages and click Delete

2. The message(s) will be removed to the **Recycle** folder.

For deleting a message permanently, go to the **Recycle** folder, select the massage and click **Delete**.

3.3 Accessing the Internet

Your wireless device allows you to access the Internet through an established 3G or GPRS connection. Once the connection is established, you can connect to any website available on the Internet, or access other Internet services such as sending/receiving E-mails. Do the following to get connected and browse the Internet.



SMS and Phonebook are unavailable while the connection is established.

- 1. Click **Connect** (in the main screen of Mobile Connect. Your wireless device will search for available connections automatically.
- 2. When the connection is established, corresponding information about the connected network will be displayed on the right-hand side of the main screen.
- 3. Click **Browser** () to start the Explorer on your PC, you can then access the Internet.
- 4. Click **Disconnect** () when you want to disconnect the connection.

Mobile Connect is capable of automatically configuring the wireless device; however, you can manually change some settings by clicking the Setting button to enter the setting page.

Sending/Receiving E-mails


You can send/receive E-mails via MS outlook after establishing a connection. Click **Connect** in the main screen to get connected, you can then click **E-mail** () to open MS outlook and send/receive E-mails.

3.4 Managing Your Phonebook


Connect Mobile can help you to manage the entries in your SIM card. You can add, edit and delete entries in the Phonebook; moreover, you can send text massages directly from the Phonebook.

Adding Entries

- 1. Click **Phonebook** () in the main screen.
- 2. Click to open the screen for creating a new entry.

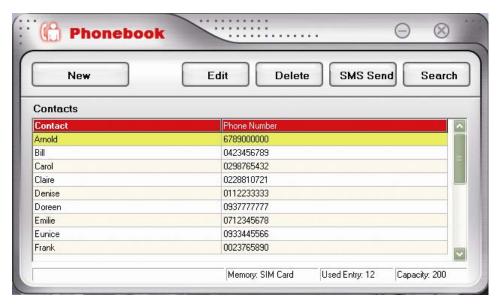

3. Fill in the name and the mobile number.

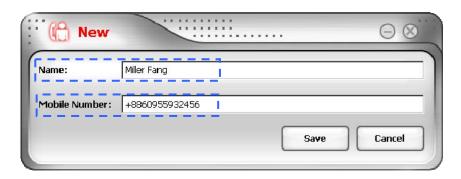

4. Click save to save the new entry to the Phonebook.

Editing Entries

- 1. In the Phonebook screen, select one contact and click
- 2. Modify the name and the mobile number in the Edit screen.


3. Click save to save the modified entry.

Deleting Entries

- 1. Select one or more entries to be removed from the Phonebook.
- 2. Click Delete to permanently delete the entry/entries.

Searching Contacts

- 1. In the Phonebook screen, click Search
- 2. Start entering a contact's name in the blank field, matching items will be listed. You can then double-click the desired contact to send him/her a message.

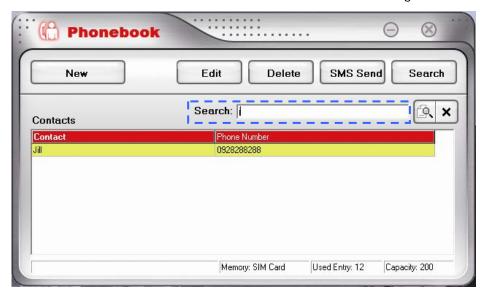

3. Click if you want to close the search box.

Sending Messages


- 1. Select the contact you want to send a text massage to.
- 2. Click sms send to show a New Message screen with the contact's phone number automatically filled in. Alternatively, you can double-click on the contact.
- 3. Input the text message.
- 4. Click Send when you complete the text message.

3.5 Changing Settings

Internet settings

By default, your wireless device searches for a network automatically when you click on **Connect**. However, you can make the search manually:

- 1. In the main screen of Mobile Connect, click the **SETTING** button.
- 2. A Setting screen will be shown. Select **Custom Input**.

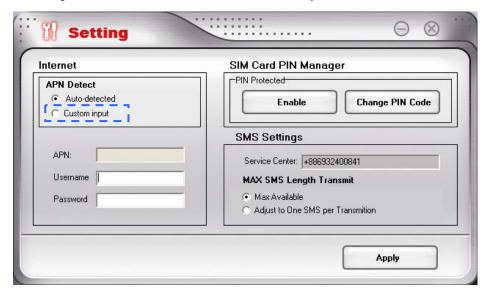

- Enter requirement information for the setting items of APN, username and password.
- 4. Click Apply to save your settings.




Please contact your network operator to obtain APN, Username and Password.


Setting PIN Security

For security purpose, SIM cards are preset with a personal identification number (PIN) that is provided by your wireless service provider. When PIN security is activated, you need to enter a PIN code when you launch Mobile Connect. To active the PIN feature, do the following:

- 1. In the main screen of Mobile Connect, click the **SETTING** button.
- 2. A Setting screen will be shown. In **PIN Protected** box, click

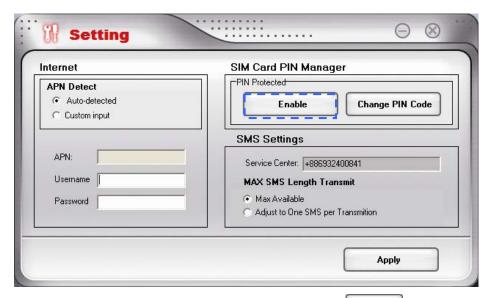

3. Enter the PIN code according to the prompt. Then click

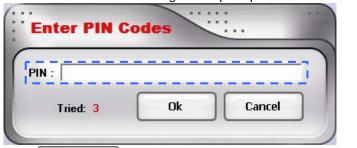


4. Click Apply in the Setting screen to save this setting.

If your PIN is entered incorrectly three times, the SIM card will be blocked. If this happens, you can unlock it with the PIN Unblocking Key (PUK) obtained from your wireless service provider.

Changing PIN code

You have to activate PIN security before changing the PIN code.

- 1. In the main screen of Mobile Connect, click the **SETTING** button.
- 2. A Setting screen will be shown. In **PIN Protected** box, click Change PIN Code

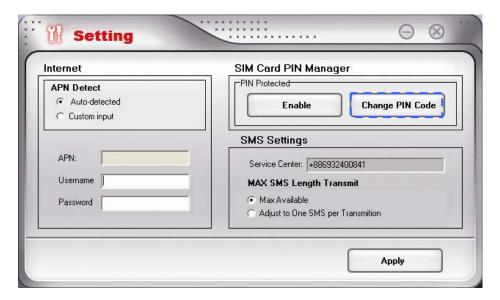

Enter the current PIN code and the new PIN code, and then enter the new code again to confirm it.




4. Click to modify it.

SMS Settings

If your text message contains more than 160 characters, it is divided into several messages and sent one by one. You can set the maximum massage length to 160 characters to prevent this kind of situation. Once you adopt this setting, the character amount of every text message you send can not exceed 160.

- 1. In the main screen of Mobile Connect, click the **SETTING** button.
- 2. Select Adjust to One SMS per Transmission.

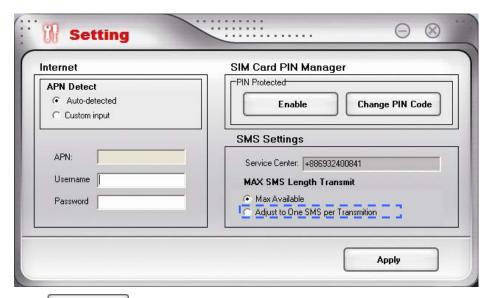

3. Click Apply to save this setting.

Chapter 4. Quitting and Uninstalling	

4.1 Quitting and Removing

Quitting Mobile Connect

If you wish to quit Mobile Connect, do either of the following:

- 1. Click the close button **B** in the upper right of the main screen.
- 2. Right-click the Mobile Connect icon in your computer's taskbar, and select **Exit** in the pop-up screen.

Removing the Wireless Device from your PC

If you want to remove the wireless device from your PC, please do it through the hardware removing function provided by Windows.

- Double-click the Safely Remove Hardware icon in the notification area of Windows taskbar.
- 2. You will be given a list of USB devices that are active. Select your wireless device and click Stop.



3. Windows will confirm that your wireless device can be safely removed, you can then Unplug it from the USB port of your PC.

4.2 Uninstalling Mobile Connect

To remove Mobile Connect from your PC, select **Start** > **Programs** > **Data Card** > **Uninstall Mobile Connect**. You can then uninstall Mobile Connect by following the on-screen uninstall Wizard steps.

Appendix

A.1 Specifications

Model Type	HSDPA USB Dongle
Dimensions	80 x 28 x 13 mm
Weight	35g (estimated)
Power Supply	+5V±10%, +3.3V±5%
Power Consumption	2.5 W
Data Rate	Uplink: up to 384kbps (UMTS)
	Downlink: up to 3.6Mbps (HSDPA)
Auto Installer	Yes, Driver pre-load in flash with auto-exe.
Frequency Bands	GSM/GPRS/EDGE
	850, 900, 1800, 1900 MHz
	Class 10 GPRS/EDGE service
	UMTS/HSDPA
	850, 1900, 2100 MHz

A.2 Troubleshooting

- Minerva 3107 cannot be detected by my PC.
 Make sure the Minerva 3107 is fully inserted into a USB port on your PC and check if the USB port is valid.
- I cannot establish a connection.
 Check if the signal strength is stable, if not, move your PC and Minerva 3107 to a location
- Minerva 3107 stopped working suddenly.
 Please check if the USIM card is inserted properly.

with a stronger strength and try again.

The USIM card is locked.

The USIM card will be locked if you enter incorrect PIN three times. If this happens, please contact your wireless service provider for PIN unblocking Key (PUK).