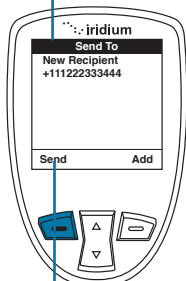
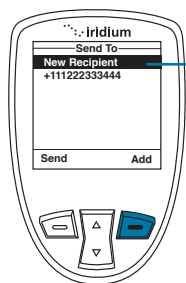
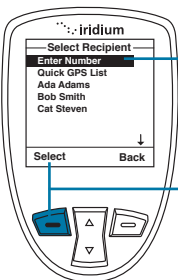
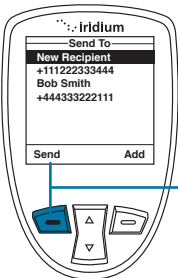


- 
2. A **Send To** screen appears with “New Recipient” highlighted. If you previously selected a recipient, the phone number or contact name of your selected contact will be displayed.  
**Note:** You may elect to send the message to additional recipients by following the process covered on this page in Adding an SMS Message Recipient
  3. If no recipient is listed, you need to add a recipient as covered on this page in Adding an SMS Message Recipient.
  4. Press the **left soft key** “Send” to send your message to your recipient.


## Adding an SMS Message Recipient


- 
1. To add an SMS message recipient, highlight the “New Recipient” on the “Send To” screen. Select the **right soft key** “Add” option.

- 
- 
2. Use the **2-way Navi-key** to scroll through the list of options and press the left soft key for the desired selection.
  3. For a contact, select the desired number if the contact has more than one number listed. For manual entry, enter the numbers direct. For Quick GPS List, select the desired option. Use the **left soft key** “Select” for all selections.
  4. Once you are satisfied with the recipient(s) press **left soft key**, labeled **Send**.


**Note:** Repeat this procedure if you want to send the same message to more than one contact at a time.

## Edit an Entry in My Phonebook

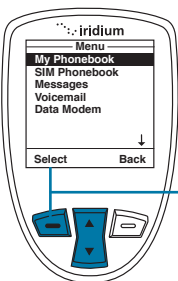 
- 
- To change information in the Phonebook, use the Edit Option. Starting at the **Main Menu**, with **My Phonebook** highlighted:
1. Press the **left soft key**, labeled **Select**.

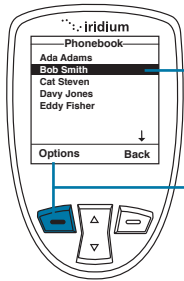

 
2. The Phonebook is displayed. Use the **2-way Navi-key** to scroll until the desired entry is highlighted.
3. Press the **left soft key**, labeled **Options**.

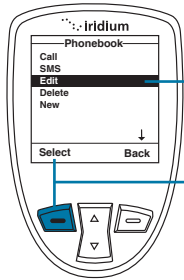

 4. Use the **2-way Navi-key** until the **Edit** option is highlighted.
5. Press the **left soft key**, labeled **Select** to proceed.

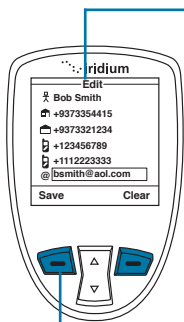


 6. The Edit Screen appears. Edit the entry as needed using the **2-way Navi-key** to scroll to the required field(s). Use the **side volume keys** to navigate backwards (up key) and forwards (down key) without deleting and the **right soft key**, labeled **Clear** to delete characters. Use the keypad to enter new characters.
7. Press the **left soft key**, labeled **Save**.

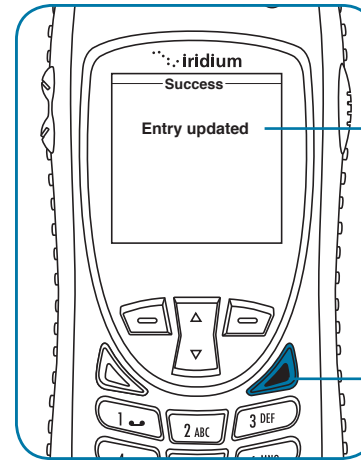


8. A message briefly appears to indicate the entry was updated. The screen then returns to the main Phonebook menu.
9. Press the **red key** to return to the **Main Screen**.


## Delete an Entry

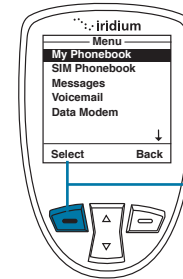 

 
- To remove an entry in the Phonebook, use the **Delete** option. Start at the **Main Menu**:
1. Press the **left soft key**, labeled **Select**.

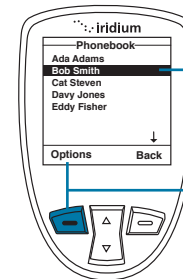

 
2. The Phonebook is displayed. Use the **2-way Navi-key** to scroll until the desired entry is highlighted.
3. Press the **left soft key**, labeled **Options**.

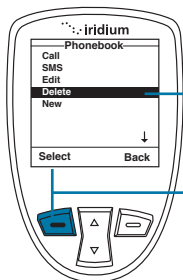

 4. Use the **2-way Navi-key** until the **Delete** option is highlighted.
5. Press the **left soft key**, labeled **Select** to proceed.

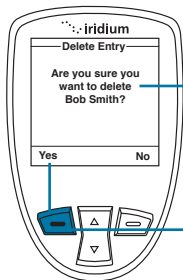


 6. You receive a message asking if you want to delete the entry. Press the **left soft key**, labeled **Yes**. If you press No, the screen reverts to the previous menu.

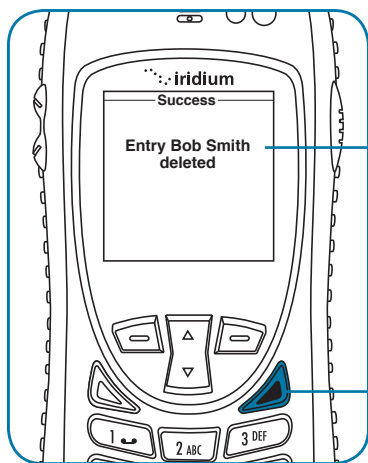


7. A message briefly appears to indicate the entry was deleted. The main Phonebook menu then appears.
8. Press the **red key** to return to the **Main Screen**.


## Viewing Memory Status

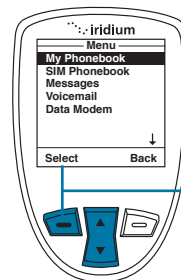 

 
1. Press the **left soft key**, labeled **Select**.

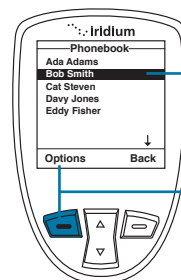

 2. The Phonebook is displayed.
3. Press the **left soft key**, labeled **Options**.

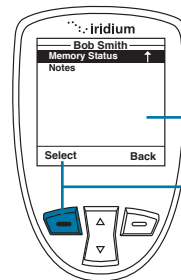

 
4. Use the **2-way Navi-key** until **Memory Status** is highlighted.
5. Press the **left soft key**, labeled **Select** to proceed.

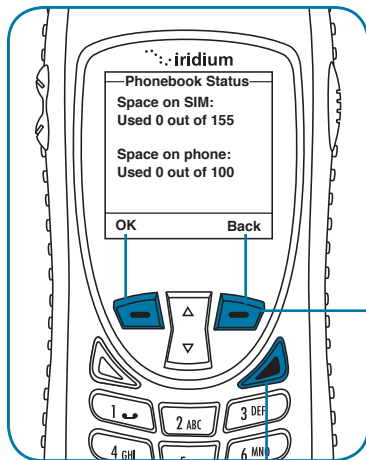

6. The **Phonebook Status** is displayed, showing the space on the SIM and the phone memory.


7. Press the **left soft key**, labeled **OK** or the **right soft key** labeled **Back** to return to the previous screen.

 Press the **red key** to return to the **Main Screen**.

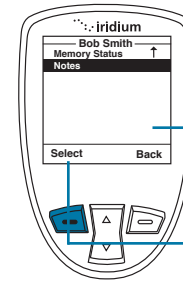

4. Use the **2-way Navi-key** until **Notes** is highlighted.

 5. Press the **left soft key**, labeled **Select** to proceed.

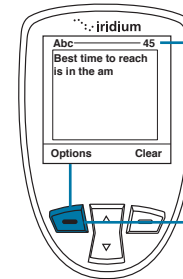


6. A text screen appears. Use the **Keypad** to enter your text.

**Note:** you can enter up to 64 characters. The character count in the top right corner counts down as you enter text.

7. Press the left soft key, labeled **Options**.


## Adding Notes to a Phonebook Entry

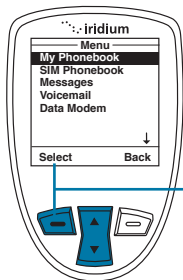 

Use this capability to add information regarding an entry.


Start at the **Main Menu**:

 1. Press the **left soft key**, labeled **Select**.

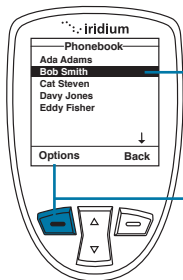

2. The Phonebook is displayed. Use the **2-way Navi-key** to scroll until the desired entry is highlighted.

 3. Press the **left soft key**, labeled **Options**.

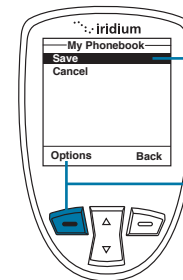

8. A My Phonebook screen appears with **Save** highlighted.

9. Press the **left soft key**, labeled **Options** and select **Save** when done using **2-way Navi-key** and **left soft key** labeled **Select**.


**Note:** The text you entered is now stored in the Note option for this entry.

## Restricted Phonebook

 When the Phonebook is restricted, My Phonebook and SIM Phonebook do not appear. The main menu displays Fixed Phonebook only. The Fixed Phonebook cannot be edited as it is programmed directly to the SIM card using a PC software program.


## 9: Using the Messages Menu

### Locating the Messages Menu

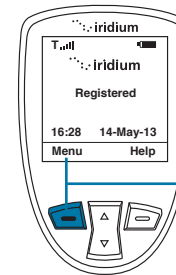

**Starting from the Main Screen:**

 
1. Press the **left soft key**, labeled **Menu**.

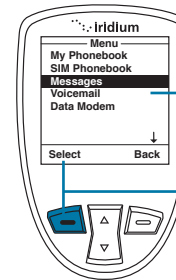

2. The **Main Menu** is displayed. Use the **2-way Navi-key** to scroll until **Messages** is highlighted.

3. Press the **left soft key**, labeled **Select**.

 
**Note:** All instructions for the **Messages** menu start from the **Main Menu** as shown.

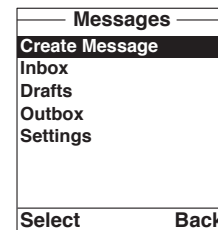

**You can perform the following functions using the Messages menu:**


- Create messages
- Read, reply, delete, call and forward messages
- Edit stored messages and send
- Enter service center number, set expiry period and enable or disable delivery reports.
 
## Create and Send a new SMS Message to an Email Address not in your Phonebook

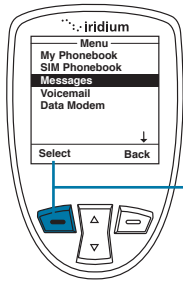


Start at the **Main Menu** with **Messages** highlighted:

 1. Press the **left soft key**, labeled **Select**.

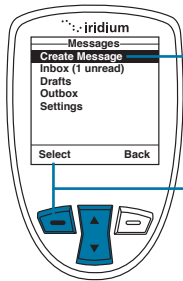


 2. The **Create Message** option should be selected. If not then use the **2-way Navi-key** to scroll until it is highlighted.
3. Press the **left soft key**, labeled **Select**.

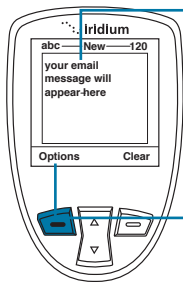


4. Enter your message.
 

 
**Note:** You must begin your text message with the recipients email address, leaving a space between the email address and the beginning of your message.
- When your message is complete, press the **left soft key**, labeled **Options**.

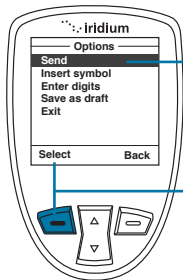

 
5. The **Send** option should be highlighted. If not then use the **2-way Navi-key** to scroll until it is highlighted.
6. Press the **left soft key**, labeled **Select** to send the message.

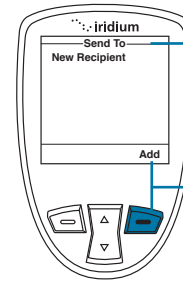

 
7. A **Send To** screen appears.
8. Press the **right soft key**, labeled **Add**.

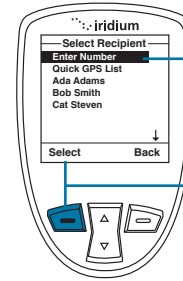

 9. The **Enter Number** option should be highlighted. If not use the **2-way Navi-key** to scroll until it is highlighted.
10. Press the **left soft key**, labeled **Select**.

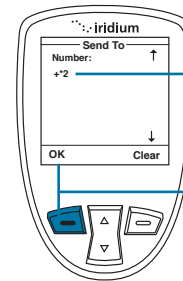


 11. In the **Number field**, after the prefix of 00 or +, enter **\*2**.
12. Press the **left soft key**, labeled **OK**.

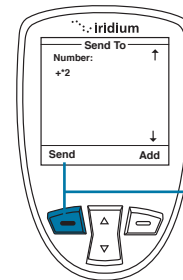


13. Press the **left soft key**, labeled **Send** to send the message.

## Create and Send a new SMS Message to an Email Address in My Phonebook

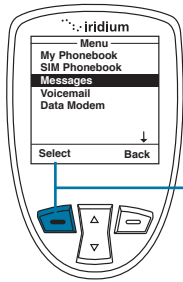 


Start at the **Main Menu** with **Messages** highlighted:

 1. Press the **left soft key**, labeled **Select**.

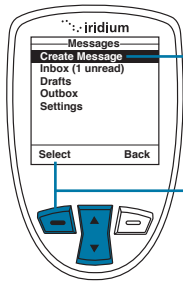


2. The **Create Message** option should be selected. If not then use the **2-way Navi-key** to scroll until it is highlighted.

 3. Press the **left soft key**, labeled **Select**.

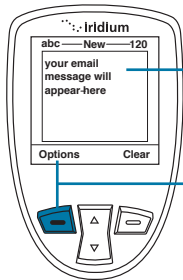


4. Enter your message.

 5. When your message is complete, press the **left soft key**, labeled **Options**.

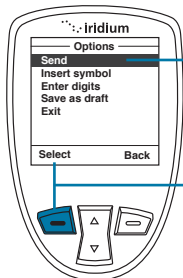


6. The **Send** option should be highlighted. If not then use the **2-way Navi-key** to scroll until it is highlighted.

 7. Press the **left soft key**, labeled **Select** to send the message.

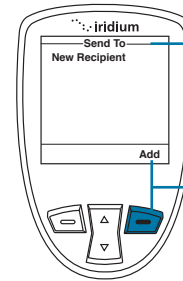

8. A **Send To** screen appears.

 
9. Press the **right soft key**, labeled **Add**.

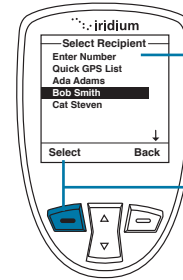


10. Use the **2-way Navi-key** to highlight your selection.

11. Press the **left soft key**, labeled **Select**.

 
**Note:** If the Contact's email address is the only information listed, the screen returns you to the **Send To** screen.

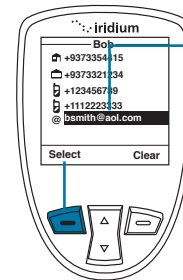

 12. If the Contact has an email address as well as a phone number listed, you are presented with their phonebook entry. Use the **2-way Navi-key** to highlight their email address and press the **left soft key**, labeled **Select**.

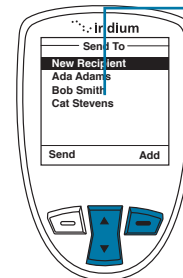

 13. The **Select Recipient** screen appears with the recipient's name highlighted. To add another recipient, use the **2-way Navi-key** to highlight the next recipient and repeat step 10.

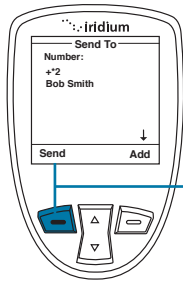

14. Press the **left soft key**, labeled **Send**.

## About SMS Messaging

### Message Notification

If your phone is powered ON, it notifies you of received messages in the following ways:

- An alert sounds and/or the phone vibrates.
- The message indicator is displayed
- The message **New Message. Read Now?** is displayed.

### How Messages are Stored

Your phone stores all messages on the SIM card. If the message indicator is flashing, your SIM card is full. See “Delete a Message” on page 104 to make room for the new message.

### What Messages Contain

 
You can receive short text or numeric messages in your Personal Mailbox. Text messages may contain up to 1,000 characters. Numeric messages, typically phone numbers, may contain up to 20 digits.

Standard SMS messages are up to 160 characters. Long SMS messages up to 1000 characters are divided into smaller 160 character messages and may be billed at the standard 160 character SMS rate. For example, an SMS message with 320 characters may be billed as two standard SMS messages. Contact your service provider for additional information.

Your personal mailbox works with Call Forwarding. For more information see “Forward a Received Message” on page 101.

## Using the Inbox


You can do the following functions using the **Inbox**:

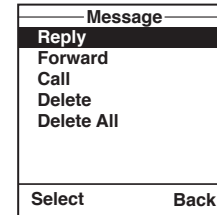

- Reply to a message
- Forward a message
- Call the number that left the message
- Delete one or all messages


**Note:** If the message storage space on your SIM card is full, you cannot store a message for later retrieval. See “Delete a Message” on page 104 to make room for new messages on your SIM card.

### Read a Message

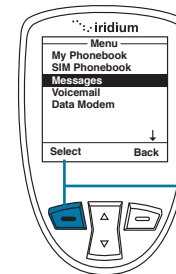 

Start at the **Main Menu** with **Messages** highlighted:

 
1. Press the **left soft key**, labeled **Select**.

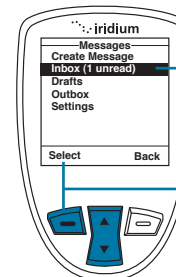





2. Use the **2-way Navi-key** to scroll until **Inbox** is highlighted.

 3. Press the **left soft key**, labeled **Select**.



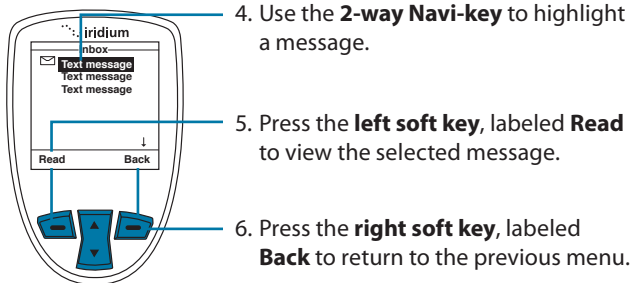



### Reply to Sender

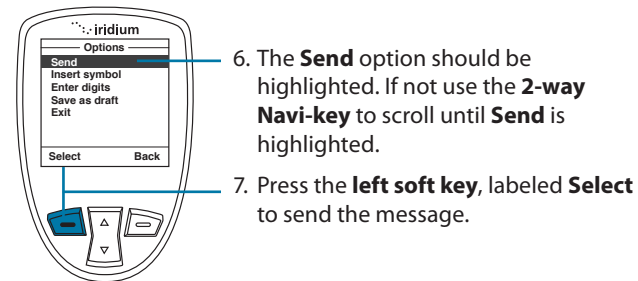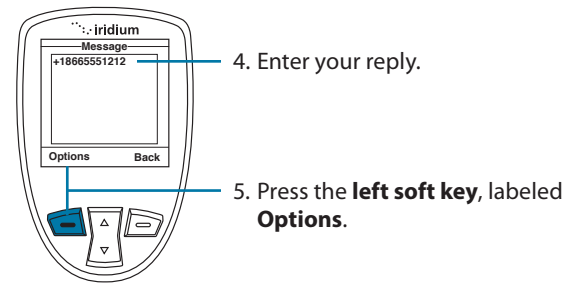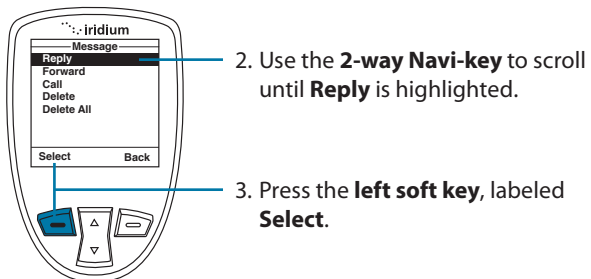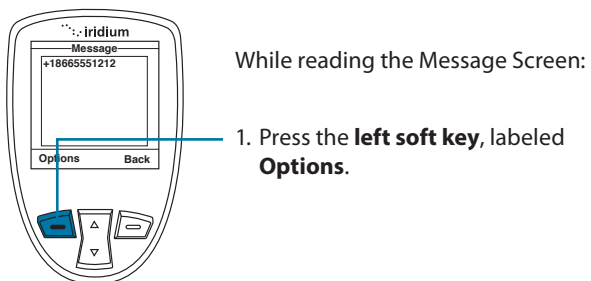    


**Note:** If the sender's phone number is not part of your phonebook, select New Recipient to add the number.

### Forward a Received Message

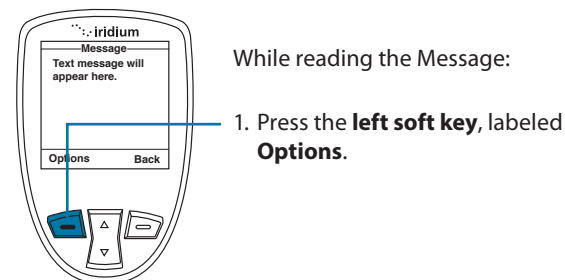 


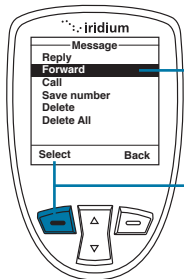 

 
2. Use the **2-way Navi-key** to scroll until **Forward** is highlighted.
3. Press the **left soft key**, labeled **Select**.
4. The user is returned to the message. Press the **left soft key** "Options"

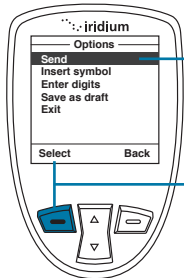

 
5. The **Send** option should be highlighted. If not use the **2-way Navi-key** to scroll until **Send** is highlighted.
6. Press the **left soft key**, labeled **Select** to send the message.

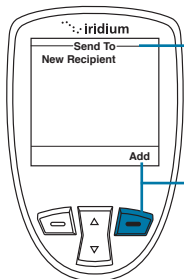

 
7. A **Send To** screen appears.
8. Press the **right soft key**, labeled **Add**.

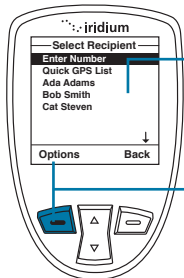

 
9. Use the **2-way Navi-key** until the desired recipient from your phonebook is highlighted.
10. Press the **left soft key**, labeled **Options**.

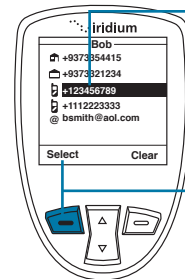

 11. If the recipient has more than one number listed, the recipient's information screen appears. Use the **2-way Navi-key** to scroll to the number you would like to forward to.
12. Press the **left soft key**, labeled **Select**. The number is added to a recipient list.

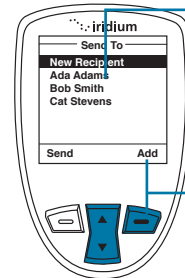


 13. The **Select Recipient** screen appears with the recipient's name highlighted. To add another recipient, use the **2-way Navi-key**, highlight the next recipient and repeat step 8.
14. Once all recipients have been selected, press the **right soft key**, labeled **Back**.

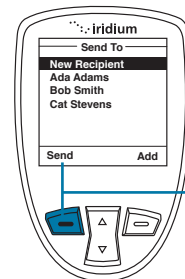


15. Press the **left soft key**, labeled **Send**.

## Call a Number from a Received Message

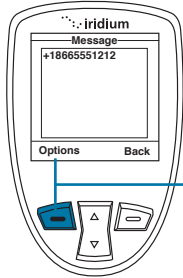 


While reading the Message Screen:

 1. Press the **left soft key**, labeled **Options**.

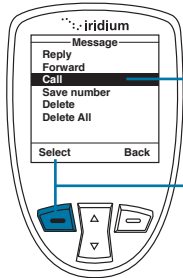


 2. Use the **2-way Navi-key** to scroll until **Call** is highlighted.
3. Press the **left soft key**, labeled **Select**.

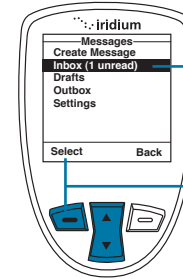

2. Use the **2-way Navi-key** to scroll until **Inbox** is highlighted.

 
3. Press the **left soft key**, labeled **Select**.

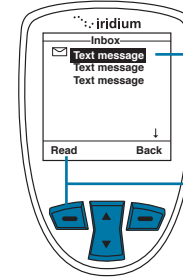

4. Use the **2-way Navi-key** to scroll to the message.


5. Press the **left soft key**, labeled **Read** to view the selected message.

## Delete a Message

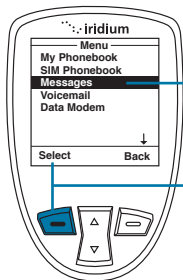 


Start at the **Main Menu** with **Messages** highlighted:

 1. Press the **left soft key**, labeled **Select**.

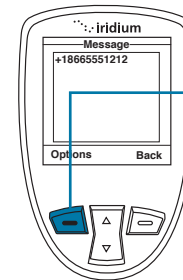


 6. Press the **left soft key**, labeled **Options**.

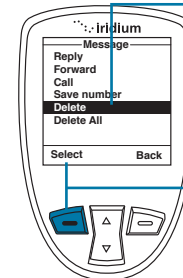

7. Use the **2-way Navi-key** to scroll until **Delete** is highlighted. To delete all messages highlight **Delete All**.

 
8. Press the **left soft key**, labeled **Select**.

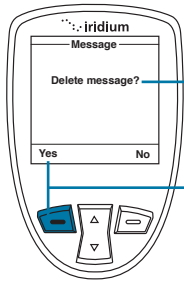

9. The menu prompts you to ensure you want to proceed. Press the **left soft key**, labeled **Yes** to delete the message.


The screen flashes **Message Deleted**, and automatically returns to the Message mailbox.

## Using the Drafts Menu

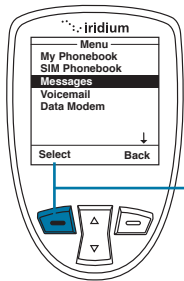 


To edit and send a stored message, use the **Draft menu**. Start at the **Main Menu** with **Messages** highlighted:

 1. Press the **left soft key**, labeled **Select**.

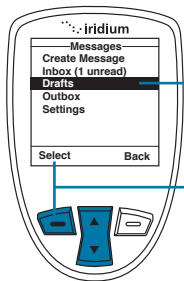


 2. Use the **2-way Navi-key** to scroll until the **Drafts** option is highlighted.
3. Press the **left soft key**, labeled **Select**.

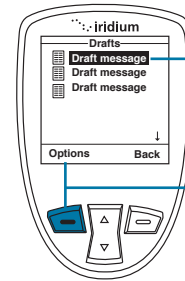


4. Use the **2-way Navi-key** to scroll until the draft message you want to send is highlighted.

 
5. Press the **left soft key**, labeled **Options**.

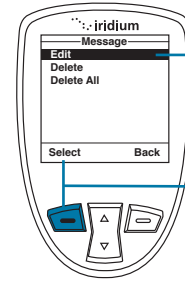

 6. Highlight **Edit** and press the **left soft key**, labeled **Select**.

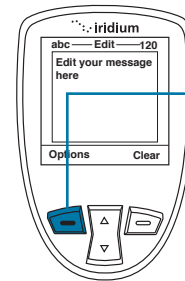


 7. When you are finished editing press the **left soft key**, labeled **Options**.

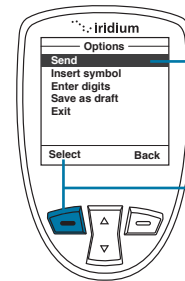


8. The **Send** option should be highlighted. If not use the **2-way Navi-key** to scroll until **Send** is highlighted.

 9. Press the **left soft key**, labeled **Select** to send the message.

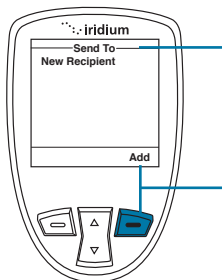


10. A **Send To** screen appears with the entry name and number.

 11. Press the **right soft key**, labeled **Add**.

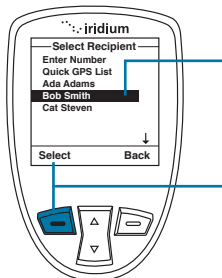

12. Use the **2-way Navi-key** until the desired recipient from your phonebook is highlighted.

 13. Press the **left soft key**, labeled **Select**.

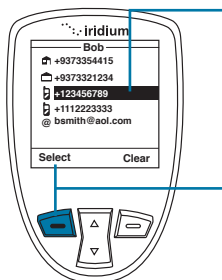


14. If the recipient has more than one number listed, the recipient's information screen appears. Use the **2-way Navi-key** to scroll to the number you would like to forward to.

15. Press the **left soft key**, labeled **Select**. The number is added to a recipient list.



 16. As you select recipients, they will be listed on the **Send To** screen. Continue to add recipients as outlined in step 10 until all recipients have been added.

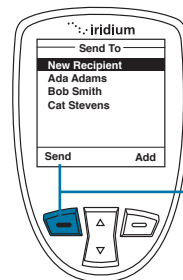


To remove a contact added to the **Send** list, highlight the contact name using the **2-way Navi key** and use the **right soft button** to select "Remove".

17. When finished selecting recipients, press the **left soft key**, labeled **Send**.

## Using the Settings Menu

 
### Enter Service Center Number

Use this capability to enter the number for the service center to which you wish to forward your outgoing messages. The 9575A will use Iridium's Service Center number by default if none has been explicitly configured.

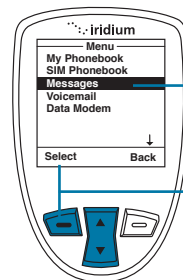


Start at the **Main Menu** with **Messages** highlighted:

 1. Press the **left soft key**, labeled **Select**.

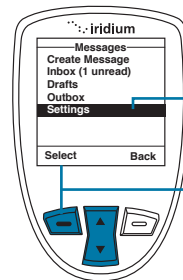


2. Use the **2-way Navi-key** to scroll until the **Settings** option is highlighted.

 
3. Press the **left soft key**, labeled **Select**.

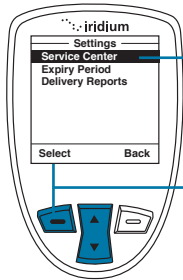

 
- The **Service Center** option should be highlighted. If not use the **2-way Navi-key** to scroll until it is highlighted.
- Press the **left soft key**, labeled **Select**.

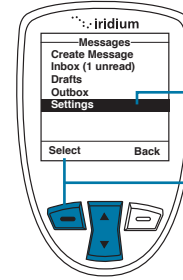

 - Use the **2-way Navi-key** to scroll until the **Settings** option is highlighted.
- Press the **left soft key**, labeled **Select**.

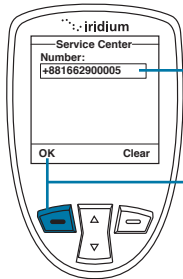

 
- Enter the service number.
- Press the **left soft key**, labeled **OK**. The screen returns to the **Settings** menu.

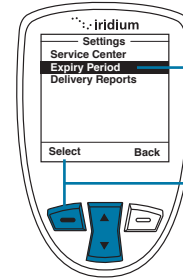


- Use the **2-way Navi-key** to scroll until the **Expiry Period** option is highlighted.
- Press the **left soft key**, labeled **Select**.

## Set Expiry Period

 Use this capability to specify the amount of time your undelivered messages should wait before auto-expiring.

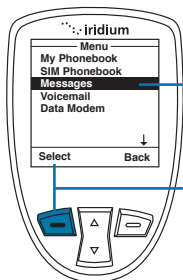

 
- Start at the **Main Menu** with **Messages** highlighted:
- Press the **left soft key**, labeled **Select**.

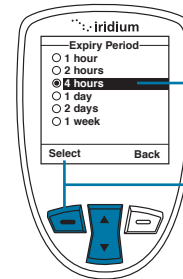

- Use the **2-way Navi-key** to scroll until the desired period of time is highlighted.
- Press the **left soft key**, labeled **Select**. The screen returns to the **Settings** menu.


## Select Delivery Reports

 Use this capability to enable or disable message delivery reports.

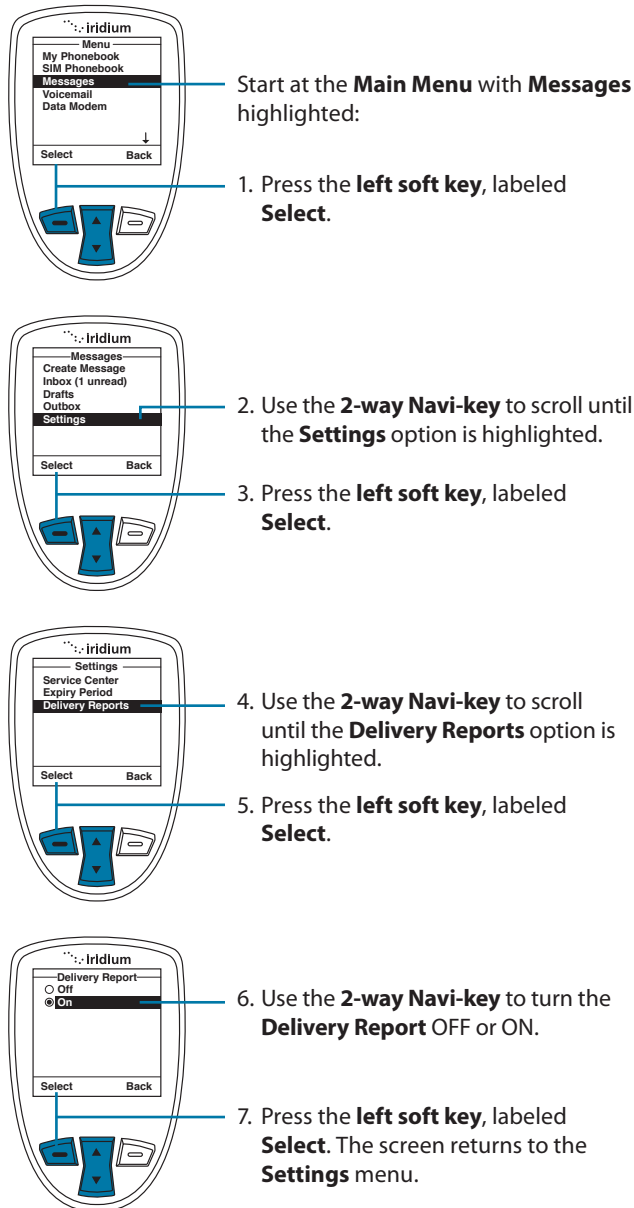

## 10: Using the Voicemail Menu

 
### Locating the Voicemail Menu

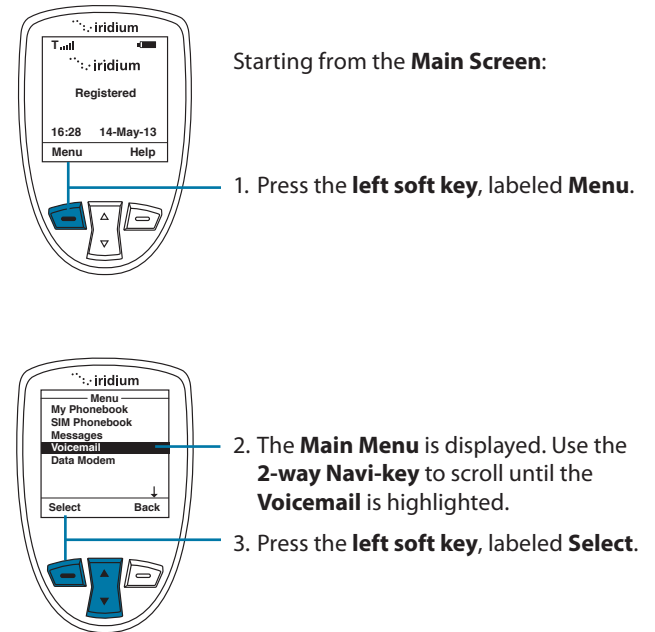

**Note:** All instructions for the **Voicemail** menu start from the **Main Menu** as shown.

### About the Voicemail Menu

 
You can do the following functions using the **Voicemail** menu:

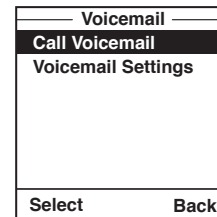

- Listen to your voicemail
- Reply to a voicemail
- Store voicemail numbers
- Access and configure your voicemail

## Vicemail Notification

 When you receive a voicemail, an incoming voicemail notification message automatically appears on your screen.


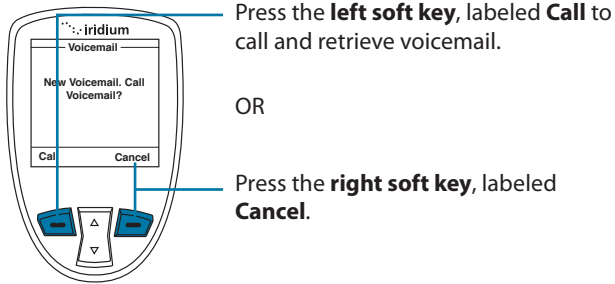


OR

Press the **right soft key**, labeled **Cancel**.

## Check Your Voicemail


 
 
To listen to a voicemail that has been saved:

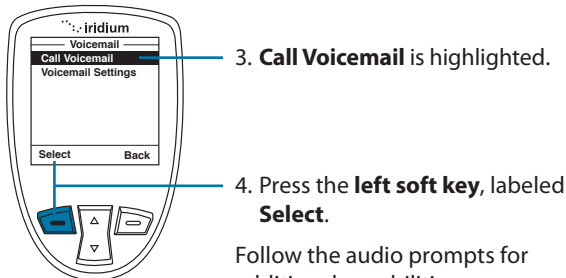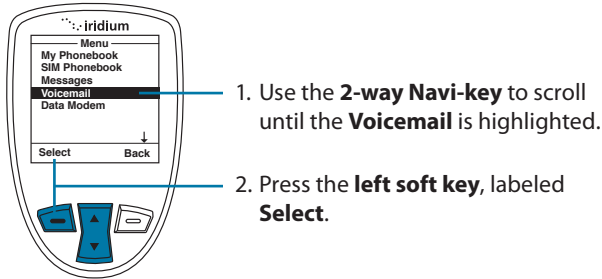


Follow the audio prompts for additional capabilities.

## Store Your Voicemail Number

    
If you have not previously stored a voicemail number, then you see No Number Available on the display. You must store a voicemail number before you can access the service for the first time.

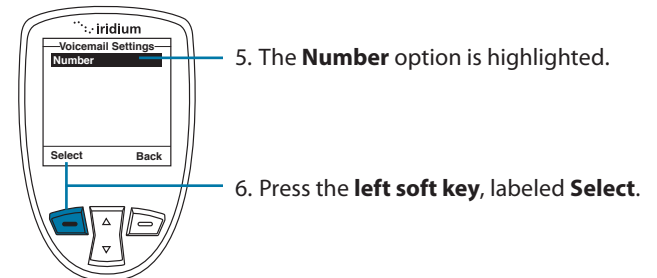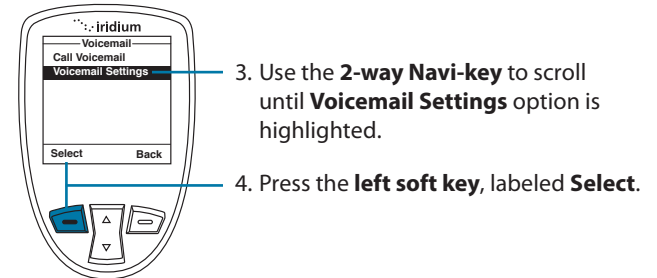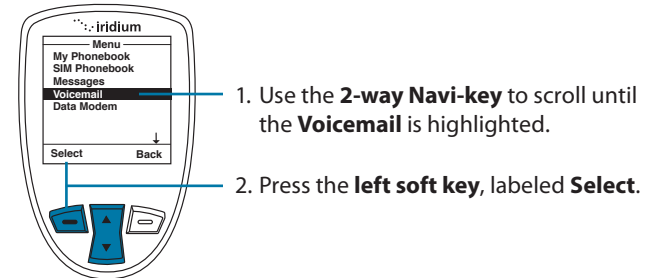



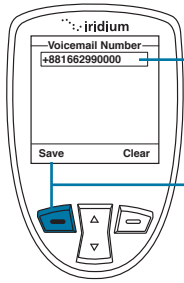

 7. Enter the voicemail number given to you by your Service Provider.
8. Press the **left soft key**, labeled **Save**.

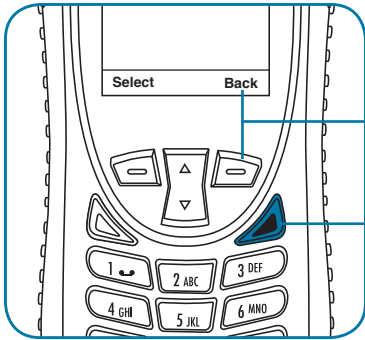

9. Press the **right soft key**, labeled **Back** to return to the previous menu.
10. Press the **red key** to exit to the **Main Screen**.

### One-Touch Access to Voicemail

 
The 9575A provides one-touch access to voicemail for ease of use. To use this feature, press and hold the 1 key for 2 seconds in order to prompt a call to voicemail without having to navigate through the phone menu.

## 11: Using the Data Modem Menu

In order to use the 9575A as a modem for your computer, you must first follow the installation instructions provided on the CD-ROM included with your phone or use the instructions provided by your service provider. The data modem menu is not required to initiate or use the phone as a modem for data services, it only reports the connection status of the USB. The instructions provided are optional and are to be followed if desired prior to plugging in the USB cable to the phone and to your computer.


### Locating the Data Modem Menu

**Note:** All instructions for the **Data Modem** menu start from the **Main**

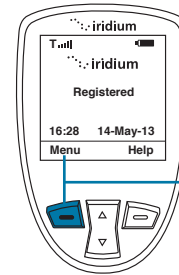


Starting from the **Main Screen**:

 1. Press the **left soft key**, labeled **Menu**.

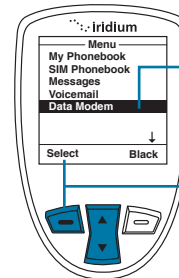

2. The **Main Menu** is displayed. Use the **2-way Navi-key** to scroll until **Data Modem** is highlighted.
3. Press the **left soft key**, labeled **Select**.

 **Menu** as shown.

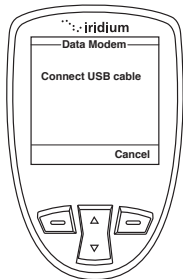


**Note:** If you are not connected to the USB cable you are prompted to connect. While connected to the USB cable it is important to not remove the battery.

If you need to remove the battery, first disconnect from the USB cable, power down the 9575A and then remove the battery.


## 12: Using the Call History Menu
 
### Locating the Call History Menu

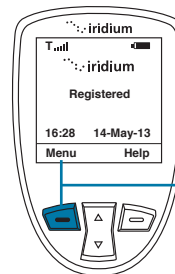

Starting from the **Main Screen**:

 1. Press the **left soft key**, labeled **Menu**.

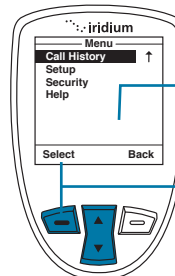


2. The **Main Menu** is displayed. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.

3. Press the **left soft key**, labeled **Select**.

**Note:** All instructions for the **Call History** menu start from the **Main Menu** as shown.

### About the Call History Menu

 You can perform the following functions using the **Call History** menu:

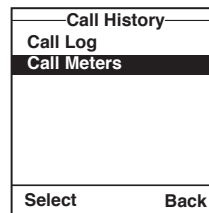


- View the amount of time spent talking on your phone
- View your most recent dialed, missed and received calls
- Set phone alerts

## Using the Call Log Menu

 
### View Most Recent Received Calls

Your phone saves received calls. Use the **Call Log** menu to view those numbers.

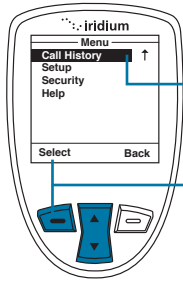


Starting from the **Main Menu**:

 
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
2. Press the **left soft key**, labeled **Select**.

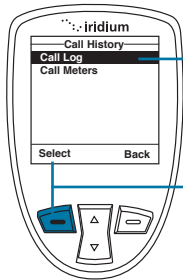

 3. The **Call History** menu is displayed with **Call Log** highlighted.
4. Press the **left soft key**, labeled **Select**.

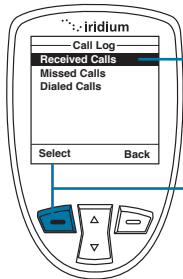

 5. The **Call Log** menu is displayed with **Received Calls** highlighted.
6. Press the **left soft key**, labeled **Select**.

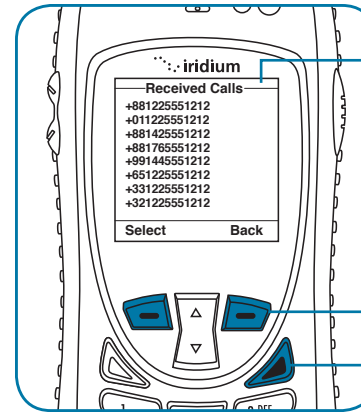


7. The **Received Calls** screen is displayed with a list of your last ten calls. Inbound Caller ID to provide specific numbers is not currently supported by the network. This feature may be enabled in the future.
- Press the **right soft key** labeled **Back** to go back one level, or the **red key** to return the **Main Screen**.


### View Missed Calls

 Your phone saves a list of calls you've missed when the phone is busy or were not able to get to it. The phone does not show calls that you missed when the phone is turned OFF or not registered on the network.


Starting from the **Main Menu**:

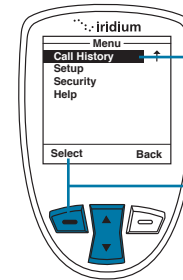

 
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
2. Press the **left soft key**, labeled **Select**.

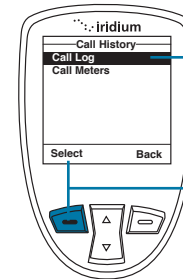

 
3. The **Call History** menu is displayed with **Call Log** highlighted.
4. Press the **left soft key**, labeled **Select**.

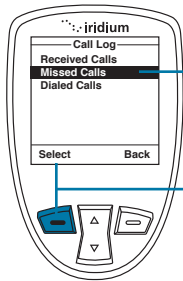

 - Using the **2-way Navi-key** scroll until **Missed Calls** is highlighted.
- Press the **left soft key**, labeled **Select**.

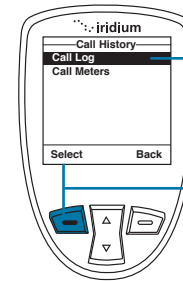


 - The **Call History** menu is displayed with **Call Log** highlighted.
- Press the **left soft key**, labeled **Select**.

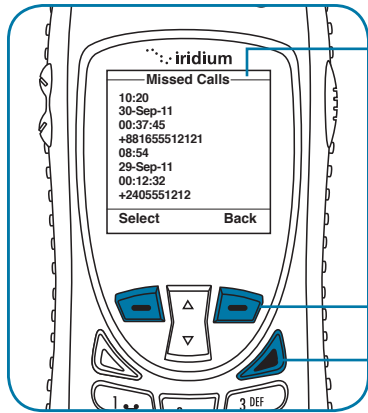


- The **Missed Calls** screen is displayed with a list of your last missed calls. Inbound Caller ID to provide specific numbers is not currently supported by the network. This feature may be enabled in the future

 Press the **right soft key** labeled **Back** to go back one level, or the **red key** to return the **Main Screen**.

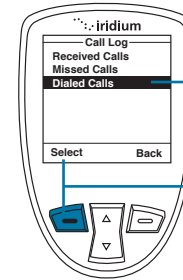

 - Using the **2-way Navi-key** scroll until **Dialed Calls** is highlighted.
- Press the **left soft key**, labeled **Select**.

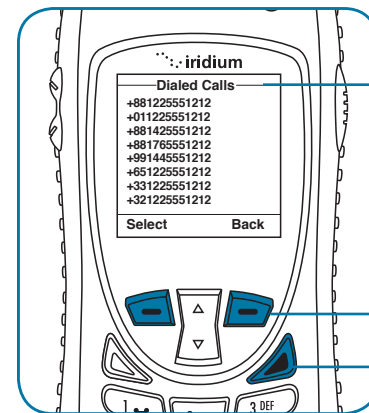


- The **Dialed Calls** screen is displayed with a list of your last ten calls.

Press the **right soft key** labeled **Back** to go back one level, or the **red key** to return the **Main Screen**.

### View Most Recent Dialed Calls

 Your phone saves the last ten calls dialed. Use the Call Log menu to view those numbers.

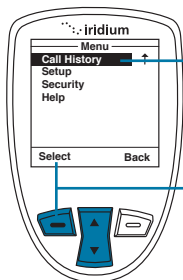


Starting from the **Main Menu**:

- Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
- Press the **left soft key**, labeled **Select**.

## Using the Call Meters Menu

 
Call meters help you track your airtime, keep a running tab of your monthly usage or view the air time of your most recent calls.

### Show the Time of Last Call

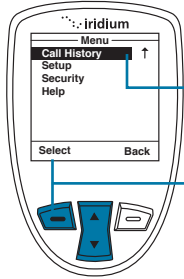


Starting from the **Main Menu**:

 
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
2. Press the **left soft key**, labeled **Select**.

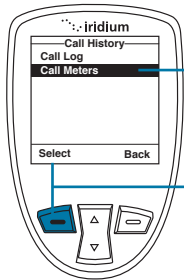

 3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
4. Press the **left soft key**, labeled **Select**.

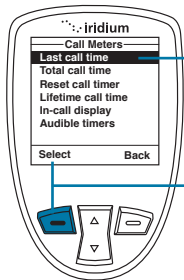

 5. **Last call time** is highlighted. If not, use the **2-way Navi-key** until it is.
6. Press the **left soft key**, labeled **Select**.

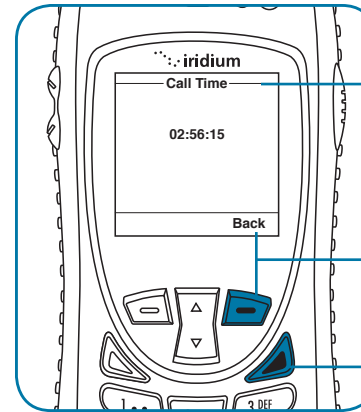

The duration of the last call is displayed.


7. Press the **right soft key** labeled **Back** to return to the previous menu.
8. Press the **red key** to return to the **Main Screen**.

**Note:** The last call timer shows the elapsed time of the most recent call made since your phone was turned on. This information is not saved when you turn off the phone.


### Show Total Time for All Calls

 This capability displays your total airtime since you last reset the call timer.


Starting from the **Main Menu**:

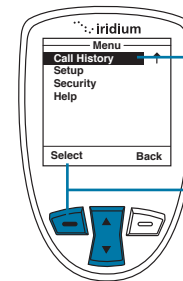

 
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
2. Press the **left soft key**, labeled **Select**.

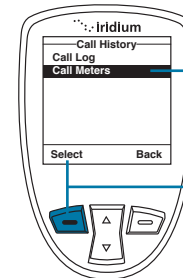

 
3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
4. Press the **left soft key**, labeled **Select**.

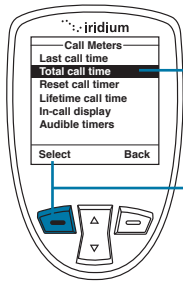

 
- Use the **2-way Navi-key** to scroll until **Total call time** is highlighted.
- Press the **left soft key**, labeled **Select**.

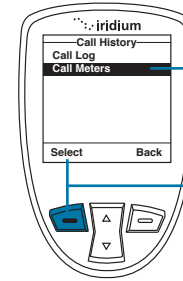

 
- Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
- Press the **left soft key**, labeled **Select**.

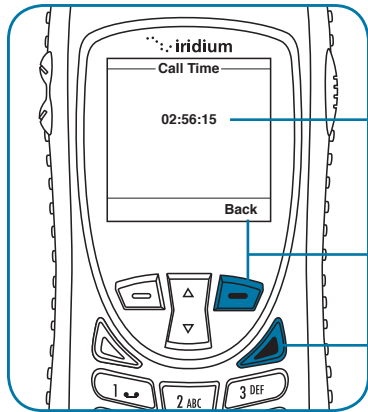

 
- The airtime accumulation since the timer was last reset is displayed on the screen.
- Press the **right soft key** labeled **Back** to return to the previous menu.
  - Press the **red key** to return to the **Main Screen**.

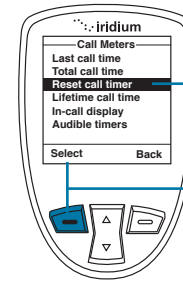

 - Use the **2-way Navi-key** to scroll until **Reset call timer** is highlighted.
- Press the **left soft key**, labeled **Select**.

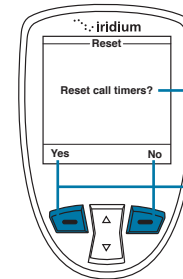

 - The screen displays: **Reset call timers?**
- Press the **left soft key** for **Yes** or the **right soft key** for **No**.

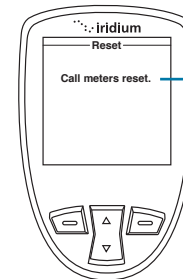


- If you press **Yes**, the display reads **Call meters reset**.


### Reset all Timers

 Reset your timers at the beginning of each billing cycle to keep track of your spending.


Starting from the **Main Menu**:

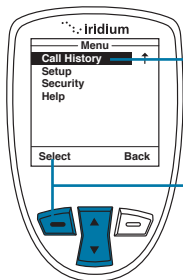

 - Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
- Press the **left soft key**, labeled **Select**.

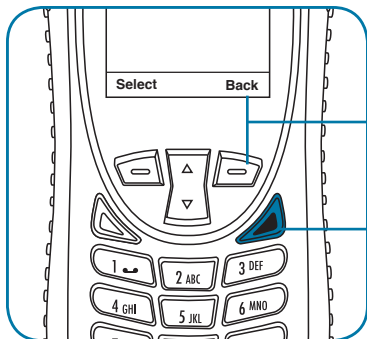

 
9. Press the **right soft key** labeled **Back** to return to the previous menu.
10. Press the **red key** to return to the **Main Screen**.

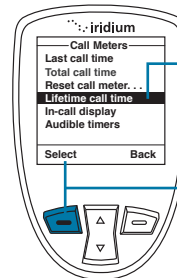


3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
4. Press the **left soft key**, labeled **Select**.

### Showing the Lifetime Call Timer

 This capability displays a running clock of the total call time for the phone since being activated.

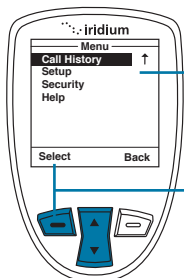


 - Starting from the **Main Menu**:
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
  2. Press the **left soft key**, labeled **Select**.

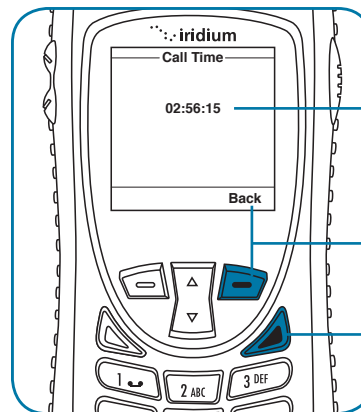

- The total time of all calls is displayed.
7. Press the **right soft key** labeled **Back** to return to the previous menu.
  8. Press the **red key** to return to the **Main Screen**.

 
**Note:** The Lifetime timer can not be reset.

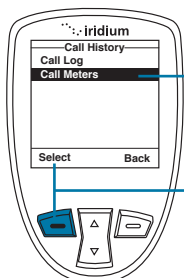


3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
4. Press the **left soft key**, labeled **Select**.

### Showing the In-call Display

 This capability enables or disables the call timer that displays the amount of time that has passed since placing a specific call.

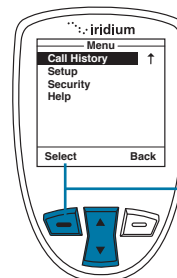


 - Starting from the **Main Menu**:
1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
  2. Press the **left soft key**, labeled **Select**.

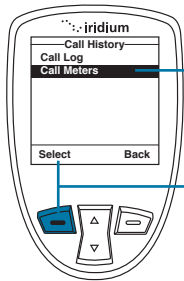


3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.

 4. Press the **left soft key**, labeled **Select**.

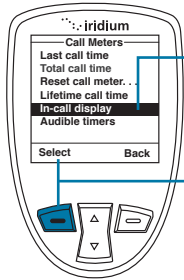

5. Use the **2-way Navi-key** to scroll until **In-call display** is highlighted.

 6. Press the **left soft key**, labeled **Select**.

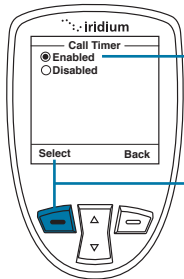

7. Use the **2-way Navi-key** to scroll until **Enabled** or **Disabled**.


8. Press the **left soft key**, labeled **Select**.

## Setting Audible Call Timers

 This capability lets the phone watch the clock for you. At a set time or interval, the call timers produce a beep that only you can hear. You can choose No Alert, Single Alert or Repetitive Alert.


### Set the Single Alert Timer

Starting from the **Main Menu**:

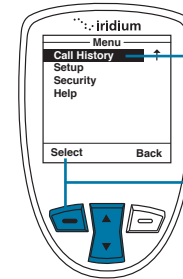


1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

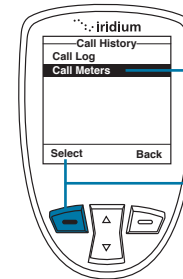

3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.

 
4. Press the **left soft key**, labeled **Select**.

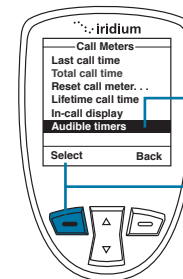


5. Use the **2-way Navi-key** to scroll until **Audible timers** is highlighted.

 6. Press the **left soft key**, labeled **Select**.




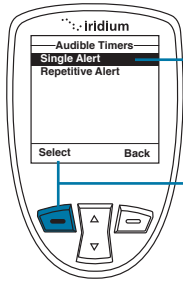

 7. The **Single Alert** option should be highlighted. If not, use the **2-way Navi-key** to scroll until it is.
8. Press the **left soft key**, labeled **Select**.

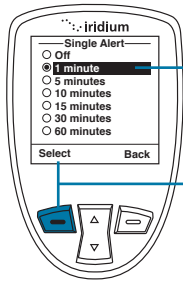

 9. Use the **2-way Navi-key** to scroll to the desired single alert.
10. Press the **left soft key**, labeled **Select**.

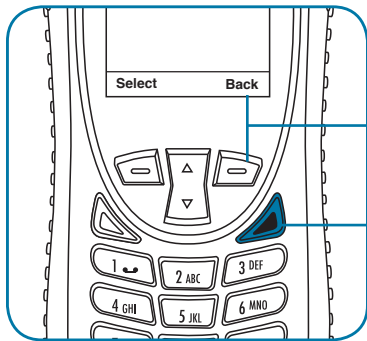


11. Press the **right soft key** labeled **Back** to return to the previous menu.
12. Press the **red key** to return to the **Main Screen**.


## Set the Repetitive Alert

 This capability sets your phone to alert you at specific intervals, for example every minute.


Starting from the **Main Menu**:

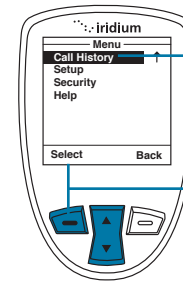

 1. Use the **2-way Navi-key** to scroll until **Call History** is highlighted.
2. Press the **left soft key**, labeled **Select**.

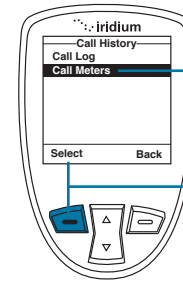

 
3. Use the **2-way Navi-key** to scroll until **Call Meters** is highlighted.
4. Press the **left soft key**, labeled **Select**.

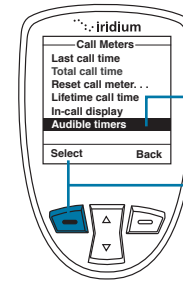

5. Use the **2-way Navi-key** to scroll until **Audible timers** is highlighted.
6. Press the **left soft key**, labeled **Select**.


## 13: Using the Setup Menu
 
### Locating the Setup Menu

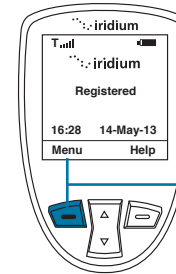

Starting from the **Main Screen**:

 1. Press the **left soft key**, labeled **Menu**.

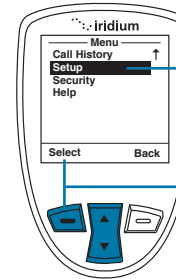


2. The **Main Menu** is displayed. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

3. Press the **left soft key**, labeled **Select**.


**Note:** All instructions for the **Setup** menu start from the **Main Menu** as shown.

### About the Setup Menu

 You can perform the following functions using the **Setup** menu:

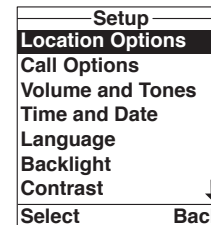


 - Set Location Options
- Set call options
- Set volumes and tones for your ringer speaker and alert
- Set time zone, time and date format
- Set language
- Set your phone lighting preferences
- Set the contrast on the display screen

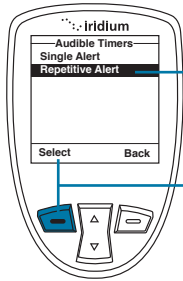


7. Use the **2-way Navi-key** to scroll to the **Repetitive Alert** option.

 8. Press the **left soft key**, labeled **Select**.

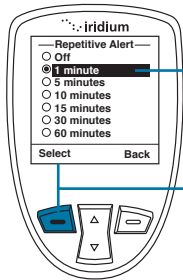


9. Use the **2-way Navi-key** to scroll to the desired repetitive alert.

 10. Press the **left soft key**, labeled **Select**.

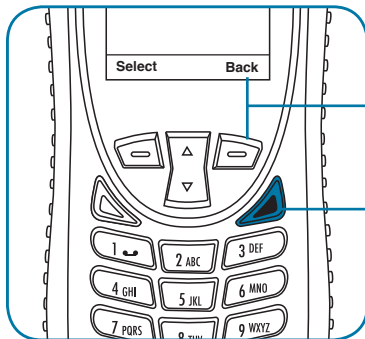

11. Press the **right soft key** labeled **Back** to return to the previous menu.

 12. Press the **red key** to return to the **Main Screen**.

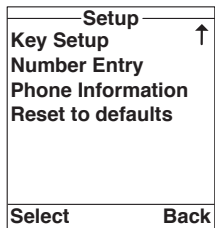


- Set preference for the convenience key and right soft key
- Set your prefix preference for entering phone numbers
- View phone information
- Reset phone settings to default

**Note:** The Setup menu consists of three screens. Scroll past the Language option using the **2-way Navi-key** for more options.

**Note:** Location options will be covered in more detail on Chapter 14.

## Setting Call Options

 
The Call Options menu allows you to enable or disable various call capabilities.

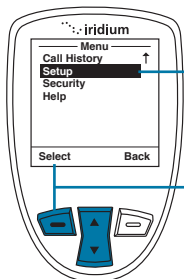

Starting from the **Main Menu**:


1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

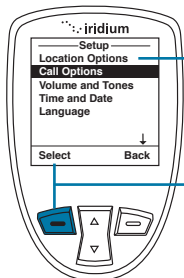

3. **Call Options** is already displayed.

 4. Press the **left soft key**, labeled **Select**.

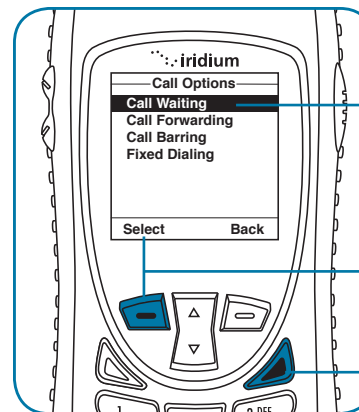

5. Highlight the call capability you would like to enable.


6. Press the **left soft key** labeled **Select** to return to the previous menu.

7. Press the **red key** to return to the **Main Screen**.

## Setting Volumes and Tones
 
### Adjust the Ringer Volume


The **Volumes and Tones** menu allows you to adjust the sound tone and volume level as well as to set the phone to ring or vibrate for incoming call notification.

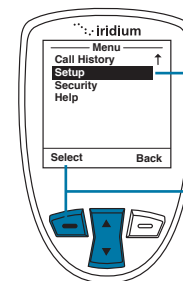

Starting from the **Main Menu**:

1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

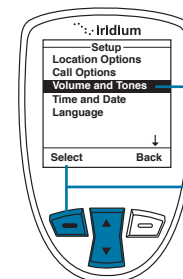


3. Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.


4. Press the **left soft key**, labeled **Select**.

## Adjust the Speaker Volume

 
This capability adjusts the volume of the speaker. The phone sounds the new volume level as you adjust it.

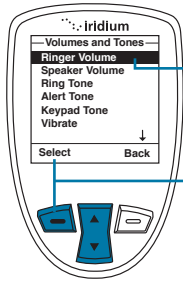

 5. **Ringer Volume** is highlighted. If not, use the **2-way Navi-key** to scroll to it.
6. Press the **left soft key**, labeled **Select**.

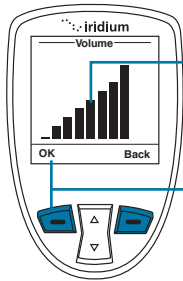


 7. The volume bars increase or decrease as you press the **2-way Navi-key** up or down. You will hear the selected audio level as part of the selection process.
8. Press the **left soft key**, labeled **OK** when you have the desired setting or you may cancel the changes by pressing the **right soft key** labeled **Back** to return to the **Volume and Tones Menu**.

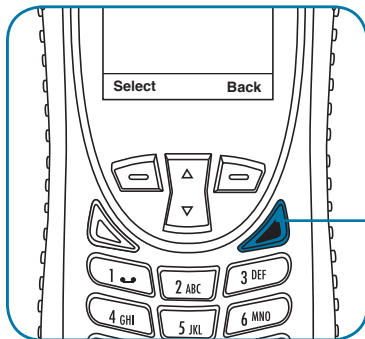


9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

 
Starting from the **Main Menu**:

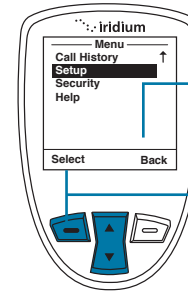

 
1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

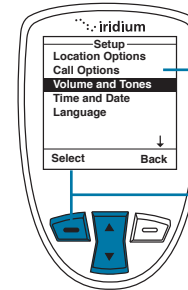

 3. Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.
4. Press the **left soft key**, labeled **Select**.

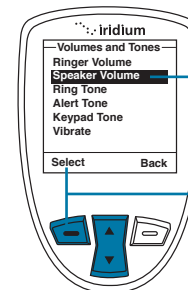

 
5. Use the **2-way Navi-key** to scroll to **Speaker Volume**.
6. Press the **left soft key**, labeled **Select**.

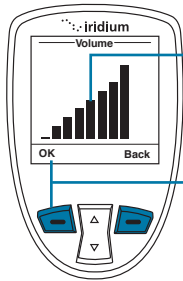

7. The volume bars increase or decrease as you press the **2-way Navi-key** up or down. You will hear the selected audio level as part of the selection process.


8. Press the **left soft key**, labeled **OK** when you have the desired setting or you may cancel the changes by pressing the **right soft key** labeled **Back** to return to the **Volume and Tones Menu**.

 9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

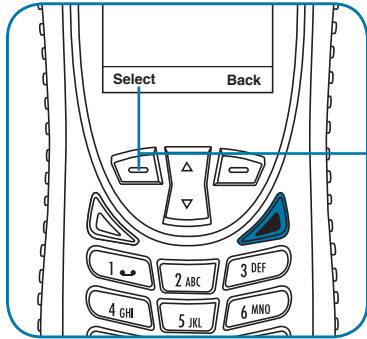

### Adjust the Ring Tone

 
This capability adjusts the tone of the ringer. The phone sounds the new tone as you adjust it.

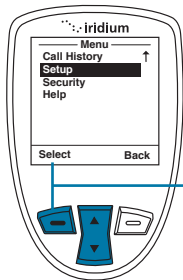

Starting from the **Main Menu**:


1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

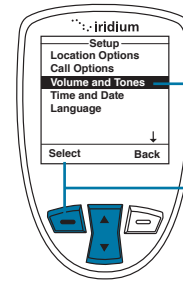


3. Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.

 4. Press the **left soft key**, labeled **Select**.

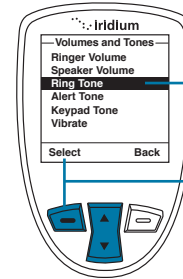

5. Use the **2-way Navi-key** to scroll to **Ring Tone**.

 
6. Press the **left soft key**, labeled **Select**.

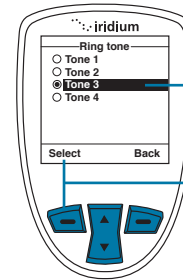

7. Use the **2-way Navi-key** to select the desired tone. You will hear the selected tone as part of the selection process.


8. Press the **left soft key**, labeled **OK** when you have the desired setting or you may cancel the changes by pressing the **right soft key** labeled **Back** to return to the **Volume and Tones Menu**.

 9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

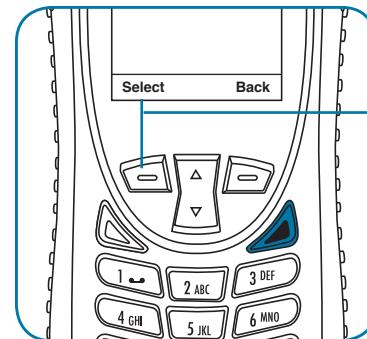

## Setting the Call Alert Mode

 
This capability adjusts the alert tone. The phone sounds the new tone as you adjust it.

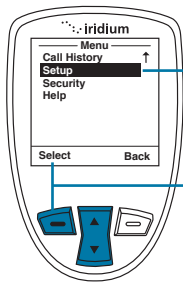

Starting from the **Main Menu**:


1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

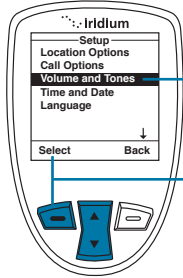


3. Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.

 4. Press the **left soft key**, labeled **Select**.

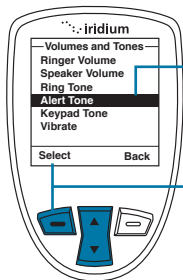


5. Use the **2-way Navi-key** to scroll until **Alert Tone** is highlighted.

 6. Press the **left soft key**, labeled **Select**.

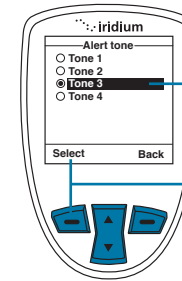

7. Use the **2-way Navi key** to select the desired tone. You will hear the selected tone as part of the selection process.

 8. Press the **left soft key**, labeled **OK** when you have the desired setting or you may cancel the changes by pressing the **right soft key** labeled **Back** to return to the **Volume and Tones Menu**.

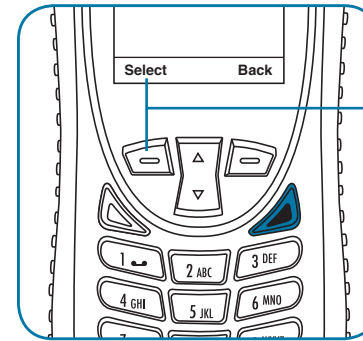


9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

## Setting the Keypad Tone

 
This capability selects the keypad tone. You can select to have a single tone, DTMF tones or no tones when the keypad is pressed.

Starting from the **Main Menu**:

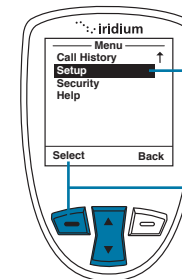


1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 
2. Press the **left soft key**, labeled **Select**.

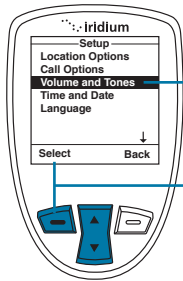

 
- Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.
- Press the **left soft key**, labeled **Select**.

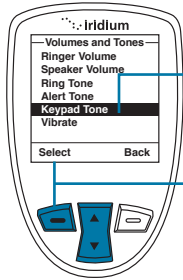

 - Use the **2-way Navi-key** to scroll until **Keypad Tone** is highlighted.
- Press the **left soft key**, labeled **Select**.

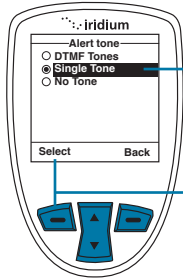

 - Use the **2-way Navi key** to select the desired tone. You will hear the selected tone as part of the selection process.
- Press the **left soft key**, labeled **OK** when you have the desired setting or you may cancel the changes by pressing the **right soft key** labeled **Back** to return to the **Volume and Tones Menu**.

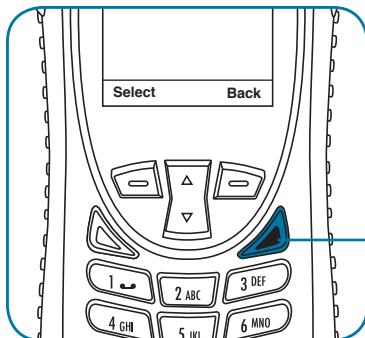


- You may exit the settings and return to the **Main Screen** by selecting the **red key**.


### Set the Phone to Ring and /or Vibrate

 This capability is ideal for situations where a ringing phone is inappropriate or in a loud environment. The vibrate function notifies you of incoming calls with discreet vibrations.


Starting from the **Main Menu**:

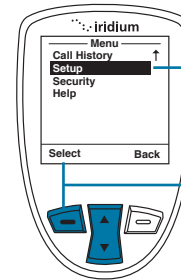

 
- Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
- Press the **left soft key**, labeled **Select**.

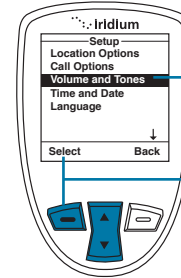

 
- Use the **2-way Navi-key** to scroll until **Volumes and Tones** is highlighted.
- Press the **left soft key**, labeled **Select**.

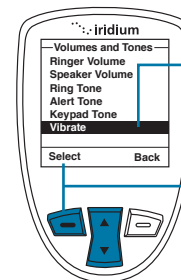

 
- Use the **2-way Navi-key** to scroll until **Vibrate** is highlighted.
- Press the **left soft key**, labeled **Select**.

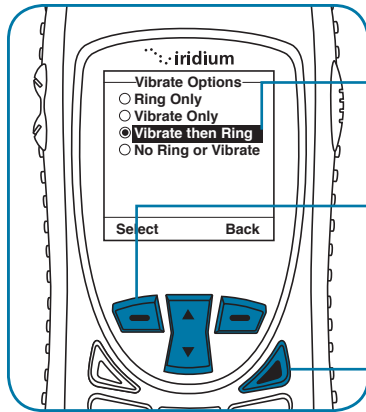

 7. Use the **2-way Navi-key** to scroll to the desired **Vibrate Option**.
8. Press the **left soft key**, labeled **Select** to confirm change or press the **right soft key** labeled **Back** to return to the **Volumes and Tones Menu**.
9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

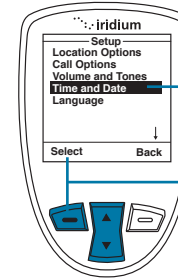

 3. Use the **2-way Navi-key** to scroll until **Time & Date** is highlighted.
4. Press the **left soft key**, labeled **Select**.

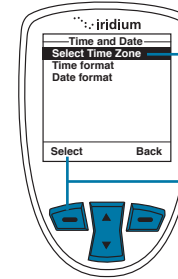


5. Use the **2-way Navi-key** to scroll until the desired **Select Time Zone** is highlighted.
6. Press the **left soft key**, labeled **Select** to confirm or press the **red key** to return to the **Setup Menu**.

## Time and Date Settings

 
### Select the Time Zone

Your phone uses the satellite network to obtain the time and date information. However, you need to select the time zone in which you are located.

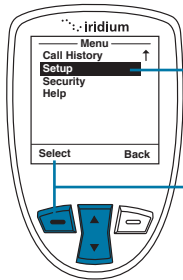

Starting from the **Main Menu**:

 
1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

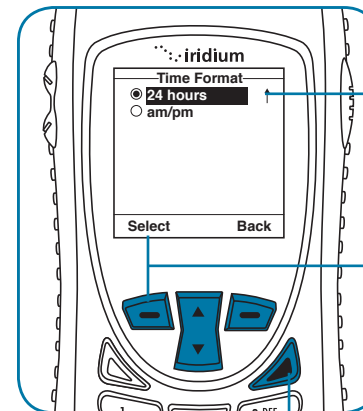


7. Use the **2-way Navi-key** until the required time zone is highlighted.
8. Press the **left soft key**, labeled **Select** to confirm or press the **right soft key** labeled **Back** to return to the **Time and Date Menu**.
9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.




### Select the Time Format

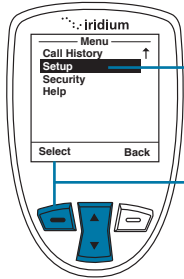 

 
- Starting from the **Main Menu**:
1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
  2. Press the **left soft key**, labeled **Select**.

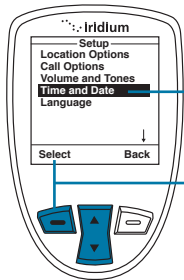

 3. Use the **2-way Navi-key** to scroll until **Time and Date** is highlighted.
4. Press the **left soft key**, labeled **Select**.

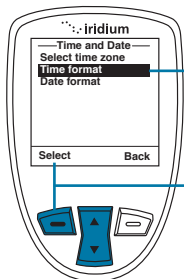


 5. Use the **2-way Navi-key** to scroll until **Time format** is highlighted.
6. Press the **left soft key**, labeled **Select**.

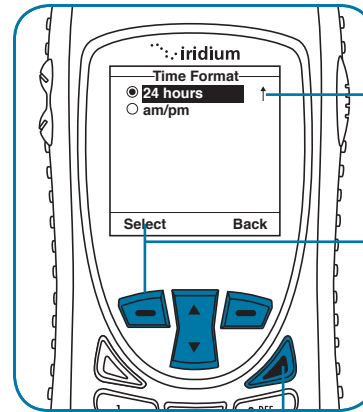


7. Use the **2-way Navi-key** until the required time format is highlighted.
8. Press the **left soft key**, labeled **Select** to confirm selection or press the **right soft key**, labeled **Back** to return to the **Time and Date Menu**.
9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.


### Select the Date Format

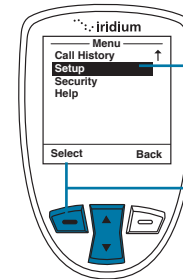 

 
- Starting from the **Main Menu**:
1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
  2. Press the **left soft key**, labeled **Select**.

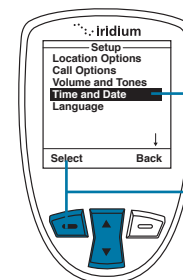

 
3. Use the **2-way Navi-key** to scroll until **Time and Date** is highlighted.
4. Press the **left soft key**, labeled **Select**.

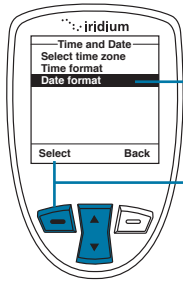

 
- Use the **2-way Navi-key** to scroll until **Date format** is highlighted.
- Press the **left soft key**, labeled **Select**.

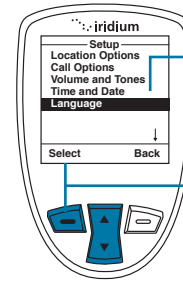

 - Use the **2-way Navi-key** to scroll until **Language** is highlighted.
- Press the **left soft key**, labeled **Select**.

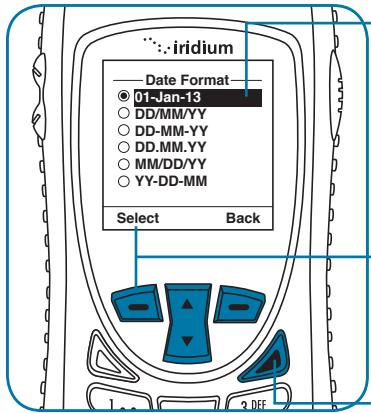

 
- Use the **2-way Navi-key** until the required date format is highlighted.
- Press the **left soft key**, labeled **Select** to confirm change or press the **right soft key** labeled **Back** to return to the **Time and Date Menu**.
- You may exit the settings and return to the **Main Screen** by selecting the **red key**.

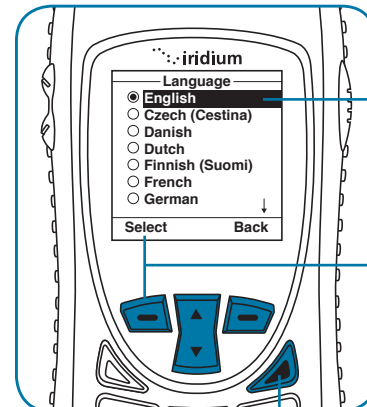

- Use the **2-way Navi-key** to highlight **Menu** and press the **left soft key** labeled **Select** to access the available languages
- Use the **2-way Navi-key** to scroll until the required **Language** is highlighted.
- Press the **left soft key**, labeled **Select** to confirm the selection or press the **right soft key**, labeled **Back** to return to the **Setup Menu**.
- You may exit the settings and return to the **Main Screen** by selecting the **red key**.

## Selecting the Display Language

 Your phone contains 23 languages. Use this capability to select the language in which your phone displays menus and messages.

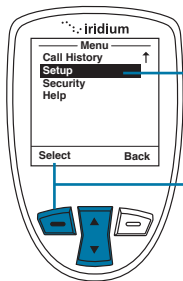

Starting from the **Main Menu**:


- Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
- Press the **left soft key**, labeled **Select**.

**Tip:** If you accidentally select a language other than English and are unable to read the phone menus, follow these steps to change back to English:

- Press the **red key** three times.
- Press the **left soft key**.
- Scroll down six times.
- Press the **left soft key** again.
- Scroll down four times.
- Press the **left soft key** and then press it a second time. The **English** option is at the top so press the **left soft key** a final time to confirm change back to **English**.


## Setting Backlights

 Enable, disable or adjust the length of time the backlight stays on after a key press.

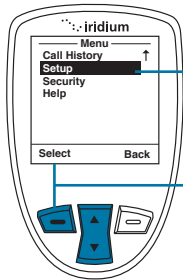


Starting from the **Main Menu**:

 1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

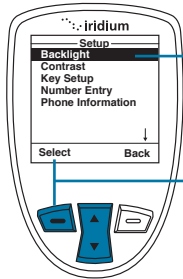

 
3. Use the **2-way Navi-key** to scroll until **Backlight** is highlighted.
4. Press the **left soft key**, labeled **Select**.

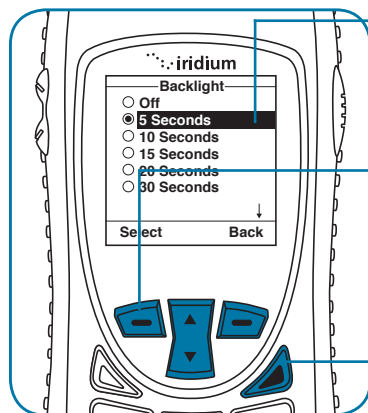

5. Use the **2-way Navi-key** to scroll until the required **Backlight** is highlighted.
6. Press the **left soft key**, labeled **Select** to confirm selections or press the **right soft key** labeled **Back** to return to the **Setup Menu**.
7. You may exit the settings and return to the **Main Screen** by selecting the **red key**.


## Setting Contrast

 This capability allows you to adjust the contrast on the display screen.

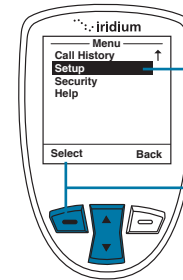


Starting from the **Main Menu**:

 1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

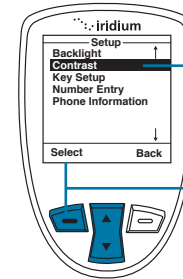

 3. Use the **2-way Navi-key** to scroll until **Contrast** is highlighted.
4. Press the **left soft key**, labeled **Select**.

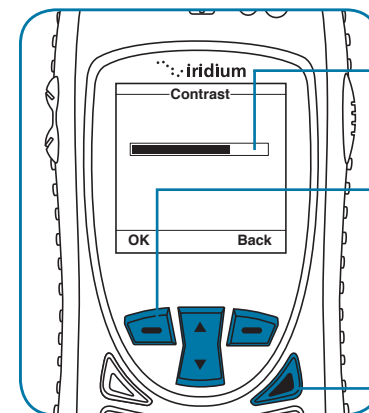


5. Use the **2-way Navi-key** to scroll until to increase or decrease the contrast.
6. Press the **left soft key**, labeled **OK** to confirm selections or press the **right soft key** labeled **Back** to return to the **Setup Menu**.
7. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

### Using the Key Setup Menu

 
This capability selects the function of the **convenience key** and the **right soft key** when the **Main Screen** is displayed. The default function is to display the Help screen which is useful for new users; however the function can be changed to access the phonebook.

#### Setup the Convenience Key Function

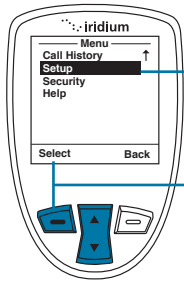


Starting from the **Main Menu**:

 
1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

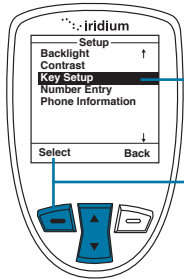

 3. Use the **2-way Navi-key** to scroll until **Key Setup** is highlighted.
4. Press the **left soft key**, labeled **Select**.

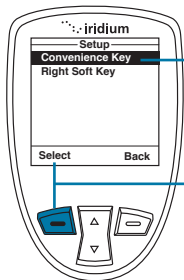


 5. **Convenience Key** is highlighted.
6. Press the **left soft key**, labeled **Select**.

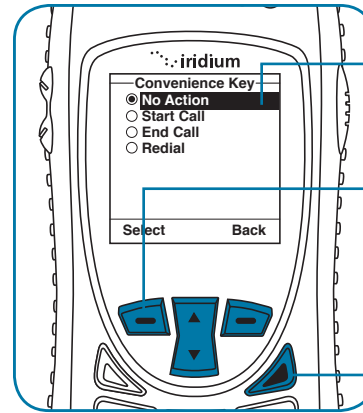


7. Use the **2-way Navi-key** to scroll until the desired action is highlighted.
8. Press the **left soft key**, labeled **Select** to confirm selections or press the **right soft key** labeled **Back** to return to the **Setup Menu**.
9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

#### Setup the Right Soft Key Function

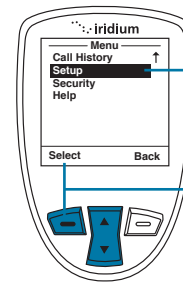 


Starting from the **Main Menu**:

 1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.
2. Press the **left soft key**, labeled **Select**.

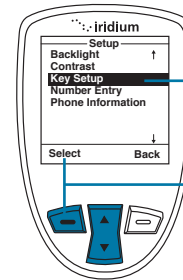


 3. Use the **2-way Navi-key** to scroll until **Key Setup** is highlighted.
4. Press the **left soft key**, labeled **Select**.

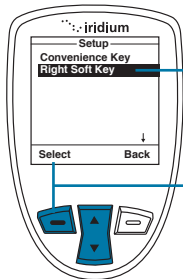


5. Use the **2-way Navi-key** until **Right Soft Key** is highlighted.

 6. Press the **left soft key**, labeled **Select**.

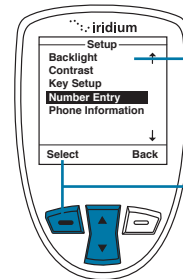

3. Use the **2-way Navi-key** to scroll past the **Key Setup** option until **Number Entry** is highlighted.

 
4. Press the **left soft key**, labeled **Select**.

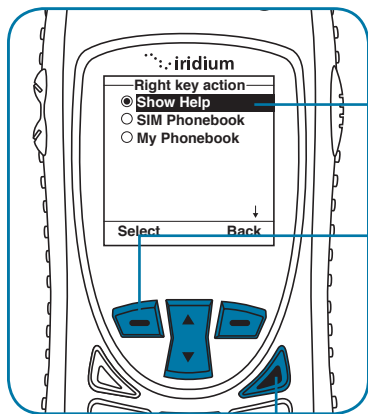

7. Use the **2-way Navi-key** to scroll until the desired action is highlighted.

8. Press the **left soft key**, labeled **Select** to confirm selections or press the **right soft key** labeled **Back** to return to the **Setup Menu**.

 9. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

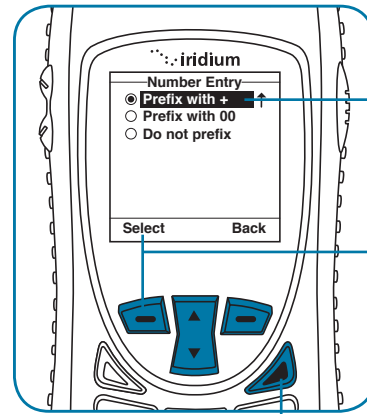


5. Use the **2-way Navi-key** to scroll until the desired action is highlighted.

6. Press the **left soft key**, labeled **Select** to confirm selections or press the **right soft key** labeled **Back** to return to the **Setup Menu**.

7. You may exit the settings and return to the **Main Screen** by selecting the **red key**.

## Set Number Entry Prefix

 
This capability allows you to set your preferred international access code and can automatically attach (00) or (+) to any phone number you enter.

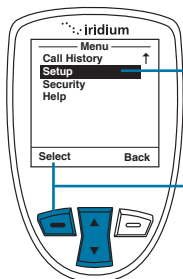

Starting from the **Main Menu**:

1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

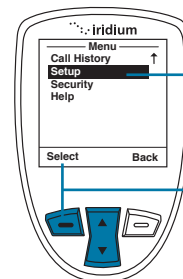


Starting from the **Main Menu**:

1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

2. Press the **left soft key**, labeled **Select**.


## View Phone Information

 This capability allows you to view technical information about the 9575A Satellite Phone software, hardware versions and the IMEI number.

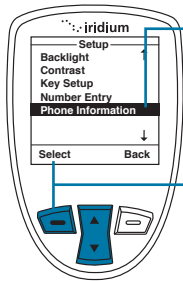


3. Use the **2-way Navi-key** to scroll past the **Key Setup** option until **Phone Information** is highlighted.

 4. Press the **left soft key**, labeled **Select**.

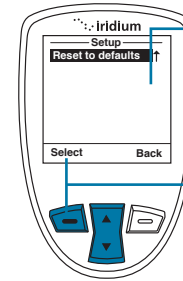


3. Use the **2-way Navi-key** to scroll past the **Key Setup** option until **Reset to defaults** is highlighted.

 4. Press the **left soft key**, labeled **Select**.

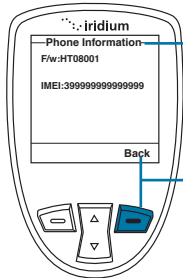

Information regarding your phone appears on the display.

 
5. Press the **right soft key**, labeled **Back** to return to the **Setup** menu.

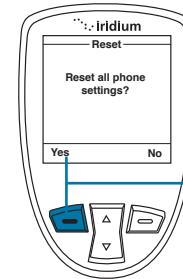

5. Press the **left soft key**, labeled **Yes**.

### Reset Phone Options to Factory Defaults

 
This capability resets all settings to their original default settings.

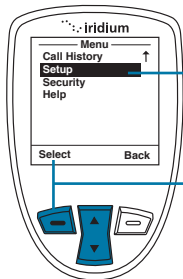

Starting from the **Main Menu**:

1. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 2. Press the **left soft key**, labeled **Select**.

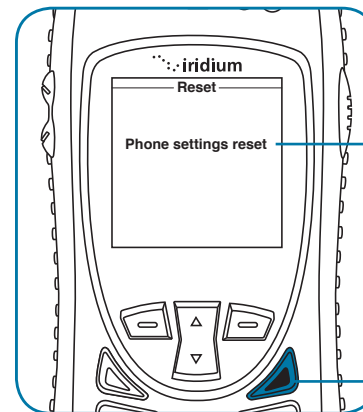

6. A message appears briefly indicating the phone settings have been reset.

7. Press the **red key** to return to the **Main Screen**.

## 14: GPS and Location-Based Services

The 9575A GPS and Location-Based Service features allow you to view, send, or restrict your location information. There are four main components to set up and use these features:

- **Location Options Setup Menu:** located in the 9575A main menu in the setup section, Location Options is where you customize your GPS, emergency, message, and format options.
- **Programmable SOS button:** this red button is located on the top of the phone, under a protective cover. By removing the cover and pressing the red button you can send your location information to your designated contact in the event of an emergency.
- **Location Convenience Key:** located on the right side of the phone, you can press this key to view your location and share it via SMS to either a pre-programmed "Quick GPS" contact or a new message contact.
- **Online portal integration with 3<sup>rd</sup> party providers:** enables the transmission of the phone's location information on a scheduled interval via short-burst data (SBD) to 3rd party portal providers for online tracking

 
**Note:** Standard usage fees apply for sharing location via messaging or placing a phone call via the programmable SOS button.

### Location Options Setup Menu

The Location Options Setup Menu enables you to set up the following options:


- GPS Options: Enable/disable GPS on your handset; determine how frequently the GPS is updated when enabled; and lock your GPS settings.
- Portal Options: Register/De-register with portal provider; check your portal status
- Emergency Options: Set up **Emergency Recipients**; determine **Emergency Actions**; configure **Emergency settings**; and enter/cancel **Emergency Mode**; GEOS Service use/do not use.
- Message Options: Set up the recipient and frequency of your auto GPS location update message.
- Format: Configure the format of GPS location information.
- Current Location: View and update your current GPS location.

## Locating Location Options

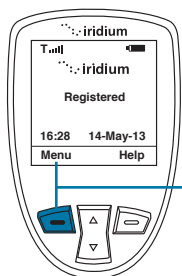


Starting from the **main screen**:

 1. Press the **left soft key**, labeled **Menu**.

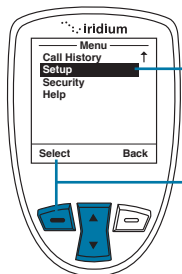


2. The **Main Menu** is displayed. Use the **2-way Navi-key** to scroll until **Setup** is highlighted.

 Press the **left soft key** to select **Setup**.

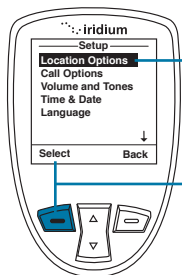


 3. With **Location Options** highlighted press the **left soft key**, labeled **Select** to enter the **Location Options** menu.

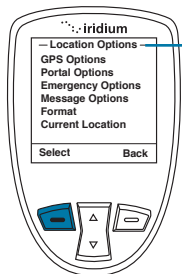

4. Within the **Location Options** menu are **GPS Options**, **Portal Options**, **Emergency Options**, **Message Options**, **Format**, and **Current Location**.


## Using the GPS Options Menu

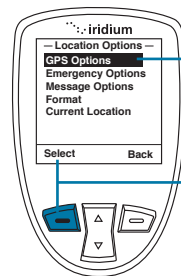 

Use the **GPS Options** menu to configure the basic GPS settings on your handset. Through this menu you can lock GPS settings, set the GPS refresh frequency rate, and turn GPS On or Off.


1. Press the **left soft key**, labeled **Select**

## GPS Settings Lock

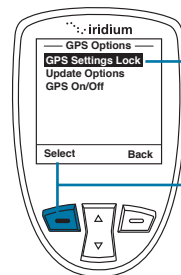 

Within the **GPS Options** menu, enable the **GPS Settings Lock** to prevent modifications to GPS settings unless the **GPS Settings Lock PIN** is entered.

 
1. Press the **left soft key**, labeled **Select**.

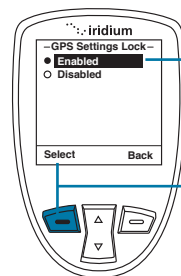

The default setting for **GPS Settings Lock** is **Disabled**. To enable **GPS Settings Lock**, move the **2-way Navi-key** until the **Enabled** option is highlighted

 2. Press the **left soft key**, labeled **Select**.




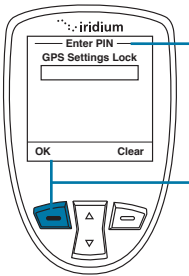

To modify the **GPS Settings Lock**, you will be prompted to enter the **GPS Settings Lock PIN**. The default **GPS Settings Lock PIN** is **3333** and can be modified in the **Security Menu** by navigating to **Change PINs** and then **GPS Settings Lock**. If your phone has been "Reset to defaults" or entered the incorrect PIN multiple times, you may require a GPS PIN unlock code from customer support to restore this capability.


3. Once the default or personalized **GPS Settings Lock PIN** is entered, press the left soft key, labeled **OK**.

### Turning GPS On/Off

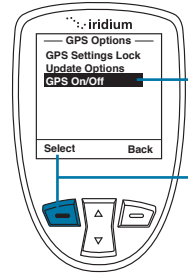 

Within the **GPS Options** menu, the **GPS On/Off** will allow you to turn the built-in GPS receiver on or off in your phone. Features that require GPS on will prompt you to turn GPS on. Use of the programmable SOS button will automatically turn GPS on. To adjust **GPS On/Off**, access the **GPS Options** menu and use the **2-way Navi-key** until the **GPS On/Off** menu is selected.

 1. Press the **left soft key**, labeled **Select**.

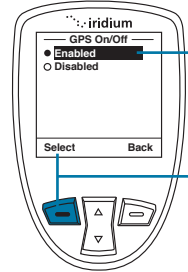

The default setting for **GPS On/Off** is **Disabled**, meaning that GPS is off. It is recommended that GPS is enabled for frequent use of GPS (for example, use with 3rd party online tracking portal) and disabled for infrequent use to conserve battery. To **Enable GPS** and turn it on, use the **2-way Navi-key** until the **Enabled** option is highlighted.

2. Press the **left soft key**, labeled **Select**.


**Note:** the GPS receiver automatically saves your location to your phone when the phone is turned on even if the GPS receiver is off.

### Setting Emergency Options

 The Emergency Options menu items are used to personalize your settings for the programmable SOS button located on the top of your phone. The programmable SOS button gives you the ability to flip open the protective SOS button cover, press the red key located underneath, and initiate a message and/or phone call to your dedicated contacts. These contacts could be a family member, commercial safety service, safety office, or Iridium-supported public emergency number (ex. 911 in U.S. or 000 in Australia).


Iridium has partnered with GEOS Travel Safety Group to provide an emergency response coordination service for your 9575A. Upon power-up of your phone you will be presented with the option of using this service by having the SOS button call and message to a destination automatically programmed for you in the phone through the menus. You will also be prompted to register for service by visiting [www.geosalliance.com/iridium](http://www.geosalliance.com/iridium) to review and accept the terms of use and enter your emergency contact

### GPS Update Options

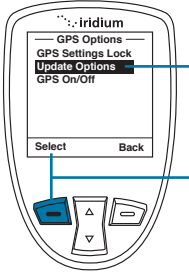

Within the **GPS Options** menu, the **GPS Update Options** will allow you to set how frequently a GPS position is updated for viewing the **Current Location** on the phone screen. To access **Update Options**, use the **2-way Navi-key** to scroll and highlight this feature.

 1. Press the **left soft key**, labeled **Select**.

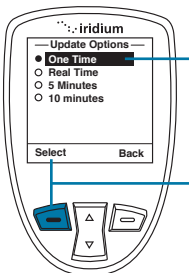

Within the **Update Options** menu, the options are provided to have the GPS location updated **One Time**, **Real Time**, every **5 minutes**, or every **10 minutes**. To modify this setting, use the 2-way Navi-key to scroll and highlight the desired update rate.

2. Press the **left soft key**, labeled **Select**.

information. Registration, programming, and a valid Iridium subscription is required for this service. Additional information on this service can be found on [www.iridium.com](http://www.iridium.com) in the 9575A section by viewing the emergency service section. To view or modify your settings, navigate to Emergency Options and then down to GEOS Service (the last menu option after “Call Recipient”). From this menu option you will have the option to “Use” or “Not Use”. If you select “Use”, you will be prompted to “Please confirm you have registered at [www.geosalliance.com/iridium](http://www.geosalliance.com/iridium)”. You will need to register and then your phone will be pre-programmed to send your location with an emergency message to GEOS and will initiate a phone call to the GEOS response coordination center. Standard airtime charges will apply for emergency mode messages and/or calls to GEOS.


If you select to “Not Use” GEOS, then you will need to program your emergency “Call Recipient” and “Message Recipient” information in order for the SOS button to initiate contact with those dedicated contacts. To view or modify your settings, navigate to Chapter 14: GPS and Location-Based Services under the section “Setting Emergency Options”.

In addition to the peace of mind delivered through the included Emergency Response service, GEOS also offers optional add-on Membership Benefits to enhance your safety and security worldwide including GEOS Search and Rescue (SAR) and GEOS MEDIVAC™ Plus service. The GEOS Emergency Response Service, GEOS Search and Rescue (SAR) Membership and the GEOS MEDIVAC™ Plus are services offered and provided exclusively by GEOS, and not by Iridium which is a separate, unrelated company. Neither GEOS nor Iridium will pay the cost of rescue efforts in the event that the 9575A user fails to register and contract separately with GEOS for SAR and/or GEOS MEDIVAC™. Any issues, terms and conditions and limitations of liability related to your 9575A are outlined in this 9575A User Manual. The use of the GEOS Emergency Response service requires agreement to GEOS’s emergency monitoring terms & conditions, registration with GEOS on [www.geosalliance.com/iridium](http://www.geosalliance.com/iridium), programming of your 9575A, a valid subscription, network service availability, proper orientation and use of the phone, and standard usage fees that will apply.

**Notice:** the operation of the SOS button feature is limited by any conditions affecting the GPS signal strength and GPS service availability.


## ⚠ WARNING

 You must configure the Emergency Mode in order for the SOS button to send an emergency message to a designated Call Recipient and Message Recipient. Failure to configure the SOS button will result in no message being sent when the SOS button is pressed. This could prevent or delay an emergency response and result in serious injury or death.

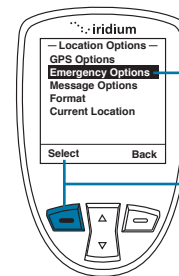


To access **Emergency Options**, access **Location Options** and scroll down with the **2-way Navi-key** until **Emergency Options** is highlighted.

 Press the **left soft key**, labeled **Select**.

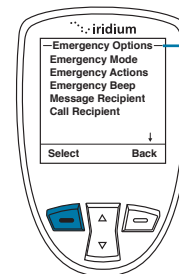

Within the **Emergency Options** menu are **Emergency Mode**, **Emergency Actions**, **Emergency Beep**, **Message Recipient**, **Call Recipient**, and **GEOS Service**.

## Emergency Mode

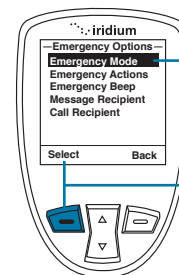 

In the Emergency Options menu, the Emergency Mode allows you to initiate an emergency call and/or message to your programmed contacts. The more direct way to initiate Emergency Mode is to press the red SOS button located on the top of your phone.

If Emergency Mode is active, this menu item can be used to cancel Emergency Mode. When Emergency Mode is activated, the option to cancel Emergency Mode also appears on the main screen.

To initiate **Emergency Mode** from the menu, highlight “**Emergency Mode**” and press the **left soft key**, labeled **Select**.