





ONE PAGE FOLDED, Black and White Copy

|   |   |   |   |  |
|---|---|---|---|--|
| <div>MANUAL (ENGLISH)</div> <div></div> <div><div>(1) Touch/Tab Built-in Control</div><div>(2) LED Indicator</div><div>(3) Charging Case</div></div> <div><div>FUNCTIONS</div><div><div>1. <i>To Turn on:</i> Take out the earbuds from the charging case. The earbuds will turn on automatically or you can press and hold (1) to turn on.</div><div>2. <i>To Turn off:</i> Hold (1) for 5 seconds to disconnect and turn off earbuds.</div><div>3. <i>To Answer/hang up the call:</i> Tap (1) one time.</div><div>4. <i>To play/pause music:</i> Tap (1) one time.</div></div><div>2</div></div> | <div><div>5. <i>Volume adjustments:</i> Press (1) on the left earbud for 2 seconds to increase the volume and press (1) on the right earbud for 2 seconds to decrease the volume. When the volume is increased to the maximum volume, there will be a voice prompt “Volume Maximum” and there should be more than 1 second between continuous volume adjustments.</div><div>6. <i>Forward and Reverse songs:</i> Tap (1) the right earbud 3 times to forward and play next song, tap the left earbud 3 times to reverse the previous song.</div><div>7. <i>Low battery alarm:</i> When the battery is turned on, a beep will sound every 30 seconds when the battery is low.</div><div>8. <i>Low battery shut down:</i> The earbuds will automatically shut down when the battery is completely discharged.</div><div>9. <i>Charging:</i> Put the earbuds into the charging case to charge. The red LED on the earbud turns on when it is charging and off when it is fully charged. When the charging case is charging, the red light on the case will start blinking, when it is fully charged it will stop blinking.</div></div> <div>3</div>  | <div><div>10. <i>Bluetooth® pairing phone connection:</i> When pairing the pair earbuds for the first time, remove the left and right earbuds from the charging case at the same time. If the two earbuds are turned off press and hold for about 3 seconds to turn on. The left and right earbud indicators will flash, letting you know they are pairing together. Then they will alternately flash red and blue, letting you know they are ready for Bluetooth pairing. Go to your phone's Bluetooth® settings and select "Elite". If the connection is successful the light will turn off.</div></div> <div><div>Package Contents:</div><div>True Wireless Earbuds w/ Ear Cushions</div><div>Charging Case</div><div>Type-C Charging Cable</div><div>Instruction Manual</div></div> <div><div>(1) Read all the instructions before using the product. b) To reduce the risk of injury, close supervision is necessary when the product is used near children.</div><div>(2) Do not put fingers or hands into the product. d) Do not expose power bank to rain or snow.</div><div>(3) Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.</div><div>(4) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.</div><div>(5) Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.</div><div>(6) Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the temperature of 212°F.</div></div> <div>4</div> | <div><div>ONE YEAR WARRANTY</div><div>Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.</div><div>We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.</div><div><i>*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.</i></div><div><b>Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.</b></div><div><b>For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com</b></div></div> <div><div>Specifications</div><div>Earbud battery: 40 mAh x 2</div><div>Charging case battery: 300 MAH</div><div>Standby time: 150H</div><div>Charge time for case: 2 hours</div><div>Charge time for earbuds: 1 hour</div><div>Earbud operating time: 3 hours</div><div>Number of charges from case: 3</div></div> <div>5</div>  | <div><div></div><div><div>TWS</div><div>SERIES</div></div><div>855-999-8041   www.xtremecables.com</div></div> |
| <div><div></div><div><div>TWS</div><div>SERIES</div></div><div>855-999-8041   www.xtremecables.com</div></div>   | <div><div>GARANTIE UN AN</div><div><div>Xtreme garantit ses produits pour une année contre les défauts de fabrication sous l'usage régulier du consommateur avec la réception originale de l'achat au détail.</div><div>Nous croyons en nos produits et nous voulons vous fournir un remplacement, si nécessaire, mais nous devons connaître le problème alors que le produit est encore sous garantie. Si vous découvrez un défaut couvert par cette garantie, contactez-nous pour recevoir un remplacement. Pour utiliser la garantie des produits, le client doit fournir la preuve du reçu des détaillants.</div><div><i>* Tous les clients situés en dehors des États-Unis seront responsables des frais d'expédition et de maintenance si un remplacement est nécessaire et n'est pas dû à un défaut de fabrication. Si il n'y a pas de défaut de fabrication, les frais d'expédition et de maintenance seront appliqués.</i></div><div>La garantie de Xtreme est limitée à nos produits uniquement. Notre garantie ne couvre pas le coût de remplacement ou de réparation d'un accessoire tiers, d'un appareil électronique ou d'un bien personnel.</div><div>Pour obtenir des instructions sur la façon d'obtenir un service de garantie pour votre produit, veuillez contacter le service à la clientèle au customerservice@xtremecables.com</div><div>Caractéristiques</div><div>Batterie pour écouteurs: 40 mAh x 2</div><div>Batterie du boîtier de charge: 300 MAH</div><div>Temps d'attente: 150H</div><div>Temps de charge pour le boîtier: 2 heures</div><div>Temps de charge des écouteurs: 1 heure</div><div>Durée de fonctionnement des écouteurs: 3 heures</div><div>Nombre d'accusations par caisse: 3</div></div><div>5</div></div> | <div><div>Contenu du colis:</div><div>Véritables écouteurs Sans Fil avec Coussins D'oreille</div><div>Étui de Chargement</div><div>Câble De Charge de Type-C</div><div>Manuel D'instructions</div></div> <div>4</div>   | <div><div>LES FONCTIONS</div><div><div>1. <i>Pour allumer:</i> Retirez les écouteurs de l'étui de chargement. Les écouteurs s'allumeront automatiquement ou vous pouvez appuyer et maintenir (1) pour allumer.</div><div>2. <i>Pour éteindre:</i> Maintenez (1) pendant 5 secondes pour déconnecter et éteindre les écouteurs.</div><div>3. <i>Pour répondre / raccrocher l'appel:</i> Appuyez une fois sur (1)</div><div>4. <i>Pour lire / mettre en pause la musique:</i> Appuyez une fois sur (1).</div></div><div><div>5. <i>Régler le volume:</i> appuyez sur (1) sur l'écouteur gauche pendant 2 secondes pour augmenter le volume et appuyez sur (1) sur l'écouteur droit pendant 2 secondes pour diminuer le volume. Lorsque le volume est augmenté au volume maximum, il y aura une invite vocale «Volume Maximum» et il devra y avoir plus d'une seconde entre les réglages de volume continus.</div><div>6. <i>Chanson haut et bas:</i> Appuyez 3 fois sur l'écouteur droit (1) pour avancer et lire la chanson suivante, appuyez sur l'écouteur gauche 3 fois pour inverser la chanson précédente.</div><div>7. <i>Alarme de batterie faible:</i> Lorsque la batterie est allumée, un bip retentit toutes les 30 secondes lorsque la batterie est faible.</div><div>8. <i>Arrêt de la batterie faible:</i> Les écouteurs s'éteignent automatiquement lorsque la batterie est épuisée.</div><div>9. <i>Chargement:</i> Placez les écouteurs dans l'étui de chargement pour les charger. Le voyant rouge de l'écouteur s'allume lorsqu'il est en charge et s'éteint lorsqu'il est complètement chargé. Lorsque le boîtier de charge est en cours de charge, le voyant rouge du boîtier commencera à clignoter, lorsqu'il sera complètement chargé, il cessera de clignoter.</div></div><div>3</div></div> | <div><div>MANUAL (FRANÇAIS)</div><div></div></div>  |

## **FCC ID:2AHAS-XBE90128**

### **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.