

DE

EN

CS

FR

IT

JA

PL

RU

TW

ES

CN



**Audi**  
Entertainment mobile

# Quick Start Guide

## Rear seat entertainment

This quick start guide explains the operating elements and the most important functions of your Audi Entertainment mobile. You can obtain more detailed information by calling up the integrated online help screens.

Read and observe the enclosed safety instructions in all cases to ensure that the device can be used in a safe manner.


## Overview of functions

- Playback of films, music and images
- Saving and using applications and playing games
- Intuitive touchscreen user interface
- Wireless network connection via Wi-Fi
- Headset connection via Bluetooth
- Many different connecting options
- DLNA integration, amongst others

## Switching on and operating the device

1. Press the On / Off button on the front of the device.
2. After switching on for the first time, select the country-specific settings matching your requirements.
3. Briefly tap on the symbols of the screen in order to open the separate areas.
4. Use the navigation buttons at the bottom bar in order to jump between the pages or to return to the start screen.
5. Press the On / Off button on the front of the device again to switch off.

## Operating elements and connections

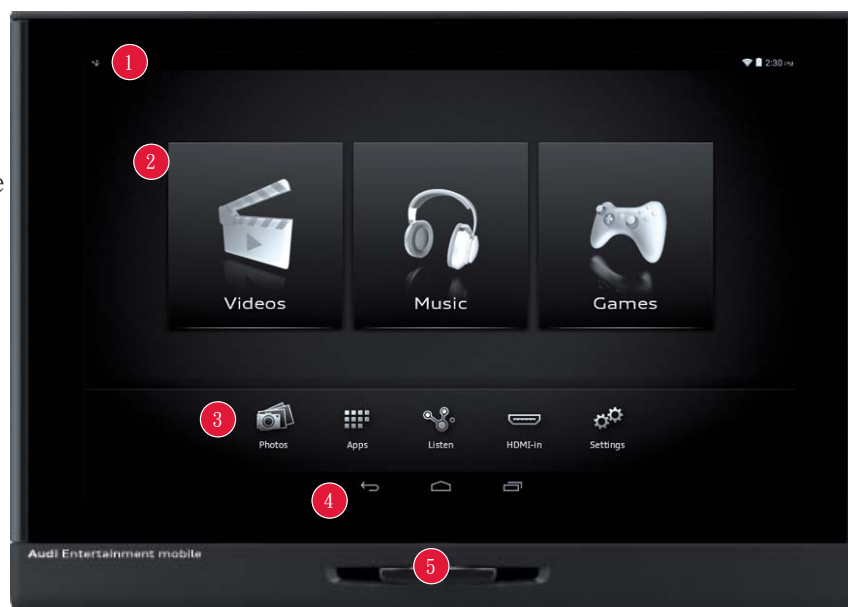

### Front side / start screen

- 1 Information bar
- 2 Buttons for calling up the areas Videos, Music, Games
- 3 Buttons for calling up the areas Photos, Apps, Listen, HDMI-IN, Settings
- 4 Navigation buttons
  - ↶ Go back one step / screen
  - 🏠 To start screen
  - ☰ Call up the task view
- 5 On/Off button
- 6 Ambient Light

### Left side

- A Slot for SD memory cards
- B HDMI output
- C HDMI input

 


### Right side

- D Button for volume control
- E USB socket
- F Micro USB socket for connecting to a computer and for charging
- G Headset connection

## Network connection

For the integration onto a wireless network, select Settings - Device settings - Wi-Fi or call up the quick access menu of the right screen side.

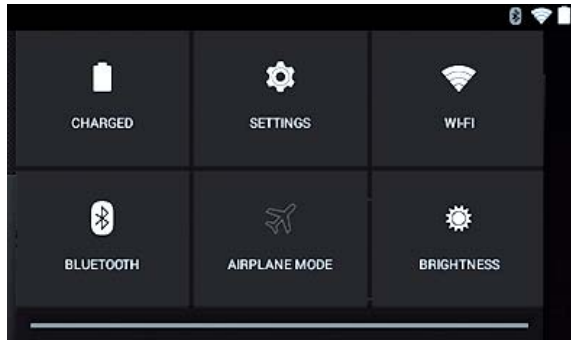

If necessary, activate the Wi-Fi and enter your access data. After establishing the connection, you are able to share films, photos, etc. with other Audi Entertainment mobile devices as well as devices that support the DLNA standard. You can find out more about this in the integrated help.


## Audi "RSE remote" App



In order for the Audi Entertainment mobile to be able to receive contents that are sent from another device logged into the network (mode Listen) the application "RSE remote" must be installed on the device sending (e.g., Apple iPhone or Android Smartphone).

This application can be found in the Google App Store or Apple Store.

## Layout of the user interface

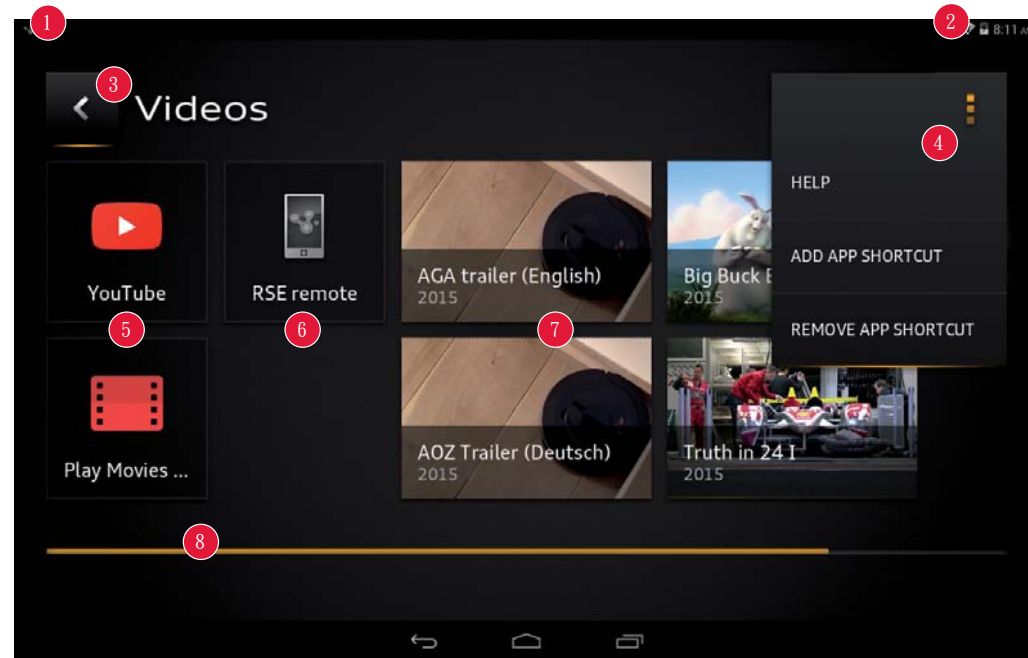

### Information bar and quick access menus

The info bar at the top edge of the screen contains:

- 1 Left corner: messages for current events, symbols for the current mode and data carriers connected
- 2 Right corner: status symbols for Bluetooth, Wi-Fi, charge level, current time

In both corners, by tapping on and lightly pulling down, a quick access menu can be opened for the messages and modes or different settings.

The functions for playback of films, music and photos are explained in the online help.

 
### Main elements of the screen

- 3 Title of the current page, tapping on the arrow (or cross) changes to the previous screen
- 4 Calling up the area-specific menu, each with the online help
- 5 Symbols of the applications available (pre-installed or added later)
- 6 Symbols of other devices that a connection can be made to for sharing contents (via DLNA)
- 7 Symbols of the available contents: videos, photos, music title or folders, albums, etc.
- 8 Scroll bar (for scrolling on the side)

## Contents of external data carriers

Connect an external data carrier (SD card, USB stick) to the Audi Entertainment mobile, the films, music files and photos stored on the device are displayed and played back but are not copied to the Audi Entertainment mobile. These contents disappear again when the data carrier is removed.

If you want to avoid this, you can permanently copy the contents to the Audi Entertainment mobile using a USB connection or with a computer via a USB cable. For this purpose, use the options of the USB connection from the quick access menu from the top left corner:

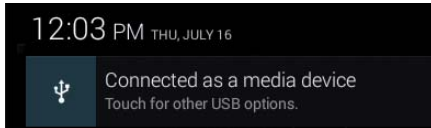

Tap on the entry and select USB connection or Media device. Then you can copy your contents into the respective folder of the Audi Entertainment mobile via a file explorer.

## Charging the rechargeable battery

The rechargeable battery of the Audi Entertainment mobile is charged:

- if the device is located in the holder of the vehicle seat and the engine is running,
- in conjunction with the device with a computer switched on via a USB cable (Micro USB socket),
- using an appropriate power pack.

## Using in the vehicle



**DANGER!**

Use the device in the vehicle only in the holder intended for this purpose. The device may only be installed and operated in such vehicles so that the driver cannot be distracted.

When removing the Audi Entertainment mobile from the holder when traveling or when the engine is running, a warning message appears on the screen.

### ATTENTION!

Children in the passenger compartment in rearboard position: Remove the Audi Entertainment mobile as well as the corresponding holder from the backrest of the front seat. Risk of injury.



## Information on Troubleshooting

The device cannot be switched on  
Rechargeable battery is empty - Using the adjacent options specified, charge the rechargeable battery and switch on again.

No volume

The volume is at 0 - Increase the volume.  
Parallel use of two devices - In this mode, only the device receiving determines the volume.  
Playing back has been interrupted - Continue playback or restart.

Films / photos / music files / applications are not displayed as expected  
The file format is not supported - The playback formats are specified in the online help.  
The data carrier cannot be read - Check correct connection and read again.  
Symbols have been deleted - Add the symbol (e.g., an App) back to the desired area.

For questions arising, consult the online help or contact your dealer or local Audi Partner in case you cannot find a solution.

Changes with regard to technical development are reserved.

The illustrations and screen settings used in this instruction may deviate from actual version of the device.

This document is protected by copyright.

Any use and distribution, even excerpts is forbidden without the permission of the owner.

© Made by JET Optoelectronics for Audi Genuine Accessories, Version August 2015

# Rear seat entertainment

## Safety instructions

Before using the Audi Entertainment mobile for the first time, please inform yourself about the features and the operation of the device. Carefully read and follow the safety instructions below. Ignoring the safety instructions will lead to the loss of all warranty claims and there may be a risk of injury or damage being caused to the device!




### DANGER!

Use the device in the vehicle only in the holder intended for this purpose. The device may only be installed and operated in such vehicles so that the driver cannot be distracted. When removing the Audi Entertainment mobile from the holder when traveling or when the engine is running, a warning message appears on the screen.

### ATTENTION!

Children in the passenger compartment in reboard position: Remove the Audi Entertainment mobile as well as the corresponding holder from the backrest of the front seat. Risk of injury!

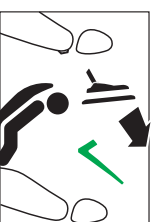

Select moderate volume: Using the ear pieces when the volume is too loud may lead to hearing impairment.

Never open the housing!

In event of malfunction or damage, contact your Audi Partner for the necessary repairs.

Protect the device against moisture!

Use a soft dry cloth to clean the surface of the housing. Do not use chemicals.

Do not drop the device and avoid strong vibrations. Never expose the device to extreme heat or cold conditions as well as to direct sunlight. Protect the device against overheating.

Do not remove the USB cable or data carrier during a running data transfer. Connect the device from a connected computer only in a safe manner. Otherwise the loss of data and malfunctions may occur.


In event of stormy weather or if not used for a longer period, remove all connecting cables from the device.

### ATTENTION!

For charging the rechargeable batteries use the intended options (mounted in the vehicle or via the connection with a computer switched on via USB cable (Micro USB socket)).

If you want to charge the Audi Entertainment mobile via a separate power pack, make sure that this has the matching charging parameters (see technical specifications overleaf).

Do not dispose a defective device (installed rechargeable battery) as domestic waste. Return it to your Audi Partner or return it to a collecting point for electrical waste. These ensure for an environmentally compatible disposal.

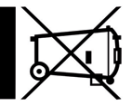

**Audi**  
Entertainment mobile

# Technical specifications

**Chip:** MT8127 with 1.5 GHz  
**Internal memory:** 16 GB  
**Display:** 10.1", aspect ration 16:10, resolution 1280 x 800 pixels  
**Dimensions:** 272 mm x 193 mm  
**Power supply:** DC 12 V/1.5 A  
**Storage temperature:** -30 °C ... 60 °C (-22 °F ... 140 °F)  
**Operating temperature:** 0 °C ... 50 °C (32 °F ... 122 °F)  
**Supports** WiFi 802.11 b/g/n only in the 2.4 GHz band, Bluetooth AVRCP and A2DP profile, Miracast and UPnP-AV-Server/DLNA via adapted applications.

## Scope of delivery


- Audi Entertainment mobile
- Carry bag
- Stereo headphones
- Quick Start Guide and safety information (11 languages)
- USB to Micro-USB cable

## Other certificates and licenses

Aprobado CNC-XX-XXXX



N ###

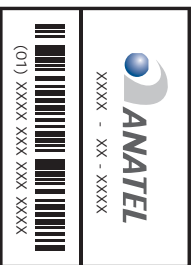

IC: XXXX-XXXX

CMIT ID: XXXXXXXXX

CE XXXX



FCC ID: XXXX-XXXX

MT8127 with 1.5 GHz

16 GB

10.1", aspect ration 16:10, resolution 1280 x 800 pixels

272 mm x 193 mm

DC 12 V/1.5 A

-30 °C ... 60 °C (-22 °F ... 140 °F)

0 °C ... 50 °C (32 °F ... 122 °F)

Supports WiFi 802.11 b/g/n only in the 2.4 GHz band, Bluetooth AVRCP and A2DP profile, Miracast and UPnP-AV-Server/DLNA via adapted applications.

## Scope of delivery


- Audi Entertainment mobile
- Carry bag
- Stereo headphones
- Quick Start Guide and safety information (11 languages)
- USB to Micro-USB cable

## Other certificates and licenses

Aprobado CNC-XX-XXXX



N ###

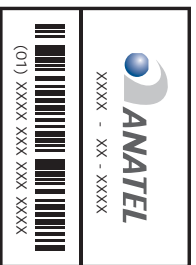




IC: XXXX-XXXX

CMIT ID: XXXXXXXXX

CE XXXX



   FCC ID: XXXX-XXXX

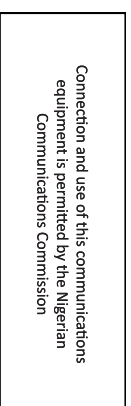

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Radiation Exposure Statement:  
 This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Ce dispositif répond aux limites de la FCC sur l'exposition aux rayonnements établies pour un environnement non-contrôlé. Les utilisateurs finaux doivent suivre les instructions de fonctionnement spécifiques pour satisfaire aux normes d'exposition aux RF. Cet émetteur ne doit pas être installé ou utilisé en conjonction avec d'autres antennes ou autres émetteurs.