

TURNING ON

BASE OF TOY

REMOTE

Press power button for 2 seconds. The toy will vibrate twice. PleX is now in standby mode.

To Start Motors

Option 1 - short press *Treble* or *Bass* button on toy.

Option 2 - hold *Treble* or *Bass* button on remote for 2 seconds.

Press (+) and (-) buttons on toy or remote to adjust intensity.

1

2

3

4

5

Short press *power* button on side of the toy to cycle through patterns.

Charge for 4 hours before first use.

BASE OF TOY

REMOTE

Returning To Standby Mode

Option 1 - short press *Treble* or *Bass* button on toy.

Option 2 - hold *Treble* or *Bass* button on remote for 2 seconds.

TURNING OFF

Press power button for 2 seconds to switch off.

PleX is water proof; remote is NOT.

Hot Octopuss products are covered by various global IP rights including copyright, patent applications, patents and registered designs.

Made from skin-safe Silicone. Does not contain phthalates or latex. Use with water based lubricants only. Sold as an adult novelty. Discontinue use if irritation or discomfort occurs. To avoid injury or aggravating pre-existing skin conditions, do not use on swollen or inflamed areas, or lacerated skin. No medical claims are warranted or implied by the use of this product.

Designed by Hot Octopuss, London in Great Britain, assembled in China.

HOT OCTOPUSS LTD.
Parklands Business Park, Forest Rd, Denmead, PO7 6XP, UK

HOT OCTOPUSS EU:
5237 HD Den Bosch, NL

HOT OCTOPUSS USA:
3443 Edwards Avenue, Santa Clara, CA 95054, USA

WATCH INSTRUCTION VIDEO

Scan QR code

Or visit
www.HO.tips/vid12