

Troubleshooting Guide

If the Camera and/or Monitor...	You should...
No Power□	<ol style="list-style-type: none"> 1. Check that the power cord(s) is properly connected. 2. Check that the monitor is turned ON. 3. Wrong AC/DC adapter used. Check that the adapter labeled OUTPUT: 10V DC is connected to the camera, and adapter labeled OUTPUT: 5V DC is connected to the monitor.
No sound or picture. Distorted sound or picture	<ol style="list-style-type: none"> 1. Check the channel switch settings on the camera(s) and monitor. Make sure the channels match on both units. 2. Signal interference from a microwave oven. Check if a micro-wave oven is in use or located in the path between the camera and monitor. If so, turn it off or move it out of the path. 3. Signal interference from other signal producing devices. <ol style="list-style-type: none"> (a) Change the channel setting on both camera and monitor. (b) Identify and eliminate the source of the interference. (c) Relocate the camera and/or monitor closer to each other. 4. Camera and monitor are too far apart. Relocate the camera and/or monitor 5. Antenna is positioned improperly. Adjust the antenna on the camera and/or monitor.

1 Year Limited Warranty:

JSW Pacific Corp., the maker of **Navigator**® brand products, warrants that for a period of 1 year from the date of purchase, this product will be free from defects in material and workmanship. JSW, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. This warranty is valid for the original purchaser from the date of initial purchase with JSW and is not transferable. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JSW or an authorized service center. Further, the warranty does not cover acts of God, such as fire, flood, hurricanes and tornadoes or any batteries that are included with this unit. JSW shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty.

Model No.: CCD-625
2.4 GHz Wireless Color 2.5" TFT Monitoring System

Contents

Important Safety Precautions	1
Specifications	2
Parts Included with This System	3
Parts of the Wireless Monitoring System	3
- Parts of the Camera	3
- Parts of the Monitor	3
Installation	4
- Installing the Mounting Bracket (Camera Stand)	4
- Installing and Aligning the Camera on the Mounting Bracket (Camera Stand)	4
- Installing or Replacing Batteries in the Camera	4
- Installing the Wireless Monitoring System	5
Rotating the Antenna for Best Performance	6
Monitor to A/V Function	6
Troubleshooting Guide	7
Warranty	7