

# IQ RECEIVER

## IQ-2008

### INSTRUCTIONAL MANUAL



LEE TECHNOLOGY KOREA CO., LTD.

## INSTRUCTION for IQ Pager



**※ When the pager is removed from the charger base, it will be vibrating and flashing for 5 or 10 seconds.**

### **Programming the Alert Mode**

#### **A) Capcode 1 (Group Message)**

<b>Message</b>	<b>Alert Description</b>	<b>Alert Time &amp; Remark</b>
<b>9292</b>	Vibrating Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
<b>9393</b>	Out of Range "OFF"	
<b>9494</b>	Out of Range "ON" (Melody & Voice)	The pager will melody, when it is out of range.
<b>9595</b>	Beeping, Flashing and Voicing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
<b>9696</b>	Vibrating and Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
<b>9797</b>	Flashing Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
<b>9898</b>	Beeping, Vibrating, Flashing, Voicing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
<b>99</b>	Sleep Mode	
<b>8281</b>	Beeping once and Vibrating	Alert Time : 5 Sec (when the pager is removed from the charger base)
<b>8282</b>	Beeping once and Vibrating	Alert Time : 10 Sec (when the pager is removed from the charger base)
<b>8381</b>	Volume 1 (LOW)	Speaker Volume Range Setting
<b>8382</b>	Volume 2 (MID)	Speaker Volume Range Setting
<b>8383</b>	Volume 3 (HIGH)	Speaker Volume Range Setting

<b>8882</b>	Beeping once and Vibrating	Beeping & Flashing for 3 min (when it receives the Group Call)
<b>8883</b>	Beeping once and Vibrating	The last message will be activated (when it receives the Group Call)
<b>9090</b>	Beeping once and Vibrating	Alert Time : 8 sec
<b>9091</b>	Beeping once and Vibrating	Alert Time : 15 sec
<b>9092</b>	Beeping once and Vibrating	Alert Time : 30 sec
<b>9093</b>	Beeping once and Vibrating	Alert Time : 60 sec
<b>9094</b>	Beeping once and Vibrating	Alert Time : 120 sec
<b>9095</b>	Beeping once and Vibrating	Alert Time : 180 sec
<b>9099</b>	Beeping once and Vibrating	Alerting continuously

#### B) Capcode 2 (Individual Message)

Message	Alert Description	Alert Time & Remark
No Message	The last message will be activated	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue

#### C) Capcode 4 (Group Call)

Message	Alert Description	Alert Time & Remark
No Message	Melody (Voice) and all LED will be activated (8882)  The last message will be activated (8883)	8882 (10 min)  8883 (8, 15, 30, 60, 120, 180 sec, Continue)
9*7*8(Base Id)	This function changes the Base Id, when the pager is in the charger base	Ex) Base Id: 070, 9*7*8070

- ※ When the "Out of Range" is activated, display will show "---" with a melody.
- ※ When the pager receives the individual message (CAP2), the pager number flashes.
- ※ When the pager receives the group message (CAP4), display will show the pager number continuously.
- ※ When the pager is in the charger base, display will show the pager number continuously.
- ※ When the batter needs to be charged, display will show "LO".