



Thank you very much for purchasing our television; model AV-32S776, AV-32S766, AV-30W776 or AV-27S776. There has been a misprint in your television instruction book on page 42. Please refer to this sheet for the correct information.

Tilt Correction

This adjusts the pictures so that it looks even on the screen and not lopsided.



Press the MENU button



To TILT CORRECTION



 
To enter



To adjust TILT CORRECTION



Press the MENU button when finished

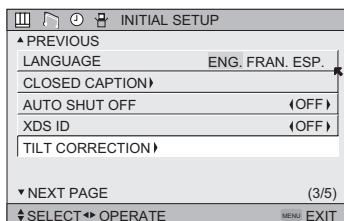

Note:

- TILT CORRECTION is for AV-30W776 ONLY.

Merci d'avoir acheté notre téléviseur, modèle AV-32S776, AV-32S766, AV-30W776 ou AV-27S776. Il y a eu une erreur d'impression dans le manuel d'instructions de votre téléviseur à la page 42. Veuillez vous reporter à la présente feuille qui contient les informations correctes.

Rotation

Cette fonction ajuste les images de manière à ce qu'elles aient l'air égal à l'écran et non de travers.



Appuyez sur le bouton MENU



Vers ROTATION



 
Pour accéder



Pour ajuster la ROTATION



Appuyez sur le bouton MENU lorsque vous avez terminé

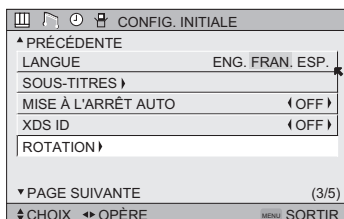

Remarque :

- ROTATION s'applique UNIQUEMENT au modèle AV-30W776.