

SOFTWARE INSTALLATION AND USB CONNECTION GUIDE

LYT1070-001B

COPYRIGHT © 2002 VICTOR COMPANY OF JAPAN, LTD.

M3D1US DSC



Printed in Japan
1102-HO-ID-VP

JVC SOFTWARE LICENSE AGREEMENT

IMPORTANT

TO CUSTOMERS:

**PLEASE MAKE SURE TO READ THIS CAREFULLY BEFORE INSTALLING
OR USING THE SOFTWARE PROGRAM NAMED "DIGITAL PHOTO
NAVIGATOR" ("Program") ON YOUR PC.**

The right to use the Program is granted by Victor Company of Japan, Limited ("JVC") to You only on the condition that You agree to the following.

Should You not agree to the terms hereof, You may not install or use the Program. HOWEVER, INSTALLING OR USING THE PROGRAM INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS.

1 COPYRIGHT; OWNERSHIP

You acknowledge that all copyrights and other intellectual property rights in the Program are owned by JVC and its licensor, and remain vested in JVC and such licensor. The Program is protected under the copyright law of Japan and other countries, and related Conventions.

2 GRANT OF LICENSE

- (1) Subject to the conditions of this Agreement, JVC grants to You a non-exclusive right to use the Program. You may install and use the Program on a HDD or other storage devices incorporated in Your PC.
- (2) You may make one (1) copy of the Program solely for your personal backup or archival purposes.

3 RESTRICTION ON THE PROGRAM

- (1) You may not reverse engineer, decompile, disassemble, revise or modify the Program, except to the extent that expressly permitted by applicable law.
- (2) You may not copy or use the Program, in whole or in part, other than as expressly specified in this Agreement.
- (3) You have no right to grant a license to use the Program, and may not distribute, rent, lease or transfer the Program to any third party or otherwise let them use the Program.

4 LIMITED WARRANTY

JVC warrants that any media in which the Program is embodied are free from any defects in materials and workmanship for a period of thirty (30) days from the date of Your purchasing any our products accompanying the Program. JVC's entire liability and your exclusive remedy in connection with the Program shall be replacement of such defective media. EXCEPT FOR THE EXPRESS WARRANTIES STATED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, JVC AND ITS LICENSORS DISCLAIM ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN REGARD TO THE PROGRAM AND THE ACCOMPANYING PRINTED MATERIALS. SHOULD THERE BE ANY PROBLEM ARISING FROM OR CAUSED BY THE PROGRAM, YOU SHOULD SETTLE ALL SUCH PROBLEM AT YOUR OWN COST AND EXPENSE.

5 LIMITED LIABILITY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL JVC AND ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT OR OTHERWISE ARISING OUT OF OR IN CONNECTION WITH THE USE OF OR INABILITY TO USE THE PROGRAM, EVEN IF JVC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. YOU WILL INDEMNIFY AND HOLD HARMLESS JVC FROM ANY LOSS, LIABILITY OR COST ARISING OUT OF OR IN ANY WAY CONNECTED TO CLAIMS FROM ANY THIRD PARTY RELATING TO THE USE OF THE PROGRAM.

6 TERM

This Agreement will become effective on the date when You install and use the Program on Your machine, and continue to be in effect until the termination under the following provision.

Should You breach any provision of this Agreement, JVC may terminate this Agreement without giving any notice to You. In this event, JVC may claim against You for any damages caused by Your breach. Should this Agreement be terminated, You must immediately destroy the Program stored in Your machine (including the erasing from any memory in Your PC), and no longer own such Program.

7 EXPORT CONTROL

You agree that You will not ship, transfer or export the Program or underlying information and technology to any countries to which Japan and other relevant countries have initiated an embargo on such goods.

8 U.S. GOVERNMENT USER

If You are an agency of the United States of America (the "Government"), You acknowledge JVC's representation that the Program is a "Commercial Item" as defined in Federal Acquisition Regulation (FAR) part 2.101 (g) consisting unpublished "Commercial Computer Software" as those items are used at FAR part 12.212 and is only licensed to You with the same use rights JVC grants all commercial end users pursuant to the terms of this Agreement.

9 GENERAL

- (1) No modification, change, addition, deletion or other alternation of or to this Agreement will be valid unless reduced to writing and signed by an authorized representative of JVC.
- (2) If any part of this Agreement is held invalid by or in conflict with any law having jurisdiction over this Agreement, the remaining provisions will remain in full force and effect.
- (3) This Agreement shall be governed by and interpreted under the laws of Japan. The Tokyo District Court has jurisdiction over all disputes which may arise with respect to the execution, interpretation and performance of this Agreement.

Victor Company of Japan, Limited

Note:

If You acquired the Program in Germany, the provisions of Sections 4 (Limited Warranty) and 5 (Limited Liability) provided above will be replaced with those of the German version of this Agreement.

CAUTION:

- Operate this equipment according to the operating procedures described in this manual.
- Use only the provided CD-ROM. Never use any other CD-ROM to run this software.
- Do not attempt to modify this software.
- Changes or modifications not approved by JVC could void user's authority to operate the equipment.

How to handle a CD-ROM

- Take care not to soil or scratch the mirror surface (opposite to the printed surface). Do not write anything or put a sticker on either the front or back surface. If the CD-ROM gets dirty, gently wipe it with a soft cloth outward from the center hole using a circular motion.
- Do not use conventional disc cleaners or cleaning spray.
- Do not bend the CD-ROM or touch its mirror surface.
- Do not store your CD-ROM in a dusty, hot or humid environment. Keep it away from direct sunlight.

- You can find the latest information (in English) on the provided software program at our world wide web server at <http://www.jvc-victor.co.jp/english/index-e.html>

- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Computer, Inc.

- Other product and company names included in this instruction manual are trademarks and/or registered trademarks of their respective holders.

Operating Environment

A camcorder can be connected to a PC that satisfies the following requirements.

Windows®

- OS** : Windows® 98 (pre-installed),
Windows® 98 Second Edition (98SE) (pre-installed),
Windows® Millennium Edition (Me) (pre-installed),
Windows® 2000 Professional (2000) (pre-installed),
Windows® XP Home Edition (XP) (pre-installed),
or Windows® XP Professional (XP) (pre-installed)
(Operation is not guaranteed on a PC that has been upgraded.)
- CPU** : Intel MMX® Pentium®, at least 200 MHz
- RAM** : At least 64 MB recommended
- Free hard disk space** : At least 10 MB for installation, at least 500 MB recommended
- Connector** : USB connector

Macintosh

- Hardware** : iMac, iBook, eMac, Power MacintoshG3, Power MacG4, Power BookG3 or G4
- OS** : Mac OS 9.0.4 to 9.2.2 (exclude Mac OS X and Mac OS X [Classic])
- Connector** : USB connector

- The system requirements information above is not a guarantee that the provided software will work on all personal computers meeting those requirements.
- If your PC does not meet the system requirements above, you can use the optional USB reader/writer CU-VUSD70, the PC card adapter CU-VP60 or the floppy disk adapter CU-VFSD50 to load the files in the memory card to the hard disk on your PC.
(Refer to “JVC Accessories” on our world web site at: <http://www.jvc-victor.co.jp/english/accessory/>)

Notice for Users

Use of this software is authorized according to the terms of the software license.
When contacting the nearest JVC office or agency in your country about this software (refer to the JVC Worldwide Service Network at <http://www.jvc-victor.co.jp/english/worldmap/index-e.html>), please fill out the following and have the appropriate information ready.

Product Name		
Model		
Problem		
Error Message		
PC	Manufacturer	
	Model	<input type="checkbox"/> Desktop <input type="checkbox"/> Laptop
	CPU	
	OS	
	Memory	MB
	Available Hard Disk Space	MB

JVC cannot answer questions regarding basic operation of your PC, or questions regarding specifications or performance of the OS, other applications or drivers.

Software Installation (Windows®)

Follow the procedure described below to install the software.

Quit any other software you are using. (Check that there are no other application icons on the task bar.)

1 Load the provided CD-ROM in the PC.

After a moment, the [Important Notice] screen appears.

- If the [Important Notice] screen does not appear, double-click [My Computer] and then double-click the CD-ROM icon.

Confirm the contents and then click [Next].

After a moment, the [Setup] screen appears.

From the [Setup] screen, you can install the following softwares.

USB Mass Storage Class driver

This driver allows your PC to read and write memory cards in the camcorder.

Windows® Me/2000/XP:

Since there is no need to install this driver, the item is not displayed. Simply connect the camcorder to the PC with a USB cable, and you can read and write memory cards in the camcorder.

Windows® 98/98SE:

Be sure NOT to connect the USB cable between the camcorder and the PC before installing the driver.

Digital Photo Navigator 1.0

This application is used to load still images to photo album and convert them into a variety of formats.

NewSoft Presto! Mr.Photo3/ImageFolio

This application is used to store and catalogue images or create electronic album. You can also process images in detail on PC.

 
Adobe® Acrobat® Reader 5.0

This application is used to read PDF files.

2 Click [Install] on the right side of the desired software and follow the on screen instructions to complete the installation.

The following is the example of Digital Photo Navigator on Windows® 98SE.

[License Agreement] screen appears.

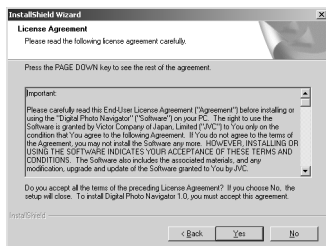

Click [Yes].

 
The following is the example of USB Mass Storage Class driver on Windows® 98SE.

[Installation Folder] screen appears.




Click [Finish].


Then, [Choose Destination Location] screen appears.

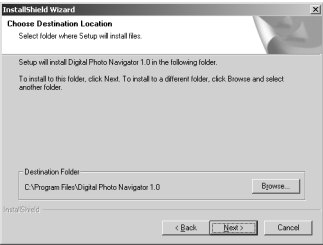

 
Click [Next].
Next, [Select Program Folder] screen appears.

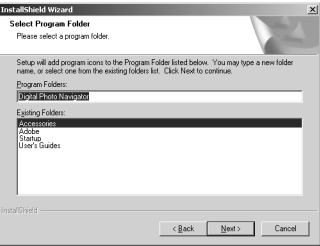

 Click [Next].
[Setup Status] screen appears. Wait for a moment until the installation is finished.

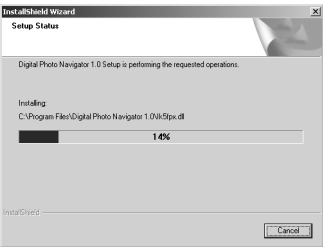


 When the installation is finished, [Digital Photo Navigator Setup] screen appears and asks you if you want to create the icon on the desktop.




If you need it, click [Yes]. If not, click [No].

 Then, [InstallShield Wizard] screen appears.

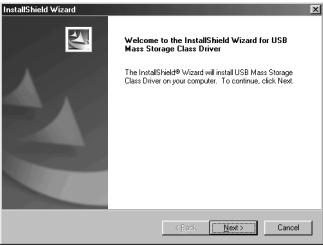

 Click [Next].
When the installation is finished, [InstallShield Wizard Complete] screen appears.

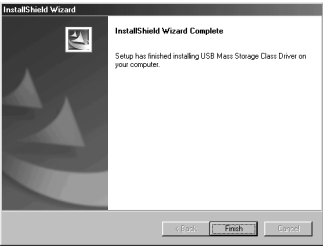

Click [Finish] and then [Setup] screen re-appears.

- 3** When the message asking whether it is OK to restart the PC appears, click [Yes].
The PC restarts, and after a moment the [Setup] screen from step 1 appears.
- 4** Repeat steps 2 and 3 to install all of the desired software.

NOTES:

- The Digital Photo Navigator instruction manual is also included on the CD-ROM in PDF format. Double-click the [JVC] folder and then double-click the [Docs] folder. Open the "Start.pdf" file and click the button of the desired language. Note that Adobe® Acrobat® Reader must be installed to read PDF files.
- If you perform installation of a software that is already installed, uninstallation will start. In this case, perform the installation again after uninstallation is finished.

Updating [Device Manager] (Windows® 98/98SE only)

If the camcorder is connected to the PC with the USB cable when installing [USB Mass Storage Class driver], the installation is not performed properly.

In this case, follow the procedure described below to update the [Device Manager] and install [USB Mass Storage Class driver] properly.

 
NOTE:

Disconnect any other USB audio devices from PC before performing the following procedure.

- 1** Use the USB cable to connect the camcorder to the PC. (☞ “Connections (Windows®/Macintosh)”)
- 2** Select [Start] – [Settings] – [Control Panel]. Double click the [System] icon.
- 3** Select the [Device Manager] tab.
- 4** Delete [GR-D91*] in [Other devices].
* The model name depends on the connected camcorder.
- 5** Disconnect the USB cable from the camcorder. Restart the PC.
- 6** Load the provided CD-ROM in the PC. Install [USB Mass Storage Class driver]. (☞ pg. 4)
- 7** Use the USB cable to connect the camcorder to the PC.
Device driver is installed.
- 8** Confirm the [Removable Disk] icon is displayed in [My Computer].

Connections (Windows®/Macintosh)

Connecting the USB cable

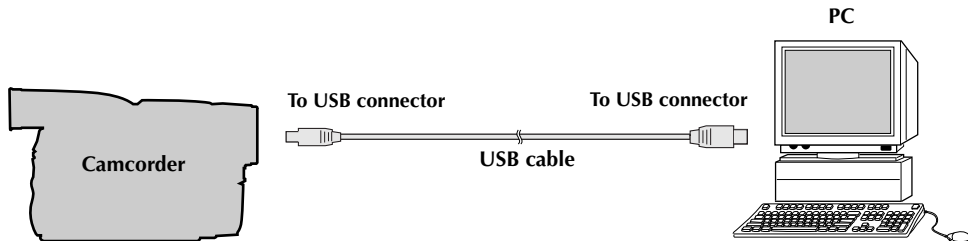

Use the USB cable to connect the camcorder to the PC.

- We recommend that you use the AC Adapter.

NOTES:

- When the USB cable is connected, turning on or off the camcorder or switching the VIDEO/DSC mode on the camcorder causes malfunctions of the PC.
- If you connect the camcorder to the PC through a USB hub, compatibility issues between the hub and the PC may result in instability in the operation of the PC. If this happens, connect the camcorder directly to the PC, not through the hub.
- Do not use an extension USB cable.

Viewing the Contents of a Memory Card (Windows®)

1 Install [USB Mass Storage Class driver]. (☞ pg. 4)

• **Windows® Me/2000/XP:**

There is no need to install this driver. Simply connect the camcorder to the PC with a USB cable, and you can read and write memory cards in the camcorder.

2 Connect the camcorder to the PC with a USB cable. (☞ pg. 6)

3 Make sure that there is a memory card in the camcorder.

4 Set the camcorder to the memory card playback mode.

- Refer to the camcorder's instruction manual for details.
[USB MODE] appears on the camcorder's LCD monitor.

5 Double-click the [My Computer] icon on the desktop.
The [Removable Disk] icon which represents the memory card in the camcorder appears in the [My Computer] window.

NOTE:

 
Windows® 98/98SE

[Removable Disk] icon does not appear if USB Mass Storage Class driver is not installed properly. In this case, refer to "Updating [Device Manager] (Windows® 98/98SE only)" (☞ pg. 6).



6 Double-click the [Removable Disk] icon.

The following folders are automatically created in the memory card. Different file types are stored in different folders.

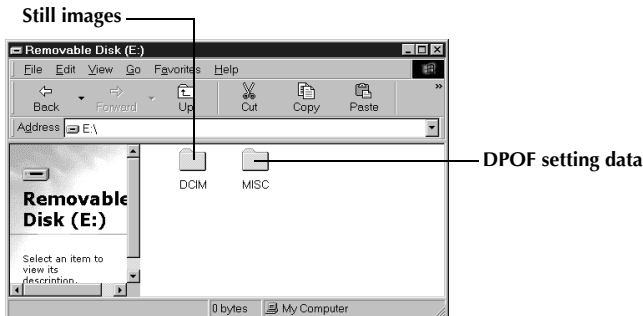

Still images : Folders within the [DCIM] folder
(extension ".jpg")

DPOF setting data : Folders within the [MISC] folder

 
NOTES:

- Saving the wrong kinds of files in a memory card or deleting files or folders from a memory card can cause problems with the operation of the camcorder. When it is necessary to delete a file from a memory card, delete it through the camcorder.
- Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.
- If you are using a brand new memory card, you need to initialize the memory card with the camcorder first. You may not be able to copy files from the memory card to the PC without doing so.

Copying Files to the PC (Windows®)

Still image files that are stored in a memory card can be copied to the PC and played back on the PC.

- 1 Double-click the [My Computer] icon on the desktop.
If the camcorder is connected to the PC correctly, the [Removable Disk] icon appears.
- 2 Double-click the [Removable Disk] icon.
The folders in the memory card appear.

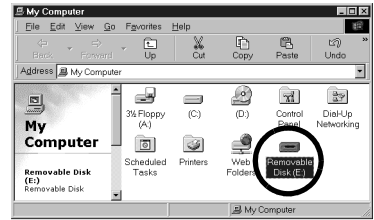


- 3 Double-click the destination folder.
- 4 Select the folder to be copied, and then drag and drop that folder in the destination folder.
 - To copy still images: Copy the folder within the [DCIM] folder.

The message [ACCESSING FILES] appears on the LCD monitor of the camcorder, and the folder is copied from the memory card to the PC.

NOTE:

 Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.

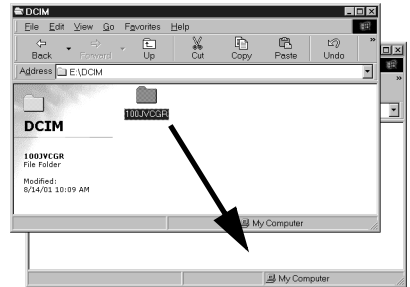

Playing Back Files on the PC (Windows®)

Still images

Use an application that can handle the JPEG file format. To view a still image, double-click the still image file (extension ".jpg").

Disconnecting the USB Cable (Windows®)

Before loading or unloading memory cards or turning off the PC, first disconnect the USB cable and turn off the camcorder.

When using Windows® 98/98SE

- 1** Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
 - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 2** Double-click the [My Computer] icon on the desktop.
If the camcorder is connected to the PC correctly, the [Removable Disk] icon appears.
- 3** Right-click the [Removable Disk] icon in the [My Computer] window.
A menu appears.
- 4** Click [Eject] in the menu.
The [Removable Disk] icon disappears.
 - If the icon does not disappear, wait for a while, and then proceed to step 5.
- 5** Disconnect the USB cable.
 - If any message appears, click [OK].
- 6** Set the Power Switch on the camcorder to "OFF".
The camcorder turns off.

 


When using Windows® 2000/Me/XP


- 1 Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
 - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 2 Double-click the [Unplug or Eject Hardware] icon in the status bar.
The [Unplug or Eject Hardware] or [Safely Remove Hardware] dialog box appears.
- 3 Select [USB Mass Storage Device] or [USB Disk], and then click [Stop].



• Windows® 2000/XP

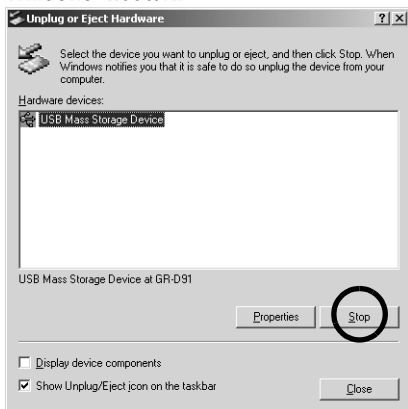

• Windows® Me

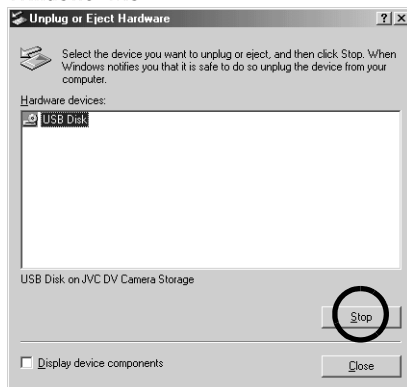 


The [Stop a Hardware device] dialog box appears.

- 4 Click [OK].

• Windows® 2000/XP



 • Windows® Me

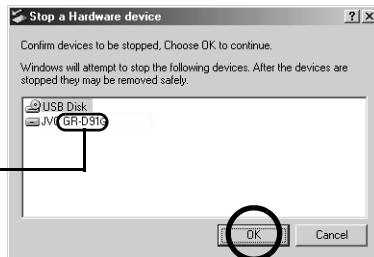

The model name depends on the connected camcorder.

- If a message indicating that the device can be safely removed appears, click [OK].
- 5 Click [Close], and then disconnect the USB cable.
 - 6 Set the Power Switch on the camcorder to "OFF".
The camcorder turns off.

Viewing the Contents of a Memory Card (Macintosh)

 
- 1 Connect the camcorder to the PC with a USB cable. (▶ pg. 6)
- 2 Make sure that there is a memory card in the camcorder.
- 3 Set the camcorder to the memory card playback mode.
 - Refer to the camcorder's instruction manual for details.[USB MODE] appears on the camcorder's LCD monitor. The memory card icon appears on the desktop.
 - The name of the memory card icon is "untitled". We recommend that you name the icon to tell it from the other removable disks or folders.
- 4 Double-click the memory card icon on the desktop.

The folders in the memory card appear.

The following folders are automatically created in the memory card. Different file types are stored in different folders.



Still images

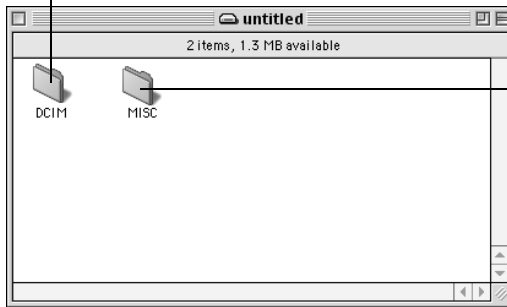

DPOF setting data

Still images
(extension ".jpg") : Folders within the [DCIM] folder

DPOF setting data : Folders within the [MISC] folder

 
NOTES:

- Saving the wrong kinds of files in a memory card or deleting files or folders from a memory card can cause problems with the operation of the camcorder. When it is necessary to delete a file from a memory card, delete it through the camcorder.
- Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.
- If you are using a brand new memory card, you need to initialize the memory card with the camcorder first. You may not be able to copy files from the memory card to the PC without doing so.

Copying Files to the PC (Macintosh)

Still image files that are stored in a memory card can be copied to the PC and played back on the PC.

- 1 Double-click the memory card icon on the desktop.
The folders in the memory card appear.
- 2 Double-click the destination folder.
- 3 Select the folder to be copied, and then drag and drop that folder in the destination folder.
 - To copy still images: Copy the folder within the [DCIM] folder.
The message [ACCESSING FILES] appears on the LCD monitor of the camcorder, and the folder is copied from the memory card to the PC.

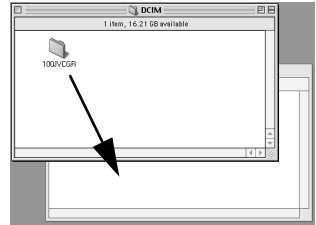

NOTE:

Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.

Playing Back Files on the PC (Macintosh)

Still images

Use an application that can handle the JPEG file format. To view a still image, either double-click the still image file (extension ".jpg"), or drag and drop the file on the application icon.

Disconnecting the USB cable (Macintosh)

Before loading or unloading memory cards or turning off the PC, first disconnect the USB cable and turn off the camcorder.

- 1 Drop the memory card icon on the desktop into the [Trash] icon.
 - If the confirmation message appears, click [OK].
- 2 Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
 - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 3 Disconnect the USB cable.
- 4 Set the Power Switch on the camcorder to "OFF".
The camcorder turns off.





Mr. Photo Gold

For Windows:

Presto! Mr. Photo 3

Presto! ImageFolio

For Macintosh:

Presto! Mr. Photo 3

Presto! ImageFolio

Copyright and Trademarks

©1998-2002, NewSoft Technology Corp. All Rights Reserved.

No portion of this document may be copied or reproduced in any manner without prior written permission from NewSoft Technology Corp. (NewSoft).

NewSoft has no warranties to this documentation and disclaims any implied warranty of merchantability or fitness for a particular purpose. All the information contained herein is subject to change without notice.

All sample images and electronic files included in the documentation and distribution materials are copyrighted by their respective photographers and not allowed to be copied or reproduced in any manner. All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

TECHNICAL SUPPORT

USA:

NewSoft America, Inc.

4113 Clipper Court, Fremont, CA 94538, U.S.A

Tel: 1-510-445-8616

Fax: 1-510-445-8601

E-mail of sale issue: sales@newsoftinc.com

Web-based tech support: www.newsoftinc.com/faq.cfm

NewSoft America Inc. Web site: <http://www.newsoftinc.com>

Taiwan:

NewSoft Technology Corp.

3F NO. 19-3, Sanchong RD., Nankang, Taipei, Taiwan

Tel: 886-2-26551201

Fax: 886-2-26551100

E-mail of sale issue: sales@newsoft.com.tw

E-mail of tech support issue: support@newsoft.com.tw

NewSoft Technology Corp. Web site: <http://www.newsoft.com.tw>

Japan:	NewSoft Japan Corp. 6-21-3 Shinbashi, Minato-Ku, Tokyo 105-0004, Japan Tel: 81-3-5472-7008 Fax: 81-3-5472-7009 E-mail of sale issue: support@newsoft.co.jp E-mail of tech support issue: support@newsoft.co.jp NewSoft Japan Corp. Web site: http://www.newsoft.co.jp
Europe:	England The Software Centre East Way, Lee Mill Industrial Estate, Ivybridge, Devon, PL21 9PE, UK Tel: (44)01752-201148 Fax: (44)01752-894833 E-mail: Tech@guildsoft.co.uk
	German SoftBay GmbH Carlstrasse 50 D-52531 Ubach-Palenberg Tel: +49 - (0)2451 - 9112647 Fax: +49 - (0)2451 - 409642 E-mail: newsoft@softbay.de
	France Graphics-France 12 rue des bles 93217 Saint Denis La Plaine cedex Tel: + 33 (0)1 49 46 23 40 Fax: + 33 (0)1 49 46 23 49 E-mail: For any information: newsoft@graphics-france.com For Mr. Photo: mphoto@graphics-france.com For VideoWorks: vworks@graphics-france.com Graphchics France Web site: http://www.graphics-france.com/newsoft
	Other countries NewSoft German Representative Office E-mail: contact@newsoft.eu.com

Presto! Mr. Photo 3 for Windows

Mr. Photo 3 is a complete package for managing, editing, and sharing your valuable photos and videos. Easily get and arrange photos or videos from digital cameras, scanners, or camcorders. Quickly view thumbnails of, get information about, and search for your photos and videos. With its image processing and printing functions, Mr. Photo 3 lets you share and enjoy easy access to your favorite photos and home movies.

System Requirements

- Personal computer with 200MHz Pentium processor or higher.
- Microsoft Windows 95/98/98 SE/2000/Me/XP.
For camcorder or other video device users:
Microsoft Windows 98/98 SE/2000/Me/XP.
- 32 MB RAM (64 MB recommended).
- 180 MB free hard disk space for installation.
- A CD-ROM drive.
- Internet Connection: Internet Explorer 4.0 or later.
- (Optional) A Mass Storage-compliant or TWAIN-compliant digital camera or scanner.
- (Optional) A color inkjet printer.
- (Optional) A PC Camera (USB capture device).
- (Optional) Video capture board for capture.
- (Optional) IEEE 1394 card for use with a DV camcorder.
- (Recommended) Display card: SVGA 800X600 True-color.

NOTE:

Because of some system limitations, several Presto! Mr. Photo 3 video functions may not work on Windows 95. We also recommend using IE 5.0 or above.

Presto! ImageFolio for Windows

ImageFolio is a complete multimedia image-processing program with a sophisticated set of editing tools. It enables you to process photographs, graphics, and drawings captured from scanners, VCRs, a laser discs, digital cameras, video capture boxes, etc. Whether you choose to create new images or enhance old ones with ImageFolio's powerful tools, your imagination is your only limit!!

System Requirements

The following hardware devices and software are required to run the software:

- Personal computer with 200 MHz Pentium processor or higher.
- One CD-ROM drive.
- One hard disk drive with at least 60 MB space available.
- At least 32 MB of RAM (preferably 64 MB).
- Microsoft Windows 95/98/98SE/2000/Me/XP.

To make full, efficient use of the program, the following additional elements are highly recommended:

- A scanner or digital camera that supports TWAIN or Mass Storage.
- A color printer supported by Microsoft Windows.

Presto! Mr. Photo 3 for Macintosh

Mr. Photo 3 is a complete package for managing, editing, and sharing your valuable photos and videos. Easily get and arrange photos or videos from digital cameras or camcorders. Quickly view thumbnails of, get information about, and search for your photos and videos. With its image processing and printing functions, Mr. Photo 3 lets you share and enjoy easy access to your favorite photos and home movies.

System Requirements

For Mac OS 9.x:

- PowerPC® G3 processor or higher (preferably G3/300).
- At least 64 MB of RAM (preferably 128 MB).
- Minimum 180 MB free hard disk space after installation.
- CD-ROM drive.
- 800×600 display mode or above.
- Internet Connection: Internet Explorer 4.0, 5.0, 5.5, or 6.0.

Recommended Equipment

- A Mass Storage-compliant digital camera or DV camcorder.
- A color printer.

Presto! ImageFolio for Macintosh

ImageFolio is a complete multimedia image-processing program with a sophisticated set of editing tools. It enables you to process photographs, graphics, and drawings captured from scanners, VCRs, a laser discs, digital cameras, video capture boxes, etc. Whether you choose to create new images or enhance old ones with ImageFolio's powerful tools, your imagination is your only limit!!

System Requirements

- PowerPC® G3 processor or higher.
- At least 64 MB of RAM (preferably 128 MB).
- One hard disk drive with at least 60 MB space available.
- System Mac OS 9.x
- A CD-ROM drive.

Recommended Equipment

- A sound card and a microphone.
- A color printer.

Installing Mr. Photo Gold

For Windows:

To install Mr. Photo 3 and ImageFolio, follow the steps in "Software Installation (Windows®)" (pg. 4). Follow the instructions on your screen as they appear.

For Macintosh:

To install Mr. Photo 3 and ImageFolio:

- 1** Insert the program CD into your CD-ROM drive.
- 2** Open the CD. Double-click on the Mr. Photo 3 or ImageFolio folder and then double-click the Installer icon to start the setup program.
- 3** Follow the on-screen instructions to complete the installation.
 - To uninstall Mr. Photo 3 and ImageFolio, drop the Mr. Photo 3 and ImageFolio folders into the [Trash] icon.