

# JVC




LYT2187-001A-M

CAMCORDER

**GZ-MS110** **AA**

## *Basic User Guide*

 ---

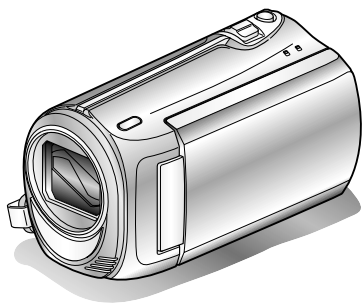

# Everio

Dear Customers

Thank you for purchasing this JVC product.

Before use, please read the Safety Precautions and Cautions on P.2 and P.20 to ensure safe use of this product.

This product has a "Basic User Guide" (this manual) and a "Detailed User Guide"(Web).

Detailed User Guide



Explains the ways of shooting in various situations and the useful features.

■ Access the following website on your PC

<http://manual.jvc.co.jp/index.html/>



Getting Started

Recording

Playback

Copying

Further Information

# Safety Precautions

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

## CAUTIONS:

- If you notice smoke or a peculiar smell coming from the camcorder or AC Adapter, shut it down and unplug it immediately. Continue using the camcorder or AC Adapter under these conditions could lead to fire or electric shock. Contact your JVC dealer. Do not attempt to repair the malfunction yourself.
- To prevent shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified personnel.
- When you are not using the AC adapter for a long period of time, it is recommended that you disconnect the power cord from AC outlet.
- In certain areas, use the conversion plug depending on the type of your AC wall outlet.

## NOTES:

- The rating plate and safety caution are on the bottom and/or the back of the main unit.
- The serial number plate is on the battery pack mount.
- The rating information and safety caution of the AC adapter are on its upper and lower sides.

## WARNING:

 
The battery pack, the camcorder with battery installed, and the remote control with battery installed should not be exposed to excessive heat such as direct sunshine, fire or the like.

## CAUTION:

- The mains plug shall remain readily operable.
- Remove the mains plug immediately if the camcorder functions abnormally.

## CAUTION:

To avoid electric shock or damage to the unit, first firmly insert the small end of the power cord into the AC Adapter until it is no longer wobbly, and then plug the larger end of the power cord into an AC outlet.



## Caution on Replaceable lithium battery

The battery used in this device may present a fire or chemical burn hazard if mistreated.

Do not recharge, disassemble, heat above 100°C or incinerate.

Danger of explosion or Risk of fire if the battery is incorrectly replaced.

- Dispose of used battery promptly.
- Keep away from children.
- Do not disassemble and do not dispose of in fire.

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

Do not block the ventilation holes.

(If the ventilation holes are blocked by a newspaper, or cloth etc. the heat may not be able to get out.)

No naked flame sources, such as lighted candles, should be placed on the apparatus.

When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly. The apparatus shall not be exposed to dripping or splashing.

Do not use this equipment in a bathroom or places with water.

Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups etc.) on top of this unit. (If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

Do not point the lens directly into the sun. This can cause eye injuries, as well as lead to the malfunctioning of internal circuitry. There is also a risk of fire or electric shock.

**CAUTION!**

The following notes concern possible physical damage to the camcorder and to the user.

Carrying or holding the camcorder by the LCD monitor can result in dropping the unit, or in a malfunction.

Do not use a tripod on unsteady or unlevel surfaces. It could tip over, causing serious damage to the camcorder.

**CAUTION!**

Connecting cables (Audio/Video, etc.) to the camcorder and leaving it on top of the TV is not recommended, as tripping on the cables will cause the camcorder to fall, resulting in damage.



If this symbol is shown, it is only valid in the European Union.

**Remember that this camcorder is intended for private consumer use only.**

Any commercial use without proper permission is prohibited. (Even if you record an event such as a show, performance or exhibition for personal enjoyment, it is strongly recommended that you obtain permission beforehand.)

**Trademarks**

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Windows® is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Inc.
- iMovie is trademark of Apple Inc., registered in the U.S. and other countries.
- YouTube and the YouTube logo are trademarks and/or registered trademarks of YouTube LLC.
- Other product and company names included in this instruction manual are trademarks and/or registered trademarks of their respective holders.

# Index

Safety Precautions .....	2	▶ Playback .....	13
Index .....	4	▶ Playing Back/Deleting Files on this Camera .....	13
Verifying the Accessories .....	4	▶ Playing Back on TV .....	14
Names of Parts and Functions .....	5	▶ Copying .....	15
▶ Getting Started .....	6	▶ Dubbing Files by Connecting to a DVD Recorder or VCR .....	15
▶ Charging the Battery Pack .....	6	▶ Further Information .....	16
▶ Grip Adjustment .....	7	▶ Recordable Time .....	16
▶ Using the Menu .....	8	▶ Troubleshooting .....	18
▶ Inserting an SD card .....	8	▶ Cautions .....	20
▶ Format SD card .....	9	▶ Specifications .....	22
▶ Remove SD card .....	9		
▶ Clock Setting .....	10		
▶ Recording .....	12		
▶ Video Recording .....	12		

## ▶ Learning About Advanced Operations

 
Use the “Detailed User Guide” on your PC to find out more about the advanced operations.

- Access the following address on your PC

<http://manual.jvc.co.jp/index.html/>

## Verifying the Accessories

AC Adapter  
AP-V30M \*1




Power Cord \*1




Battery Pack  
BN-VG107E



 USB Cable  
(Type A-Mini Type B)




AV Cable

 

CD-ROM \*2



 Basic User Guide  
(this manual)




- SD cards are sold separately.

For details on the types of cards that can be used on this unit, refer to P.9.

- \*1 When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.

- \*2 To view the Detailed User Guide, connect to the internet and click “Read Detailed User Guide”.

# Names of Parts and Functions

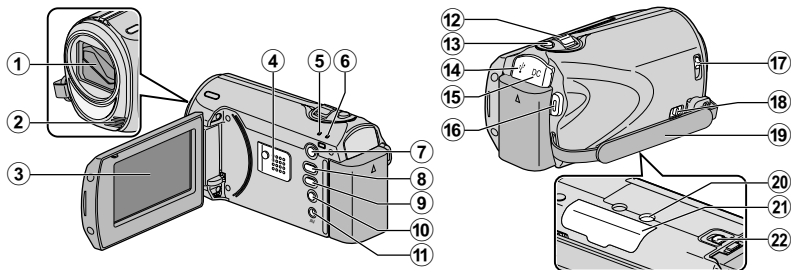 

① Lens/Lens Cover

② Monaural Microphone

③ LCD Monitor

Turns the power on/off by opening and closing.

④ Speaker

⑤ ACCESS (Access) Lamp

Lights up/blinks during recording or playback.

⑥ POWER/CHARGE (Power/Charge) Lamp ( P.6)

⑦ (Play) Button

Switches between recording and playback modes.

⑧ / (Record mode)/+ Button

Recording : The mode changes between auto and manual with every press.

Playback : Increases the volume with every press during volume adjustment.

⑨ INFO/- Button

Recording : Displays the remaining time as well as the battery power during continuous recording.

Thumbnail : Displays file information.

Playback : Decreases the volume with every press during volume adjustment.

⑩ MENU (menu) Button ( P.8)

⑪ AV Terminal ( P.14, P.15)

⑫ ZOOM/SELECT Lever

Recording : For use zoom lever. Adjusts the shooting range.( P.12)

Playback : For selecting a thumbnail display or menu item. ( P.13)

⑬ OK Button

Confirms the selected item.( P.8)

Playback : To pause, press OK. Press again to resume playback. ( P.13)

⑭ USB Terminal

⑮ DC Terminal ( P.6)

⑯ START/STOP (Video Recording)//|| (Playback) Button

Recording : Starts/stops the recording.

Playback : Starts/pauses the playback.

⑰ Lens Cover Switch ( P.12)

⑱ Grip Belt Release Lever

⑲ Grip Belt ( P.7)

⑳ Tripod Mounting Hole


㉑ SD Card Slot ( P.8)

㉒ Battery Release Lever ( P.6)

## Charging the Battery Pack

 
### 1 Attach the battery pack.

\* The battery pack is not charged at the time of purchase.

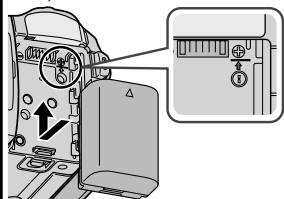



- Align the top of the battery with the mark on this unit, and slide in until the battery clicks into place.

### ■ To detach the battery pack

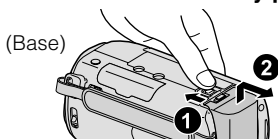 

(Base)

### 2 Connect the DC terminal.

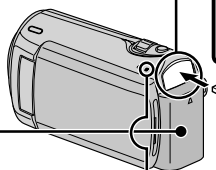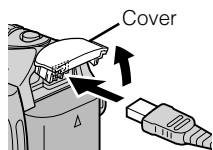  

Charging Lamp

AC Adapter  
To AC Outlet  
(110V to 240V)

### 3 Plug in the power.

Charging Lamp



Charging in progress:  
Blinks  
Charging finished:  
Goes out

 
### CAUTION

Be sure to use JVC battery packs.


- If you use any other battery packs besides JVC battery packs, safety and performance cannot be guaranteed.
- Charging time: Approx. 1 h 50 m (using supplied battery pack)

\* The charging time is when the unit is used at 25°C. If the battery pack is charged outside the room temperature range of 10°C - 35°C, charging may take a longer time or it may not start. The recordable and playable time may also be shortened under some usage conditions such as at low temperature.


# Grip Adjustment

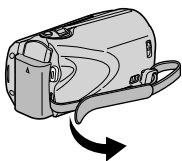

① Pull back the belt

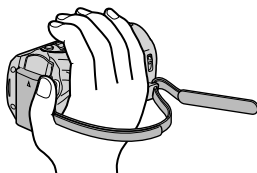 


② Adjust the length

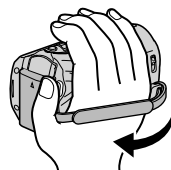 



③ Attach the belt

## Using as a Hand Strap

 Remove the strap and loop it around your wrist. While pressing ①, pull ② and remove the strap.

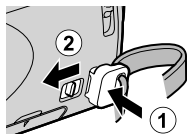


Press and hold

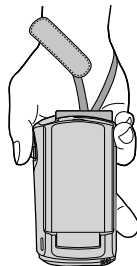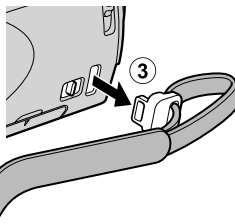  

- When attaching the hand strap, insert ③ until it clicks into place.

# Using the Menu

 You can configure various settings using the menu.

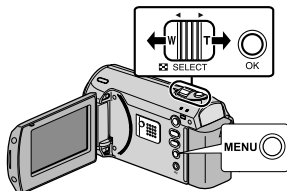

**1** Press MENU to display the menu.

- The menu differs according to the mode in use.

**2** Select the desired menu with the ZOOM (SELECT) lever and press OK.



**3** Select the desired setting and press OK.



**To exit the screen**

Press MENU.

**To return to the previous screen**

Press MENU.

 
- For more information on the settings, refer to the Detailed User Guide.

# Inserting an SD card

Insert a commercially available SD card before recording.


**1** Close the LCD monitor.

(Base)

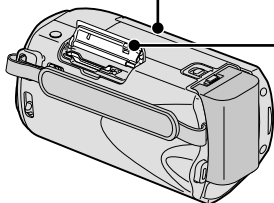

**2** Open the cover.

 **3** Insert an SD card.

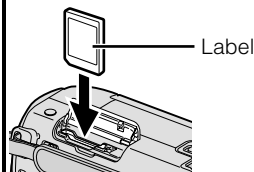

\* Turn off the power of this unit before inserting or removing a card.




## Format SD card

 To use SD cards that have been used on other devices


Format (initialize) the card using "FORMAT SD CARD" from the menu.

**All data on the card will be deleted when it is formatted. Copy all files on the card to a PC before formatting.**


① Press MENU to display the menu.

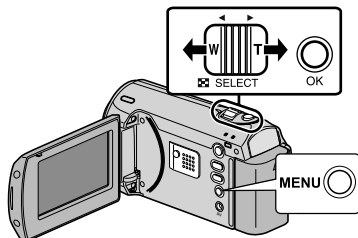

 ② Select "FORMAT SD CARD" with the ZOOM(SELECT) lever and press OK.

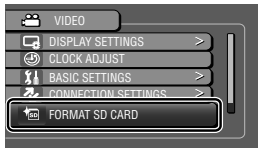

③ Select "FILE" and press OK.

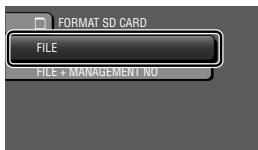 


④ Select "YES" and press OK.

⑤ After formatting, press OK.

## Remove SD card

 Push the card inward once, then pull it out straight.

(Base)

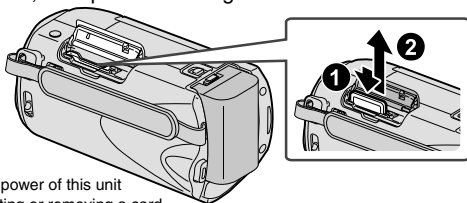

\*Turn off the power of this unit before inserting or removing a card.


### NOTE

 Operations are confirmed on the following SD cards.


Manufacturer	Panasonic, TOSHIBA, SanDisk, ATP
Video	Class 4 or higher compatible SDHC card (4 GB to 32 GB)

- Using cards other than those specified above may result in recording failure or data loss.

# Clock Setting

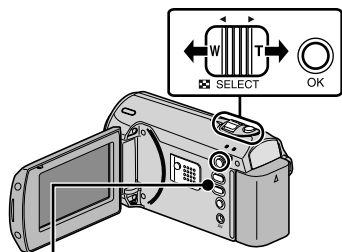

Set the date and time.

 

## 1 Open the LCD monitor.

- The unit turns on. When the LCD monitor is closed, the unit turns off.

 
## 2 Select "YES" and press OK when "SET DATE/TIME!" is displayed.



- Use the ZOOM(SELECT) lever to select, then press OK to set.

## 3 Set the date and time.

Cursor

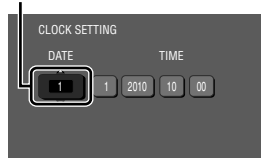


- Use the +/- button to adjust the year, month, day, hour and minute.
  - + : The number increases with every press.
  - : The number decreases with every press.
- Adjust the ZOOM(SELECT) lever (◀▶) to move the cursor.

## 4 After setting the date and time, press OK.
 
## 5 Select the region where you live with the +/- button and press OK.


- The city name and time difference is displayed.

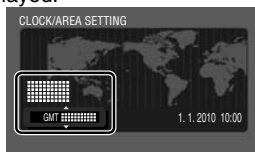


## ■ To reset the clock

Set the clock with “CLOCK ADJUST” from the menu.

 
- 1 Press MENU to display the menu.

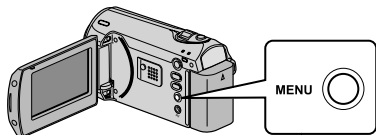

 - 2 Select “CLOCK ADJUST” with the ZOOM(SELECT) lever and press OK.

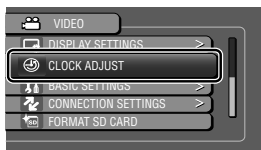

 - 3 Select “CLOCK SETTING” and press OK.

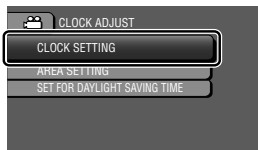


- The subsequent setting operations are the same as steps 3 - 5 on the previous page.


## ■ To change the display language

 The language on the display can be changed.


- 1 Press MENU to display the menu.

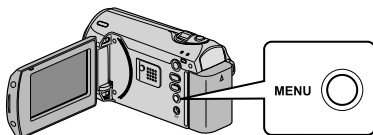

 - 2 Select “DISPLAY SETTINGS” with the ZOOM(SELECT) lever and press MENU.

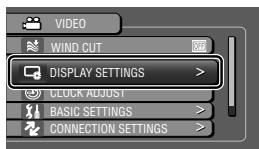

- 3 Select “LANGUAGE” and press OK.

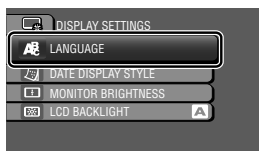 


- 4 Select the desired language and press OK.

## Video Recording

You can record without worrying about the setting details by using the auto mode.

 
**Before recording an important scene, it is recommended to conduct a trial recording.**

 
**1** Open the lens cover.




**2** Check if the recording mode is **A** Auto.

- If the mode is **M** Manual, press the **A**/**M** button to switch.
- The mode changes between auto and manual with every press.



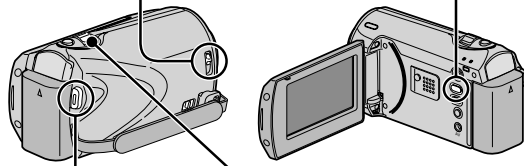


Zooming

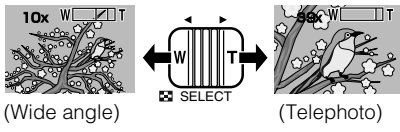 


**3** Start recording.

 START / STOP ● Press again to stop.



### ■ Indications during video recording

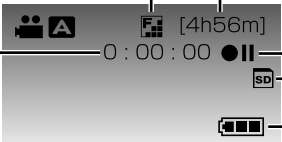 

Video Quality [4h56m]

Remaining Recording Time

● **||** : Record-Standby

● **REC** : Recording in Progress

Recording Media (SD CARD)

Battery Indicator

Scene Counter 0 : 00 : 00


#### NOTE

- The estimated recording time of the supplied battery pack is approximately 50 minutes. ( P.16)

# Playing Back/Deleting Files on this Camera

Select and play back the recorded videos from an index screen (thumbnail display).


**1** Select the playback mode.




**Press**

**2** Select the video.

 
Use the SELECT lever to move the cursor.



**3** Play back a file.



- Press OK to play back.
- To pause, press OK or START/STOP. Press again to resume playback.
- Pressing the zoom lever during pause mode returns screen to the thumbnail display.

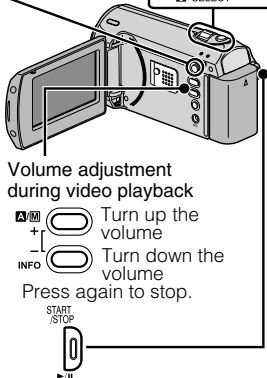

**Volume adjustment during video playback**

- Turn up the volume
- Turn down the volume




 
Press again to stop.

■ To delete unwanted files  
Select "DELETE" in the menu to delete.



- Select YES when the confirmation message appears and press OK.


## ■ Usable operation buttons during playback

 Operation button	During playback	During pause
	Pause	Playback
	Forward/Reverse search	Returns to thumbnail display
	Turns up the volume	-
	Turns down the volume	Displays file information

# Playing Back on TV

- 1 Connecting the AC adapter. ( P.6)
- 2 Open the LCD monitor and select the playback mode.
- 3 Connect to a TV.

\* Refer also to the instruction manual of the TV.

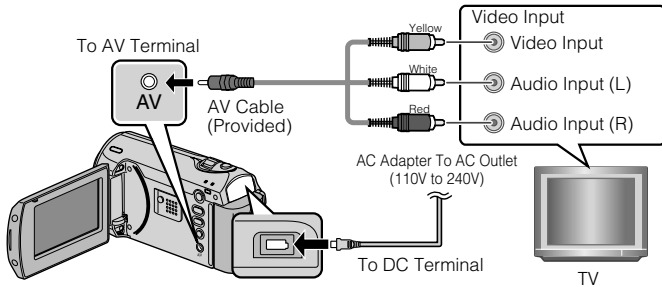

- 4 Select the TV input switch.
- 5 Play back a file. ( P.13)

## ■ To play back with date/time display

Set “DISPLAY ON TV” in the connection settings menu to “ON”.  
Alternatively, set “ON-SCREEN DISPLAY” in the playback menu to “DISPLAY ALL” or “DISPLAY DATE ONLY”.

## ■ When images look unnatural on the TV

Images do not appear on the TV properly.	<ul style="list-style-type: none"><li>• Disconnect the cable and connect again.</li><li>• Restart this unit by turning off and on.</li></ul>
Images are projected vertically on the TV.	Set “VIDEO OUTPUT” in the connection settings menu to “4:3”.
Images are projected horizontally on the TV.	Adjust the TV's screen accordingly.

 
### NOTE

- Please contact the TV manufacturer on questions or problems with setting the TV to the correct mode.


## Dubbing Files by Connecting to a DVD Recorder or VCR

You can dub videos in standard quality by connecting to a DVD recorder or VCR. Refer also to the instruction manual of the TV, DVD recorder, VCR, etc.

### 1 Connect to a VCR/DVD recorder.

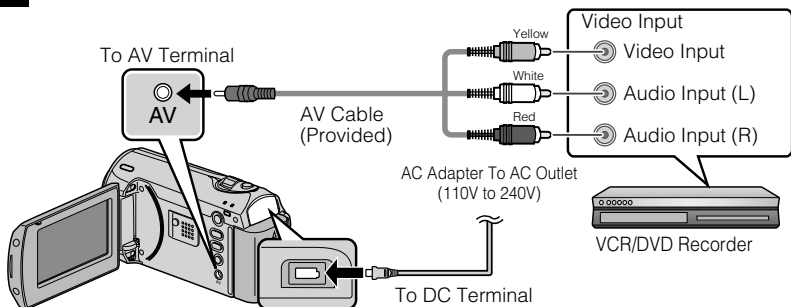


### 2 Select the playback mode.

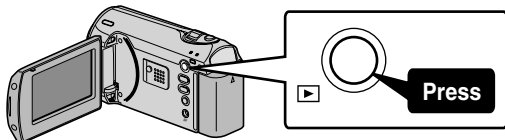 

### 3 Prepare to record.

#### Preparation on TV and VCR/DVD recorder

 - Switch to a compatible external input.
- Insert compatible blank DVD or VHS to dub.

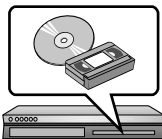

#### Preparation on this unit

- Set "VIDEO OUTPUT" in the connection settings menu to the aspect ratio ("4:3" or "16:9") of the connecting TV.
- To include the date during dubbing, set "DISPLAY ON TV" in the connection settings menu to "ON". Alternatively, set ON-SCREEN DISPLAY in the playback menu to DISPLAY DATE ONLY.

### 4 Start recording.

- Start playback on the camcorder ( P.13) and press the record button on the recorder.
- After playback is complete, stop the recording.

# Recordable Time

You can check the video recording time by pressing the INFO Button.

### Approximate Video Recording Time

Quality	SDHC Card			
	4 GB	8 GB	16 GB	32 GB
ULTRA FINE	56 m	1 h 50 m	3 h 45 m	7 h 30 m
FINE	1 h 20 m	2 h 50 m	5 h 40 m	11 h 20 m
NORMAL	1 h 45 m	3 h 45 m	7 h 30 m	15 h
ECONOMY	4 h 57 m	10 h	20 h	40 h

- The approximate recording time is only a guide. The actual recording time may shorten depending on the shooting environment.

### Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG107E	50 m	1 h 30 m
BN-VG114E	1 h 40 m	3 h 5 m
BN-VG121E	2 h 35 m	4 h 40 m

- The above are values when "LCD BACKLIGHT" is set to "STANDARD".
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly. (It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged. (Replace the battery pack with a new one.)



## Customer Support Information

Use of this software is authorized according to the terms of the software license.

### JVC (for inquires regarding this unit)

When contacting the nearest JVC office or agency in your country (refer to the JVC Worldwide Service Network at <http://www.jvc-victor.co.jp/english/worldmap/index-e.html>) about this software, please have the following information ready.

- Product Name, Model, Serial Number, Problem, Error Message
- PC (Manufacturer, Model (Desktop/Laptop), CPU, OS, Memory (MB/GB), Available Hard Disk Space (GB))

Please note that it may take some time to respond to your questions, depending on their subject matter. JVC cannot answer questions regarding basic operation of your PC, or questions regarding specifications or performance of the OS, other applications or drivers.

### Pixela (for inquires regarding the provided software)

Region	Language	Phone #
USA and Canada	English	+1-800-458-4029 (toll-free)
Europe (UK, Germany, France, and Spain)	English/German/French/Spanish	+800-1532-4865 (toll-free)
Other Countries in Europe	English/German/French/Spanish	+44-1489-564-764
Asia (Philippines)	English	+63-2-438-0090
China	Chinese	10800-163-0014 (toll-free)

**Homepage:** <http://www.pixela.co.jp/oem/jvc/mediabrowser/e/>

Please check our website for latest information and downloading.

Getting Started

Recording

Playback

Copying

Further Information

# Troubleshooting

Before requesting service, consult the following chart or the "Troubleshooting" section in the Detailed User Guide.


If the solutions indicated in the chart do not solve the problem, consult your nearest JVC dealer or JVC service center for instructions. Refer also to the FAQ of new products on JVC's website. Refer also to the Q&A information of new products on JVC's website (<http://www.jvc.com>).

This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, reset this unit.

**■ Reset this unit when it does not function properly or when "... Error" appears on the screen.**

- ① Turn off the power. (Close the LCD monitor.)
- ② Remove the AC adapter and battery pack from this unit, reattach them, and turn on the power again.

## Trouble

Trouble		Action	Page
Power	POWER/CHARGE lamp starts blinking when the monitor is closed.	<ul style="list-style-type: none"> <li>The battery pack is being charged.</li> </ul>	P.6
	Recording cannot be performed.	<ul style="list-style-type: none"> <li>Set to the recording mode with the  button.</li> </ul>	P.13
Recording	Recording stops by itself.	<ul style="list-style-type: none"> <li>Turn off this unit, wait for a while, and turn it on again. (This unit stops automatically to protect the circuit when the temperature rises.)</li> <li>Recording stops automatically after 12 hours of continuous recording.</li> </ul>	- -
	No date/time display.	<ul style="list-style-type: none"> <li>Set "ON-SCREEN DISPLAY" in the playback menu accordingly.</li> </ul>	-
Playback	Sound or video is interrupted.	<ul style="list-style-type: none"> <li>Sometimes playback is interrupted at the connecting section between two scenes. This is not a malfunction.</li> </ul>	-

The lamp does not flash during battery pack charging.

- Check the remaining battery power. (When the battery pack is fully charged, the lamp does not flash.) P.12
- When charging in either a hot or cold environment, ensure that battery is being charged within the permitted temperature range. (Otherwise, charging may stop to protect the battery pack.) P.6

This unit heats up.

- This is not a malfunction. (This unit may become warm when used for a long time.) -

## Warning Indications

 
Warning Indications	Action	Page
RECORDING FAILURE	<ul style="list-style-type: none"> <li>• Turn off and on this unit again.</li> </ul>	-
UNSUPPORTED SCENE! (Video)	<ul style="list-style-type: none"> <li>• Make use of a file recorded with this unit. (Files recorded with other devices may not be playable. If the file was recorded with this unit, then it is corrupted.)</li> </ul>	-
"DATA RECORDED IS TOO LITTLE UNABLE TO SAVE"	<ul style="list-style-type: none"> <li>• If a video recording is stopped with the actual recording time displayed at "0:00:00:17" and below, the video cannot be saved.</li> </ul>	-

# Cautions

## Battery Pack

The supplied battery pack is a lithium-ion battery. Before using the supplied battery pack or an optional battery pack, be sure to read the following cautions:

Terminals



- **To avoid hazards**
  - ... **do not** burn.
  - ... **do not** short-circuit the terminals. Keep it away from metallic objects when not in use. When transporting, make sure the provided battery cap is attached to the battery. If the battery cap is misplaced, carry the battery in a plastic bag.
  - ... **do not** modify or disassemble.
  - ... **do not** expose the battery to temperatures exceeding 60°C, as this may cause the battery to overheat, explode or catch fire.
  - ... use only specified chargers.
- **To prevent damage and prolong service life**
  - ... do not subject to unnecessary shock.
  - ... charge within the temperature range of 10°C to 35°C. Cooler temperatures require longer charging time, or in some cases stop charging at all. Warmer temperatures prevent complete charging, or in some cases stop charging at all.
  - ... store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.
  - ... fully charge and then fully discharge the battery every 6 months when storing the battery pack over a long period of time.
  - ... remove from charger or powered unit when not in use, as some machines use current even when switched off.

## Recording Medium

- **Be sure to follow the guidelines below to prevent corruption or damage to your recorded data.**
  - Do not bend or drop the recording medium, or subject it to strong pressure, jolts or vibrations.
  - Do not splash the recording medium with water.
  - Do not use, replace, or store the recording medium in locations that are exposed to strong static electricity or electrical noise.
  - Do not turn off the camcorder power or remove the battery or AC adapter during shooting, playback, or when otherwise accessing the recording medium.
  - Do not bring the recording medium near objects that have a strong magnetic field or that emit strong electromagnetic waves.
  - Do not store the recording medium in locations with high temperature or high humidity.
  - Do not touch the metal parts.

## LCD Monitor

- **To prevent damage to the LCD monitor, DO NOT**
  - ... push it strongly or apply any shocks.
  - ... place the camcorder with LCD monitor on the bottom.
- **To prolong service life**
  - ... avoid rubbing it with coarse cloth.

## Main Unit

### ● For safety, DO NOT

- ... open the camcorder's chassis.
- ... disassemble or modify the unit.
- ... allow inflammables, water or metallic objects to enter the unit.
- ... remove the battery pack or disconnect the power supply while the power is on.
- ... leave the battery pack attached when the camcorder is not in use.
- ... place naked flame sources, such as lighted candles, on the apparatus.
- ... expose the apparatus to dripping or splashing.
- ... leave dust or metal objects adhered to the power plug or an AC wall outlet.
- ... insert any objects in the camcorder.

### ● Avoid using the unit

- ... in places subject to excessive humidity or dust.
- ... in places subject to soot or steam such as near a cooking stove.
- ... in places subject to excessive shock or vibration.
- ... near a television set.
- ... near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).
- ... in places subject to extremely high (over 40°C) or extremely low (under 0°C) temperatures.

### ● DO NOT leave the unit

- ... in places of over 50°C.
- ... in places where humidity is extremely low (below 35%) or extremely high (above 80%).
- ... in direct sunlight.
- ... in a closed car in summer.
- ... near a heater.
- ... in high places such as on a TV. Leaving the unit in high places while a cable is connected may result in a malfunction if the cable is caught and the unit falls onto the floor.

### ● To protect the unit, DO NOT

- ... allow it to become wet.
- ... drop the unit or strike it against hard objects.
- ... subject it to shock or excessive vibration during transportation.
- ... keep the lens directed at extremely bright objects for long periods.
- ... expose the lens to direct sunlight.
- ... swing it excessively when using the hand strap.
- ... swing the soft camcorder case excessively when the camcorder is inside it.
- ... place the camcorder in dusty or sandy areas, such as on a beach.

- To prevent the unit from dropping,
  - Fasten the grip belt securely.
  - When using the camcorder with a tripod, attach the camcorder to the tripod securely. If the camcorder drops, you may be injured and the camcorder may be damaged. When a child uses the unit, there must be parental guidance.

Getting Started

Recording

Playback

Copying

Further Information

# Specifications

Camera	
Power supply	Using AC adapter: DC 5.2 V, Using battery pack: DC 3.6 V
Power consumption	1.5 W (when LCD backlight is set to "STANDARD")
Dimensions (mm)	52 x 62 x 110 (W x H x D: excluding grip belt)
Mass	Approx. 195 g (camera only), Approx. 220 g (including supplied battery pack)
Operating environment	Allowable operating temperature: 0°C to 40°C Allowable storage temperature: -20°C to 50°C Allowable operating humidity: 35 % to 80 %
Image pickup device	1/6" 800,000 pixels
Recording area (Video)	410,000 pixels (optical zoom), 410,000 to 550,000 pixels (dynamic zoom)
Lens	F1.8 to F4.3, f= 2.2 mm to 85.8 mm (35 mm conversion: 41.5 mm to 1619 mm)
Zoom (Video)	Optical zoom: Up to 39x Dynamic zoom: Up to 45x Digital zoom: Up to 800x
Video recording format	SD-VIDEO standard, Video: MPEG-2, Audio: Dolby Digital (2 ch)
Recording media	Requires (x1) SDHC card ,sold separately

AC Adapter (AP-V30M)*	
Power supply	AC 110 V to 240 V, 50 Hz/60 Hz
Output	DC 5.2 V, 1.8 A
Allowable operating temperature	0°C to 40°C (10°C to 35°C during charging)
Dimensions (mm)	50 x 29 x 100 (W x H x D:excluding cord and AC plug)
Mass	Approx. 112 g

- \* When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.
- The specifications and appearance of this product are subject to changes for further improvement without prior notice.



# Terms

<b>A</b>	AC Adapter .....	6	<b>M</b>	Menu Settings .....	8
	AV Connection .....	14, 15	<b>R</b>	Recordable Time .....	16
<b>B</b>	Battery Pack .....	6	<b>S</b>	SD Card .....	8, 16
<b>C</b>	Clock Adjust .....	11	<b>V</b>	Viewing Files on TV .....	14
<b>D</b>	Date/Time Setting .....	10	<b>Z</b>	Zoom .....	12
	Deleting Files .....	13			
<b>F</b>	Format SD Card .....	9			
<b>L</b>	Language Setting .....	11			
	LCD Monitor .....	20			

# JVC