

Notice the following information will help you to solve your problems.  
Keep this IMPORTANT sheet together with the INSTRUCTIONS.

- **After installing the unit**

→ Follow the procedure [A] described below.

- **If the unit does not operate**

→ Follow the procedure [A] described below.

- **If a disc is not ejected from the loading slot**

→ Follow the procedure [B] described below. (If the procedure [B] does not work, try the procedure [A].)


- **If a disc is not recognized ("No Disc," "Loading Error," or "Eject Error" flashes on the display) even though there is a disc in the loading slot**

→ Follow the procedure [B] described below. (If the procedure [B] does not work, try the procedure [A].)

**[A] To reset the microcomputer**

Press the reset button on the control panel using a ball-point pen or similar tool.  
This will reset the built-in microcomputer.

**NOTE:** Your preset adjustments—such as preset channels or sound adjustments—will also be erased.

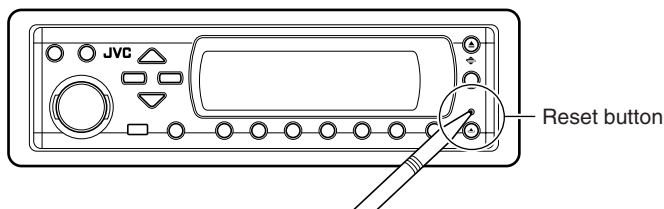

**[B] To eject a disc by force**

While holding  $\phi$ /I ATT, press and hold  $\blacktriangle$  for more than 2 seconds.  
(Be careful not to drop the disc when it is ejected.)

