


# JVC

LT-19LK3BJ LT-22LK3BJ  
LT-19DK3BJ LT-22DK3BJ

LCD-TELEVISION

INSTRUCTIONS

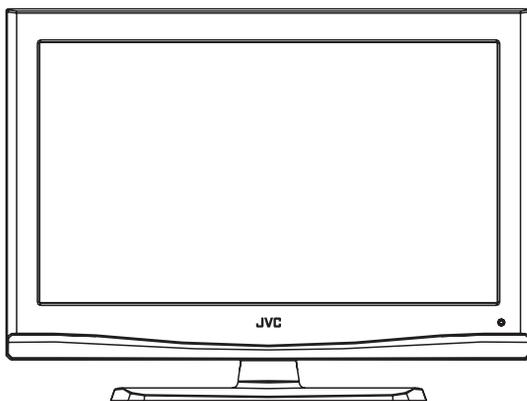

HDMI, the HDMI Logo and High Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

DVB is a registered trademark of the DVB Project.

Manufactured under license from Dolby Laboratories. "Dolby", and the double-D symbol are trademarks of Dolby Laboratories. (Only for LT-19DK3- / LT-22DK3- model: )

Dear Customer,  
This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.  
European representative of Victor Company of Japan, Limited is: JVC Technical Services Europe GmbH Postfach 10 05 04  
61145 Friedberg  
Germany

## Information for Users on Disposal of Old Equipment and Batteries

### [European Union]



These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2002/96/EC.

### Products

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products. For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.



Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### [Business users]

If you wish to dispose of this product, please visit our web page <http://www.comet.co.uk> to obtain information about the take-back of the product.

### Battery

**Notice:**  
The sign Pb below the Symbol for batteries Indicates that this battery Contains lead.

### [Other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment and batteries.

## If something doesn't seem to work

If there is something about your appliance which you do not understand and you live in the UK you can

Phone our help line during normal office hours on:

0844 8009595

Calls are charged at standard rates.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

Kesa U.K HU1 3AU 29 / 04 / 2008

# LCD TV

## SAFETY INSTRUCTIONS

Check that the voltage marked on the rating plate on the back of the power adapter matches that of your local mains supply.

The manufacturer accepts no responsibility for using the product with the wrong mains voltage.

This product must be earthed.

This product is intended for domestic use only, any other use may invalidate the warranty and might be dangerous.

If the mains lead becomes damaged it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid a hazard. If the power adapter becomes damaged it must be replaced with an adapter of the same type and rating.

### Important Safety warnings


To prevent electric shock, do not remove any cover.

If anything goes wrong, don't try and fix it yourself, get a qualified service agent to look at the product.

Do not expose this equipment to dripping or splashing or place any objects filled with liquids, such as vases, on the equipment. Never put a naked flame source such as lighted candles on or near this equipment.

Small parts. Do not let young children play with the equipment.


- \*Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- \*When Cleaning the TV set, please use the cleaning cloth which doesn't contain volatile materials.
- \*Never scratch the TV screen and cabinet with sharp object including nail and blade.
- \*Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products.
- \*Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in accidents.
- \*Never insert objects through vents or openings. do not spill water or liquid on the product.
- \*When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- \*Do not use this product near water-for example, near a bathtub, washbowl, kitchen sink, or laundry tub ,in a wet basement, or near a swimming pool.
- \*Do not overload wall outlets.

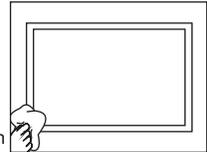

### Precautions When Displaying a Still Image

A Still image may cause permanent damage to the TV screen.

- \* Do not leave the screen in pause mode for more than two hours as you may experience temporary or permanent image burn.

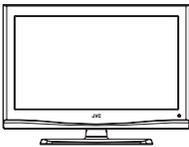

To avoid this image burn, please decrease picture Brightness and contrast ratio in pause mode.

The warranty will not cover the damage caused by above reason.

Do not leave the screen (Playing a game or watching a movie) in pause mode for extended periods of time, for as a result the borders may leave traces.

To avoid this decrease picture Brightness and contrast values in pause mode.

**Warning:** To prevent the spread of fire, keep candles or other open flames away from this product at all times.



To reduce the risk of electric shock ,do not remove cover(or back).No user serviceable parts inside. Refer servicing to qualified service personnel. Indicates a situation which, if not avoided, could damage the equipment or other apparatus.



This symbol indicates dangerous voltage inside the TV that presents a risk of electric shock or personal injury.Indicates a hazardous situation which,if not avoided,could result in serious injury.



This symbol indicates important instructions accompanying the TV.



## Class 1 laser products

This product contains a low power laser device, danger of invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.



This unit is designed and manufactured to respond to the Region Management information that is recorded on a DVD disc. The region number of this player is "2". If the region number described on the DVD discs does not correspond to the Region number described on the DVD discs, the player will not play this disc.

This player will play DVD discs made for "ALL" regions, Therefore, this player will play DVD discs marked with labels containing the region number "2" or "ALL"

## Mains plug and mains lead


We have fitted this equipment with a standard mains plug.

- . If you cut off the mains plug or fit a different type, destroy the old plug, as it is dangerous to insert it into a live power outlet.
- . If a fuse is fitted to the plug, remove the fuse before throwing the plug away.
- . Carefully follow the wiring instructions supplied with a new mains plug.
- . Never use a fused mains plug without the fuse cover.
- . Make sure the mains lead cannot be walked or crushed, chafed or cut and that it is routed in such away as to reduce the risk of a tripping hazard.
- . Do not let the mains lead hang over edge of a table or counter.
- . Do not immerse the mains lead or mains plug in water.
- . In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current.
- . Earthed (Class I) equipment must be connected to a mains power outlet with a protective earthing connection
- . Where the Mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## Mains plug wiring for the UK

In a re-wirable plug the wires in the mains lead of this equipment must be connected as follows.

- . The wire coloured brown must be connected to the terminal that is marked with the letter L.
- . The wire coloured blue must be connected to the terminal that is marked with the letter N.
- . For class I (**earthed**) equipment the wire coloured green and yellow must be connected to the earth terminal which is marked E, or 
- . For Class II (**double insulated**) equipment there is no green or green and yellow wire. Do not connect anything to the earth terminal which is marked E, or 
- . You must make sure the mains lead is firmly secured under the cord clamp.

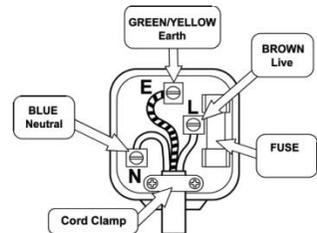

## Mains fuse

UK standard (BA1363) plugs must be fitted with a BS1362 standard fuse. Please see the operating instructions for the correct fuse rating.

## Ventilation

If the product is used in a cabinet, allow at least a 10cm gap all around. Don't obstruct the ventilation slots, including those underneath, with soft furnishings. Overheating will increase the risk of fire.

## CONTENTS

### Connection And Preparation For Use

- Supplied Accessories----- 4
- Operating Controls ----- 4
- Connection ----- 5
- Installing the TV Base----- 6

### Using The Remote Control

- Remote Control ----- 7
- Installing The Remote Control Batteries  
----- 7
- Power On/ Off -----9
- Placing In Standby Mode -----9
- Changing Programmes----- 9
- Teletext Function-----10

### Connection Inputs-----10

### Basic Operation

- Basic Function ----- 11
- First Time Installation----- 12
- How To Use OSD Menu----- 13
  - Setting Up Picture ----- 13
  - Setting Up Sound ----- 13
  - Setting Up Channel ----- 14
  - Setting Up Setup ----- 15
  - Setting Up PC ----- 15

### PC Setting

- Setting Up Your PC Software  
(based On Windows XP) ----- 16
- Display Mode -----16

### DTV(digital TV) Introduction

- Remote Control for DTV Menu ----- 17
- Setting Up DTV ----- 18
- DTV Source Function Instruction
  - To Select Programme ----- 19
  - To Quick Select Programme ----- 19
  - Switching Audio and Language ----- 19
  - EPG ----- 20
  - Switching TV/Radio ----- 20
  - DTV Channel Manager ----- 21
  - To Select FAV Programme ----- 23
  - Time ----- 23
  - Native Game ----- 24
  - Advanced Setting ----- 24

### DVD Player ( Optional )

- Types Of Discs Your DVD Player Play  
-----27
- Remote Control For DVD ----- 28
- DVD Keypad Definition ----- 29
- Basic Operation ----- 30
- Additional Operation -----31
- Playing MP3, JPEG Discs -----34
- USB/CARD Storage Device -----35
- The System Setup Menu -----36


### Suggestion ----- 40

### Product Specification----- 41




## Connection And Preparation For Use

### Supplied Accessories

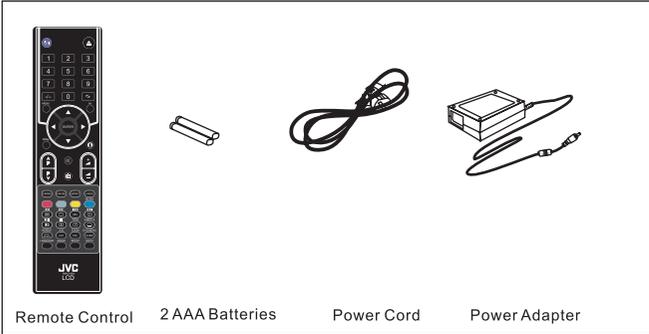

### Operating Controls

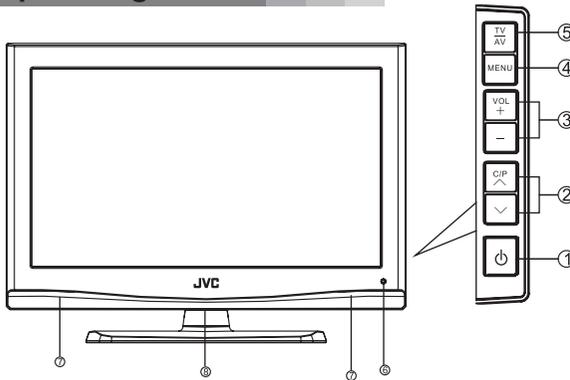


1. **Power button**  
Press to turn TV on or turn to standby mode.
2. **C/P <-> (PR+/-)**  
Press to select desired channels
3. **VOL+、VOL-**  
Press to adjust the volume level
4. **.MENU**  
Press to display the set up menu on the TV screen.
5. **TV/AV**  
Press to select TV or all video input modes : TV, AV,DTV, S-VIDEO, SCART, YPbPr, HDMI,DVD,PC.
6. **Infrared Remote Sensor**  
Receives the signals from the remote control.
7. **Speaker**
8. **Power Light**  
On playing Mode, the light turns blue.

**NOTE:** In TV/AV menu, DVD for LT-19DK3-/LT-22DK3-.

# LCD TV

## Connection

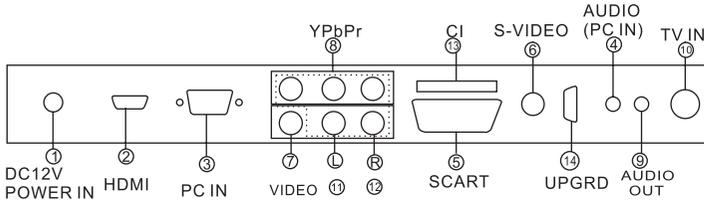

1. Connect to the DC input terminal of TV

2. HDMI Jack

- Supports connections between HDMI-connection-enabled AV devices (set top box, DVD Player, AV receiver and digital TV)
- No sound connection is needed for an HDMI to HDMI connection.

3. Connecting a Computer

- Connect the D-SUB connector to the PC video connector

Connect the stereo audio cable to the "PC AUDIO IN (STEREO)" jack on the rear of your TV and the other end to the "Audio Out" jack of the sound card on your computer.

4. AUDIO(PC In)

Connect a mini-plug.

5. SCART Jack (It does not correspond to S-video)

6. S-VIDEO Input

S-Video and Video share same input audio.

7. VIDEO Input Jack

Video and YPbPr share same input Audio.

8. YPbPr---Connecting Component Device

- Connect component video cables to component connect (Y,Pb,Pr) on the rear of your TV and the other ends to corresponding component video out connectors on the DVD.

- Y,Pb, Pr on AV connectors on your component device (DTV or DVD) are sometimes labeled Y.B-Y, and R-Y or Y, Cb and Cr.

- Connect the RCA audio cables to "AUDIO" (L) and "AUDIO (R)" on the rear of your TV and other ends to corresponding audio out connectors on DTV or DVD.

9. AUDIO OUT

10. Connecting an Aerial or Cable TV Network

- An outdoor aerial / A cable television network / To view television channels correctly, a signal must be received by the set from an outdoor aerial or a cable television network.

11. Left Audio

Connect this terminal to the sound output terminal of your DVD player or other video source this terminal is for composite S-Video and component signals.

12. Right Audio

Connect this terminal to the sound output terminal of your DVD player or other video source this terminal is for composite S-Video and component signals.

13. CI Card Input


PCMCIA (Personal Computer Memory Card, International Association) card slot.

14. UPGRD (Only for software upgrade)


## Installing The TV Base

The TV base will be separated with the TV unit. You should install the base before you use the TV unit.


1. Place the TV on its face on a soft blanket.

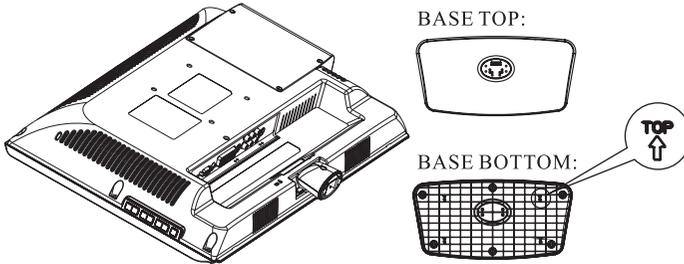

2. Place the base on the hinge of TV unit, with the base direction shown under the base. (See the picture)

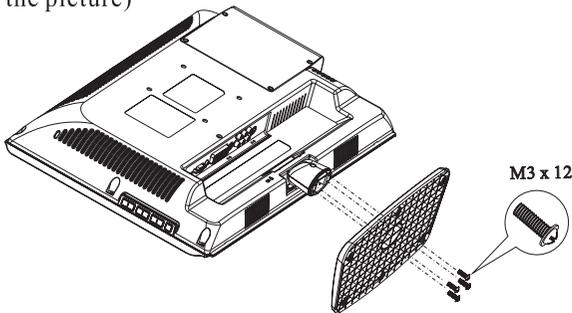

3. Install the base stand with 4 screws (M3 x 12) (See the picture)  
(4 Screws : Provided with TV unit)

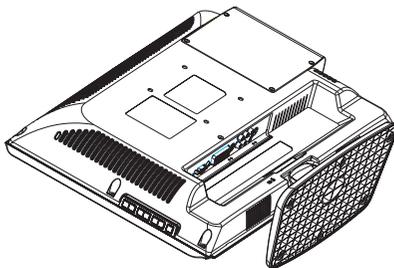

If you wish to mount this product on a wall, you must purchase a 100mm VESA Mount kit (Sold separately).  
You must closely follow the instructions supplied with the mounting kit.

## Using The Remote Control

### Remote Control

LT-19DK3BJ/LT-22DK3BJ



LT-19LK3BJ/LT-22LK3BJ



### Installing The Remote Control Batteries



1. Open the battery cover.



2. Insert batteries (two size-AAA batteries).  
Place batteries with their terminals observing the (+) and (-) indications.



3. Replace the cover and press down until the lock snaps closed.  
If the remote control is not used for an extended period of time, remove the batteries from the remote control as damage may result due to electrolyte leakage from the batteries.

**Note:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## Remote Control For TV:

Button	Description
Power 	Press this button to power on the television. Press again to put the set into standby
Muting 	Press this button to mute the sound output. Press it again to restore the sound output.
S.MODE	Press repeatedly to cycle through the available sound modes.
P.MODE	Press repeatedly to cycle through the available picture modes.
ASPECT	Press repeatedly to cycle through the available aspect modes.
SLEEP 	Press this button to set up the LCD TV auto turn off time.
Number	Press to select the TV programme you want to enter or input password.
Programme Enter -/--	Press this button before entering a programme number greater than 09. When DTV is selected, this function can not be used.
SWAP 	Press this button to toggle between the current and the previous programme you were viewing.
MEMU	Press this button to display the OSD (on-screen display) menu for adjusting the image, sound and functions. Pressing this button again removes the OSD display.
	Press these two buttons to directly adjust the TV programme.
	Press the volume button to directly increase or decrease the sound volume level.
Direction Buttons 	Work as Left/Right/UP/Down direction key respectively.
AV	Press this button to open the input source.
DISPLAY 	Press once to display the current LCD TV information, press again to turn off this display.

**NOTE:**1. AUDIO button is also available for AUDIO function in the countries supporting AUDIO signal.

2. TXT button only available for the TXT function.

## Remote Control For Teletext:

Button	Description
Red 	Press this Red button to enter corresponding item or page.
Green 	Press this Green button to enter corresponding item or page.
Yellow 	Press this Yellow button to enter corresponding item or page.
Blue 	Press this Blue button to enter corresponding item or page.
TXT 	Press this button to turn on the Teletext function press again to turn it off.
HOLD 	Press this button to freeze the analogue text image on the screen (the signal will continue to be broadcast). Press the button again to unfreeze.
MIX 	Press to make the analogue Teletext background transparent.
SUBPAGE 	Press to turn on Subpage press again to turn it off.
INDEX 	Press this button to go to the analogue Teletext index page.
SIZE 	Press to select the analogue Teletext Size.
REVEAL 	Press this button to display hidden analogue Teletext information.

# LCD TV

---

## Power On/ Off

### Turning on the TV

1. Plug the TV's power cord into a wall outlet (after this step, the main unit will turn on and enter standby mode automatically).
2. Press the **(Power)** button on the TV, or press the **(Power)** button on the remote control. The TV will turn on.

## Placing In Standby Mode

Your TV can be placed in Standby mode in order to reduce the power consumption. The standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

1. Press the Power button.
2. To switch back on, simply press power button.

**Remark:** Do not leave your TV in Standby mode for long periods of time. (when you are away on holiday, for example). It is the best to unplug the set from the mains and aerial.

## Changing Programmes

### Using the programme selection buttons on the remote control to change programmes

1. To select a programme, press the corresponding programme selection button on the remote control. For example, to select programme 8, press the "8" programme selection button on the remote control.
2. To select a over 99 programme, press the **(Programme Enter)** button **-/--** on the remote control, and then enter the programme number using the programme selection buttons. For example, to select programme 100, and then press the **-/--** "1", "0", "0" programme selection buttons on the remote control. (**-/--** "Button no available under DTV mode.")

### Using the buttons to sequentially change programmes


Press  buttons on the remote control or on the TV to sequentially select the TV programmes available in your area.

### Using the button to return to the previous programme

To return to the previous viewed programme, press the  button on the remote control.

## Teletext Function

Press the  button on the remote control to enable the Teletext function. To disable the function, press the button again.

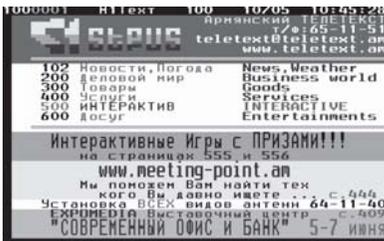

1. Press  button to turn on the Teletext function press again to turn it off.
2. Press  button to freeze the image on the screen (the signal will continue to be broadcast). Press the button again to unfreeze.
3. Press  button to change the Teletext background transparent.
4. Press  button to display the current time (Remark: Not available for some models).
5. Press  button to go to Teletext index page.
6. Press  button to select the Teletext Size.
7. Press  button to display hidden Teletext information
8. Press the **(Number)** buttons to jump to different pages.
9. Press the **(▲▼)** buttons to go to the previous or next page.

**NOTE:** When in Teletext, OSD menu has no effect.

## Connection Inputs

### 1. Model TV signal

Compatible with: PAL BG, PAL DK, PAL I, AUTO, SECAM/L, SECAM/L'

Compatible with: Audio, TeleText

### 2. CVBS

Compatible with: PAL, NTSC, SECAM

### 3. S-video

Compatible with: PAL, NTSC, SECAM

### 4. HDMI

Compatible with: HDMI

Compatible with: 480i, 480P, 576i, 576P, 720P50/60, 1080i50/60

### 5. YPbPr

Compatible with: 480i, 480P, 576i, 576P, 720P50/60, 1080i50/60

### 6. PC

Compatible with:

640x480@60/72/75Hz, 800x600@60/72/75Hz, 1024x768@60/70/75Hz, 1360x768@60Hz

### 7. SCART

Compatible with: PAL, NTSC, SECAM



## Basic Operation

To use the TV, be sure to have well inserted the power plug to a mains outlet within the TV's rated voltage range and to have connected the aerial.

### Basic Function

#### Standby

During TV play, you can press POWER button, TV enters to standby state. When TV on standby state, press POWER button you can turn on TV.

#### Sleep

During TV play, press SLEEP button you can set up the TV auto turn off time. There are 5 modes: Off, 15 Mins, 30Mins, 45Mins, 60Mins, 90Mins, 120Mins.

#### AV

When TV turns on, press AV button, and press ▲▼ buttons to select your desired source, then press ◀▶ to enter.

#### DISPLAY

TV screen display the current information when  button is pressed on any state. For example, on TV source the programme number, programme name, colour system and sound system are displayed.

#### Muting

Press  button to mute the sound output. Press it again to restore the sound output.

#### P.MODE

You can change between the picture mode presets Standard, Vivid, Soft, Optimal and User with the P.MODE button.

#### S.MODE

You can change between the sound mode presets Standard, Music, Movie, Speech and User with the S.MODE button.

#### AUDIO

On TV state, you can press AUDIO button to turn on or off other sound tracks and switch Mono/Dual I/Dual II modes.

#### Number

On TV state, you can press NUMBER button to directly select channel.

#### Channel Swap

On TV state, you can press  button to toggle between the current and the previous channel you were viewing.

#### Volume

During TV play, you can press  buttons and it will be displayed on the screen.

#### Channel

On TV state, you can press  buttons to select different channels.

## First Time Installation

When the system is first switched on, the Application attempts to configure itself for the first time. This is called First Time Installation. You can choose your language. The language that can be selected depends on the models.





You can choose your country after choosing language.



Only for EU



Then the system ask you to set the following menu.

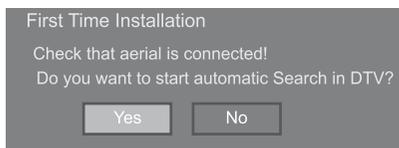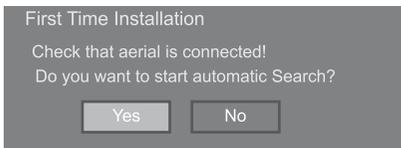

The user is then asked if they wish to perform an automatic tune for services. Automatic tuning function is described later in this manual. When the automatic tune finishes and services have been found, the lowest number service is selected and a banner describing that service is shown. A user may have chosen not to perform an automatic tune or no services may have been found by an automatic scan. In this instance the user may use the "Main Menu" to automatically scan again or perform a manual scan.


The menu items explained in this manual will be given in both English and the language used in this manual.

Depending on the model, the language used in this manual may not be available for selection as the OSD language.

The image of the OSD used in this manual are taken from the English OSD. Depending on the model, the English OSD is not available for selection.

## How to Use OSD Menu

### Setting Up Picture

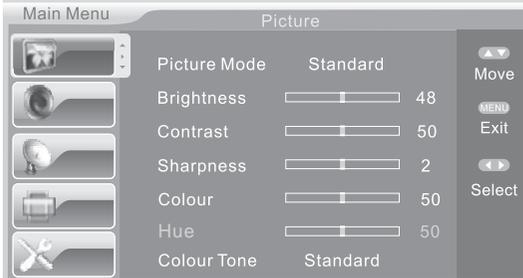

1. You can press **MENU** button on the remote control to enter OSD menu, then press **▲▼** buttons to select **PICTURE** in main menu.

2. You can press **◀▶** button to enter picture mode, and then press **▲▼** buttons to select your desired item, press **◀▶** buttons to adjust.

3. You can press **MENU** button on the remote control to exit OSD menu.

**Picture Mode:** Press **◀▶** to select. The following options are available "Standard, Vivid, Soft, Optimal, User"

**Brightness:** Adjust image black level.

**Contrast:** Adjust image contrast.

**Sharpness:** Adjust the sharpness level of image.

**Colour:** Adjust the colour saturation.

**Hue:** Adjust image hue (This is only available with NTSC)

**Colour Tone:** (You can select the most comfortable colour tone to your eyes): Standard, Warm, Cool.

**Standard:** Keep the original white colour


**warm:** Adjust the white colour to a little bit red.

**cool:** Adjust the white colour to a little bit blue.

**Remark:** 1. You must ensure "Picture Mode" is set to "USER" to allow you to make these adjustments. The changes you made will be stored automatically.

2. The above function are available for all source.

### Setting Up Sound

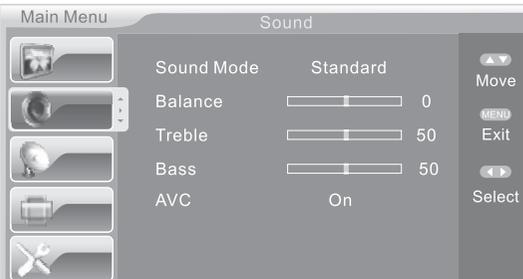

1. You can press **MENU** button on the remote control to enter OSD menu, then press **▲▼** buttons to select **SOUND** in main menu.

2. You can press **◀▶** button to enter sound mode, and then press **▲▼** buttons to select your desired item, press **◀▶** buttons to adjust.

3. You can press **MENU** button on the remote control to exit OSD menu.

**Sound Mode:** Press **◀▶** to select. The following options are available "Standard, Music, Movie, Speech, User"

**Balance:** Adjust Balance effect.

**Treble:** Adjust Treble effect.


**Bass:** Adjust Bass effect.

**AVC:** (Auto Volume Control) On/Off

**Remark:** You must ensure "Sound Mode" is set to "USER" to allow you to make these adjustments. The changes you made will be stored automatically.

## Setting Up Channel

1. On TV source state, you can enter to setting up model TV page.
2. You can press **MENU** button on the remote control to enter OSD menu, then press **▲▼** buttons to select channel in main menu.
3. You can press **◀▶** button to enter channel mode, and then press **▲▼** buttons to select your desired item, press **◀▶** buttons to adjust.
4. You can press **MENU** button on the remote control to exit OSD menu.

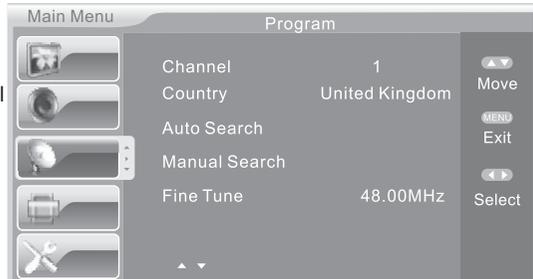

**Channel:** Display channel number or change channel.

**Country:** Germany / Italy / France / Spain /Netherlands /Norway /Sweden/ Finland / Denmark/Austria/Belgium/Switzerland/Poland/Czech/Bulgaria/Hungary/Romania/ (Only for EU).

**Country:** United Kingdom(Only for UK)

**Auto Search:** It allows you to search programme automatically.

**Manual Search:** It allows you to search programme manually.

**Fine Tune:** Auto Frequency Tuning.


**Skip:** You can turn programme skip On or Off. If you set a programme skip on ,when you press **◀▶**, the selected programme will be skipped.

**Programme Table:** You can modify the programme list to your favorite.

## Programme Table

After entering the channel menu:

1. You can press **▲▼** buttons to select Programme Table menu, and then press **▶** button to confirm. The window of Programme Table is displayed.
2. Press **▲▼** buttons to select the programme number you want to edit.
3. Press **RED, GREEN, YELLOW, BLUE** buttons on the remote control to edit, then press **ENTER** button to confirm.
4. You can press **MENU** button on the remote control to exit OSD menu.

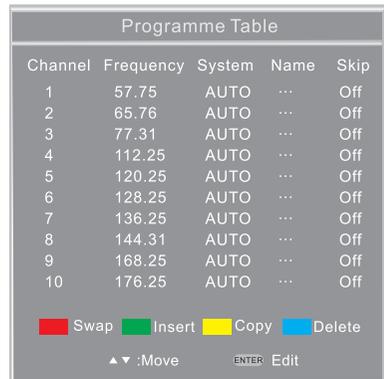


**Channel Editor:** Press **▲▼** buttons to select your desired item. After entering Channel Name, you can press **▲▼◀▶** Buttons to select character, and then press **ENTER** button to confirm. After completion of editing, you can select **OK** menu, and then press **ENTER** button to exit and save.



# LCD TV

## Setting Up Setup

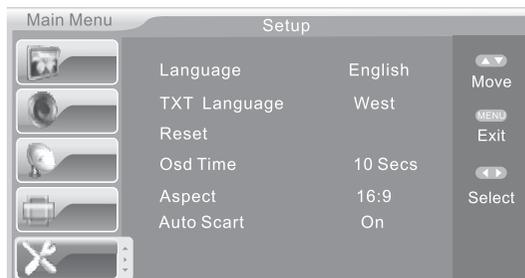

1. You can press **MENU** button on the remote control to enter OSD menu, then press **▲▼** buttons to select set up in main menu.

2. You can press **◀▶** button to enter PC setup mode, and then press **▲▼** buttons to select your desired item, press **◀▶** buttons to adjust.

3. You can press **MENU** button on the remote control to exit OSD menu.

**Language:** Select your favourite OSD language.

**TXT Language:** West, East, Russian, Arabic, Farsi.

**Reset:** If you choose this item, the all user set up will return to normal.

**Osd Time:** Setting up main menu and source menu turn off time: 5s, 10s, 15s, 20s, 25s, 30s.


**Aspect:** screen play mode, support: Zoom, 16:9, 4:3, Panoramic, Auto.

**Auto Scart:** You can set it On/Off.

**Note:** As the panel is 16:10, the screen aspect ratio will display 16:9 and black bars appear on the top/bottom of TV screen when the aspect ratio in AUTO mode.

**Caution:** The "Reset" will erase all analogue and digital TV programmes and reset all modes, settings and source to the factory defaults.

## Setting Up PC

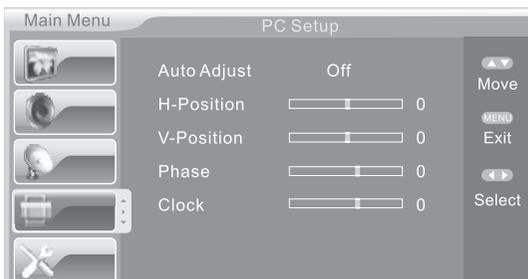

1. When input PC source, you can go to PC setup menu.

2. You can press **MENU** button on the remote control to enter OSD menu, then press **▲▼** buttons to select PC SETUP in main menu.

3. You can press **◀▶** button to enter PC setup mode, and then press **▲▼** buttons to select your desired item, press **◀▶** buttons to adjust.

4. You can press **MENU** button on the

remote control to exit OSD menu.

**Auto Adjust:** Press **◀▶** buttons, TV system adjust by itself, it can adjust H Position, V Position, Phase and so on that can make the image in center and display best.

**H-Position:** Adjust the Horizontal Position of the PC Screen.

**V-Position:** Adjust the Vertical Position of the PC Screen.


**Phase:** If necessary, adjust the pixel phase of the picture to avoid picture interference.

**Clock:** Press the **◀▶** button to minimize any vertical bars or stripes visible on the screen background.

# PC SETTING

## Setting up Your PC Software (Based on Windows XP)

The Windows display-settings for a typical computer are shown below. But the actual screen on your PC will probably be different, depending upon your particular version of Windows and your particular video card. But even if your actual screen look different, the same, basic set-up information will apply in almost all cases.

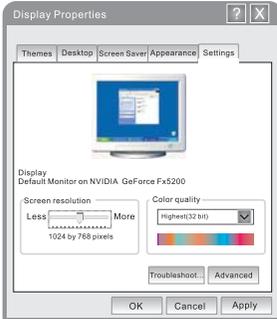

1. First, click on "Control Panel" on the Windows start menu.
2. When the control panel window appears, click on "Appearance and Themes" and a display dialog-box will appear.
3. When the control panel window appears, click on "Display" and a display dialog-box will appear.
4. Navigate to the "Settings" tab on the display dialog-box. The correct size setting (resolution) Optimum: 1024 x 768  
If a vertical-frequency option exists on your display settings dialog box, the correct value is "60" or "60 Hz", Otherwise, just click "Enter" and exit the dialog box.

## Display Mode

If the signal from the system equals the standard signal mode, the screen is adjusted automatically. If the signal from the system does not equal the standard signal mode, adjust the mode by referring to your Videocard user guide; otherwise there may be no video. For the display modes listed below, the Screen image has been optimized by manufacturer.

Resolution	Vertical Frequency (Hz)	Mode
640x480	60Hz 72Hz 75Hz	VGA
800x600	60Hz 72Hz 75Hz	SVGA
1024x768	60Hz 70Hz 75Hz	XGA
1360X768	60Hz	WXGA



## DTV (Digital TV) Introduction

### REMOTE CONTROL FOR DTV MENU



Button	Description
Menu	Open/Close Digital TV menu
▲	Move between menu items
▼	
◀	Move between menu items
▶	
FAV.	Favourite List
GUIDE	Open/close Electronic program guide
ENTER	Function defined by context
	In DTV mode open/close caption
DTV/RADIO	Switch DTV program and radio program
LIST	Open/Close channel List
STILL	Open/Close stillness image
	Switch TV channel


## Setting Up DTV



1. On DTV source state, you can enter to set up model TV page.
2. You can press MENU button on the remote control to enter OSD menu, then press ▲▼ buttons to select DTV in main menu.
3. You can press ◀▶ button to enter DTV mode, and then press ▲▼ buttons to select your desired item, press ◀▶ buttons to adjust.
4. You can press MENU button on the remote control to exit OSD menu.



1. On DTV source state, you can enter to set up model TV page.
2. You can press MENU button on the remote control to enter OSD menu, then press ▲▼ buttons to select DTV in main menu.
3. You can press ◀▶ button to enter DTV mode, and then press ▲▼ buttons to select Advanced Setting, press ▶ button to enter.
4. You can press MENU button on the remote control to exit OSD menu.

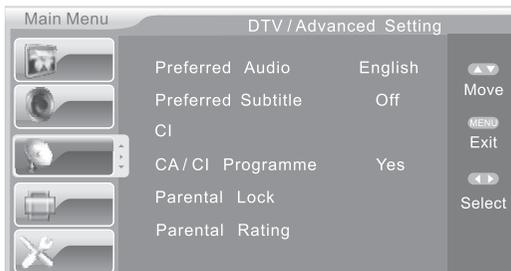



# LCD TV

## DTV Source Function Instruction

### 1.To Select Programme

When the current input is on DTV state, press MENU button to enter DTV page, before you go to auto select you should set up AREA, then you can choose Auto Search item .Area search is intelligent and convenient for us to select channel,it selects channel from all channel points and programmes that the selected country (area) has.

- Support country(area): Germany / Italy / France / Spain / Netherlands / Norway /Sweden/ Finland /Denmark/Poland/Hungary/Austria/ Switzerland/Romania(Only for EU). Support country(area):United Kingdom(Only for UK).
- TV will auto search all channel point and programme in this country(area) after enter the auto search page;
- During TV auto search, press MENU button to exit this mode ;

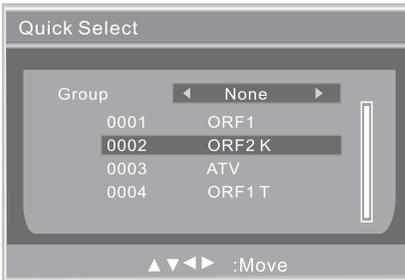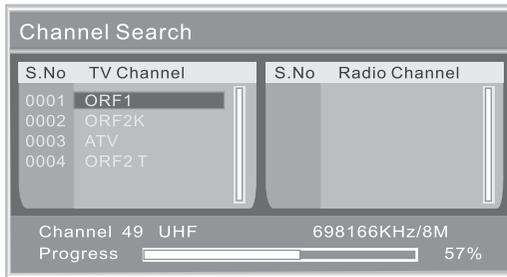

### 2.To Quick Select Programme

When play DTV, press LIST button, then press ▲▼ buttons and you can directly select programme. The screen displays as the picture below:

You can use ◀▶ buttons to switch programme groups .There are 8 options: None, News, Science ,Sports, Movie, Kids, Music, Fashion. Favorite Programmes in this group will be displayed on screen, you can use ▲▼ buttons to select your desired item, then press ENTER button to watch the programme. To exit the menu, press MENU button.



### 3. Switching Audio and Language

When play DTV, press AUDIO button to display Multi Audio page.

You can press right or left buttons to cycle through the Stereo-->Left-->Right modes.

You can use ▲▼ buttons to select audio language.

Press ENTER button to exit this menu. You can also use MENU button to exit this menu.

**4. EPG**

If you want to understand what programmes will play and get TV information in the current or in the future, you can press **GUIDE** on the remote control to enter EPG menu. Date and time will be shown on up-right side, programme list will be shown on left side , programme list which will be playing in different time will be shown on right. You can press **LEFT** or **RIGHT** button to switch, press **UP** or **DOWN** button to switch between different programme to EPG .Current information will be shown on the screen below.


On some models when in auto aspect mode, you may notice the size of the EPG menu changes according to the aspect of the picture being displayed . This is due to the software version in use by the TV's operating system and is not a fault. Change to 16:9 mode to stop this effect.

There are 3 modes:

Daily mode : If you want to display programmes on daily mode ,you can press **RED** button to enter Daily mode.



Weekly mode :If you want to display programmes on Weekly mode , you can press **GREEN** button to enter Weekly mode;

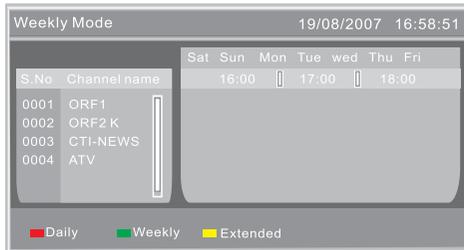

Extended mode : Press **YELLOW** button, the extended menu display on screen and you can get more information from this page. you press **MENU** button return to EPG menu;



**5. Switching TV/ Radio**

During programmes play, you can press **TV/RADIO** button to switch TV and radio.

# LCD TV



## 6. DTV Channel Manager

You can use this function to manage these systems: favorite, skip, delete, arrange, divide and so on.

When input DTV, you can press ► button to enter DTV page and choose Channel Management, then press ► button to enter this page. The screen displays as the picture below:

### Channel Organizer

In this page, you can press ▲▼ buttons to select your desired item.

Compatible with: favorite, delete, skip, lock, for example:

Using ▲▼ buttons to select. Press the coloured buttons a second time to de-select

FAV: Press RED button.

DEL: Press GREEN button.


Skip: Press YELLOW button.

Lock: Press BLUE button. (Initial password is 0000)

Channel name: Press ► button to enter the manual programme name.


If the FAV/DEL/Skip attribute was changed, you should press Enter button to keep your select, then press MENU button to Exit, and **Successfully updated** will be displayed on the screen.

If you set up several attributes, the system will auto arrange in order: FAV, DEL, Skip.

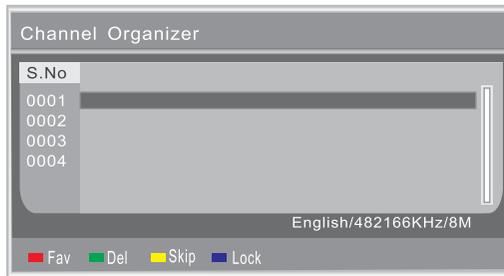

### To Edit a Channel Name

Press ▲▼ buttons to select the channel you want to edit. Press ► button to edit Name.

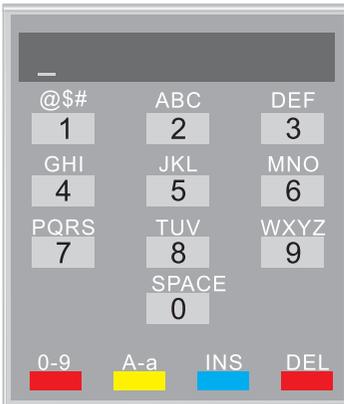

Then the selected programme appears in a text box that opens below the picture window. The first character of the name is enclosed in square brackets.

RED button: Press to exchange option letter and number.

YELLOW button: Press to exchange capital letter and small letter

BLUE button: Press to insert character.

GREEN button: Press to delete character.

Press the MENU on the remote control to exit and save.

Use the number buttons (0-9) to modify this character using the table below.

	Remote Button	1	2	3	4	5	6	7	8	9	0
	Press once	1	2	3	4	5	6	7	8	9	0
Press RED button	Press once	\$	A	D	G	J	M	P	T	W	SP
	Press twice	#	B	E	H	K	N	Q	U	X	SP
	Press three times	*	C	F	I	L	O	R	V	Y	SP
	Press four times	!	/	/	/	/	/	S	/	Z	SP
	Press five times	-	/	/	/	/	/	/	/	/	SP
	Press six time	@	/	/	/	/	/	/	/	/	SP
	Press seven times	/	/	/	/	/	/	/	/	/	SP
Press YELLOW button	Press once	\$	a	d	g	j	m	p	t	w	SP
	Press twice	#	b	e	h	k	n	q	u	x	SP
	Press three times	*	c	f	i	l	o	r	v	y	SP
	Press four times	!	/	/	/	/	/	s	/	z	SP
	Press five times	-	/	/	/	/	/	/	/	/	SP
	Press six time	@	/	/	/	/	/	/	/	/	SP
	Press seven times	/	/	/	/	/	/	/	/	/	SP

**Channel Sorting**

In channel sorting menu ,you can press ▲▼ buttons to select order of the programme, then press ► button to enter .


Number, name , frequency and band were displayed on screen below; important items were displayed on screen up-left in order.

□ Area is the first item , compatible with : Germany / Italy / France / Spain / Netherlands / Norway /Sweden/ Finland / Austria/Denmark/Switzerland/Poland/Hungary/Romania/ All Area(Only for EU).

Compatible with :United Kingdom(Only for UK)

□ The second item is to select the list by the order of Scramble. There are 3 items: ALL, Free, Scramble.

□ The third item for user to select. There are 5 items: All , A to Z, Z to A, LCN+ and LCN- Press ENTER button to select your desired item. If you want to save this item you should press ENTER button again.

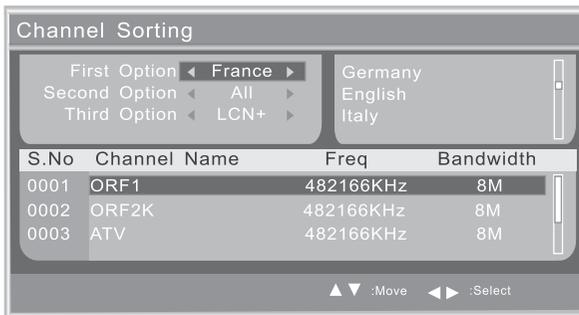


# LCD TV

## Channel Grouping

In channel grouping, you can press ▲▼ buttons to select group, then press ► button to enter this page, for example:

In this page, select NO. and channel name will be displayed on the screen on left, and you can see FAV and Group items, it can tell you the channel state. There are 8 modes: 1 None, 2 News, 3 Science, 4 Sports, 5 Movies, 6 Kids, 7 Music, 8 Fashion.

You can move arrow to select channel, press corresponding number to set up will be displayed in group. Press ENTER to save, then press MENU button to exit, and **Successfully updated** will be displayed on the screen.

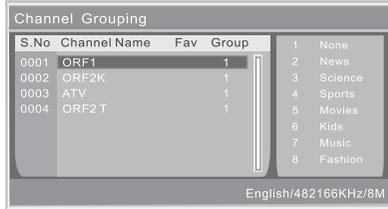

## Delete Channel

In this page, you can press ▲▼ buttons to delete channel.


**Delete all TV Channels:** You can press ► button to delete all TV channels.

**Delete all Radio Channels:** You can press ► button to delete all Radio channels.

## 7. To Select FAV Programme

During DTV play, press FAV button to enter this menu. The screen displays as the picture below:

This page will display a FAV. List, we can see the channel name and know the channel mode be set by user, you can use ▲▼ buttons to select your desired item, and press ENTER button to enter. To exit press the MENU button.

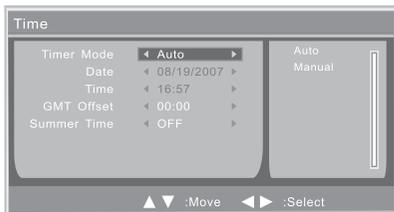

## 8. Time


When in DTV mode, press the MENU button to display the DTV menu. Choose the TIME item

Using ▲▼ buttons to select your desired items and ► button to change items.

Then press the ENTER button to store the setting or press MENU to exit.

**9. Native Game** (only available in DTV mode)


When in DTV, press MENU button to open main menu and enter DTV menu, you can choose Native Game ,then press ► button to enter .

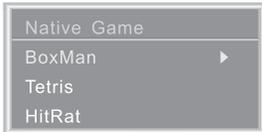

There are 3 items: BoxMan, Tetris and HitRat.

Using ▲▼ buttons to select you want to play item. For example, if you select BoxMan.

You can press MENU button to exit.

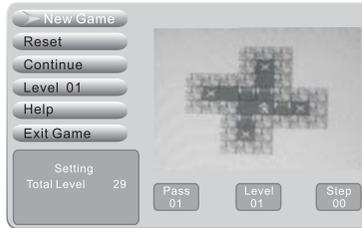

**10. Advanced Setting**

When input DTV, press MENU button to open main menu and enter DTV menu, you can choose Advanced setting, then press ▲▼ button to enter . There are 6 items: Preferred Audio, Preferred Subtitle, CI, CA/CI programme, Parental Lock and Parental Rating. Use ► button to select the item you want to play. You can press MENU button to exit.



**Preferred Audio**

In this page, you can press ▲▼ buttons to highlight Preferred Audio, then press ◀▶ buttons to display the options in turn.

The following options are available: Dutch, English, French, German, Italian, Spanish, Portuguese, Danish and Czech.

**Preferred Subtitle**

In this page, you can press ▲▼ buttons to highlight Preferred Subtitle, then press ◀▶ buttons to display the options in turn.

The following options are available: English, French, German, Italian, Spanish, Portuguese, Danish, Czech and off.

# LCD TV

---

## CI

Common interface

### CA/CI Program

1. Use > button to select the common interface menu.
2. Press OK/ENTER to select the main menu and use ▲▼ buttons to change item. To exit, press the EXIT/MENU button.

#### **NOTE:**

Some TV's require the ENTER and MENU buttons for this function and other TV's may require OK and EXIT.

### Parental Lock

In this page, you can press the ▲▼ button to select Parental Lock.  
The window below is displayed:



#### **Initial password is 0000.**

Change your password:

Enter the old password in the code entry box using the number buttons(0~9);

Input new password to the Enter New Password entry box using the number buttons(0~9);

Enter the same new password in the Confirm New Password entry box using the number buttons(0~9).

### Parental Rating

This setting allows you to control the playback of certain TV program using a rating system.

- 1) Use the number buttons on the remote to enter your 4 digit password (Default 0000) then press ENTER.
- 2) Use the ◀▶ buttons on the remote to move to the rating level required.
- 3) Use ▲▼ to select the rating level, then press ENTER to confirm.
- 4) Press the MENU button to exit.

## Teletext Function

### Teletext(Only for UK)

By pressing the **Ⓜ** button while in digital viewing mode, the OSD Teletext is displayed after loading, in digital mode some features become available through the remote control whilst the OSD Teletext is displayed. The navigation buttons **▲▼** are used to go from one page to another into the Teletext page itself (Cursor mode) and the **[ENTER]** button selects and goes to the focused page.


The colour buttons are interpreted as shortcuts to specific pages if the Teletext page handles them (Shortcut mode).

Button	Description
Red	Press this Red button to enter corresponding item or page.
Green	Press this Green button to enter corresponding item or page.
Yellow	Press this Yellow button to enter corresponding item or page.
Blue	Press this Blue button to enter corresponding item or page.
TXT	Press this button to turn on the Teletext function press again to turn it off.

Press the **Ⓜ** button on the remote control to enable the Teletext function. To disable the function, press the button again.

### Only for EU

1. Press the **Ⓜ** button to turn on the Teletext function and press again to turn off.
2. Press the **(Number)** buttons to jump to different pages.
3. Press the **(▲▼)** buttons to go the previous or next page.

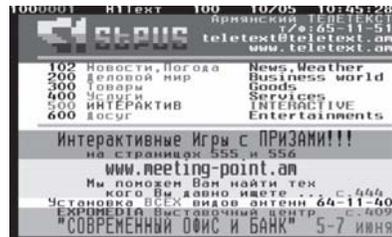

Button	Description
Red	Press this Red button to enter corresponding item or page.
Green	Press this Green button to enter corresponding item or page.
Yellow	Press this Yellow button to enter corresponding item or page.
Blue	Press this Blue button to enter corresponding item or page.
TXT	Press this button to turn on the Teletext function press again to turn it off.



## DVD Player(Optional)

*Only for LT-19DK3-/LT-22DK3-model.*

### Types of Discs Your DVD Player Play

	DISC LOGO	Contents	Size
DVD		Digital Audio+Video (Active Picture)	12cm
CD		CD-DA: Digital Audio	12cm
MP3/JPEG		Compressed Digital Audio /Still high resolution	12cm

It is recommended that files to be played back in this unit are recorded under the following specifications:

<MP3>

.Sampling frequency: 32kHz or 44.1kHz or 48kHz

.Constant bit rate:32 kbps-320kbps

<JPEG>

.Upper limit: 24Mpixel

## Remote Control For DVD




Button	Description
GOTO	Press goto and input time which you would like to view.
ANGLE	This button can adjust the viewing angle of DVD.
MEDIA	To choose Disc /Card/USB Reader media.
-/--	When DVD is played, press to select programme greater than 10.
0	When DVD is played, press to select tenth.
REPEAT	1.Repeat one track / chapter. 2.Repeat the whole disc / title. 3.Cancel repeat function. (When MP3 is played, the player will repeat the whole directory. Then next pressing will cancel the repeating function.)
A-B	Allow you to repeat specified section(from A-B) on a disc.
LANGUAGE	You can select a desired Audio language quickly and easily with the Language button.
SUBTITLE	You can select a desired language quickly and easily with the Subtitle button. If a menu is encoded on the disc, you can select by using the MENU button.
SETUP	Bring up the DVD player's Setup Menu. Use ▲▼◀▶ To select setup item, and press "ENTER" to affirm then execute.
DVD MENU	1.When CDDA / MP3 / JPEG / GAME is played, it is invalid. 2.When DVD is played, brings up the Root Menu.
TITLE	1.When DVD is played, brings up the Title Menu. 2.Press to return to the upper menu when playing USB/card.
ZOOM	Zoom a picture.
EJECT	Press this button to eject disc from DVD player. It functions only when DVD has been selected with media.
PLAY/ PAUSE	Start playing the disc. Pause the playback.
STOP	Stop playback.
REV/FWD	Use to skip a scene or music. When playing JPG with the key pressed, the picture rotates clockwise or anti-clockwise.
ENTER	Enter to select.
Prev/ Next	Go back to the previous or skip to the next chapter during playback.
DISPLAY	Press once to display the current LCD TV DVD mode information, and press again to turn off this display.
▲▼◀▶	Press to select up/down/left/right.

**NOTE:** The operation key to DVD player can let function only at the time of DVD mode.



## DVD Player

### DVD Keypad Definition

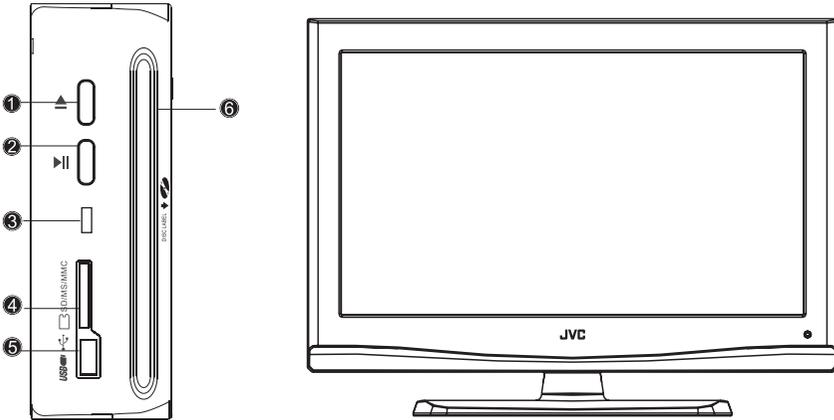

- ① EJECT Press this button to eject disc from DVD player.  
(It functions only when DVD has been selected with media.)
- ② PLAY/PAUSE Start playing the disc/Pause the playback.
- ③ LED
- ④ Card Reader Compatible with SD/MMC/MS card.
- ⑤ USB Reader
- ⑥ DVD Reader

**NOTE:** if you want to play DVD, please select the DVD source input first, otherwise it doesn't work.

## Basic Operation

### Turn On the TV and select DVD mode

Press the Power button on the TV or the remote control, and by pressing AV, then selecting DVD, you can switch to DVD mode.

### Place a Disc

Push a disc gently into the DVD (Single-side disc you must put the picture side front and data side rear. Double side disc have content data both sides, so you can place either side front.), and the player starts to read. Then the disc starts playing Automatically.

**NOTE:** For some certain type discs, after reading out the type, the Play or Enter button should be pressed to start playing.

### Play

The contents of each disc menu vary according to how the disc was authored and features are included. The disc menu will be turned on for you to select, when Menu button is pressed. Also play and pause can be switched with the Pause button on the remote. Moreover, such as menu play, title play, sequence play etc., these different play modes are offered.

### Menu Play (compatible with DVD discs)

- I. Press DVD Menu  
TV screen displays the DVD Root Menu when a DVD disc is loaded.
- II. When a DVD disc is loaded, you can press ▲▼ buttons to highlight the menu item you want to choose.
- III. Press "ENTER" button to begin play.
- IV. Return when playing: When a DVD disc is playing, press the DVD Menu button, and you can return to Root Menu.
- V. Stop
  - 1) When you press "■" button for the first time, the player turns into PRE stop state. At the same time the OSD appears "PRE Stop". To begin the title over, press Stop twice.
  - 2) In quasi stop mode, the player remembers where you stopped, when you start playing the disc again, the DVD player picks up where you left off.
  - 3) In stop mode, when you press Play, the player enters sequence playback mode. For the disc protection, before you press ⏏ button to eject the disc when playing, please press Stop button at first. After taking out the disc, press ⏏ again to close the tray.  
If you're not going to use the DVD player for a long time, be sure to remove the Mains plug.

### Title Play (compatible with DVD discs only)

- I. During DVD playback, press DVD Menu button to display the DVD title content.
- II. Press the ▲▼◀▶ buttons to highlight the title you want to choose, And press Enter; also you can press the numeric buttons to choose.
- III. The DVD player begins with the chapter 1 of the chosen title.

### Sequence Play (compatible with DVD, MP3/JPEG discs)

- IV. In the stop mode, when press the Play button, the unit then enters sequence playback mode. This feature is effective to all the compatible discs.

## Additional Operation

### ☒ **Selecting Tracks (compatible with DVD, CD, MP3/JPEG discs)**

- When playing a DVD disc, press Numeric buttons on the menu or title page to select tracks; During DVD playback, you can input desired title number directly.
- When playing MP3/JPEG discs, press Numeric buttons to select different tracks on current track list.

**NOTE:** If the selected track is not available, the input would be invalid.

### ☒ **Skipping Tracks (compatible with DVD, MP3/JPEG discs)**

- To skip forward to the beginning of the next title / chapter / track on a disc, press Next on the remote or the front side of the player
- To skip backward to the beginning of the preceding title / chapter / track on a disc, press Prev on the remote or the front side of the player.

**NOTE:** If a DVD disc is loaded, it will vary according to how the disc was configured .

### ☒ **Multi speed Fast Motion Playback (compatible with DVD, VCD, CD discs)**

You can search forward or reverse mode during playback.

- Press the ►► button on the remote during playback to search through a disc. Press the button again on the remote to search at the next speed. Fast Forward Playback has four speeds: 2,4,8,20. With each consecutive press of the button, the search speed increases. If you press the button six times, Fast Forward Playback cycles back to normal playback.

During DVD playback, when Fast Forward Playback gets to the beginning of the next title / chapter, it resumes normal playback;

- Press Play button to resume normal playback.  
During CD playback, with the speed ◀◀, the player has audio output.

- Press the ◀◀ button on the remote during playback to search through a disc. Press the button again on the remote to search at the next speed. Fast Reverse Playback has four speeds: 2,4,8,20. With each consecutive press of the button, the search speed increases. If you press the button six times, Fast Reverse Playback cycles back to normal playback.

During DVD playback, when Fast Reverse Playback gets to the beginning of the playing title / chapter, it resumes normal playback;

- Press Play button to resume normal playback.  
During CD playback, with the speed, the player has audio output.

**NOTE:** During MP3 playing, the REV and FWD would be invalid.

### ☒ **Freeze Frame and Frame Advance (compatible with DVD, CD, MP3/JPEG discs)**

- During CD, MP3/JPEG playback, press Pause once to freeze playback; Press the Pause button again or Play button to resume normal playback.
- During DVD playback, press Pause once to freeze playback; press Pause button again To advance the picture one frame at a time; Press Play to resume normal playback.

- ▣ **Using the Repeat Feature (compatible with DVD, CD, MP3/JPEG discs)**  
Whilst a disc is playing, press Repeat button once, and the repeat banner appears to show current repeat mode.

- ▣ **Changing the Audio Language (compatible with DVD discs)**  
During disc playback, press Language on the remote once, and the audio language info banner appears.  
When a DVD is recorded with multiple soundtracks, you can use the Language feature to temporarily change the audio language (the language of the soundtrack)  
There are a few supported languages, with each consecutive press of the Language button, the audio language switches and the corresponding serial number appears on the screen. For example, "Language Icon: [1 English DTS 6CH] (the availability of the languages are disc-dependent).

## 📺 Subtitles (compatible with DVD discs)

Press the Subtitle button on the remote once, and the subtitle info banner appears. When a DVD is recorded with subtitles, you can use the Subtitle feature to view the subtitles On-screen.

To display subtitles, press the Subtitle button again. The default language with its corresponding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are a few supported subtitles. With each consecutive press of the Subtitle button, the subtitle switches. For example, "Language Icon: [1 English DTS 6CH]"(the availability of the subtitles are disc-dependent). To turn subtitles off.

## 📺 Changing the TV type (compatible with DVD, CD, MP3/JPEG Discs)

Press Setup button on the remote to display PREFERENCE PAGE. Select TV TYPE to choose PAL, NTSC or AUTO.

**NOTE:** If AUTO TV system is selected, it can auto reach the highest definition depends on the disc.

If it is not full screen state (note: Wide Screen programme would never reach full screen state) or in black and white, press the TV System to the TV set of NTSC or PAL.

When playing in different TV system, some discs may not have their features entirely fulfilled in some certain standard.

PAL System of TV set is recommended.

## 📺 Mute the Audio(compatible with DVD, CD, MP3/JPEG discs)

Pressing the Mute button "🔇" allows you to reduce sound to an inaudible level, and "🔇" will be displayed on screen. Press the button again or press the Vol +/- button to return to the normal condition.

**NOTE:** If the player playback disc without sound, please try to press Mute button to resume.

## 📺 Zoom In the Video Image (compatible with DVD, JPEG discs)

a) The Zoom Function allows you to enlarge or zoom out the video image and to pan through the image. Press Zoom repeatedly to activate the function and choose the required zoom factor: In video mode: 2X, 3X, 4X, 1/2, 1/3, 1/4 and off.

**NOTE:** 1. This feature does not work when the Disc Menu appears.

2. The zoom function is not effective according to DISC.

b) Use the arrow buttons to pan across the screen when the zoom factor is 2, 3 or 4.

## 📺 Repeat a Specific Segment on the Disc that You Define (compatible with DVD, CD, MP3 discs)

a) During the normal or fast motion playback, press the A-B button once, and "REPEAT A" will appear on the screen. This indicates the start of the loop to be repeated.

b) During the normal or fast motion playback, press A-B again, and "REPEAT B" will appear on the screen. It indicates the end of the loop.

Looping will run from set point A to set point B until you turn off repeat.

c) Press A-B again to cancel A-B loop mode.


When playing a CD disc, you can repeat a specific segment only in one track.  
 When the next track begins, A-B Repeat turns off automatically.  
 When playing a DVD disc, you can repeat a specific segment only in one title /chapter.

- Volume control (compatible with DVD, CD, MP3/JPEG discs)**  
 You can press the Volume button on the front of TV set or the amplifier to control the sound Level.  
 Pressing the Vol+ button on the remote allow you to amplify the sound level; Pressing Vol- will reduce the sound level.

**NOTE:** The operation key to DVD player can let function only at the time of DVD mode.

## Playing MP3 and JPEG discs

Place a MP3/JPEG disc into the tray, and the player will auto search the directories saved MP3/ JPEG files. After searching, it will auto go to the first directory saved MP3 files (to the disc containing both MP3 and JPEG files; To the disc containing single type of files, it will auto go to the first directory) and play the first song in the directory ("01:" is highlighted). The screen displays as the picture below:

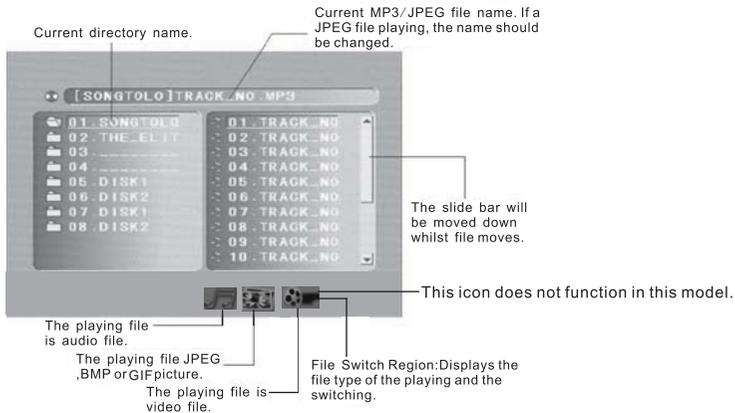

Use the Arrow buttons to enter the Directory Region and highlight the desired directory, then the first track under it starts playback; Also you can use the Arrow buttons to enter the File Region and select the file you want to play.

**NOTE:**

- I. Press the Left and Right arrow buttons, you can activate Directory Region, File Region and File Switch Region separately.
- II. The highlight in Directory Region and File Region is shown as the picture above; Whilst it appears a transparent rectangle in File Switch Region.
- III. In File Switch Region, you can press the Left and Right arrow buttons to highlight, then press Enter; the "Speaker", "Picture" and "Disc" button is illustrated in the above picture. If a MP3 file playing, "Speaker" is selected.
- IV. For the disc with MP3 and JPEG files, when playing a JPEG picture, press the Return button to return to JPEG list.
- V. You can press the Numeric buttons to select the file you want to play. For example, if you desire the 2<sup>nd</sup> track in current list, press the 2<sup>nd</sup> starts playback.


**NOTE:** When playing a disc with MP3, video cannot be output whilst only digital audio can.

# LCD TV

VI. When the cursor key(◀, ▶ etc.)is pushed, the function that the image rotate is provided while displaying the JPEG image file. You can rotate the shown picture up/down/left/right. When playing the JPEG image file, you can press ▶|| to slide show.

## USB/CARD Storage Device

Insert the USB/CARD Storage Device into the USB/CARD slot, and press the "MEDIA" button to select USB or CARD , then the player will auto search the directories saved MP3 / JPEG files. After searching, it will auto go to the first directory saved MP3 files (to the disc containing both MP3 and JPEG files; For the disc containing single type of files, it will auto go to the first directory) and play the first song in the directory ("01:" is highlighted).The screen displays as the picture below:

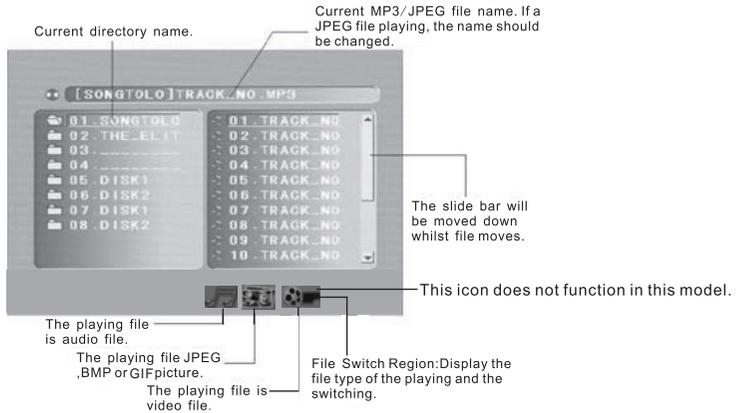

### Remark:


Other setup and operation method are same as above: Playing MP3 and JPEG discs

**NOTE:** 1. Do not pull USB/CARD out while being displaying and reading.

2. USB/card media slot only work in DVD mode, so please select the DVD source input first before playing USB/card media.

THE SYSTEM SETUP MENU

1.1 SYSTEM SETUP

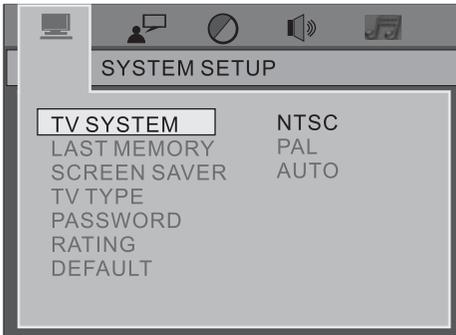


1. You can press SETUP button to enter the SYSTEM SETUP Menu, and you will see the window just as the left picture.
2. In this interface, you can press ▲▼ buttons to select any your desired item, and then press ► button to enter the detailed setting menu, choose your desired setting option, then press ENTER button to confirm. And the setting that you chose can be completed by pressing the SETUP button of yellow .

ITEM	DESCRIPTION
TV SYSTEM	According to the system of your connected image signal to choose appropriate option. NTSC color system correspond to NTSC option PAL color system correspond to PAL option if you can't confirm the color system, just choose AUTO option
LAST MEMORY	It can store and replay the last state before you switch. ON: keep it on, this function is available. OFF: keep it OFF, this function is not available. This function is only available for DVD mode, not for USB or Card device.
SCREEN SAVER	When the unit switched on without a disc playing for several minutes, a moving picture will appear on the screen. You can press any button(except STANDBY ) to wake it up.
TV TYPE	In this item, you can choose 4:3PS,4:3LB,16:9.
PASSWORD	Enter and set password(default password is 0000)
RATING	DISC rate set
DEFAULT	Choose it, all function setting will go back to default state.

# LCD TV

## 1.2 LANGUAGE SETUP

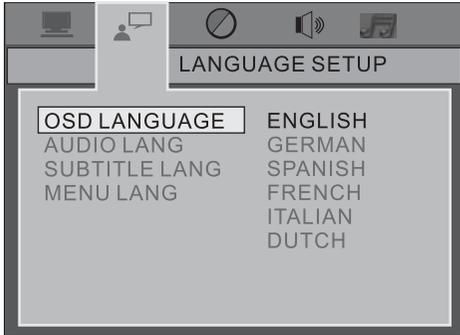

1. You can press **SETUP** button to enter the **LANGUAGE SETUP** Menu, and you will see the window just as the left picture.
2. In this interface, you can press **▲▼** Buttons to select any your desired item, and then press **▶** button to enter the detailed setting menu, choose your desired setting option, then press **ENTER** button to confirm. And the setting that you chose can be completed by pressing the **SETUP** button of yellow .

- . The menu items explained in this manual will be given in both English and the language used in this manual.
- . Depending on the model , the language used in this manual may not be available for selection as the OSD language.
- . The image of the OSD used in this manual are taken from the English OSD.
- . Depending on the model , the English OSD is not available for selection.

ITEM	DESCRIPTION
OSD LANGUAGE	You can select your suitable OSD language in this item.
AUDIO LANGUAGE	You can select your suitable audio language in this item.
SUBTITLE LANGUAGE	You can select your suitable subtitle language in this item.
MENU LANGUAGE	You can select your suitable menu language in this item.

(The language that can be selected depends on the models)

1.3 VIDEO SETUP



1. You can press SETUP button to enter the VIDEO SETUP Menu, and you will see the window just as the left picture.
2. In this interface, you can press ▲▼ buttons to select any your desired item, and then press ► button to enter the detailed setting menu, choose your desired setting option, then press ENTER button to confirm. And the setting that you chose can be completed by pressing the SETUP button of yellow .

ITEM	DESCRIPTION
BRIGHTNESS	According to your requirement, adjust the brightness
CONTRAST	According to your requirement, adjust the contrast
HUE	According to your requirement, adjust the hue
SATURATION	According to your requirement, adjust the saturation
SHARPNESS	According to your requirement, adjust the sharpness

**NOTE:** The above functions are only available in DVD mode.

# LCD TV

## 1.4 SPEAKER SETUP



1. You can press SETUP button to enter the SPEAKER SETUP Menu, and you will see the window just as the left picture.

2. In this interface, you can press ▲▼ buttons to select any your desired item, and then press ► button to enter the detailed setting menu, choose your desired setting option, then press ENTER button to confirm. And the setting that you chose can be completed by pressing the SETUP button of yellow .

ITEM	DESCRIPTION
DOWNMIX	When play the 5.1 track DISC, there are 3 options are available, LT/RT,STEREO/VSS

## 1.5 DIGITAL SETUP



1. You can press SETUP button to enter the DIGITAL SETUP Menu, and you will see the window just as the left picture.

2. In this interface, you can press▲▼ buttons to select any your desired item, and then press ► button to enter the detailed setting menu, choose your desired setting option, then press ENTER button to confirm. And the setting that you chose can be completed by pressing the SETUP button of yellow .

ITEM	DESCRIPTION
DUAL MONO	Audio output has 4 options available: STEREO/MONO L/MONO R/MIX MONO



## Suggestion

- Trouble shooting guide: Before you arrange for service

No sound or picture.	Check that the mains lead has been connected to a wall socket. Check that you have pressed the POWER button. Check the picture contrast and brightness settings. Check the volume.
Normal picture but no sound.	Check the volume. Check whether the  button has been pressed on the remote control.
No picture or black and white picture	Adjust the colour settings. Check that the broadcast system selected is correct.
Sound and picture interference.	Try to identify the electrical appliance that is affecting the set and move it further away. Plug your set into a different mains socket.
Blurred or snowy picture, distorted sound.	Check the direction, location and connections of your aerial. This interference occurs often due to the use of an indoor aerial.
Remote control malfunctions.	Check the batteries in the remote control. They may need replacing. Operate the remote control at a distance of no more than 8 meter. Clean the upper edge of the remote control (transmission window). Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall batteries and try to operate the remote control again.
The picture is noisy or distorted	Make sure that the disc is not dirty or scratched. Clean the disc.
"No signal" message is displayed.	Check that the signal cable is firmly connected to the PC. Check that the PC is turned on.
In PC mode, "Not Supported signal" message is displayed.	Check the maximum resolution and the frequency of the video adapter. Compare these values with the data in the Display Modes.
No HDMI output	Check the video output is HDMI enabled. Check the connection between the TV and the HDMI jack of video input.
Disc does not play	Ensure that the disc is installed with the label side facing towards you. Check the region number of the DVD.
DVD disc cannot be inserted.	Pushing the AV button of TV or remote control, after changing into DVD mode, insert the DVD disc.
When connecting Everio of JVC with USB, file of SD card is not recognized.	Removing the SD card from JVC Everio, insert in the CARD reader of the TV. Refer to page 35 for the reading method of data.

# LCD TV



## Product Specification

LCD	LT-19LK3-	LT-19DK3-	LT-22LK3-	LT-22DK3-
Viewing Angle(H/V)	170/160			
Contrast Ratio	850:1		700:1	
Response Time	5ms			
Display Colour	16.7M		16.7M	
WXGA+ resolution(pixels)	1366X768		1366X768	
<b>DE (Data Enable) only mode</b>				
LVDS (Low Voltage Differential Signaling) interface	1			
Active Area	410.4X256.5mm		473.76X296.1mm	
Power supply	12V / 5A			12V / 6A
Dimensions(W x D xH)	480*163*369mm		548*163*407mm	
Weight (net)	4.4kg	4.9kg	5.2kg	5.75kg
Operating temperature	0~40°C			
Mounting dimension VESA	100 x 100 mm			
<b>AC Power Adaptor</b>				
Power supply	AC100-240V 50/60Hz			
Power consumption	42 W	48 W	58 W	68 W
<b>TV Tuner</b>				
Colour System	AUTO, PAL, SECAM			
Sound System	AUTO, BG, DK, I, L, L'			
Tuner	VHF/UHF: 47~864.25MHz			
Antenna	75 Ω VHF/UHF input			
Stereo	NICAM/A2			
<b>Mpeg transport stream AV decoder</b>				
Transport stream	MPEG-2 (Transport Stream Specification)			
Profile level	MPEG-2 MP@ML			
Input rate	Max 15Mbps			
Audio Decoding	MPEG Layer I/II			
Sampling	32kHz/44.1kHz/48kHz			
<b>Speaker</b>				
Impedance	4 Ω			
Output power	3W X 2			

\* Features and specifications are subject to change without notice.

\* Weight and dimensions are approximate.

\* All trademarks and registered trademarks are the property of their respective owners. All rights reserved.

**JVC**