
JVC

INSTRUCTIONS

WIDE LCD PANEL TV

LT-42DP8BJ LT-37DP8BJ LT-32DP8BJ

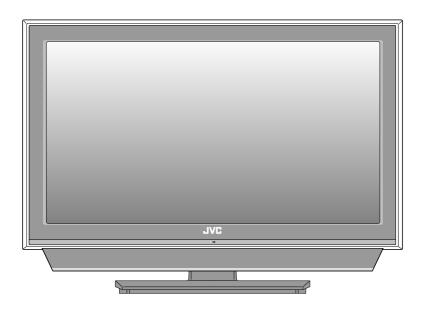















Trade Mark of the DVB Digital Video Broadcasting Project (1991 to 1996) Number : 4820, 4821, 4822



Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technology Centre Europe GmbH Postfach 10 05 52 61145 Friedberg

Germany

Information for Users on Disposal of Old Equipment

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.



By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Attention:

This symbol is only valid in the European Union.

(Business users)

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

As a small surprise on special



occasions!

Message board

25



WATCHING DIGITAL CHANNELS (Separate manual)

•	Watching digital channels	1
•	Using EPG	5
•	Customising your TV	7
•	Troubleshooting1	9
•	Technical Information	21

Digital terrestrial broadcasting (DVB-T
→ Digital channels

Digital channels

Analogue terrestrial broadcasting (VHF / UHF) and analogue cable TV

Analogue channels

Contents

		_
First	things	first

_	Warning	
_	vvarriirig	

Getting started

Names of all the parts	5
Basic connections	
Connecting external devices	9
Initial settings	11
Editing analogue channels	15

Let's try it out

)	Enjoy your new TV!	1/
)	Watching analogue channels	19
)	Viewing teletext	21
)	Watching videos / DVDs	23
	Mossago hoard	25

Try the advanced features

Useful functions	27
Operate IVC recorders and other devices	20

	Operate	JVC	record	ers and	other	devices	2
--	---------	-----	--------	---------	-------	---------	---

Just the way you like it

 Customising your TV 	[′] 31
-----------------------------------------	-----------------

When you have trouble

,	
Troubleshooting	39
Technical Information	42
"CH/CC" List	45
 Chaoifications 	16

Warning

Please follow all the guidelines below

Follow this manual regarding setup!

 Connect only to a 220 - 240 V, 50 Hz AC outlet.

Make enough room for inserting and removing the power plug!

Place the TV as close to the outlet as possible!

 Even if the TV's power lamp is unlit, the main power supply is not cut off unless the power cord is unplugged. The main power supply for this TV is controlled by inserting or removing the power plug.

Never cut or damage the power cord!

- If the power plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)
- ×
- If you have cut or damaged the power cord.
 - ⇒ "Technical Information" (P. 42)
- To change the fuse in power plugs
 "Technical Information" (P. 42)

Unplug the power cord when going out!

 The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)



Do not allow the TV to fall!

 Do not rest your elbows on, or allow children to hang from the TV.
 There is a risk that the TV will fall and cause injuries.

Never try to repair the TV yourself!

→ If the problem cannot be solved in "Troubleshooting" (P. 39), unplug the power cord and contact your retailer.

When attaching the TV to the wall, use the optional JVC wall mounting unit!

0 0

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.
- For more details on installation, usage and safety ⇒ Consult your retailer

On disposal of the TV!

 Follow the instruction in "Information for Users on Disposal of Old Equipment" (P. i).



If the TV is damaged or behaving strangely, stop using it at once!

Never dismantle the rear panel!

It may cause an electric shock.

Never obstruct the ventilation holes!

It may cause overheating or a fire.

Handle LCD panel with care!

Use a soft, dry cloth when cleaning.

Never place anything on the TV!

 Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.



Never expose to rain or moisture!

 To prevent fire or electric shock, never allow liquids to enter the unit.



Never insert objects into the cabinet openings!

 It may cause a fatal electric shock. Take care when children are near.



Never listen to headphones at high volume!

It may damage your hearing.

Hold the TV so as not to scratch the screen!


Do not touch the screen when carrying the TV.

Do not carry the TV on your own!


 In order to prevent accidents, ensure that the TV is carried by two or more people.



Names of all the parts

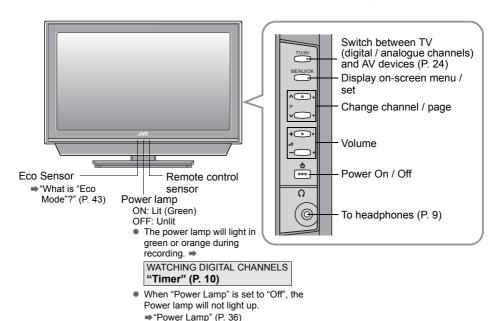


Change the direction of TV

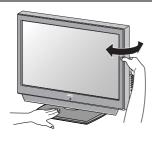

Tidying the cables

LT-37DP8BJ / LT-42DP8BJ

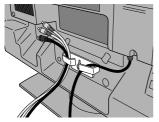

• LT-32DP8BJ is not equipped with cable clamp.

Check accessories



User manual "INSTRUCTIONS" (this book)



Separate manual "WATCHING DIGITAL CHANNELS"




Remote control (RM-C1911)



"AAA/R03" Batteries (For confirming the TV works)

WARNING:

Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

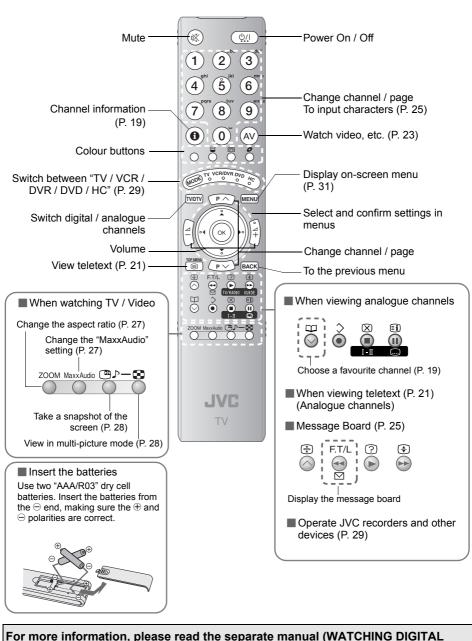


For more information, please read the separate manual (WATCHING DIGITAL CHANNELS).

"Watching digital channels" (P. 1)

Basic connections

Please read the user manuals of each device carefully before setup. It is necessary to connect an aerial to watch TV.


■ Connect with other devices ⇒ "Connecting external devices" (P. 9)

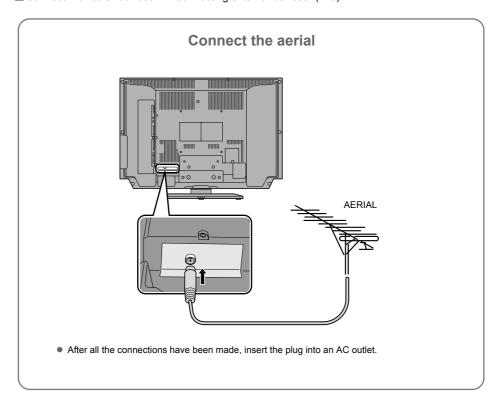


Care when setting

- Power requirements
- Connect the power cord only to a 220 240 V, 50 Hz
 To avoid overheating, ensure the unit has ample AC outlet.
- When attaching the TV to the wall, use the optional JVC wall mounting unit
- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.
- 200 mm x 200 mm mount which conforms to VESA standards.

- Installation requirements
- room.

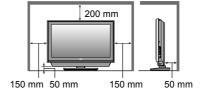

Connect a VCR / DVD recorder

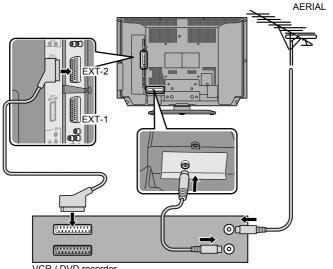

VCR / DVD recorder


- After all the connections have been made, insert the plug into an AC outlet.
- Connect "T-V LINK" compatible recording device to EXT-2.
- "T-V LINK" ⇒ "What is "T-V LINK"?" (P. 11)

Watch pay-TV digital channels

Subscribe to a broadcasting company beforehand. A Viewing Card (B) will be sent by the broadcasting company after subscribing to it. It may be necessary for you to purchase a CAM (Conditional Access Module) (A) in addition to the Viewing Card.


Consult your broadcasting company or retailer.

- 1 Unplug the power cord
- (2) Insert "B" into "A".
- (3) Insert "A".
- (4) Plug the power cord, and turn the power on.
- (5) Perform necessary settings using "Common Interface".
 - WATCHING DIGITAL CHANNELS "Common Interface" (P. 16)
 - Pay-TV analogue channels cannot be watched.

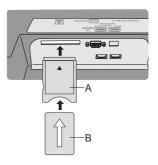

Connecting external


You can connect many different devices to the rear panel of the TV. Please read the user manuals of each device before setting up. (Connecting cables are not supplied with this TV.)

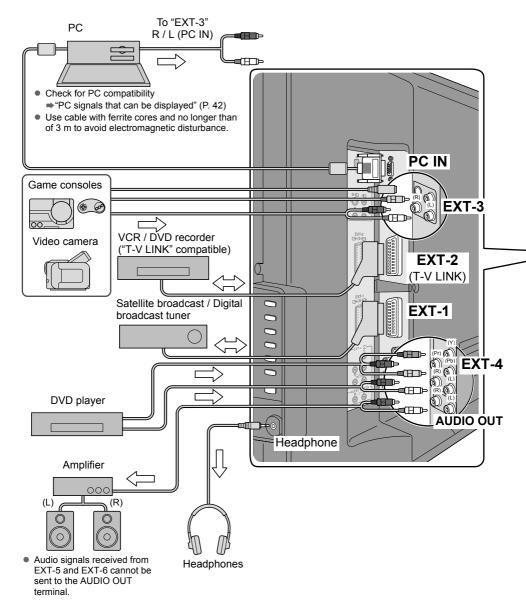

devices (VCR / DVD / other devices

- DVI devices ⇒ "Connect DVI devices" (P. 42)
- "T-V LINK" ⇒ "What is "T-V LINK"?" (P. 11)

: Signal direction

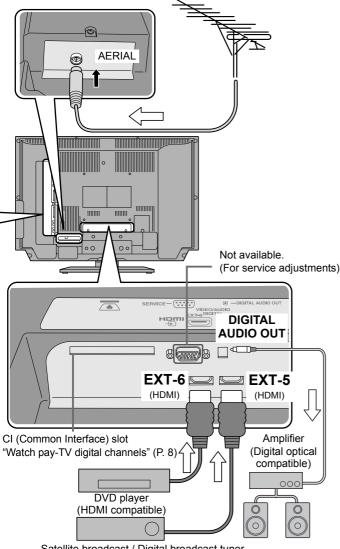

Satellite broadcast / Digital broadcast tuner (HDMI compatible)

EXT-1 Watching videos

Output 1	Input ↓	
 Composite signal 	 Composite signal 	
 Sound L / R 	/ RGB / S-VIDEO	
	 Sound L / R 	

Use S-VIDEO ⇒ "S-In" (P. 24)

EXT-2 Dubbing videos using "T-V LINK"

Output 👚	Input ↓
 Composite signal 	 Composite signal
 Sound L / R 	/ RGB / S-VIDEO
	 Sound L / R
■ Lloo S VIDEO → "	C In" (D 24)

- Use S-VIDEO ⇒ "S-In" (P. 24)
- Select dubbing sources ⇒ "Dubbing" (P. 24)
- Connect a decoder
 - ⇒ "Decoder(EXT-2)" (P. 38)

EXT-3 Watching videos

Output 🁚	Input ↓
	Composite signal / S-VIDEO
	Sound L / R

Use S-VIDEO ⇒ "S-In" (P. 24)

EXT-4 Watching DVDs

Output 1	Input ↓
	 Component signal
	(P. 46)
	 Sound L / R
- #6	0 1 (7 (0 00)

"Component Auto Select"

(P. 38)

EXT-5 Connecting HDMI FXT-6 device

Output 👚	Input ↓
	 HDMI signal (P. 46)

- "HDMI Setting" ⇒ (P. 38)
- EXT-6 input does not support analogue sound.
- Use HDMI CEC → "What is "HDMI CEC"?" (P. 43)

AUDIO OUT

Listening to the TV on external speakers Output 1

Sound L / R

DIGITAL AUDIO OUT


Listening to the digital audio of digital channels on external speakers

Output 1 Digital sound (P. 46)

- The sound from analogue channels and external devices cannot be output.
- WATCHING DIGITAL CHANNELS ""Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 22)

Initial settings

Register digital / analogue channels on TV. These channels can be edited later. (In this manual, digital terrestrial broadcasting is indicated as digital channels, analogue terrestrial broadcasting and analogue cable TV as analogue channels.)

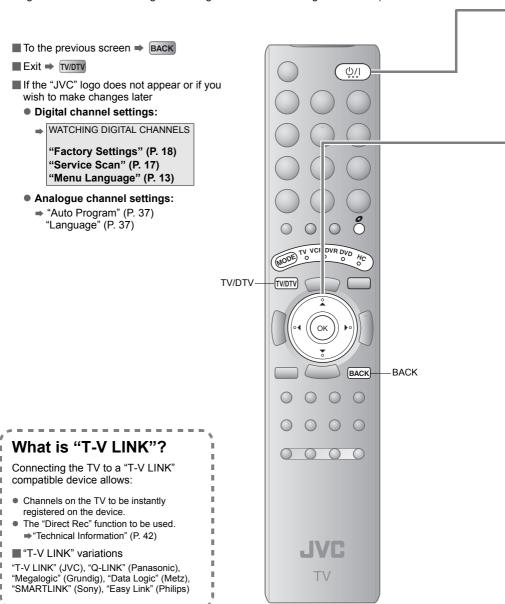

Begin



Shown only when powering on for the first time.

The remote control doesn't work



 Confirm the mode is set to "TV"

Set digital channels

✓ Confirm "English" is set





 Language for on-screen displays when watching digital channel including the DTV menus.

Confirm "United Kingdom" is set





- This TV can only receive British digital channels.
- Set the aerial power supply





- Only when using an aerial which requires external power, select "On".
 - WATCHING DIGITAL CHANNELS "Power supply for the indoor aerial" (P. 21)

4

Scan digital channels









Register digital channels






■ If digital channels are not found, the following message will appear.




- → (3) (Next page)
- After completing following steps, read "When the TV cannot find the digital channels" (P. 14) and try scanning digital channels again

Initial settings

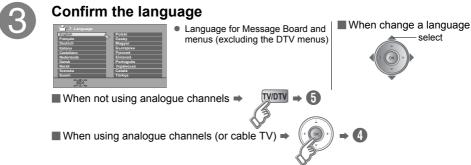

Set analogue channels

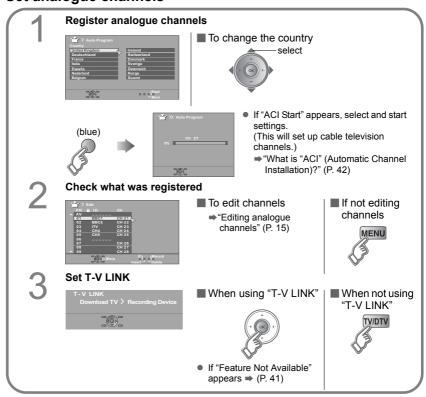



Initial setting is complete

- Edit digital channels using "Edit PR"
 - → WATCHING DIGITAL CHANNELS P. 11 12
- If digital channel reception is poor ⇒ "When the digital channel reception is poor" (P. 14)
- If analogue channel reception is poor ⇒ "Troubleshooting" (P. 39)
- Some digital channels cannot be watched on this TV.
 - WATCHING DIGITAL CHANNELS P. 21

When the TV cannot find the digital channels

Check the following points

- Is the TV connected correctly to the aerial?
- Change the direction of the indoor aerial.
- Is there a digital channels transmission tower nearby?
 - → Turn "Attenuator" to "On" (P. 38), since the radio waves are too strong.

Note

 "Attenuator" attenuates the radio waves of analogue broadcast as well as those of digital broadcast. If some noise or snow appears when watching an analogue channel, please set "Attenuator" to "Off" temporarily.



 Re-configure the initial settings using "Factory Settings" WATCHING DIGITAL CHANNELS
P. 18

■ If you still cannot watch digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ➡ Consult your retailer

When the digital channel reception is poor

The "Missing or weak signal" message appears.

Check the following points


- Is the TV connected correctly to the aerial?
- Change the direction of the indoor aerial.
- Is there a digital channels transmission tower nearby?
 - → Turn "Attenuator" to "On" (P. 38), since the radio waves are too strong.

Note


- "Attenuator" attenuates the radio waves of analogue broadcast as well as those of digital broadcast. If some noise or snow appears when watching an analogue channel, please set "Attenuator" to "Off" temporarily.
- You can check the broadcast signal level of the channel you are watching using "Signal Check".
 - → WATCHING DIGITAL CHANNELS
 P. 18
- If you still cannot watch digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ➡ Consult your retailer


Editing analogue channels


Edit the channels registered with "Auto Program" in "Initial settings" (P. 13).

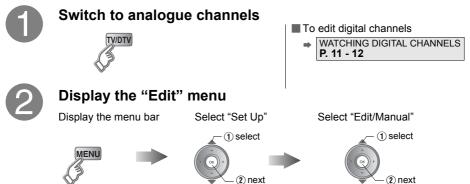

Edit channels

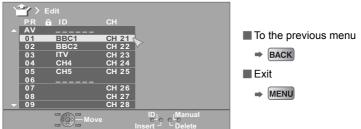

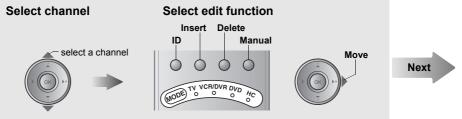

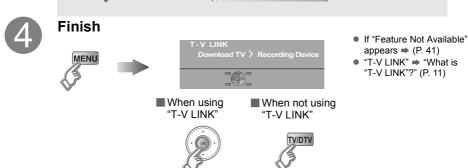


Move Move a channel's position (PR)



Edit a channel name (ID) ID

- Naming a channel
- When selecting a preset name from the "ID List"

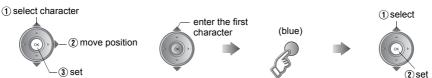

Insert

Insert a new channel directly by entering the CH/CC number

Enter a number 1 2 3

4 5 6 7 8 9

%0

Receives the broadcast signal.

In United Kingdom, you cannot enter "CC" numbers.

In Ireland, you can select "CH" or "CC" before entering a number. Select a "CH/CC"




"CH/CC" List ⇒ (P. 45)

Delete Delete a channel

Pressing the button deletes the channel.


Manual Register a new channel

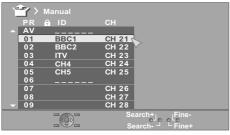





- Press the red or green button. Auto-search begins, and the nearest frequency is imported.
 - Repeat the previous steps until the desired channel is displayed.

Enjoy your new TV!

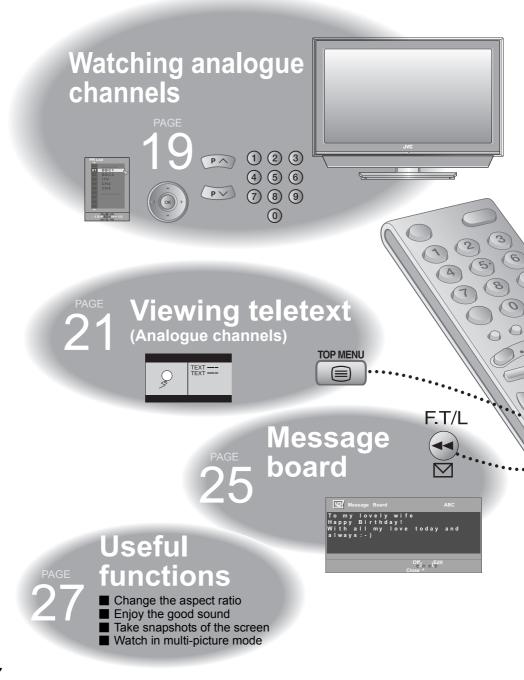

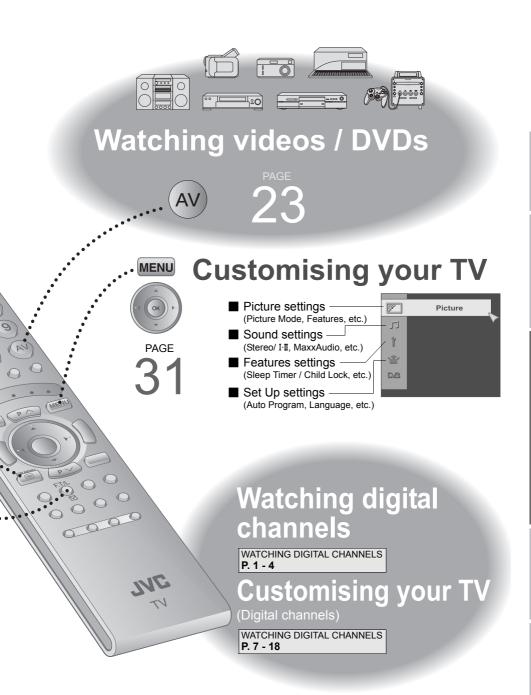


Watching analogue channels

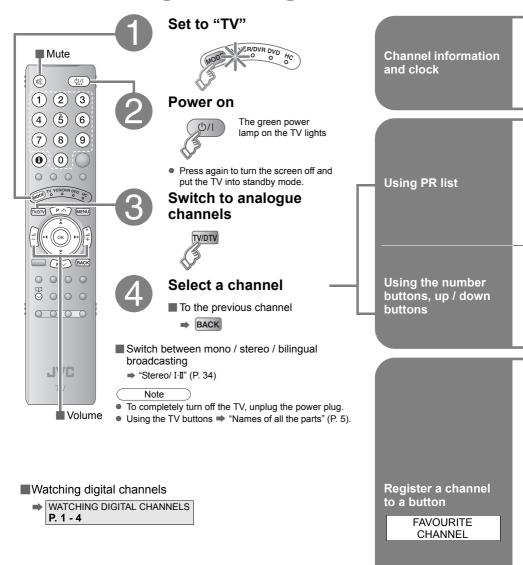


USE



To soften the picture for daily use, change the setting in "Picture Mode"
 "Picture Mode" (P. 32)

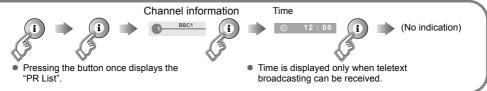

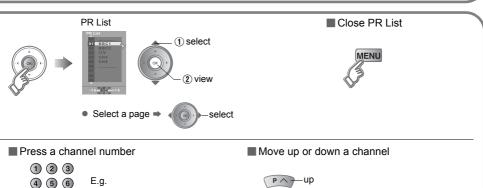





-down



Note

7 8 9

The following "Picture" and "Sound" menu settings applied to the channel will be stored in the favourite channel as well.

• Picture Mode / Super DigiPure / Colour System (P. 32 - 33)

1: (0) (1)

15: (1) (5)

MaxxVolume / Voice Enhancer (P. 34)

■ Recall the favourite channel





Press the number you registered

- 1 2 3 4
- Check your favourite channels
 - → Press "(i)" and confirm that the channels you have registered have a □ beside them
- Delete a favourite channel ⇒ "Favourite Setting" (P. 36)


Viewing teletext (Analogue channels)

This TV can display TV broadcasts and teletext on the same analogue channel in two windows.

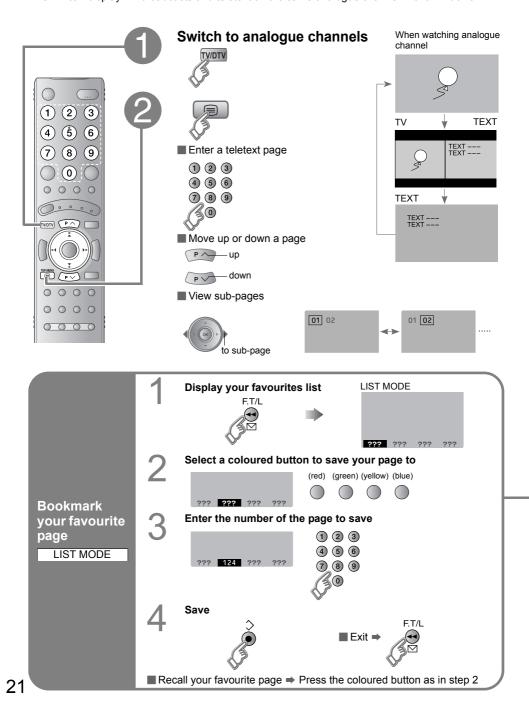


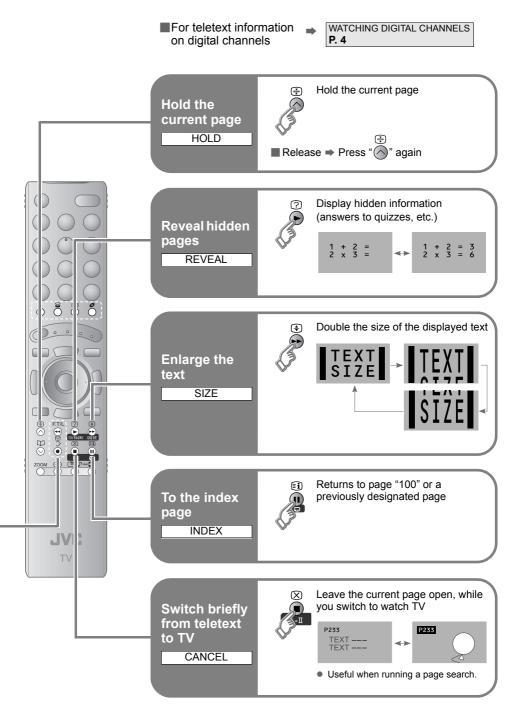


Watching videos / DVDs

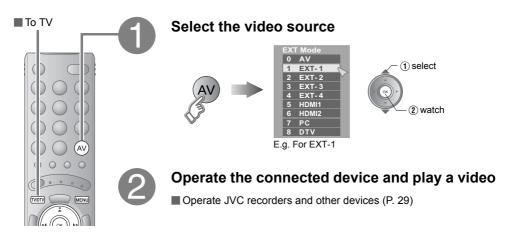

Setting external terminals

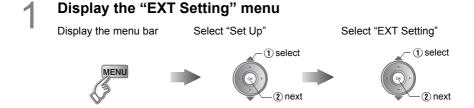


Select an "EXT" or arrow, and then proceed with setting

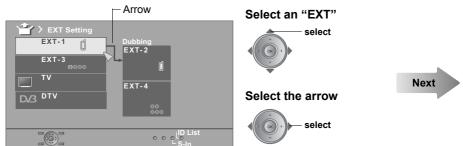


3 Finish



- Adjust the position of the PC image ⇒ "PC Position" (P. 38)
- HDMI terminal setting ⇒ "HDMI Setting" (P. 38)

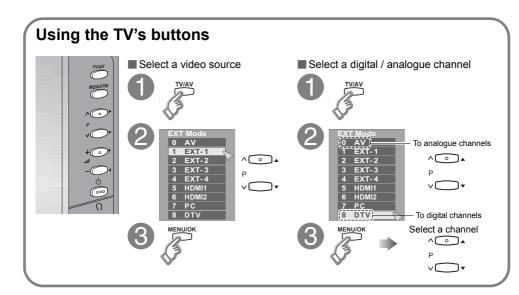

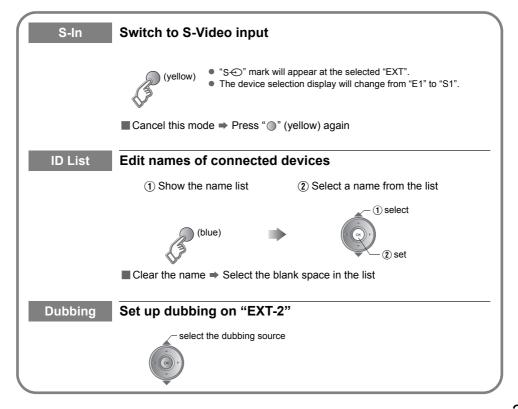


Message board

The message board function allows you to display the message that were input beforehand on the TV screen when the TV is turned on.

Times when the message board comes in handy!

- On occasions such as birthdays (e.g. Happy birthday!)
- Message to your children (e.g. I'm going out between 3 and 4 pm.)
- An alternative to calendar (timetable) (e.g. 12/7 remember 7 o'clock parent night.)

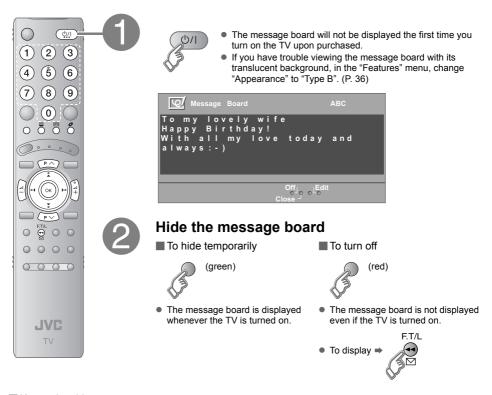

■ Key code table

1	@		/	_	-	1	,	,	"	:	;	\	()	[]	{	}								
2																										
3	D	Ε	F	3	É	È	Ê	Ë		d	е	f	3	é	è	ê	ë									
4	G	Н	Τ	4	Î	Ï				g	h	i	4	î	ï											
5	J	Κ	L	5						j	k	1	5													
6	Μ	Ν	0	6	Ñ	Ô	Ö	Œ		m	n	0	6	ñ	ô	Ö	œ									
7	Ρ	Q	R	S	7					р	q	r	s	7												
8	Т	U	V	8	Û					t	u	٧	8	û												
9	W	Χ	Υ	Ζ	9	Ŵ	Ŷ			W	Х	У	Z	9	ŵ	ŷ										
0		?	!	0	+	&	%	*	=	<	>	€	£	\$	¥	¤	~	٨	ż.	i	Ş	#				

Composing message



Display the message-editing screen

Display the message board

Switch to the editing screen










Input the message



- You can enter up to maximum 210 characters (7 rows, 30 characters per row).
- Inserting a character in the text is not allowed. The existing character will be overwritten.
- To input characters in a different language, in the "Set Up" menu, change the "Language" selection. (P. 37)

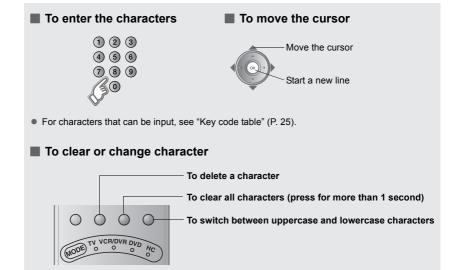




Save the message



 Only one message can be saved. To compose a new message, re-edit the current message.

Useful functions

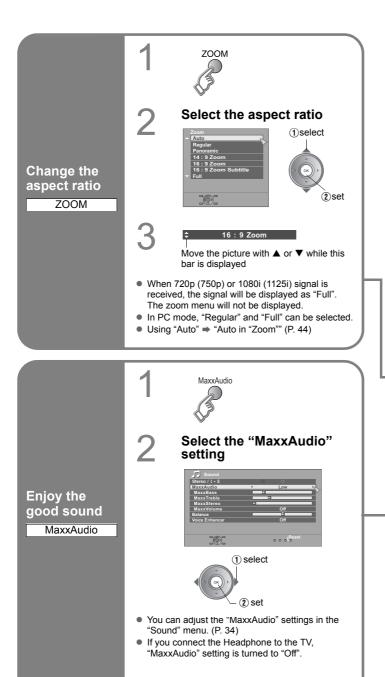




For more functions ⇒ "Customising your TV" (P. 31 - 38)







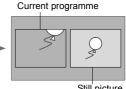

Still picture

(Not available for digital channels and PC)

Watch in multi-picture

MULTI-PICTURE

mode

Cancel

- " again, or change the channel ⇒Press "
- Not available when the SUB-PICTURE is displayed, or when in digital channels or PC mode.
- You cannot save or export the snapshot.



Select the number of screens



Selecting " returns to normal viewing mode


Not available in PC mode.

■ Watch in dual-picture mode


E.g. You can watch TV and video at the same time.

(For wide aspect ratio signals)



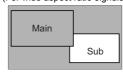


Switch between the sound sources

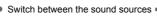



- When watching digital channels, there may be occasions where the aspect ratio changes, for example during commercials. In this case, the layout of the screen in dual-picture mode changes automatically according to the aspect ratio signal.
- Select an analogue channel in 12-screen mode All registered analogue channels are displayed as still images.

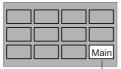

- 1) select a channel (2) watch
- Move up or down a page



Not available for digital channels, EXT-5, or EXT-6 input.




Only the selected frame has a moving picture.

Operate JVC recorders

DVD

The included remote control can be used to operate JVC recorders and other devices

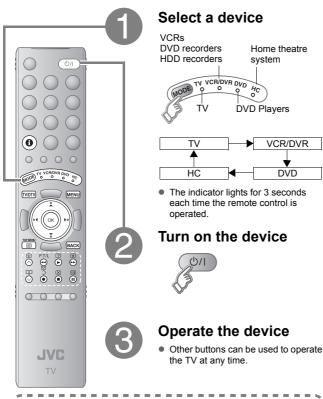

Operate the VCR, **DVD** recorder or HDD recorder

VCR/DVR

Operate the DVD Player

DVD

Operate the home theatre system

HC

Try changing the remote control code if you cannot operate a recorder.

■ Code A or 1 (Default)

Code C or 3








- Some models of JVC devices cannot be operated with this remote
- JVC DVD recorders and HDD recorders are set to code "C" or "3" by default.

Note


 If the battery is removed, the remote control code reverts back to code A or 1.

and other devices


Select VCR / DVD recorder / HDD recorder

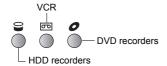


■ Operate DVD / HDD recorder menus

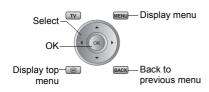


■ Playback / Record etc.

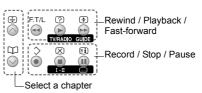


- Display the subtitle (DVD / HDD recorder mode) ⇒ Press "(i)"
- Operate DVD menus

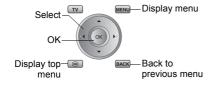


■ Playback etc.

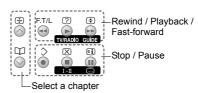

- Display the subtitle ⇒ Press "(i)"
- Operate HC menus

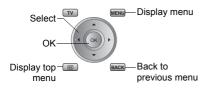

■ Playback etc.

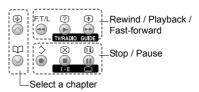

- Display the subtitle ⇒ Press " i)"
- Mute ⇒ Press "⊗"
- Volume ⇒ Press " 🗐
- Select a surround mode ⇒ Press "




Customising your TV


Display the menu bar




Display the desired menu

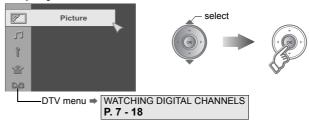

Change or adjust the setting

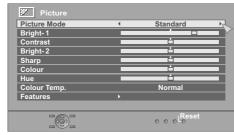

- The menu (excluding DTV menus) disappears after one minute of inactivity.
- To the previous screen
 - **⇒** BACK

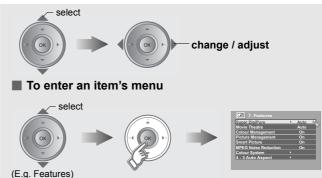

Press to hide the bottom area of the menu (excluding DTV menus). Press again to display it.

Note

Depending on the situation (analogue channels, digital channels, video signal formats, external inputs, etc.), some items will be displayed in gray colour and will not work. You will not be able to change their setting as well.


4

Close the menu





Picture

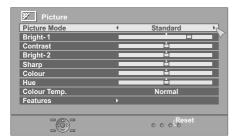

Picture Mode

You can select a preset picture setting according to the brightness of your room.

Bright : in a fairly bright room

Standard : in a room with standard brightness

Soft : in a dark room

■ You can make further adjustments to the selected preset "Picture Mode" to your liking.

Bright-1	Backlight brightness (Darker ⇔ Brighter)							
Contrast	Contrast (Lower ⇔ Higher)							
Bright-2	Brightness (Darker ⇔ Brighter)							
Sharp	Sharpness (Softer ⇔ Sharper)							
Colour	Colour (Lighter ⇔ Deeper)							
Hue	Tint (Reddish ⇔ Greenish) (NTSC only)							
Colour Temp.	Colour temperature (Warm / Normal / Cool)							



Features

⇒ "Features (sub menu)" (P. 33)

■ When using "T-V LINK"




■ When not using "T-V LINK"



- "What is "T-V LINK"?" (P. 11)
- If "Feature Not Available" appears ⇒ (P. 41)

Customising your TV

> Features (sub menu)

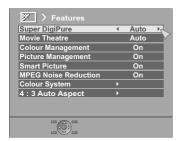


Note

 "Smart Picture" is not available when "Picture Mode" is set to "Bright" (P. 32).

Super DigiPure For natural-looking outlines When the picture loses Min Auto : Automatically adjusts sharpness Off : Function is turned off Max : When noise appears **Movie Theatre** For smooth cinema film On : Function is always on Off : Function is turned off : Automatically adjusts Auto Colour Management Maintain a natural colour balance (On / Off) **Picture Management** Make it easier to view bright / dark pictures (On / Off) **Smart Picture** Make it easier to view white areas (On / Off) **MPEG Noise Reduction** Reduce MPEG video noise (On / Off) **Colour System** When there is no colour, change the colour system (PAL, NTSC3.58, NTSC4.43) : Main picture Main : Sub-picture in MULTI-PICTURE mode (P. 28) When watching videos etc., you can select "Auto" (Automatically selects the colour system) 4:3 Auto Aspect Select a default aspect ratio for Auto in "Zoom" (P. 27) Panoramic Regular 14:9 Zoom >> 4:3 Auto Aspect 16:9 4:3 14:9 Zoom

■ Sound

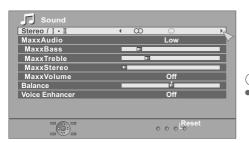

Note

 If you connect the Headphone to the TV, "MaxxAudio" setting is turned to "Off".

Stereo/ I-I

Select stereo, monaural or language (analogue channels) (O: Monaural / O: Stereo / I: SUB1 / II: SUB2)

MaxxAudio

MaxxAudio improves sound performance with four sound features (MaxxBass, MaxxTreble, MaxxStereo and MaxxVolume).

You can select one of the four "MaxxAudio" settings. (Off, Low, Mid, High)

You can make further adjustments to the four sound features of the selected preset "MaxxAudio" to your liking.

MaxxBass Compensates low frequencies to widen the frequency band.				
MaxxTreble Compensates high frequencies to widen the frequency band.				
MaxxStereo	Expands the stereo sound naturally.			
MaxxVolume	Maintains a uniform sound volume even if the sound becomes loud suddenly (during commercial breaks etc.).			

- Adjustments made to the three sound features (MaxxBass, MaxxTreble and MaxxStereo) will be stored
 in the selected "MaxxAudio" setting.
- To return to the default settings ➡



13

MaxxAudio is a registered trademark of Waves Audio Ltd. in the USA, Japan and other countries.

(blue)

Balance


Speaker balance (Left stronger ⇔ Right stronger)


Voice Enhancer

Enhances the voice levels to make vocals or dialogues clearer when the volume is set to low level. (On / Off)

Customising your TV

Features

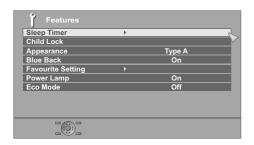

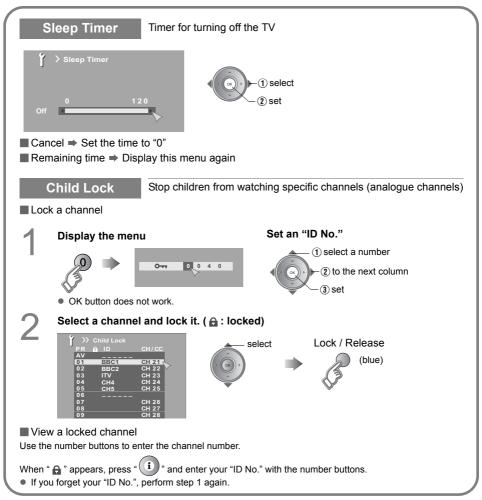

Appearance

Type of the on-screen displays, Message Board and menus (excluding on-screen displays for digital channels and DTV menus)

Type A: translucent
Type B: not translucent

 You cannot change this setting when viewing a digital channel. Switch to an analogue channel or an EXT mode.


Blue Back

Displays a blue screen and mutes the sound when the signal is weak or absent (On / Off) (analogue channels)

Favourite Setting

Remove a channel from the Favourite channel list (analogue channels)

■ For more details ⇒ "FAVOURITE CHANNEL" (P. 19)

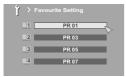





Power Lamp

Lights the power lamp (P. 5) while the TV is on (On / Off)


Eco Mode


Automatically adjusts the picture contrast according to the brightness of your room (On / Off / Demo)

■ For more details ⇒ "What is "Eco Mode"?" (P. 43)

Customising your TV

👚 Set Up

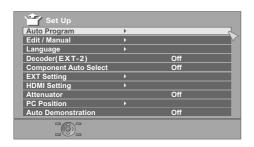

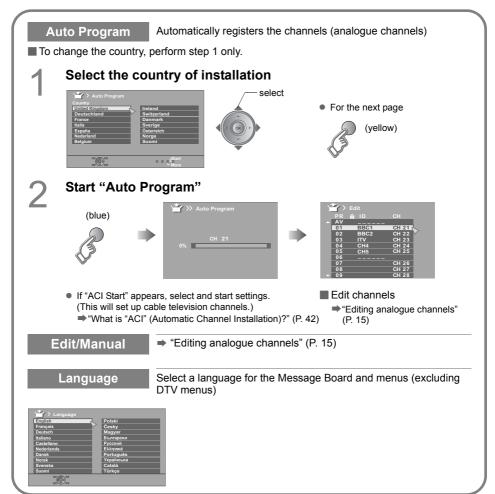

Decoder(EXT-2)

Select "On" when connecting the Decoder to EXT-2 through the VCR (On / Off)

Component Auto Select

Changes the TV input to "EXT-4" when a component signal is input to EXT-4 (On / Off)

Not available when viewing PC

EXT Setting

⇒ "Setting external terminals" (P. 23)

HDMI Setting

Size:

If picture size is not correct in 480p(525p), change this setting to 1 or 2. Normally set to "Auto".

Audio:

If there is no sound, change this setting to "Digital" or "Analogue". Normally set to "Auto".

HDMI CEC:

If you use a HDMI CEC compatible device, set this setting to "On".

For more details ⇒ "What is "HDMI CEC"?" (P. 43)

Attenuator

Select "On" when digital channels are not received because of too strong radio waves (On / Off)



 "Attenuator" attenuates the radio waves of analogue broadcast as well as those of digital broadcast. If some noise or snow appears when watching an analogue channel, please set "Attenuator" to "Off" temporarily.

PC Position

Adjust the position of the PC image







Auto Demonstration

Starts the "100Hz Clear Motion Drive" demonstration (On / Off) (P. 44)

Troubleshooting

■ Analogue channels

Severe noise or snow



- Is the TV connected correctly to the aerial?
- Change the direction of the aerial.
- Is the aerial or its cable damaged?
 - Consult your retailer
- Is the "Attenuator" set to "On"?
 - → "Attenuator" (P. 38)

Patterns, stripes or noise




- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?
 - ➡ Consult your retailer
- Are connected devices too close to the TV?
 - ➡ Insert the minimum distance between the aerial and the cause of interference until no interference

Ghosting

(Doubling of images)



- Are you receiving interference from signals reflected off mountains or buildings?
 - → Adjust the direction of your aerial, or change to a good-quality directional aerial

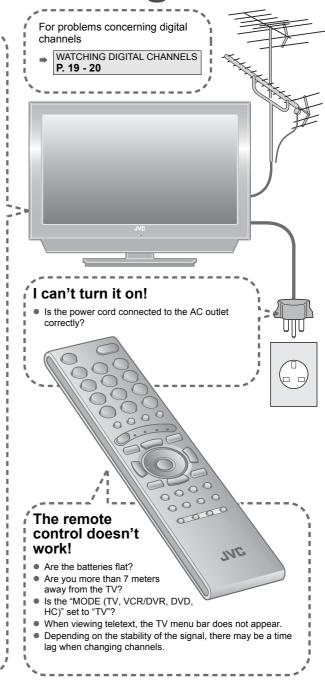

				_
	Problem		Actions	Page
Basics	Remote control stops working	•	Unplug TV, several minutes later plug it in again.	_
	Aspect ratio changes unintentionally	•	• Press "ZOOM" to return to your settings.	27
Screen	PC screen alignment is off	•	Adjust the "PC Position".	38
ñ	Black or white dots appear on the screen	•	LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. Please understand that this is not a malfunction.	_
	Enters "100Hz Clear Motion Drive" demonstration when watching TV.	•	Set "Auto Demonstration" to "Off".	38
Picture	Poor picture quality	>	 Change the "Picture Mode" setting. Unnatural colour >>> Adjust "Colour" and "Bright-1". Check your "Colour System". Noise >>> Set to the following functions. Picture Mode: Standard Super DigiPure: Max Dull picture >>> Set to the following functions. Picture Mode: Bright Super DigiPure: Min 	32 32 33 32 33 32 33 32 33
	Strange picture when using an external device	•	 If you connected S-Video output device, check the "S-In" setting. If the top of the image is distorted, check the video signal quality itself. If movement appears unnatural when receiving a signal from a DVD player etc., with 576p (625p), change the output setting of the external device to 576i (625i). 	24 - -
Sound	Poor sound	•	Adjust the "MaxxAudio" setting. If receiving a poor signal in "Stereo/ I·II", switch to "O" (monaural).	34 34
g	No sound from the audio component	•	Audio signals received from EXT-5 and EXT-6 cannot be sent to the AUDIO OUT terminal.	-

Troubleshooting

	Problem		Actions	Page
HDMI	Wrong screen size	•	● Switch "Size" in "HDMI Setting" to "1" or "2". (480p (525p) only) ● Read the user manual of the connected device and perform the following: ⇒ Check if the output setting of the device is correct. ⇒ Change the signal format of the device to other format.	38 -
	No picture, no sound	•	Use the cable marked with HDMI logo.	_
	No sound	•	Check if the device is compliant with HDMI. Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices. (Not available for EXT-6)	- 38
	Green and distorted screen	•	Wait a little for the signal to stabilize when switching the signal format for an HDMI device.	_
Fu	Some functions do not work	•	It is not a malfunction. Depending on the situation, some function items will be displayed in gray colour and will not work.	31
Functions	Some inputs cannot be selected in the sub-picture	•	"EXT-4", "EXT-5", "EXT-6" inputs and PC mode cannot be selected in the sub-picture. RGB input signal of "EXT-1" and "EXT-2" are not available in dual-picture mode.	_
	"Feature Not Available" appears	•	Is the "T-V LINK" compatible device connected to EXT-2? Is the SCART CABLE "Fully Wired"? Is the "T-V LINK" compatible device turned on? After confirming all the conditions above, press "OK" button again.	-
Error	"ACI Error" appears	•	Press ◀ to start "ACI" again. If you still receive the "ACI Error" after numerous tries, press ► to cancel "ACI".	_
Error message	"No Recording"	•	A problem occurs at the recorder.	_
	"No Recording Possible"	•	The displayed video cannot be recorded.	_
	"No Recording Media Problem"	•	The recorder is not ready for recording. Check the videotape or DVD disc.	_
	"No Recording Device Busy"		The recorder is recording another programme, or is playing.	_

Technical Information

What is "T-V LINK"?

"T-V LINK" allows the TV to share information easily with a connected "T-V LINK" compatible device. By using T-V LINK:

- You can send the channel information programmed on the TV to the "T-V LINK" compatible device, so that both the TV and the external device have the same channel settings. When connecting a new external device, channel information is loaded into it, allowing channel setup to be completed very quickly. For more details, refer to the external device's manual.
- You can easily record the TV programme you are viewing on a "T-V LINK" compatible device by using the "Direct Rec" feature. For more details, refer to the external device's manual.

What is "ACI" (Automatic Channel Installation)?

Some cable companies transmit a signal called "ACI" which contains information that allows TV channels to be registered automatically on your TV.

When an ACI signal is received, "ACI Start / ACI Skip" appears in the "Auto Program" screen.

If you accidentally cut the power cord

Attach a new plug following the steps below. If in doubt, contact your local retailer.

Important


- Never connect to the larger terminal marked with an "E", the safety earth symbol " \(\perp \)" or coloured green or green-and-yellow.
- The wires in the mains lead on this product are coloured with the following code:
 - Blue: Neutral wire (connect to the black terminal, or one marked "N")
 - Brown: Live wire (connect to the red terminal, or one marked "L")

Change the fuse in the plug

Open the plug as illustrated on the right.

 When replacing the fuse, always use a correctly rated and approved type and re-fit the fuse cover when finished.

If in doubt, contact your local retailer.

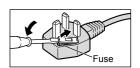

PC signals that can be displayed

 If the signal doesn't appear, check that the vertical frequency on the PC is set to "60Hz".

Resolution	640 x 480 (VGA)	1024 x 768 (XGA)
Vertical frequency (Hz)	60.0	60.0

Connect DVI devices

Connect a DVI device to EXT-5 (HDMI) using DVI-HDMI conversion cable. Connect analogue sound output of the DVI device to L and R terminals in EXT-4.

- Set "Audio" in "HDMI Setting" to "Analogue" or "Auto" ⇒ (P. 38)
- EXT-6 input does not support analogue sound (EXT-4).

For more information, please read the separate manual (WATCHING DIGITAL CHANNELS).


"Technical Information" (P. 21 - 22)

Technical Information

What is "Eco Mode"?

You can adjust this TV so that the screen automatically adjusts to the optimum contrast of light and dark according to the brightness of your room. This function reduces eyestrain and the power consumption of this TV.

- Set "Eco Mode" → "Eco Mode" (P. 36)
- Make sure not to block the Eco Sensor on front of the TV (P. 5)
- To fully reduce eyestrain and the power consumption of this TV. Set to the following functions.
 Eco Mode: On or Demo (P. 36)
 Smart Picture: On (P. 33)
- Using "Demo" in "Eco Mode", you can display the effect of the "Eco Mode" on the screen

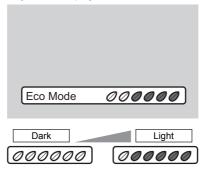

What is "HDMI CEC"?

HDMI CEC (Consumer Electronics Control) allows the TV to connect and control multiple HDMI CEC enabled devices with a single remote. CEC (Consumer Electronics Control) is an optional protocol used in HDMI.

- HDMI CEC on this TV is compliant with "High-Definition Multimedia Interface Specification".
- The TV does not support HDMI CEC functions that are not listed below.
- The TV does not guarantee to support use of all HDMI CEC enabled devices.
- Devices that are not enabled to HDMI CEC cannot be controlled with this TV.
- Control the TV using the HDMI CEC enabled device
- Turn the TV on and switch to the video source of the operating device.
- Switch to the video source of the operating device.
- Turn the TV off with the HDMI CEC enabled device you are viewing.
- * For operating instructions of the device, refer to the device's manual.
- Control the HDMI CEC enabled device using the TV
- Turn off the operating device by turning off the TV.
- * Some device may not support this function. For more details refer to the device's manual.
- Send status of the TV to the HDMI CEC enabled device
- When switching the TV's external input or channel.
- When switching the TV's menu language.
- * Information regarding behaviour of the device when status is received, refer to the external device's manual.

Turning On / Off HDMI CEC:

- Set HDMI CEC ⇒ "HDMI Setting" (P. 38)
- * Factory default setting is "On".
- If "HDMI CEC" does not work correctly:
- When HDMI CEC enabled device is connected to EXT-1 or EXT-2 with SCART cable and EXT-5 or EXT-6 with HDMI cable, you may not be able to control TV's external input. To solve the problem set "HDMI CEC" to "Off".

Auto in "Zoom"

When "Auto" is selected in Zoom, the aspect ratio will turn to the ratio obtained from the information the TV received


- The aspect ratio will turn to the ratio obtained from WSS (Wide Screen Identification Signal), video signal, or control signal of the external devices. Without receiving the aspect information, it will be the setting in "4:3 Auto Aspect" (P. 33)
- Not available in PC mode.

100Hz Clear Motion Drive

Most conventional LCD panel uses 50 frames per second (50 Hz) to display an image which needs long holding time (time it takes to display single frame), causing blurring or ghost images when there is rapid or complex movement across the screen - a phenomenon common to all LCD panels.

This TV is equipped with JVC's original "100Hz Clear Motion Drive" technology, which displays two frames (the original plus the new interpolated frame) in the time a 50 Hz set displays a single frame. Resulting to double the typical rate, 100 frames per second (100 Hz) and half the holding time without reducing brightness or contrast. By using this technology you will be able to reduce blurring or ghost images when there is rapid or complex movement across the screen.

By using "Auto Demonstration", you can display the differences between conventional LCD (50 Hz) and LCD panel equipped with "100Hz Clear Motion Drive".

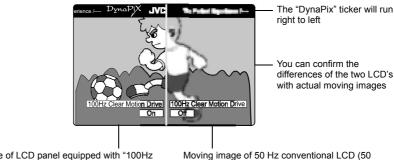

Moving image of LCD panel equipped with "100Hz Clear Motion Drive" (100 frames per second)

Moving image of 50 Hz conventional LCD (50 frames per second)*1

- *1 To simulate Moving image of conventional LCD, the TV will display two same frames at a time.
- * The illustrations are emphasized to make clear differences between LCD panel equipped with "100Hz Clear Motion Drive" and conventional LCD.
- Set "Auto Demonstration" to "On" "Off". ⇒ "Auto Demonstration" (P. 38)
- When set to "On", it automatically enters demonstration every time no operation is made for approximately 3
 minutes. To stop automatic demonstration, set "Auto Demonstration" to "Off".
- When the images are 60 frames per second (60 Hz), it will be produced as 120 frames per second (120 Hz).

"CH/CC" List

To use the "Insert" function (P. 16), find the "CH/CC" number corresponding to the TV's Channel number from this table. If you want to know a particular TV channel's menu, look in TV listings magazines or contact the broadcaster.

When the Country setting is "United Kingdom", the CC number channels and channels from CH 02 to CH 12 cannot be received.

CH	Channel	CH	Channel	CC	Channel
CH 02	E2, IR A	CH 40	E40	CC 01	S1
CH 03	E3, IR B	CH 41	E41	CC 02	S2
CH 04	E4, IR C	CH 42	E42	CC 03	S3
CH 05	E5, IR D	CH 43	E43	CC 04	S4
CH 06	E6, IR E	CH 44	E44	CC 05	S5
CH 07	E7, IR F	CH 45	E45	CC 06	S6
CH 08	E8, IR G	CH 46	E46	CC 07	S7
CH 09	E9	CH 47	E47	CC 08	S8
CH 10	E10, IR H	CH 48	E48	CC 09	S9
CH 11	E11, IR J	CH 49	E49	CC 10	S10
CH 12	E12	CH 50	E50	CC 11	S11
CH 21	E21	CH 51	E51	CC 12	S12
CH 22	E22	CH 52	E52	CC 13	S13
CH 23	E23	CH 53	E53	CC 14	S14
CH 24	E24	CH 54	E54	CC 15	S15
CH 25	E25	CH 55	E55	CC 16	S16
CH 26	E26	CH 56	E56	CC 17	S17
CH 27	E27	CH 57	E57	CC 18	S18
CH 28	E28	CH 58	E58	CC 19	S19
CH 29	E29	CH 59	E59	CC 20	S20
CH 30	E30	CH 60	E60	CC 21	S21
CH 31	E31	CH 61	E61	CC 22	S22
CH 32	E32	CH 62	E62	CC 23	S23
CH 33	E33	CH 63	E63	CC 24	S24
CH 34	E34	CH 64	E64	CC 25	S25
CH 35	E35	CH 65	E65	CC 26	S26
CH 36	E36	CH 66	E66	CC 27	S27
CH 37	E37	CH 67	E67	CC 28	S28
CH 38	E38	CH 68	E68	CC 29	S29
CH 39	E39	CH 69	E69	CC 30	S30

CC	Channel
CC 31	S31
CC 32	S32
CC 33	S33
CC 34	S34
CC 35	S35
CC 36	S36
CC 37	S37
CC 38	S38
CC 39	S39
CC 40	S40
CC 41	S41
CC 75	X
CC 76	Υ
CC 77	Z
CC 78	Z+1
CC 79	Z+2

Specifications

Main unit							
Model	LT-42DP8BJ	LT-37DP8BJ	LT-32DP8BJ				
Broadcasting systems	CCIR I						
Colour systems	TV broadcast: PAL External input: PAL, NTSC	TV broadcast: PAL External input: PAL, NTSC 3.58/4.43 MHz					
Channels and frequencies	 Digital: E21-E68 (Frequency: 470-854 MHz) Analogue: UNITED KINGDOM: E21-E69 (UHF) IRELAND: IR A-IR J, E2-E12, E21-E69 (VHF/UHF) 						
Sound-multiplex systems	NICAM (I)						
Teletext systems Digital: MHEG 5 UK profile Analogue: FLOF (Fastext), WST (World Standard System)							
Power requirements	AC 220 V - 240 V, 50 Hz						
Audio output (Rated power output)	10 W + 10 W						
Speakers	(5.5 cm x 20 cm) oval x 2 (5.5 cm x 15 cm) oval x 2 (5.5 cm x 15 cm) o						
Power consumption [standby]	220 W [0.5 W]	164 W [0.5 W]	156 W [1.0 W]				
Screen size (visible area size measured diagonally)	105 cm	94 cm	80 cm				
Dimensions (W x H x D: mm)	1030 x 719.2 x 296	919 x 654.2 x 230	800 x 595.4 x 230				
[without stand]	[1030 x 672 x 122.4]	[919 x 603.8 x 124.1]	[800 x 545 x 115.4]				
Weights	28.5 kg	20.3 kg	16.6 kg				
[without stand]	[26.4 kg] [18.8 kg] [15.1 kg]						
Accessories (See "Check accessories", P. 5)							

- A CAM (Conditional Access Module) for watching pay-TV digital channels can be installed. (P. 8)
- DC power can be supplied to the indoor aerial. **■** WATCHING DIGITAL CHANNELS **P. 21**

Terminals / Connectors						
Termi	nal name	Terminal type	Signal type (IN)	Signal type (OUT)	Notes	
Input / Output terminals	EXT-1	Euroconnector x 1 (SCART connector)	Composite video, S-Video, Analogue RGB Audio L / R	TV out		
	EXT-2	Euroconnector x 1 (SCART connector)	Composite video, S-Video, Analogue RGB Audio L / R	Dubbing out	"T-V LINK" compatible	
	EXT-3	RCA connectors x 3, S-VIDEO connector x 1	Composite video, S-Video Audio L / R			
Input terminals	EXT-4	RCA connectors x 5	Analogue component (576i (625i), 480i (525i), Progressive: 576p (625p), 480p (525p), HD: 1080i (1125i), 720p (750p)) Audio L / R			
	EXT-5 (HDMI-1) EXT-6 (HDMI-2)	HDMI connector x 2	HDMI (576i (625i), 480i (525i), 576p (625p), 480p (525p), 1080i (1125i), 720p (750p))		"HDMI CEC" compatible (P. 43)	
	PC IN	D-SUB (15 pins) x 1	Analogue PC signal (P. 42)			
	AUDIO OUT	RCA connectors x 2		Audio L / R		
Output terminals	DIGITAL AUDIO OUT	OPTICAL connector x 1		Digital audio (48 kHz, 16 bit linear PCM / Dolby Digital)		
• Wo may	Headphone	Stereo mini-jack x 1 (3.5 mm in diameter)	without notice	Headphone output		

We may change the design and specifications without notice.

JVC



For users in the UK:

If you have any problems setting up your new TV, please call the **JVC**Helpline on **0870 330 5000**.

For users in the Republic of Ireland: If you have any problems setting up your new TV, please call the JVC Helpline on 1890-582500.