

JVC

LT-32DR1BU

LT-42DR1BU

WIDE LCD PANEL TV

16:9 LCD TV

TV LCD WIDESCREEN

TELEVISEUR A ECRAN LCD PANORAMIQUE

BREEDBEELD LCD TV

ŠIROKOÚHLÝ LCD MONITOR

INSTRUCTIONS

BEDIENUNGSANLEITUNG

ISTRUZIONI

MANUEL D'INSTRUCTIONS

GEBRUIKSAANWIJZING

PŘÍRUČKA K OBSLUZE

ENGLISH
DEUTSCH
ITALIANO
FRANÇAIS
NEDERLANDS
ČESKY



LCT2510-001A-L-EN

This TV can receive digital terrestrial broadcasting (DVB-T) in the following countries. (Supports standard definition MPEG-2 broadcast only) Digital terrestrial broadcasting (DVB-T) reception in other countries is not guaranteed.

Austria, Denmark, Finland, France, United Kingdom, Germany, Italy, Netherlands, Spain, Sweden, Switzerland, Czech Republic, Belgium

When selecting a country which does not support Digital Terrestrial broadcasting, select "Other" in "Select a country" (P. 11). When "Other" is selected, you can select the system language in "Select a system language" (P. 11) from languages listed below:

Bulgarian, Hungarian, Norwegian, Polish, Romanian, Russian, Turkish, Ukrainian, Greek.

Logo & License



HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

DVB is a registered trademark of the DVB Project

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Note

The open source software is embedded in this product.

For more information, please go to:

http://www.jvc-victor.co.jp/english/download/lnx/08_eu_dtv/

Information for Users on Disposal of Old Equipment and Batteries

ENGLISH



Products



Battery

[European Union]

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2002/96/EC and 2006/66/EC.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Business users]

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

These symbols are only valid in the European Union.

If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment and batteries.

Notice:

The sign Pb below the symbol for batteries indicates that this battery contains lead.

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technical Services Europe GmbH

Postfach 10 05 04

61145 Friedberg

Germany

Warning

Please follow all the guidelines below

Follow this manual regarding setup!

- Connect only to a 220-240 V, 50 Hz AC outlet.

Make enough room for inserting and removing the power plug!

Place the TV as close to the outlet as possible!

- Even if the TV's power lamp is unlit, the main power supply is not cut off unless the power cord is unplugged. The main power supply for this TV is controlled by inserting or removing the power plug.

 
Never cut or damage the power cord!

- If the power plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)



Unplug the power cord when going out!

- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)



Do not allow the TV to fall!

- Do not rest your elbows on, or allow children to hang from the TV. There is a risk that the TV will fall and cause injuries.

Never try to repair the TV yourself!

- ➔ If the problem cannot be solved in "Troubleshooting" (P. 38), unplug the power cord and contact your retailer.

On disposal of the TV!

- Follow the instruction in "Information for Users on Disposal of Old Equipment and Batteries" (P. 1).



Never place anything on the TV!

- Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.



Never expose to rain or moisture!

- To prevent fire or electric shock, never allow liquids to enter the unit.



Never insert objects into the cabinet openings!

- It may cause a fatal electric shock. Take care when children are near.



Never obstruct the ventilation holes!

- It may cause overheating or a fire.

Never listen to headphones at high volume!

- It may damage your hearing.

If the TV is damaged or behaving strangely, stop using it at once!

- ➔ Unplug the power cord and contact your retailer.

When attaching the TV to the wall, use the optional JVC wall mounting unit!

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.

Take care when handling the glossy finish!

- For more details, see P. 5.

Handle LCD panel with care!

- Use a soft, dry cloth when cleaning.

Never dismantle the rear panel!

- It may cause an electric shock.

Hold the TV so as not to scratch the screen!

- Do not touch the screen when carrying the TV.

Do not carry the TV on your own!

- In order to prevent accidents, ensure that the TV is carried by two or more people.




■ For more details on installation, usage and safety ➔ Consult your retailer

Enjoy rich multi-media with JVC


Quick setup

Connecting external devices and aerial

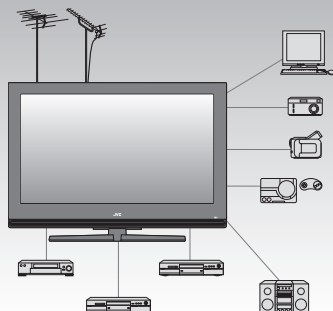

PAGE PAGE
07-10

Watch pay-TV digital channels

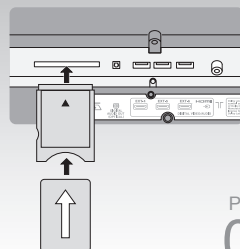

PAGE
06

Editing / tuning channels



Initial setting

PAGE
11

Edit PR

PAGE
33

Auto Scan / Manual Scan / Update Scan

PAGE PAGE
31-33

Digital terrestrial broadcasting (DVB-T) ➔ Digital channels Analogue terrestrial broadcasting (VHF / UHF) and analogue cable TV ➔ Analogue channels

Contents

Read first

- Warning 2

Getting started

- Package Contents 4
- Setting up your TV 5

Basics

- Using remote control ... 13
- Watching TV 15
- Using EPG 20
- Viewing teletext 22
- Watching videos / DVDs 23
- Configuring your remote control 24

Advanced


- Using the menu functions 26
- Viewing / listening from USB device 36

Etc.

- Troubleshooting 38
- Technical information 41
- Frequency table 45
- Specifications 48

Package Contents

Wide LCD panel TV

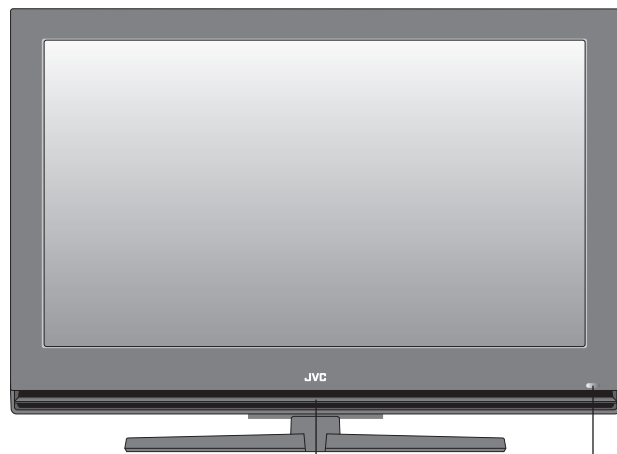

Power lamp


ON: Lit
OFF: Unlit

- The power lamp will blink for a while after inserting the plug into an AC outlet. This is not a malfunction.
- When you turn on the TV with a remote, the Power lamp will blink until you get a picture on the TV and the Power lamp will stay lit. When the Power lamp is blinking the TV will not be able to receive any commands from the remote.
- When "Power Lamp" is set to "Off", the Power lamp will not light up. For details, refer to "Power Lamp" (P. 30)

Note

- Peel off the protection films pasted on the glossy finish of the TV after the TV has been placed properly. (P. 5)

Remote control sensor
Eco sensor (See P.43)

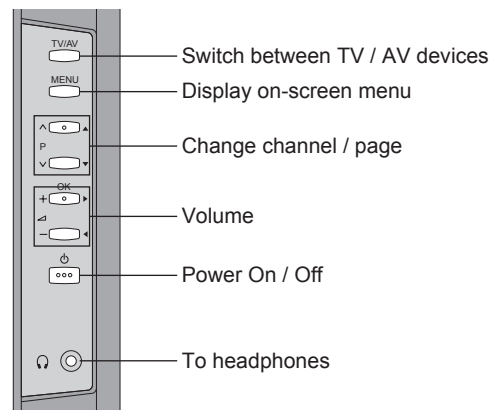

Accessories

Remote control



(For details on buttons and functions, see P. 13.)

"AAA/R03" Batteries



(For confirming the TV works)

WARNING:


Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

Setting up your TV


Attach the stand to the TV (LT-32DR1BU only)

For LT-32DR1BU, the stand will be supplied separately.
See the illustration below to attach the stand to the TV.

1

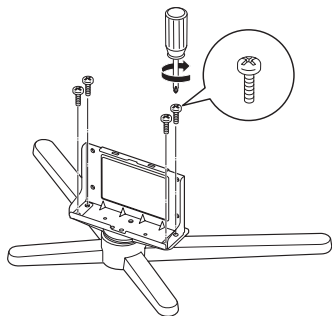


2

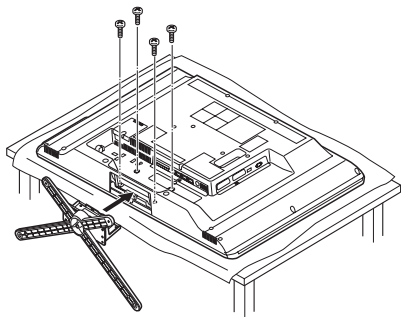

- To prevent scratches on the panel, lay a piece of soft cloth on an even platform and place the TV onto it.

Change the direction of TV

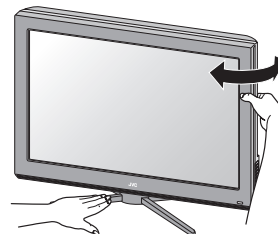


Handling the glossy finish of the TV

Be careful when handling the glossy finish of the TV

The glossy finish of the TV scratches easily.

- Protection films have been pasted onto the glossy finish of the TV to prevent scratches. Peel off the films after the TV has been placed properly.
- If the glossy finish gets dirty, clear the dust off the glossy finish first. Then wipe softly with a soft cloth. If you do not clear the dust first, or you wipe the glossy finish too hard, the glossy finish may be scratched.

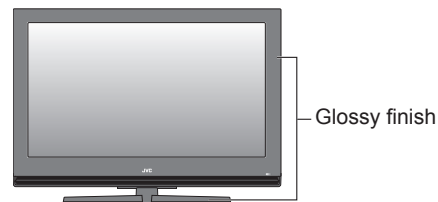

Install your TV

■ Power requirements

- Connect the power cord only to a 220 - 240 V, 50 Hz AC outlet.

■ When attaching the TV to the wall, use the optional JVC wall mounting unit

- Consult a qualified technician.

- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.
- Mounting holes for wall mounting unit:

LT-32DR1BU:

M5 x 4, 200 mm x 200 mm

Depth of screw hole is 7 mm from the surface of the TV.


LT-42DR1BU:

M5 x 4, 400 mm x 200 mm

Depth of screw hole is 13 mm from the surface of the TV.

■ Installation requirements

- Place the TV on the flat and stable location.
- To avoid overheating, ensure the unit has ample room.

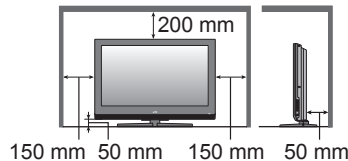


Watch pay-TV digital channels

Subscribe to a broadcasting company beforehand. A Smart Card (B) will be sent by the broadcasting company after subscribing to it. It may be necessary for you to purchase a Conditional Access Module (A) in addition to the Smart Card.


Consult your broadcasting company or retailer.

- ① Unplug the power cord
- ② Insert "B" into "A".
- ③ Insert "A".
- ④ Plug the power cord, and turn the power on.
- ⑤ Perform necessary settings using "Common Interface". (P. 30)
 - Pay-TV analogue channels cannot be watched.

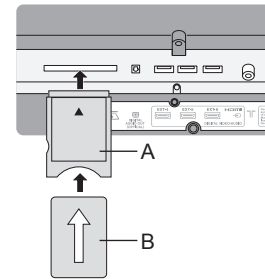


Insert the batteries

Use two "AAA/R03" dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

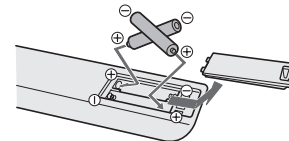


Connecting the aerial

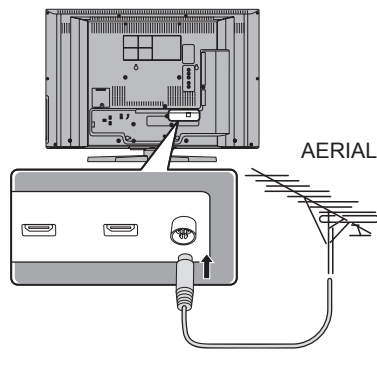

- After all the connections have been made, insert the plug into an AC outlet.

Connect a VCR / DVD recorder

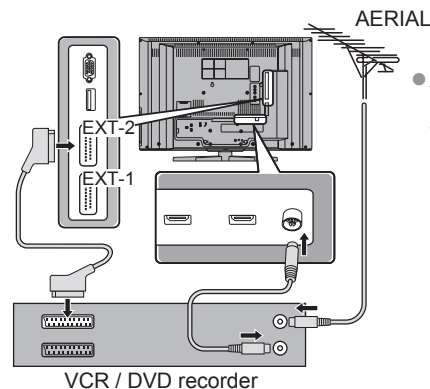

- After all the connections have been made, insert the plug into an AC outlet.

Power supply for the indoor aerial

When using an indoor aerial which requires external power, set "Antenna Power" to "On" in step 6 of "Initial settings" (P. 11). The TV will supply DC 5 V, 50 mA (max) from the aerial socket through the cable to the aerial.

- Supplying power to outdoor and indoor aerials which does not require external power, may cause damage to the aerial.
If you are uncertain whether the aerial needs external power, select "Off".
- Connect the aerial directly to the TV. When a recording device is connected between the aerial and the TV, power cannot be supplied to the aerial.
- Power is supplied to the aerial only when the TV is on.
- You can change the "Antenna Power" setting later. For details, refer to "Antenna Power" (P. 31).


Connecting external devices

Make sure all the devices and the TV are turned off.
The names of the devices shown in the following illustration are examples.

■ Find the best connections that are possible with your devices. ➡ (P. 9)

Note

- Please read the user manuals of each device before setting up.
- Connecting cables are not supplied with this TV.
- When using EXT-2 terminal, some USB device may not be able to connect properly depending on the outside dimensions.

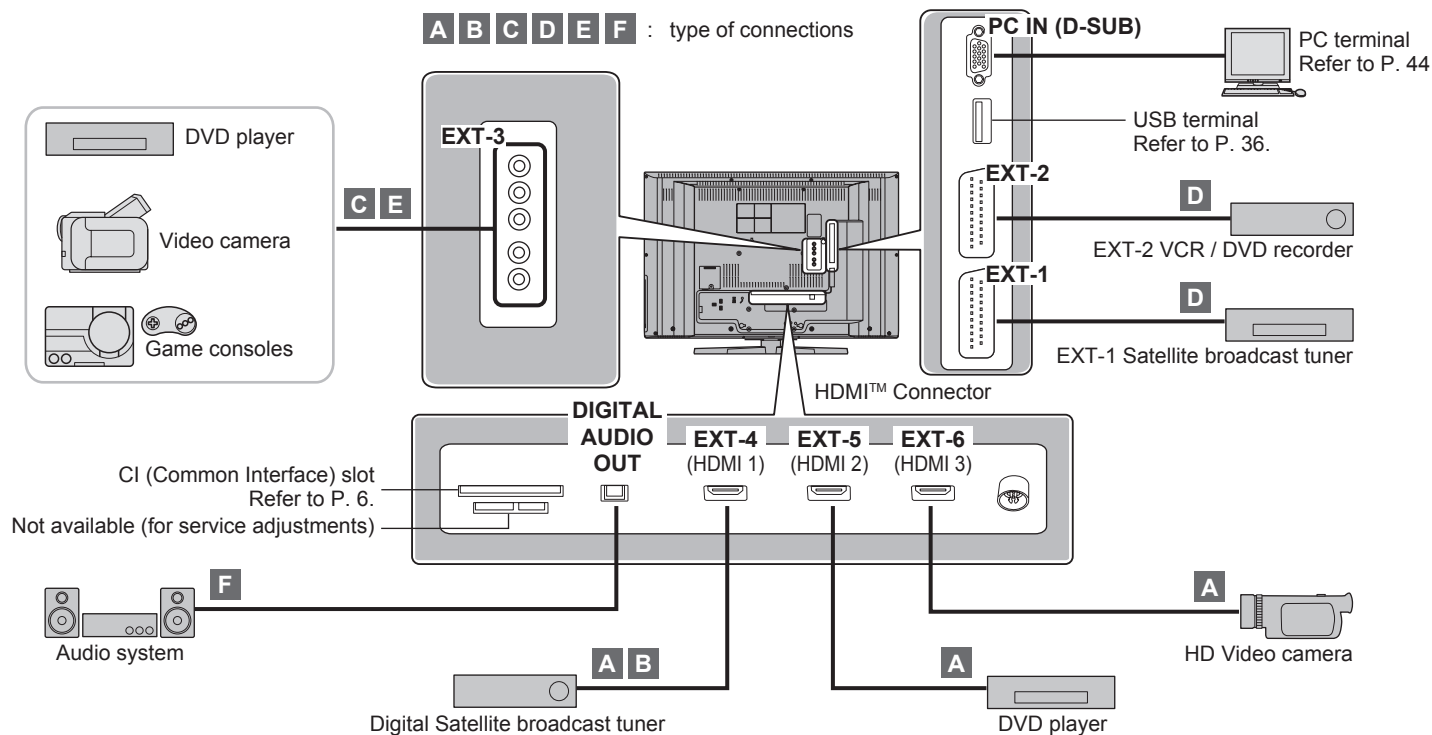




Choose your best connection

You can connect your TV to other devices in different ways. Check your devices and choose the best connection. In addition, please read “Notes” before using.


Note

- Please do not change any of the menu settings before completing the “Initial settings” (P. 11). Otherwise, the “Initial settings” will not start automatically.

Picture quality					
	Other devices	Connecting cables	Connect to your TV	Available signals	Notes
	 HDMI	 HDMI cable	 EXT-4 EXT-5 EXT-6	Input ● HDMI (digital) - SD: 576i (625i), 480i (525i) - ED: 576p (625p), 480p (525p) - HD: 1080i (1125i), 1080p (1125p) / 24Hz, 1080p (1125p) / 50Hz, 1080p (1125p) / 60Hz, 720p (750p) - Audio L / R	HDMI™ (HDMI™ CEC Support) Please use a High Speed HDMI™ Cable. High Speed HDMI™ Cable are tested to carry an HD signal up to 1080p and higher.
Best ↑ Better	 DVI  Audio	   DVI-HDMI cable, Audio cable	 EXT-4  L  R  EXT-3: L and R jacks	Input ● DVI (digital) - SD: 576i (625i), 480i (525i) - ED: 576p (625p), 480p (525p) - HD: 1080i (1125i), 1080p (1125p) / 24Hz, 1080p (1125p) / 50Hz, 1080p (1125p) / 60Hz, 720p (750p) ● Audio L / R (analogue)	
Better ↑ Best	 Component video and Audio	    Component video cable, Audio cable	 Y/V  Pb  Pr EXT-3	Input ● Component (analogue) - SD: 576i (625i), 480i (525i) - ED: 576p (625p), 480p (525p) - HD: 1080i (1125i), 720p (750p) ● Audio L / R (analogue)	Change the EXT-3 setting from “composite” to “component”. (P. 23)

  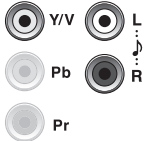D	 SCART (Euroconnector)	 SCART cable	 EXT-1	Input ● Composite video (analogue) ● S-Video (analogue) *NTSC/PAL compatible ● RGB input (analogue) ● Audio L / R (analogue) Output ● Monitor out (composite video and audio L/R) (analogue)	Please refer to the "Monitor out (EXT-1, EXT-2)" (P. 41) ● When connecting a decoder that are not equipped with a tuner, use EXT-1 terminal.
			 EXT-2	Input ● Composite video (analogue) ● S-Video (analogue) *NTSC/PAL compatible ● Audio L / R (analogue) Output ● Monitor out (composite video and audio L/R) (analogue)	
E	 Video and audio	 Video and audio cable	 EXT-3: V, L, R jacks	Input ● Composite video (analogue) ● Audio L / R (analogue)	Change the EXT-3 setting from "component" to "composite". (P. 23)

 Good

	Audio system	Connecting cables	Connect to your TV	Available signals	Notes
F	 Optical input	 Optical audio cable	 DIGITAL AUDIO OUT	Output ● When watching digital channel Linear PCM / Dolby Digital / MPEG (digital) ● Other Linear PCM (digital)	Please refer to the "Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 42)

Initial settings

The initial settings will begin automatically when the TV is turned on for the very first time. Follow the on-screen instructions to perform the settings.

1 Turn on



 
The power lamp on the TV lights

- If the remote control doesn't work, confirm that the mode is set to "TV".



2 Select a Menu language


Select a language for on-screen displays.



- If the "Menu Language" does not appear, refer to "Factory Setting" (P. 35) or "Retuning" (P. 35) for channel settings.

3 Select a country *


 
Select the country of installation. Receivable digital channels will differ depending on the "Country" setting.



4 Select a system language


Select a language for audio, subtitle, and EPG.

 - The system language will differ depending on selected country.

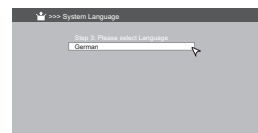



5 Select place of installation

 Select "Home", for use at home.



6 Set antenna power

 Confirm that the aerial power supply is set to "Off". Select "On" only when using an aerial which requires external power. (P. 7)

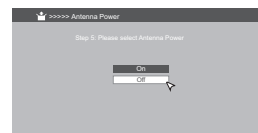


Note

* To select a country that not listed, refer to (P. 1).

7 Start auto scan

Register channels

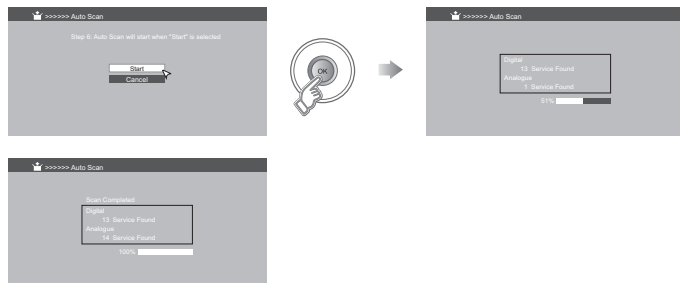

- If you can not register channels, refer to “When you cannot watch TV channels” (P. 12).
- You can edit the channels after the initial settings. For details, refer to “Edit PR” (P. 33). To edit PR → 
- Some digital channels cannot be watched on this TV. For details, refer to page 41.

8 Finish



■ To the previous screen → 

■ If the “Menu Language” does not appear or if you wish to make changes later, refer to “Factory Setting” (P. 35) or “Retuning” (P. 35) for channel settings.

When you cannot watch TV channels

1 Check the following points

- Is the TV connected correctly to the aerial?
- Change the direction of the indoor aerial.

Note

- You can check the broadcast signal level of the channel you are watching. For details, refer to “Signal Check” (P. 34).

2 Set digital channels using “Factory Settings”. For details, refer to “Factory Settings” (P. 35)

If you still cannot watch digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ➔ Consult your retailer

Using remote control

Buttons and functions

The functions of the remote control buttons are explained as follows.


This remote control can be configured to operate up to four different devices simply by changing the remote code.

“Configuring your remote control” (P. 24)

	Switch between “TV / STB / BD/DVD / AUDIO”. (P. 24)
	Turn on / off (standby) the TV.
	Display favourite list. (P. 15)
	Display the Electronic Programme Guide (P. 20)
	Select and confirm settings in menus.
	Display on-screen menu. “Using the menu functions” (P. 26)



	To the previous channel.
	Exit from Electric Programme Guide and on-screen menu.
	Change the aspect ratio. (P. 18)
	Colour buttons: Select a page when viewing teletext. Operate functions in menus.
	Change channel / page.
	Volume control. ● The volume settings for headphone and speaker will be memorised separately.
	Watch video etc. “Watching videos / DVDs” (P. 23)
	Mute.

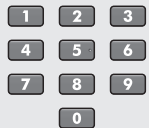	Enter channel / page number.
	Channel information. "Watching TV" (P. 16)
	View teletext. "Viewing teletext" (P. 22)
	Select digital / analogue / radio channels.
	Turn on "Surround". (P. 19)



	Display hidden information when viewing teletext. (P. 22)
	Change the subtitle language when viewing digital channels (P. 17)
	Change the audio language when viewing digital channels. (P. 17) Change the sound mode when viewing analogue channels. (P. 18)
	Set the sleep timer. (P. 19)

Note

- For buttons that can be used to operate other devices, refer to "Configuring your remote control" (P. 24).

Watching TV

Digital channels / Analogue channels / Radio

 


1

Turn on

The power lamp on the TV lights

- If the remote control doesn't work, confirm that the mode is set to "TV".
- Press again to turn the screen off and put the TV into standby mode.
- To completely turn off the TV, unplug the power plug.



2

Select Digital, Analogue or Radio



3

Select a channel


■ Enter a channel number

E.g.
1 : 0 → 0 → 1
15 : 0 → 1 → 5

■ Move up or down a channel

up
 down

■ Select with PR List

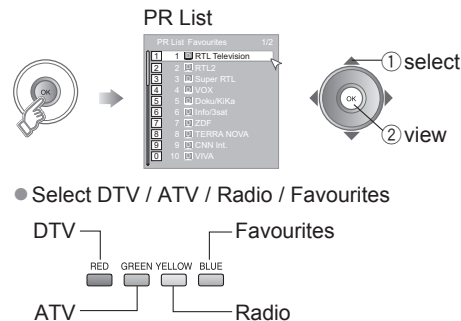

● Select DTV / ATV / Radio / Favourites

● Close PR List

- You can also display "Favourites" by pressing
- To edit favourite channels, refer to "Favourite Setting" (P. 33)

■ Select with EPG (Electronic Programme Guide) (P. 20)




- Display only programmes which match your selected genre
→ "Genre" (P. 21)

Note

- Add a new station. → "Update Scan" (P. 33)
- Edit the "PR List" according to your liking. → "Edit PR" (P. 33)
- Some digital channels cannot be watched on this TV. → (P. 41)
- The channels and programme names shown in the illustrations are for Germany.

Display the programme information


■ Digital channel / radio

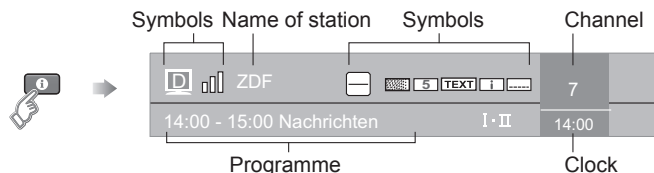

- Whenever changing the channel, "Programme Information" is displayed.



■ Analogue channel

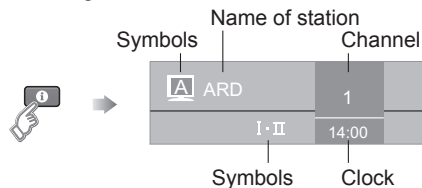

- Time is displayed only when teletext broadcasting can be received.

■ Symbols description

: Reception level

Red	Yellow	Green
: Poor	: Acceptable	: Excellent

: TV programme
 : Radio programme

: Teletext is available. (P. 22)

I·II : I: Audio in another language is not available.
 II: Other audio languages are available. (P. 17)

: Pay-TV channel

: Minimum viewing age limit of the programme.
 Set viewing age limit. → (P. 30)

: Subtitles are available. (P. 17)

: More information about the programme is available. →

Dolby Digital : Dolby Digital signal is received. (P. 42)

 
: Special audio track for the visually impaired. (P. 29)

: Special audio track for the hearing impaired. (P. 29)


View subtitles (Digital channel only)

By default, the language set in “System Language” (P. 29) is automatically selected.

When not broadcast in that language, another broadcast language is automatically selected.



■ Switch to another language

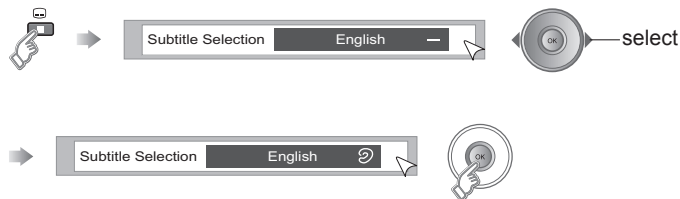

⌂ : Special subtitles for the hearing impaired

Undefined : When the subtitle's language cannot be identified


- The language that can be selected depends on the broadcast.
- When no subtitles are broadcasted, “No Subtitles” is displayed.

Select audio language (Digital channel only)

By default, the language set in “System Language” (P. 29) is automatically selected.

When not broadcast in that language, another broadcast language is automatically selected.

■ Switch to another language

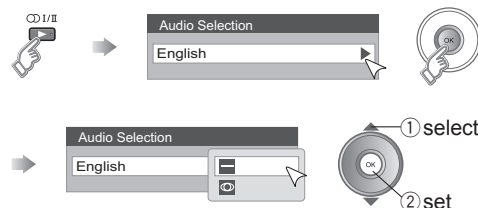

⌂ : Special audio track for the visually impaired

⌂ : Special audio track for the hearing impaired

Undefined: When the audio's language cannot be identified

 

Dolby: Dolby Digital

- The language that can be selected depends on the broadcast.
- Please read ““Dolby Digital” output from the DIGITAL AUDIO OUT terminal” (P. 42) before selecting “Dolby”.

Change the sound mode (Analogue channel only)



2 Select the sound mode

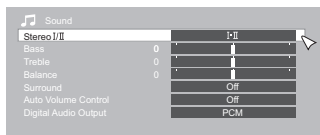




- When viewing a bilingual broadcast programme, you can select either Bilingual I (Sub I) or Bilingual II (Sub II) sound.
- If the stereo broadcast reception is poor, you can change to mono sound for clearer sound.
- This button can also be used when watching digital channels. For details, refer to “Select audio language” (P. 17)

Change the aspect ratio



2 Select the aspect ratio

 ■ For high definition signal

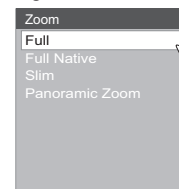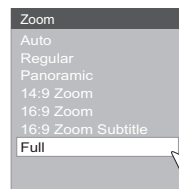

- When viewing high definition signal, the content of the menu will be changed.




Move the picture with ▲ or ▼ while this bar is displayed

- “Full Native” → “What is “Full Native”?” (P. 44)
- When “Slim” is selected, a 4:3 image stretched out to 16:9 will revert back to its original aspect ratio with black bands.
- When “Panoramic Zoom” is selected, a 4:3 image with black bands will be stretched out to 16:9.
- Using “Auto” → “Auto in “Zoom”” (P. 41)

Note

- If an image is displayed in an aspect ratio that differs from its original aspect ratio, the image will be distorted or portions of the image will be cut off.
- When viewing “PC”, only “Full” or “Regular” can be selected.

Enjoy ambient sound

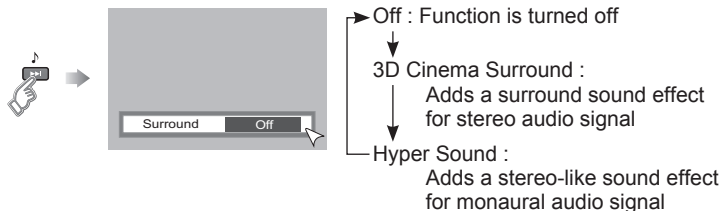


- You can also adjust the “Surround” settings in the “Surround” menu.
(P. 29)
- “Surround” does not work with headphones.

Set a time for the TV to turn off automatically



2 Set the time

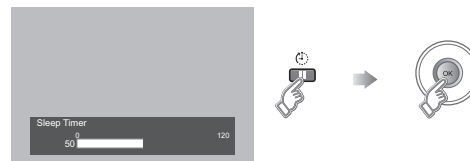

- Each press of will increase the time by 10 minutes.
- Cancel → Set the time to “0”.
- Remaining time → Display this menu again.

Using EPG (Electronic Programme Guide)

You can find a programme from an eight-day programme guide, check its information, and make a reservation.




1 Display EPG



- It may take a while to receive data.

2 Find a programme

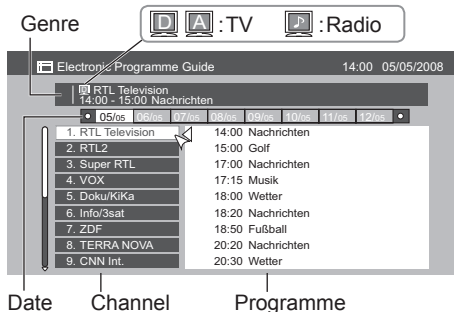

Date Channel Programme

Select a Date

Select a channel /
a programme

Previous Next



Note

- The channels and programme names shown in the illustrations here are examples only.

■ Check programme information



■ Close EPG



Genre icon

General

Music

Movie

Culture

News

Current Affairs

Entertainment

Education

Sports

 
Leisure

Children's

Special

- The genre types that can be selected differ depending on the country selected in the "Country" (P. 11) setting.

■ Watch / listen to the programme



- When the clock is off → "Time Zone" (P. 29)
- Select the default language for programme name and programme information → "System Language" (P. 29)


Genre

Display only programmes which match your selected genre.

1 Display the genre list




2 Select a genre

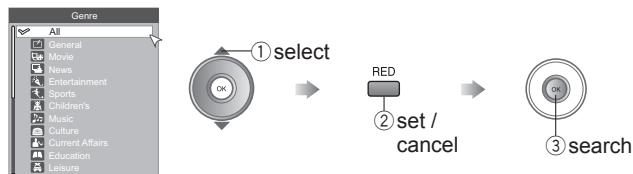

- More than one genre can be selected.

3 Find a programme

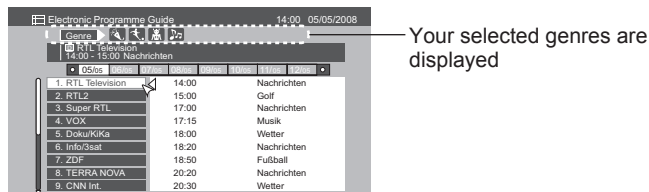

Your selected genres are displayed

- Only programmes in the selected genre are displayed.

Timer


Reserve a programme to watch. (One programme at a time)
To record a programme, refer to "Monitor out (EXT-1, EXT-2)" (P. 41).

1 Select a programme

- Select a column (Channel / Programme)
- Select a channel / a programme



2 Set "Timer"

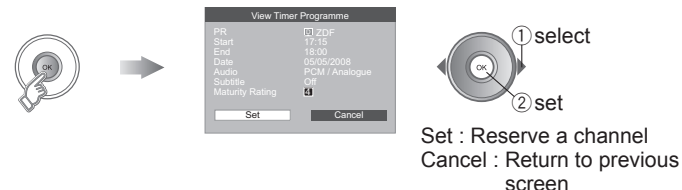

- If there already is a programme reserved, "Over write Timer?" will display. To cancel and over write the existing reservation, select "Yes". When set, the will display.

■ Confirm / Cancel a reservation




To cancel the reserved programme, select "Cancel Timer" then select "Yes". To keep the reservation, select "Confirm".

- You can also cancel by changing channels during timer.
- Message will display 60 seconds before the timer starts. When the timer starts during standby, the TV will turn on automatically and will return to standby when the end time comes.

Viewing teletext

This TV can display TV broadcasts and teletext on the same channel in two windows.

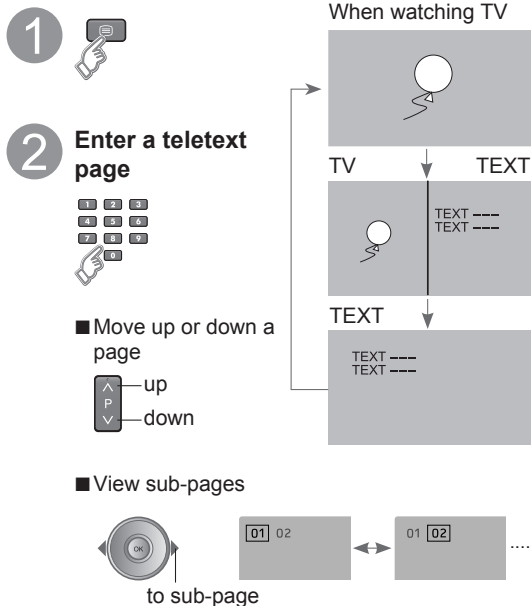

Reveal hidden pages

Display hidden information (answers to quizzes, etc.)

$$\begin{array}{rcl} 1 & + & 2 = \\ 2 & \times & 3 = \end{array}$$

$$\begin{array}{rcl} 1 & + & 2 = 3 \\ 2 & \times & 3 = 6 \end{array}$$


To the index page

Returns to page "100" or a previously designated page

Watching videos / DVDs



1 Select the video source

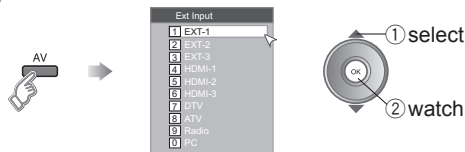


2 Operate the connected device and play a video

■ To return to TV channels

- Press the "DTV" button or select "DTV" from the "EXT Input" menu for digital channels.
- Press the "ATV" button or select "ATV" from the "EXT Input" menu for analogue channels.

 2 Select "EXT-3 Setting", "EXT ID Setting" or "Control with HDMI"



■ EXT-3 Setting

Select "Component" or "Composite"



Component For component signal

Composite For composite signal

■ EXT ID Setting

Select terminal

Show the name list

 
Select a name from the list



■ Control with HDMI

If you use a HDMI CEC compatible device, set this setting to "On".

- For more details ➔ "What is "HDMI CEC"? (P. 43)




Setting external terminals

1 Display the "Connection setting" menu

Display the menu bar

Select "System Setup"

 Select "Connection setting"




Configuring your remote control

You can configure your TV's remote control to operate your other devices.

Setting your remote



 - 1 Turn on the device manually.
- 2 Switch the remote control mode to a mode that matches your device. Refer to the table on the right to select an appropriate mode.



- The indicator lights for 3 seconds each time the remote control is operated.

- 3 Find the remote control code for your device according to its brand from the "Remote control codes" list. (Refer to P. I - XII at the back of this manual.)

4 Set the remote control code.



Press and hold



Enter four digit number



Release the button

- The indicator will unlit for a second after entering the four digit remote control code number.

- 5 Point the remote control at your device, press  and confirm that your device is turned off. If your device does not respond, try entering another available code.

Note

- If your device does not respond, try all the available codes for the device's brand.
- If none of the code works, or the brand is not listed, refer to "Using the search code function" (P. 25).

MODE	Applicable devices
TV	JVC brand only
STB	Cable Set Top Box, Cable/PVR Combination, Satellite Set Top Box, SAT/PVR Combination
BD/DVD	DVD, Blu-Ray DVD, HD DVD, DVD-R, Home Theater in Box, TV/DVD Combination
AUDIO	Amplifier, Receiver, Home Theater in Box

Using the search code function

This function searches through the codes one by one, beginning from the first code in the list.

- 1 Turn on the device manually.
- 2 Switch the remote control mode to a mode that matches your device.

Press **MODE** to select the mode.

- 3 Activate the search code function.


Hold down **⏻** (stand-by) and **⏮** until the mode indicator blinks.

- 4 Point the remote control at your device and press the stand-by button. If there is no response, try the next code by pressing ► and press the stand-by button again. Repeat the process until your device turns off.

- 5 Press **⏮** to register the code.

The code is now set. Confirm that the mode indicator goes out.

- If your TV's remote control still does not work even after using the search code function, use your device's own remote control. The TV's remote control is not guaranteed to work with all models, brands or operations.

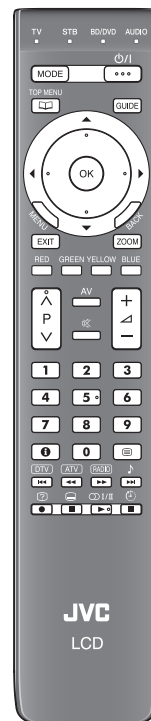

Button functions

■ Change the remote control mode

TV STB BD/DVD AUDIO

 
MODE

■ Turn on/off the device



■ Navigate the menus

Display top menu



■ Playback / Record, etc.

 
Select a chapter



Reverse

Forward

Play



■ Display on screen ➔ Press "i"

■ Mute ➔ Press "MUTE"

■ Volume ➔ Press "VOL"

■ Select a surround mode ➔ Press "SUR"

For STB, it displays Electric Programme Guide.

- Depending on your device, some functions may not be operable with this remote control.

Using the menu functions



 

1 Display the menu bar




2 Display the desired menu



3 Change or adjust the setting

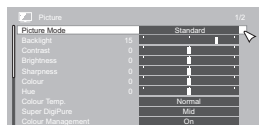

■ To enter an item's menu

 


- To hide or display the bottom area of the menu
→
- Depending on the situation, some items will be displayed in gray colour and will not work. You will not be able to change their setting as well.

■ To the previous screen →

■ To Exit →



■ When entering the PIN code

 When watching digital channels or changing DTV menu settings, it may be necessary for you to enter a PIN code.
Once a PIN code has been entered, there is no need to enter it again until the TV is turned off.




- The default PIN code is "0000".
- You can set your own PIN code. → "Enter PIN code" (P. 30)
- It may be necessary for you to reenter a PIN code, when you reset "Maturity Rating" or "PR Lock" setting.

  ■ When a message with option selections appears



■ When an information message appears

 


Using the menu functions

Photo viewer menu

You can view picture files and listen to music files that are stored in your USB device. For details refer to “Viewing from USB devices (Picture / music)” (P. 36)

Picture menu

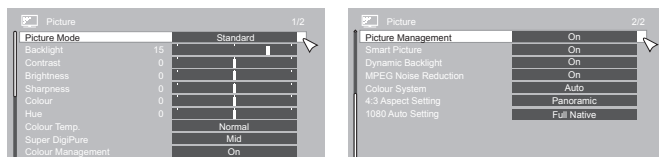

- “Colour System” is available only for analogue channels.

Picture Mode

Select preset picture setting according to the brightness of your room.

- Standard** in a room with standard brightness
- Soft** in a dark room
- Bright** in a fairly bright room
- Game** when playing video games
- User** Make adjustments to your liking

When “User” is selected, you can set the settings listed below.

Backlight	Backlight brightness (Darker ⇄ Brighter)
Contrast	Contrast (Lower ⇄ Higher)
Brightness	Brightness (Darker ⇄ Brighter)
Sharpness	Sharpness (Softer ⇄ Sharper)
Colour	Colour (Lighter ⇄ Deeper)
Hue	Tint (Reddish ⇄ Greenish) (NTSC only)
Colour Temp.	Colour temperature (Warm / Normal / Cool)

Super DigiPure

For natural-looking outlines

- Off** Function is turned off
- Min** Less effective
- Mid** More effective
- Max** When noise appears

Colour Management

For natural looking pictures

- On** Maintain a natural colour balance
- Off** Function is turned off

Picture Management

Fix bright / dark pictures

- On** Make it easier to view bright / dark pictures
- Off** Function is turned off

Smart Picture

Make it easier to view white areas

- On** Make it easier to view white areas
- Off** Function is turned off

- When “Bright” is set as a “Picture Mode”, this function becomes invalid.

Dynamic Backlight

Make it easier to view black areas when the picture is dark

- On** Make it easier to view black areas
- Off** Function is turned off

MPEG Noise Reduction

Reduce MPEG video noise

On

Reduce MPEG video noise

Off

Function is turned off

Colour System

When there is no colour (On / Off)

Select the colour system

PAL

Western Europe

SECAM

Eastern Europe / France

NTSC 3.58

USA 3.58 MHz*

NTSC 4.43

USA 4.43 MHz*

AUTO*

When watching videos, etc.

* Select in video mode only.

4:3 Aspect Setting

Set a default aspect ratio
(Panoramic / Regular)

Select a default aspect ratio

Panoramic

Regular

16 : 9

4 : 3

1080i Auto Setting

Select a default aspect ratio for Auto in
"Zoom" (P. 41) when 1080i/p (1125i/p)
signal is received

Full

Full Native



ENGLISH

 
Getting started

Basics

Advanced

Etc.

Sound menu



● "Stereo/ I-II" is available only for analogue channels.

Stereo/ I-II

Select stereo, monaural or language

○

Monaural

∞

Stereo

I

SUB1

II

SUB2

Bass

Low tones

|

Weaker ⇄ Stronger

Treble

High tones

|

Weaker ⇄ Stronger

Balance

Speaker balance

|

Left ⇄ Right

Using the menu functions

Sound menu (continued)

Surround

Enjoy ambient sound

Off

Function is turned off

3D Cinema Surround

Adds a surround sound effect for stereo audio signal

Hyper Sound

Adds a stereo-like sound effect for monaural audio signal

- "Surround" does not work with headphones.

Auto Volume Control

Maintains a uniform sound volume even if the sound becomes loud suddenly during commercial breaks etc.

On

Maintains a uniform sound volume

Off

Function is turned off

- "Auto Volume Control" does not work with headphones.

Digital Audio Output

Dolby Digital signal or MPEG signal
(When viewing Digital channels)

PCM


Linear PCM signal

Dolby Digital


Dolby Digital signal or MPEG signal
(When viewing Digital channels)

- See "Dolby Digital" output from the DIGITAL AUDIO OUT terminal" (P. 42) before setting.

System Setup menu

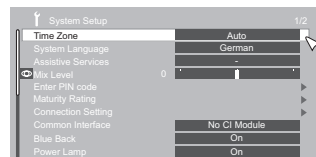

- "Time Zone", "Assistive Services", "Maturity Rating", and "Common Interface" is available only for digital channels.

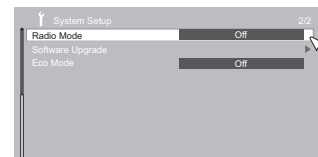

Time Zone

Set the time zone if the clock is off

System Language

Set audio language, subtitle language, and EPG language. Languages will differ depending on selected country. (See page 1)

Assistive Services

Automatically set hearing impaired or visually impaired

-

Function is turned off



For visually impaired



For hearing impaired

Mix Level

Adjust the mix level of audio from the programme and special audio track for the visually impaired.

- To display mix level, select "Special audio track for the visually impaired" in "Assistive Services".

Enter PIN Code

 
 
Change PIN code

1 Input the current code





- Default is "0000".
- If you forget the code, input "0081".

2 Input a new code twice



Maturity Rating

 Set the viewing age limit

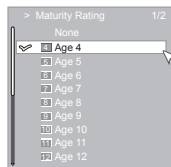

- Only programmes with a maturity rating can be restricted.
- To watch the restricted programme, the PIN code must be entered.

- The maturity rating may differ depending on the "Country" setting.

Connection Setting

For use with video players and other devices ➔ "Setting external terminals" (P. 23)

Common Interface

Set Conditional Access Module

To watch pay-TV digital channels, use the Conditional Access Module menu. This function can only be used when pay-TV can be received in your region.

When the Conditional Access Module etc. is inserted after subscribing to the broadcasting company, this function is available. Press "OK" button to display the Conditional Access Module menu and follow the instructions on the screen.

- "Watch pay-TV digital channels" ➔ (P. 6)
- If the Conditional Access Module etc. is not inserted, "No CI Module" will be displayed and this function cannot be used.
- The content of the menu is different depending on the broadcasting company.
➔ For details, consult your broadcasting company.
- The language shown in the menu may differ from the "Language" set for the TV.

Blue Back

Displays a blue screen when the signal is weak or absent (On / Off)

On

Function is turned on

Off

Function is turned off

- To activate this function, power cycle the TV.

Power Lamp

Power lamp setting

On

Function is turned on

Off

Function is turned off

Using the menu functions

System Setup menu (continued)

Radio Mode

Automatically turns off the backlight when listening to the radio channel.
This function reduces the power consumption of this TV.

On

Function is turned on

Off

Function is turned off

- When set to "On", the "Power Lamp" will also be set to "On".

Software Upgrade

Software update using the USB terminal

Software Upgrade

Did you connect the device that installed the up-grade data with the USB terminal?

Yes

No

Current used Software version

52281_0.24.2.0

When you select "Yes" after connecting the USB, the TV will enter standby then turns on again and the "Upgrade menu" is displayed.

- To exit "Upgrade menu", turn off the TV.


- You can also check your current version.
- You can update the software downloaded by Over air download (P. 44)

Eco Mode

Automatically adjusts the picture contrast according to the brightness of your room (On / Off / Demo)

- For more details ➔ "What is "Eco Mode"?" (P. 43)

PR Installation menu

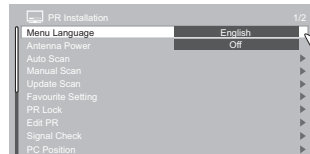

Menu Language

Select a language for on-screen menus

Antenna Power

Power supply for indoor aerial

When using an indoor aerial which requires external power, set "Antenna Power" to "On". The TV will supply DC 5 V, 50 mA (max) from the aerial socket through the cable to the aerial.

- "Power supply for the indoor aerial" ➔ (P. 7)

Auto Scan

 
Scans and updates all receivable channels

1 Select "Continue"



All existing or locked services, Favourite Settings, and Timer Settings will be deleted!

Continue

Cancel





2 Start "Auto Scan"

  

Manual Scan

Manually scan and update a channel

  
Select “Digital” or “Analogue”



■ Digital

1 Select the CH number

 - CH number → “Frequency table” → (P. 45)



2 Start “Manual Scan”



or

 
 


3 Store channel





■ Analogue

1 Set the “System” and “Band”



2 Select the CH number

  - CH number → “Frequency table” → (P. 45)



- To directly register selected channel, press “BLUE” button and then press “YELLOW” button.

 
3 Start “Manual Scan”



or



4 Fine tune channel



5 Store channel



Using the menu functions

PR Installation menu (continued)

Update Scan


Updates new channels

Start "Update Scan"



Favourite Setting


Register your favourite channel

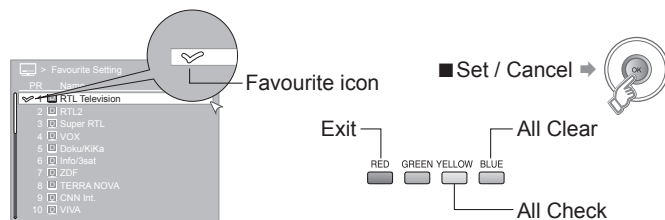

- To move through only your favourite channels.
➔ "Select with PR List" (P. 15)

PR lock

Stops children from watching specific channels

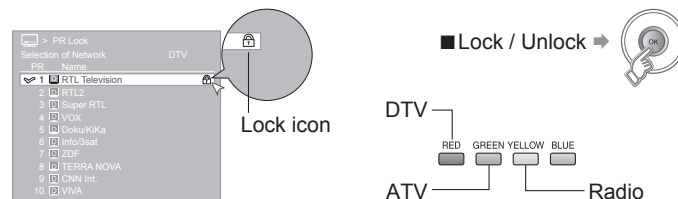


- To enable "Lock" function, turn the TV off and on again.
- To watch the locked channels, the PIN code must be entered.
➔ "When entering the PIN code" (P. 26)
- Enter PIN code if needed
➔ "When entering the PIN code" (P. 26)

Edit PR

Registering channels and moving the channel or channel name for PR list


1 Select "Digital", "Analogue" or "Radio"

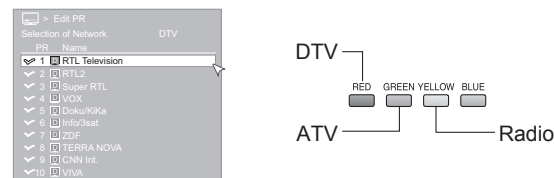


2 Select a channel




■ Register a channel to PR list

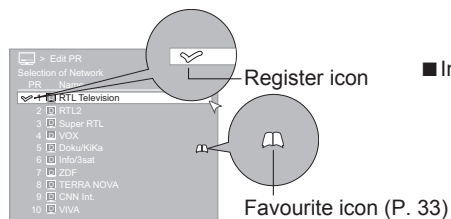

■ Move a channel

 

■ Edit channel name (Up to 5 characters)

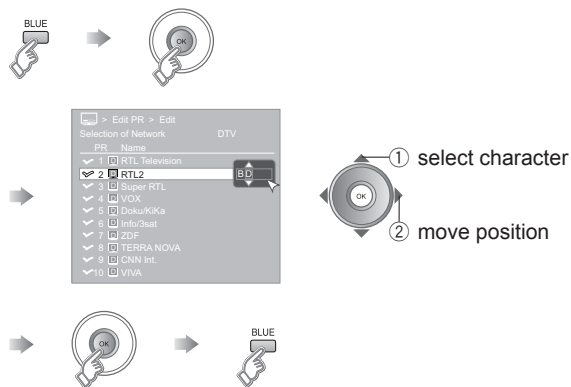


Signal Check

Check the broadcast signal



Signal: **Poor** < **Acceptable** < **Excellent**

 
■ To check another broadcast channel



- The "Channel" is the frequency of the digital broadcasting. It differs from the channel number displayed on the TV.

PC Position

 Adjust the position of the PC image



■ Reset



PR Installation menu (continued)

Factory Setting

 
Initialise the settings

Are you sure you want to delete the PR list and
reset all settings?

Yes

No

The TV will switch off when reset is completed.
Please switch the TV back on.



➡ Initial setting will start again.
"Initial settings" (P. 11)

- Select "Yes" in "Factory Setting" (will enter standby), then turn on from standby and start the "Initial settings" (P. 11).

Retuning menu

 
You can set the TV to restart the initial setting. For details refer to step 2 in "Initial setting" (P. 11)

Viewing / listening from USB device

Picture / Music

You can view photos and play music by connecting usb mass storage class devices.


1 Connect USB device



"Photo Viewer" is displayed.

- If the "Photo Viewer" does not appear, select "Photo Viewer" from the menu bar.

 
2 Select "Picture" or "Music"





■ To exit Photo Viewer → **EXIT**

- Make sure to exit "Photo Viewer" before disconnecting the USB device.

Picture



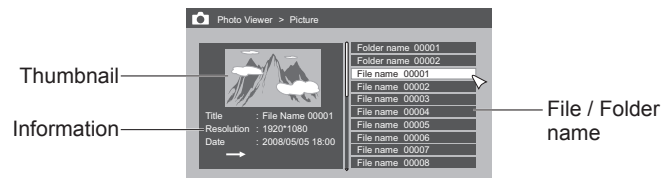


■ To view a photo

  


- "Zoom" function is available only when the size of the photo is bigger than the TV screen size. You can only zoom up to it's original size.
- When using the zoom function you can move the photo side to side and up and down by using
- Depending on the file, the rotate information will be memorised.

   
■ To view as slide show




- The slide show can only be used for picture that are placed inside the folder

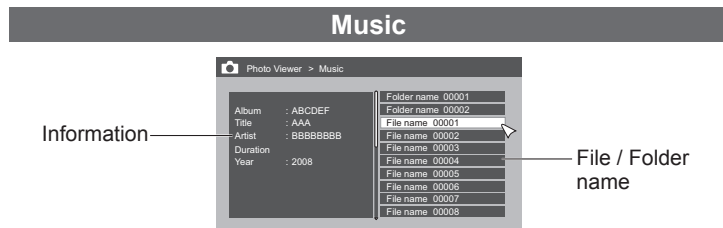

■ To play a song

 

■ To continuously play the songs

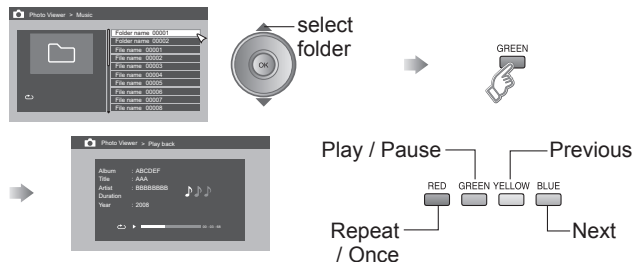

- To continuously play the songs, you must place the songs inside the folder.
- For supported formats, refer to "Supported music formats for Photo Viewer". (P. 42)

Slide show with background music

You can view slide show with background music by setting "To continuously play the songs" (P. 37) and "To view as slide show" (P. 36)

- To view slide show with background music, make sure to place the pictures and music inside the folder.

1 Start the background music

To start the background music, follow the instruction in "To continuously play the songs" (P. 37). Press the OK button to exit from the Playback screen.

2 Start the slide show

To start the slide show, follow the instruction in "To view as slide show" (P. 36).

Note

- Photo Viewer cannot be guaranteed to work with all USB Mass Storage Devices. It may take some time to display or it may not display correctly.
- The USB device that needs specific driver software is not supported.
- Supported file formats are ".jpg", ".JPG", ".mp3", or ".MP3".
- All your stored data should be backed up first as a precaution before connecting to the TV. Any loss or damage of data is not guaranteed.
- Depending on your stored file size, it can take extra time to display "Photo Viewer" page.
- When disconnecting the USB device, make sure to pull out gently.
- Folders with a "." in their folder name will not be displayed.
- Does not support Progressive JPEG format.

Troubleshooting

■ Analogue channels

Severe noise or snow



- Is the TV connected correctly to the aerial?
- Change the direction of the aerial.

- Is the aerial or its cable damaged?
➔ Consult your retailer
- Is the "Antenna Power" set to "On"?
➔ "Antenna Power" (P. 31)

Patterns, stripes or noise



- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?

- ➔ Consult your retailer
- Are connected devices too close to the TV?
➔ Place a minimum distance between the aerial and the cause of interference until no interference


Ghosting

(Doubling of images)



- Are you receiving interference from signals reflected off mountains or buildings?

- ➔ Adjust the direction of your aerial, or change to a good-quality directional aerial

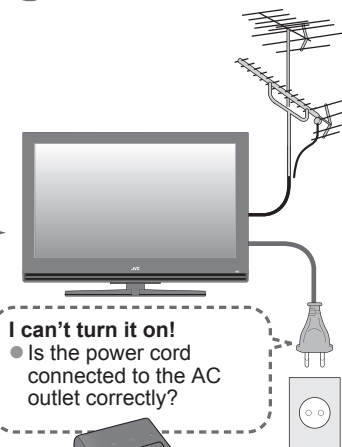

I can't turn it on!

- Is the power cord connected to the AC outlet correctly?

The remote control doesn't work!

- Are the batteries flat?
- Are you more than 7 meters away from the TV?
- Is the "MODE (TV, STB, BD/DVD, AUDIO)" set to "TV"?
- When viewing teletext, the TV menu bar does not appear.
- Depending on the stability of the signal, there may be a time lag when changing channels.



	Problem	Actions
Basics	Remote control stops working	● Unplug TV, several minutes later plug it in again.
	TV screen is frozen	● Continuity press "MENU" (TV), "⏏", "1" (remote) with under 2 seconds of interval. ● Unplug TV, several minutes later plug it in again.
	Forgot my PIN code!	● The default PIN code is "0000". If you forget the numbers that you used to change the default PIN code, first input "0081" in the "Enter PIN code" and then register a new PIN code. (P. 30)
	Locked channels can be watched without inputting PIN code	● Once the PIN code is input, the lock functions ("Lock" and "Maturity Rating") are released. If you want to use the lock functions again, turn the TV off and then turn it on again.
Screen	Aspect ratio changes unintentionally	● Press "ZOOM" to return to your settings. (P. 18)
	Black or white dots appear on the screen	● LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. Please understand that this is not a malfunction.

	Problem	Actions
Picture	Poor picture quality	● Change the "Picture Mode" setting. (P. 27) ● Unnatural colour >>> Adjust "Colour" and "Backlight". (P. 27) Check your "Colour System". (P. 28) ● Noise >>> Set to the following functions. Picture Mode: Standard (P. 27) Super DigiPure: Max (P. 27) ● Dull picture >>> Set to the following functions. Picture Mode: Bright (P. 27) Super DigiPure: Off (P. 27)
	Strange picture when using an external device	● If the top of the image is distorted, check the video signal quality itself. ● If movement appears unnatural when receiving a signal from a DVD player etc., with 576p (625p), change the output setting of the external device to 576i (625i).
Sound	Poor sound	● Adjust "Bass" and "Treble". (P. 28) ● If receiving a poor signal in "Stereo/ I-II", switch to "O" (monaural). (P. 28) ● Change the broadcasting system using "Manual Scan". (P. 32)
	Left and right sound coming from one side of the speaker	● If you hear both the left and right sound from one side of the speaker even after adjusting the speaker balance to one side, set "Surround" to "Off". (P. 28)

	Problem	Actions
Picture	Some functions do not work	● It is not a malfunction. Depending on the situation, some function items will be displayed in gray colour and will not work. (P. 26)
	Wrong screen size	● Read the user manual of the connected device and perform the following: ➡ Check if the output setting of the device is correct. ➡ Change the signal format of the device to other format.
HDMI	No picture, no sound	● Use the cable marked with HDMI logo. HDMI
	No sound	● Check if the device is compliant with HDMI.
	Green and distorted screen	● Wait a little for the signal to stabilise when switching the signal format for an HDMI device.

Problem		Actions
Message	"Missing or weak signal"	● Is the TV connected correctly to the aerial? ● Change the direction of the indoor aerial. ● Check digital channels signal with "Signal Check". (P. 34) ● If you still cannot watch the digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ➔ Consult your retailer.
	"The timer will start soon"	● While watching TV, the message appears when a timer programme is about to start, indicating that the channel will be switched.
	"Software Update"	● You can update the software downloaded by Over air download (P. 44)
DTV	No picture, no sound	● Some digital channels cannot be watched on this TV. (P. 41)
	When the clock is off time	● Change the "Time Zone" setting. (P. 29)

Problem		Actions
Photo Viewer	Album / Title / Artist / Year does not display or display correctly (Music)	● Make sure to use ID3v1 tag.
	Duration time does not display or display correctly (Music)	● Duration time cannot be calculated for MP3 that contains the artwork. ● The duration time is calculated from the bit rate and the file size, the time displayed may differ from the actual playback time. Higher the compression rate and lower the bit rate / sample rate is these error margins will be greater.

This is not a malfunction

- When the TV is turned on, it will take approx. 18 seconds to properly produce picture and sound.
- When the TV is turned on by plugging to the AC outlet, it will take approx. 15 seconds until the TV is ready to receive any commands from the remote.

Technical information

Receivable broadcast systems

The broadcast system that can be received by "Auto Scan" will differ by countries.

- FRANCE: Can receive SECAM-L.

To register channels that can not be received by using "Auto Scan" because of the broadcast system, use "Manual Scan".

Auto in "Zoom"

When "Auto" is selected in Zoom, the aspect ratio will turn to the ratio obtained from the information the TV received.

- The aspect ratio will turn to the ratio obtained from WSS (Wide Screen Identification Signal), video signal, or control signal of the external devices. Without receiving the aspect information, it will be the setting in "4:3 Aspect Setting". (P. 28)

Digital channels that cannot be watched on this TV

If a digital channel service uses new formats (such as DVB-H or MPEG4, etc.), or MHP, it cannot be watched even though the channel name appears. If the channel is selected, the picture will not appear and audio cannot be heard.

* This TV can receive digital terrestrial broadcasting (DVB-T) in the following countries. Digital terrestrial broadcasting (DVB-T) reception in other countries is not guaranteed.

Austria, Denmark, Finland, France, United Kingdom, Germany, Italy, Netherlands, Spain, Sweden, Switzerland, Czech Republic, Belgium

Monitor out (EXT-1, EXT-2)

- To record Digital / Analogue channels to external devices
Connect the external device to EXT-1 or EXT-2.
Select a programme you want to record and video / audio will output as an analogue signal.
Analogue channel video / audio will output from EXT-1 when analogue channel or EXT-1 is selected.
- To record video and audio from another external devices
Connect the external device to EXT-1 or EXT-2.
Select an external device you want to record and video / audio will output as an analogue signal.

Note

- Set the aspect ratio to "Regular" or "Full". The aspect ratio will not be displayed correctly during recording or playback.
- You can not output from EXT-1 if you switch to EXT-1 from digital channel.
- 1080p (1125p) signal is not supported, because they can not be converted to composite signal.

“Dolby Digital” output from the DIGITAL AUDIO OUT terminal

Some digital channels are broadcasted with “Dolby Digital” signals. In these cases, “Dolby Digital” signals can be output from the DIGITAL AUDIO OUT terminal.

1. Connect an audio system with a “Dolby Digital” decoder to the DIGITAL AUDIO OUT terminal.
➔ “Connecting external devices” (P. 8)
2. Change the “Digital Audio Output” setting from “PCM” to “Dolby Digital”.
➔ “Digital Audio Output” (P. 29)
 - Even if “Dolby Digital” is set, “MPEG” signals will be output by a channel that is not broadcast with “Dolby Digital” signals.
 - Even if “Dolby Digital” is set, “Linear PCM” signals will be output from the sources other than digital channels.
 - Set the audio system so that it is compatible with “Dolby Digital”, “MPEG” and “Linear PCM”. (For detail, refer to the audio system instruction manual.) If the audio system does not have a MPEG decoder, change the setting to “PCM” when listening the sound of a channel that is not broadcast with “Dolby Digital” signals.
 - Do not change the setting to “Dolby Digital” from “PCM” when the audio system does not have a “Dolby Digital” decoder.
 - If you have a noise or no sound problem, change the setting to “PCM” from “Dolby Digital”.


Supported music formats for Photo Viewer

- Sample rate
 - 32, 44.1, and 48 kHz (MPEG-1 Audio Layer-3)
 - 16, 22.05, and 24 kHz (MPEG-2 Audio Layer-3)
- Resolution
16 bit
- Channels
monaural, stereo
- Bit rate
32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 kbps
 - Some files may not be able to playback depending on the combination between the sample rate and the bit rate.

What is "Eco Mode"?

You can adjust this TV so that the screen automatically adjusts to the optimum contrast of light and dark according to the brightness of your room. This function reduces eyestrain and the power consumption of this TV.

- Set "Eco Mode" ➔ "Eco Mode" (P. 31)
- Make sure not to block the Eco Sensor on front of the TV (P. 4)
- To fully reduce eyestrain and the power consumption of this TV. Set to the following functions.
Eco Mode: On or Demo (P. 31)
Smart Picture: On (P. 27)
- Using "Demo" in "Eco Mode", you can display the effect of the "Eco Mode" on the screen

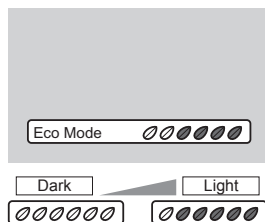

What is "HDMI CEC"?

HDMI CEC (Consumer Electronics Control) allows the TV to connect and control multiple HDMI CEC enabled devices with a single remote. CEC (Consumer Electronics Control) is an optional protocol used in HDMI.

- HDMI CEC on this TV is compliant with "High-Definition Multimedia Interface Specification".
- The TV does not support HDMI CEC functions that are not listed below.
- The TV does not guarantee to support use of all HDMI CEC enabled devices.
- Devices that are not enabled to HDMI CEC cannot be controlled with this TV.
- Control the TV using the HDMI CEC enabled device
 - Turn the TV on and switch to the video source of the operating device.
 - Switch to the video source of the operating device.
- Control the HDMI CEC enabled device using the TV
 - Turn off the operating device by turning off the TV.
- * Some device may not support this function. For more details refer to the device's manual.

- Send status of the TV to the HDMI CEC enabled device
 - When switching the TV's external input or channel.
 - When switching the TV's menu language.

* Information regarding behaviour of the device when status is received, refer to the external device's manual.

Turning On / Off HDMI CEC:


- Set HDMI CEC ➔ "Control with HDMI" (P. 23)
- * Factory default setting is "On".

If "HDMI CEC" does not work correctly:

- When HDMI CEC enabled device is connected to EXT-1 or EXT-2 with SCART cable and EXT-4, EXT-5, EXT-6 with HDMI cable, you may not be able to control TV's external input. To solve the problem set "HDMI CEC" to "Off".
- When displaying the "Photo Viewer", the connected HDMI CEC enabled device will not operate correctly.

What is “Full Native”?

- With the full HD LCD display and “Full Native”, you can enjoy full native HD resolution of 1920 x 1080. It exposes flaws in the video that were hidden when viewing on “Full”.

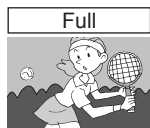


- * The illustrations are emphasised to make clear differences between “Full” and “Full Native”.
- Dark bar or noise may appear at the edges of the screen when viewing in “Full Native” for some videos. This is resulted from the signal itself, not due to TV malfunction.
 - “Full Native” cannot be selected in 720p signal.

Software downloaded by Over air download

If new software is available, the TV will automatically download the tuner software. If a confirmation message appears, Follow the on-screen instructions to perform the settings.

- The software download function works only when the TV is off (standby).
- If you have selected “Later”, you can update the software from “Software Upgrade” in “System Setup”.

Connect a computer

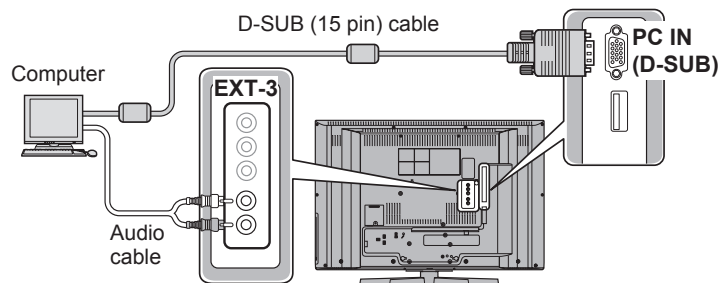

Resolution	640 x 480 (VGA)	1024 x 768 (XGA)	1360 x 768 (WXGA)
Vertical frequency (Hz)	60.0	60.0	60.0

Note

- Use cable with ferrite cores and no longer than of 3m to avoid electromagnetic disturbance.
- If the signal doesn't appear, check that the vertical frequency on the PC is set to “60Hz”.
- Adjust the position of PC image ➔ “PC Position” (P. 34)

Frequency table

To use the “Manual Scan” function (P. 32), find the “CH” number corresponding to the frequency from this table.

Digital channels

	Austria Switzerland Czech Republic Germany Denmark Netherlands Sweden Belgium Other	Italy	Spain Finland	France	United Kingdom
CH	Frequency				
CH 04		177.5			
CH 05	177.5	186		178.75	
CH 06	184.5	194.5		186.75	
CH 07	191.5	203.5		194.75	
CH 08	198.5	212.5		202.75	
CH 09	205.5	219.5		210.75	
CH 10	212.5	226.5		218.75	
CH 11	219.5				
CH 12	226.5				
CH 21	474	474	474	474	474
CH 22	482	482	482	482	482
CH 23	490	490	490	490	490
CH 24	498	498	498	498	498
CH 25	506	506	506	506	506
CH 26	514	514	514	514	514
CH 27	522	522	522	522	522
CH 28	530	530	530	530	530
CH 29	538	538	538	538	538
CH 30	546	546	546	546	546
CH 31	554	554	554	554	554
CH 32	562	562	562	562	562
CH 33	570	570	570	570	570
CH 34	578	578	578	578	578
CH 35	586	586	586	586	586
CH 36	594	594	594	594	594
CH 37	602	602	602	602	602
CH 38	610	610	610	610	610
CH 39	618	618	618	618	618
CH 40	626	626	626	626	626
CH 41	634	634	634	634	634
CH 42	642	642	642	642	642

	Austria Switzerland Czech Republic Germany Denmark Netherlands Sweden Belgium Other	Italy	Spain Finland	France	United Kingdom
CH	Frequency				
CH 43	650	650	650	650	650
CH 44	658	658	658	658	658
CH 45	666	666	666	666	666
CH 46	674	674	674	674	674
CH 47	682	682	682	682	682
CH 48	690	690	690	690	690
CH 49	698	698	698	698	698
CH 50	706	706	706	706	706
CH 51	714	714	714	714	714
CH 52	722	722	722	722	722
CH 53	730	730	730	730	730
CH 54	738	738	738	738	738
CH 55	746	746	746	746	746
CH 56	754	754	754	754	754
CH 57	762	762	762	762	762
CH 58	770	770	770	770	770
CH 59	778	778	778	778	778
CH 60	786	786	786	786	786
CH 61	794	794	794	794	794
CH 62	802	802	802	802	802
CH 63	810	810	810	810	810
CH 64	818	818	818	818	818
CH 65	826	826	826	826	826
CH 66	834	834	834	834	834
CH 67	842	842	842	842	842
CH 68	850	850	850	850	850
CH 69	858	858	858	858	858

Analogue channels VHF/UHF

	Austria Switzerland Germany Denmark Spain Finland Netherlands Sweden Belgium Other	Italy	United Kingdom	Czech Republic	France
CH	Frequency				
CH 01	45.25	53.75	45.75	49.75	
CH 02	48.25	62.25	53.75	59.25	55.75
CH 03	55.25	82.25	61.75	77.25	60.5
CH 04	62.25	175.25	175.25	85.25	63.75
CH 05	175.25	183.25	183.25	93.25	176
CH 06	182.25	192.25	191.25	175.25	184
CH 07	189.25	201.25	199.25	183.25	192
CH 08	196.25	210.25	207.25	191.25	200
CH 09	203.25	217.25	215.25	199.25	208
CH 10	210.25	224.25	223.25	207.25	216
CH 11	217.25	45.25	231.25	215.25	
CH 12	224.25	48.25	239.25	223.25	
CH 13		55.25	247.75		
CH 14		62.25	255.25		
CH 15		175.25	263.25		
CH 16		182.25	271.25		
CH 17		189.25	279.25		
CH 18		196.25	287.25		223.25
CH 19		203.25	295.25		231.25
CH 20		210.25	303.25		239.25

	Austria Switzerland Germany Denmark Spain Finland Netherlands Sweden Belgium Other	Italy United Kingdom Czech Republic France
CH	Frequency	
CH 21	471.25	
CH 22	479.25	
CH 23	487.25	
CH 24	495.25	
CH 25	503.25	
CH 26	511.25	
CH 27	519.25	
CH 28	527.25	
CH 29	535.25	
CH 30	543.25	
CH 31	551.25	
CH 32	559.25	
CH 33	567.25	
CH 34	575.25	
CH 35	583.25	
CH 36	591.25	
CH 37	599.25	
CH 38	607.25	
CH 39	615.25	
CH 40	623.25	
CH 41	631.25	
CH 42	639.25	
CH 43	647.25	
CH 44	655.25	
CH 45	663.25	
CH 46	671.25	
CH 47	679.25	
CH 48	687.25	
CH 49	695.25	
CH 50	703.25	

	Austria Switzerland Germany Denmark Spain Finland Netherlands Sweden Belgium Other	Italy United Kingdom Czech Republic France
CH	Frequency	
CH 51		711.25
CH 52		719.25
CH 53		727.25
CH 54		735.25
CH 55		743.25
CH 56		751.25
CH 57		759.25
CH 58		767.25
CH 59		775.25
CH 60		783.25
CH 61		791.25
CH 62		799.25
CH 63		807.25
CH 64		815.25
CH 65		823.25
CH 66		831.25
CH 67		839.25
CH 68		847.25
CH 69		855.25

Frequency table

CATV

	Austria Switzerland Germany Denmark Spain Finland Netherlands Sweden Belgium Other	Italy United Kingdom Czech Republic	France
CH	Frequency		
CH 01	105.25		92.75
CH 02	112.25		100.75
CH 03	119.25		108.75
CH 04	126.25		116.75
CH 05	133.25		128.75
CH 06	140.25		140.75
CH 07	147.25		152.75
CH 08	154.25		164.75
CH 09	161.25		176.75
CH 10	168.25		188.75
CH 11	231.25		200.75
CH 12	238.25		212.75
CH 13	245.25		224.75
CH 14	252.25		236.75
CH 15	259.25		248.75
CH 16	266.25		260.75
CH 17	273.25		272.75
CH 18	280.25		284.75
CH 19	287.25		296.75
CH 20	294.25		
CH 21	303.25		303.25
CH 22	311.25		311.25
CH 23	319.25		319.25
CH 24	327.25		327.25
CH 25	335.25		335.25
CH 26	343.25		343.25
CH 27	351.25		351.25
CH 28	359.25		359.25
CH 29	367.25		367.25
CH 30	375.25		375.25
CH 31	383.25		383.25
CH 32	391.25		391.25

	Austria Switzerland Germany Denmark Spain Finland Netherlands Sweden Belgium Other	Italy United Kingdom Czech Republic	France
CH	Frequency		
CH 33	399.25		399.25
CH 34	407.25		407.25
CH 35	415.25		415.25
CH 36	423.25		423.25
CH 37	431.25		431.25
CH 38	439.25		439.25
CH 39	447.25		447.25
CH 40	455.25		455.25
CH 41	463.25		463.25
CH 42	69.25		69.25
CH 43	76.25		76.25
CH 44	83.25		83.25
CH 45	90.25		90.25
CH 46	97.25		97.25
CH 47	104.25		104.25

Specifications

Model	LT-32DR1BU		LT-42DR1BU	
Broadcasting systems	CCIR I / B / G / D / K / L (See “Technical information”, P. 41) Digital: DVB-T 7 MHz / 8 MHz			
Colour systems	TV broadcast : PAL, SECAM External input : PAL, SECAM, NTSC 3.58/4.43 MHz			
Channels and frequencies	Digital: Frequency: 174-230 MHz / 470-862 MHz Analogue: Frequency: 47-470 MHz (VHF) / 470-862 MHz (UHF) E2-E12 / E21-E69, F2-F10 / F21-F69, IR A-IR J, ITALY A-H / H+1 / H+2, R1-R12 / S1-S41, X / Y / Z / Z+1 / Z+2, French cable channels			
Sound-multiplex systems	NICAM (I / B / G / D / K / L), A2 (B / G / D / K)			
Teletext systems	Digital: EBU Text Analogue: FLOF (Fastext), TOP, WST (World Standard System)			
Power requirements	AC 220 V - 240 V, 50 Hz			
Audio output (Rated power output)	10 W + 10 W			
Speakers	(4 cm x 16 cm) x 2			
Power consumption [standby]	99 W [0.4 W]		147 W [0.5 W]	
Screen size (visible area size measured diagonally)	81 cm		107 cm	
Connectors	HDMI x 3, RCA x 5 (component video or composite video, audio L/R), Euroconnector (SCART) x 2, Optical connector (digital audio output) x 1, USB x 1, D-SUB (15 pins) x 1 For details ➡ (P. 9, 36, 44)			
Headphone jack	Stereo mini jack (3.5 mm in diameter) x 1			
Dimensions (W x H x D: mm) [without stand]	791 x 570 x 279 [791 x 521 x 104]		1014 x 696 x 279 [1014 x 646 x 109]	
Weights [without stand]	13.2 kg [11.9 kg]		22.6 kg [21.3 kg]	
Accessories	(See “Accessories”, P. 4)			

- A Conditional Access Module for watching pay-TV digital channels can be installed. (P. 6)
- DC power can be supplied to the indoor aerial. (P. 7)
- We may change the design and specifications without notice.



Remote control codes (P. 24) / Fernbedienungscode (S. 24) / Codici del telecomando (pag. 24) / Codes de télécommande (P. 24) / Codes afstandsbediening (pag. 24) / Kódy dálkového ovládání (str.24)

Cable Set Top Box / Kabeldigitalempfänger / Decoder (interattivo) / Détecteur Set câblé / Detectorset met kabel / Kabelový set-top-box							
ABC	0014	Humax	0660, 2142	Optus	0276	Samsung	0000, 0702, 0779, 1060, 1410, 1666, 2015
ADB	1230, 1269	Jerrold	0014, 0276	Orange	0817		
Auna	1230	LG Alps	0779	Pace	1060, 1068, 1577	Scientific Atlanta	0477
Austar	0276	Macab	0817	Pacific	1410	StarHub	0276
Bell & Howell	0014	Madritel	1230	Panasonic	0000	Supercable	0276
Birmingham Cable Communications	0276	Magnavox	0014	Paragon	0000	Telewest	1068
Cable & Wireless	1068	Memorex	0000	Philips	0290, 0817	Toshiba	0000
Fosgate	0276	Motorola	0276	Pioneer	0023	US Electronics	0276
France Telecom	0817	Nokia	1569	Pulsar	0000	Virgin Media	1060, 1068
Freebox	1482, 1976	Noos	0817	Runco	0000	Visiopass	0817
General Instrument	0014, 0276	NTL	0276, 1060, 1068	Sagem	0817	Zenith	0000
		Ono	1068	Salora	0000		

Cable/PVR Combination / Kabel/PVR Kompination / Combinazione cavo/PVR / Combinaison câble/PVR / Combinatie kabel/PVR / Kombinace kabel/PVR							
Freebox	1482, 1976	Humax	2142	Nokia	1569	StarHub	1927

Satellite Set Top Box / Satellitdigitalempfänger / Decoder satellitare / Détecteur Set satellite / Detectorset met satelliet / Satelitní set-top-box							
@sat	1300	Apro	1672	Axitronic	1626	Canal Satellite	0292, 0853, 1339, 1853
@Sky	1334	Arcon	1075	B@ytronic	1412	Canal+	0853
ABsat	0713	Arcus	1143	Balmet	1457	CGV	1413, 1567
Acoustic Solutions	1284	Armstrong	0200	Beko	0455	Cherokee	1480
ADB	0642, 1367, 1418, 1473, 1491	Arnion	1300	Best Buy	1993	Chess	0114, 0713, 1334, 1626
		Asat	0200	Big Sat	1457	Chili	1718
Akai	0200	ASCI	0114, 1334	Black Diamond	1284	CityCom	0299, 0607, 0658, 0818, 1075, 1176, 1232
Akura	1705	ASLF	0713	Blaupunkt	0173		
Alba	0455, 0613, 0713, 1284, 1659	AssCom	0853	Blue Sky	0713	Clark	0613
		Aston	1261	Boca	0132, 0713, 1232, 1366, 1579	Classic	1672
Allegro	0635	Astra	0607, 0713			Clatronic	1413
Allsat	0200	Astratec	1743	Bodner & Mann	1480	Clemens Kamphus	0396
Alltech	0713	Astro	0173, 0501, 0607, 0613, 0658, 1099, 1100, 1113, 1273, 1816	Boston	1251	Cobra	0396
Allvision	1232, 1334, 1412			Brainwave	0658, 1294, 1672	Colombia	0132
Amitronica	0713			British Sky Broadcasting	0847, 1175, 1662	Comag	0132, 1232, 1366, 1412, 1413, 1579
Ampere	0132, 0396	Atsat	1300	Broco	0713		
		AtSky	1334	BskyB	0847, 1175, 1662	Comsat	1413
Amstrad	0132, 0396, 0501, 0713, 0847, 0885, 1113, 1175, 1693	Audioline	1672	BT	1296	Condor	0607
		Audioton	0613	Bubu Sat	0713	Connexions	0396
Anglo	0713	Austar	0642	Bush	1284, 1291, 1645, 1672, 1743	Conrad	0132, 0501, 0607
Ankaro	0713	Avalon	0396			Coship	1457, 1672
Anittron	0613	Axil	1413, 1457, 1659, 1993	Cambridge	0501	Crown	1284
Apollo	0455	Axis	1111	Canal Digital	0853	Cryptovision	0455

Cyrus	0200	Fenner	0713				
D-box	0723, 1114, 1127	Ferguson	0455, 1291, 1743	Humax	1176, 1427, 1675, 1743, 1788, 1808, 1882, 1915, 2144, 2408	Listo	1626
Daewoo	0713, 1111, 1296, 1743	Fidelity	0501			Lodos	1284
DAK	1993	Finlandia	0455	Huth	0132, 0607, 1075, 1143	Logik	1284
Dantax	1626	Finlux	0455, 1626	Hyundai	0758, 1075, 1159	Logix	1075
Deltasat	1075	Flair Mate	0713	i-CAN	1367	Lorenzen	0132, 0299, 0607, 1161, 1294, 1579
Digatron	1294	Fly Com	1457	ID Digital	1176	Luxor	0501
Digenius	0299, 1161	FMD	0114, 1413, 1457	ILLUSION sat	1557	M Electronic	0818
Digality	0607, 1334	Free Wave Technology	1743	Imperial	1195, 1197, 1334, 1429, 1672	M vision	1557
Digifusion	1581, 1645, 1743	Freecom	0501	Ingelen	0114, 0396	Manata	0132, 0713
Digihome	1284	FTEmaximal	0713	Inno Hit	1626	Manhattan	0455, 1300
DigiLogic	1284	Fuba	0173, 0299, 0396, 1161, 1214, 1251	International	0132	Marantz	0200
DigiQuest	1300, 1457, 1473	Galaxis	0853, 1111, 1557	Interstar	1214	Maspro	0173, 0713
DigiSat	1232	Gardiner	0818	Intervision	0607	Matsui	0173, 1284, 1591, 1626, 1743
Digisky	1457	Garnet	1075	Inves	1743, 1993	Max	0607
Digitrade	1659	GbSAT	1214	iotronic	1413	Maxim	1705
Dijam	1296	Gecco	1273, 1412	ITT Nokia	0455, 0723	Maximum	1075, 1334
DiPro	1367, 1543	General Satellite	1176	Jaeger	1334	Mediabox	0292, 0853
DirecTV	0099	Globo	1251, 1334, 1412, 1429, 1626	K-SAT	0713	Mediacom	1206
Discovery	1480	GOD Digital	0200	Kamm	0713	MediaSat	0292, 0501, 0853, 1339
Distratel	0885, 1283, 1704, 1705	Gold Box	0292, 0853	Kaon	1300	Medion	0132, 0299, 0713, 1075, 1232, 1334, 1412, 1626
DMT	1075	Golden Interstar	1283	KaTelco	1111	Medison	0713
DNT	0200, 0396					Mega	0200
Dream Multimedia	1237	Goodmans	0455, 1284, 1291, 1591, 1705	Kathrein	0114, 0173, 0200, 0480, 0504, 0613, 0658, 0713, 0818, 1416, 1561, 1567, 1717	Metronic	0132, 0613, 0713, 0818, 0885, 1283, 1334, 1375, 1413, 1659, 1704, 1705
Durabrand	1284	Granada	0455	Kenwood	0853	Metz	0173
		Grandin	1626	Key West	0132	MiCO	1993
Echostar	0167, 0396, 0455, 0610, 0713, 0853, 1200, 1323, 1409, 1418, 1473	Grocos	1457	Kiton	0114	Micro	0501, 0607, 0613, 0713, 1294
Einhell	0132, 0501, 0713	Grundig	0173, 0847, 0853, 1284, 1291, 1330, 1659, 1672	Konig	0607	Micro Elektronik	0713
Elap	0713, 1413, 1567	Haensel & Gretel	0132	KR	0613	Micro Technology	0713
Elsat	0713	Hama	1567	Kreiling	0114, 0658, 1480, 1626	Micromaxx	0299
Elita	0200, 1659	Hanseatic	1099, 1100	Kreiselmeier	0173	Microstar	1075
eMTech	1214	Hauppauge	1294, 1672	Kyostar	0613	Microtec	0713
Engel	0713, 1251, 1993	HB	1214	L&S Electronic	0132, 1334	Mitsubishi	0455
EP Sat	0455	HDT	1159	Labgear	1296	Morgan's	0132, 0200, 0713, 1232, 1412
Eurieult	0885	Heliocom	0607	LaSAT	0132, 0173, 0299, 0607	Motorola	1473
Eurocrypt	0455	Helium	0607	Legend	1718	Multibroadcast	0642
EuroLine	1251	Hirschmann	0173, 0299, 0396, 0501, 0607, 1111, 1232, 1412	Leiko	1626	Multichoice	0642
Europa	0501, 0607	Hitachi	0455, 1284	Lemon	1334	Mustek	1659
Europhon	0132, 0299, 0607	HNE	0132	Lenco	0607, 0713	Mx Onda	1659
Eurosky	0114, 0132, 0299, 0501, 0607	Hornet	1300	Lenson	0501		
Eurostar	0607, 0818	Houston	0396	LG	1075		
Eutelsat	0713			Lifesat	0132, 0299, 0713		
Exator	0613						

Satellite Set Top Box / Satellitdigitelemfänger / Decoder satellitare / Détecteur Set satellite / Detektorset met satelliet / Satelitní set-top-box							
Myryad	0200	Patriot	0132	Satec	0713	Star Sat	1214
Mysat	0713	peeKTON	1457, 1659, 1993	Satelco	1232	Starland	0713
MySky	1693, 1848, 1850	Philips	0099, 0133, 0173, 0200,	Satplus	1100	Starlite	0200
Neom	1993		0292, 0455, 0613, 0818,	Schaecke	0613	Stream	1848
NEOTION	1334		0853, 1114, 1499, 1543,	Schaub Lorenz	1214	Stream System	1300
Netgem	1322		1672, 1743	Schneider	1206, 1251		
Netsat	0099	Phonotrend	1200		0132, 0504, 0607, 0885,	Strong	0132, 0613, 0713, 0820,
Neuf TV	1322	Pilotime	1339	Schwaiger	1075, 1111, 1334, 1412,		0853, 1159, 1284, 1409,
Neuhaus	0501, 0607, 0713	Pino	1334		1457	Sumin	1473, 1626, 1765
Neuling	0132, 1232	Pioneer	0292, 0329, 0853, 1308	Scientific Atlanta	1980	Sunny	1412
Neusat	0713	Planet	0396	SCS	0299	Sunsat	1300
Neveling	1161	PMB	0713, 1611	Sedea Electronique	0132, 1206, 1283, 1626	Sunstar	0713
Nevir	1659	Polytron	0396	Seeltech	1993	Sunstech	0132, 0642
Newton	0396	Portland	1296	Seemann	0396	Supermax	1993
NextWave	1143	Preisner	0132, 0396, 1113, 1366	SEG	0114, 1075, 1251, 1626,	Supratech	1143
Nikko	0200, 0713, 0723	Premier	0292, 0723, 1429		1993	Systec	1413
Noda Electronic	0885, 1704, 1705	Primacom	1111	Septimo	0885, 1375	TaeKwang	1334
Nokia	0455, 0723, 0751, 0853,	Proline	1284, 1659	Serd	1412	Tahnou	0733
	1023, 1127, 1223, 1310,	Promax	0455	Serino	0610	Tantec	1704
	1723	Quelle	0299, 0607	Servimat	1611	Tatung	0455
	0455	Radiola	0200	ServiSat	0713, 1251	TBoston	1251, 1659
Nordmende	0613	Radix	0396, 1113	Siemens	0173, 0396, 1334, 1429	Tecatel	1200
Octagon	1294	Rainbow	0613	Silva	0299	Technical	1626
OctalTV	1705	Rebox	1214	Skantin	0713	Technika	1705
Oggle	1284	Regal	1251	SKR	0713		
Onn	1232, 1412	RFT	0200	SKT	0132	TechniSat	0114, 0396, 0455, 0501,
Optex	0114, 0713, 1283, 1413,	Roadstar	0713, 0853	SKY	0099, 0847, 0856, 1175,		1099, 1100, 1195, 1197,
	1611, 1626	Rollmaster	1413		1662, 1693, 1848, 1850		1322
Orbis	1232, 1334, 1412	Rover	0713	SKY Italia	0853, 1693, 1848	Technomate	1283, 1610
Orbitech	0114, 0501, 1099, 1100,	Rownsonic	1567	Sky XL	1251, 1412	Technosat	1143
	1195, 1197	S-ZWO	1207	Sky+	1175	Technosonic	1672
P/Sat	1232	SAB	1251, 1300			Technotrend	1429
Pace	0200, 0241, 0329, 0455,	Saba	0607, 0820, 0885	Skymaster	0713, 1075, 1200, 1334,	Technowelt	0132, 0607
	0847, 0853, 1175, 1323,	Sabre	0455		1409, 1545, 1567, 1611	Techwood	0114, 1284, 1626
	1423, 1693, 1717, 1848,	Sagem	0820, 1114, 1690	Skymax	0200, 1413	Telasat	0607
	1850		0773, 0853, 1206, 1243,	Skyplus	1232, 1334, 1412	TELE System	0396, 1251, 1409, 1611
Pacific	1284, 1375	Samsung	1458, 1570, 1916	SkySat	0114, 0501, 0607, 0713	Teleciel	0613
				Skyvision	1334	TeleClub	1367
Packard Bell	1111	Sansui	1545	SL	0132, 0299, 1294, 1672	Teleka	0396, 0501, 0607, 0613
Palcom	0299, 1161, 1409	Sanyo	1626	SM Electronic	0713, 1200, 1409	Telesat	0607
Palladium	0396, 0501	SAT	0501				
Pallsat	0501	Sat Control	1300	Smart	0132, 0396, 0713, 1113,	Telestar	0114, 0501, 1099, 1100,
Panasonic	0455, 0847, 1304	Sat Partner	0501, 0613		1232, 1273, 1404, 1413		1195, 1197, 1251, 1334,
Panda	0173, 0455, 0607	Sat Team	0713	Sony	0282, 0292, 0455, 0847,	Teletech	1610, 1626, 1672
Pantech	0747	SAT+	1409		0853, 1558		0114
Pass	1567	Satcom	0607	SR	0132	Televes	0132, 0455, 0501, 1214,
							1300, 1334

Telewire	1232	Trevi	1251	Ventana	0200	Wisi	0132, 0173, 0299, 0396,
Tempo	1143	Triasat	0501	Vestel	0114, 1251		0455, 0501, 0607, 1232
Tevion	0713, 1409, 1672, 1705	Triax	0114, 0132, 0200, 0396,	VH Sat	0299	Worldsat	0114, 1214, 1251, 1480,
Thomson	0292, 0455, 0607, 0713,		0501, 0713, 0853, 1113,	Viola Digital	1672		1543
	0820, 0847, 0853, 1046,		1251, 1291, 1296, 1413,	Vision	1626	Xsat	0713, 0847, 1214, 1323
	1175, 1291, 1534, 1543,	TT-micro	1611, 1626	Visionic	1283	Xtreme	1300
Thorn	0455	Turnsat	1429	VisionNet	1557	Yakumo	1413
Tiny	1672	Turnsat	0713	Visiosat	0114, 0713, 1413, 1457,	Yamada	1718, 1993
Tioko	0132	Twiner	0713, 1611		1718	Yes	1887
Tividi	1429	Unisat	0132, 0200	Vitecom	1413	Zehnder	0114, 0504, 0818, 1075,
Tokai	0200	United	1251	Viva	0856		1232, 1251, 1334, 1412,
Tonna	0455, 0501, 0713, 1611	Universum	0114, 0173, 0299, 0607,	VTech	0818		1413
Topfield	1206, 1207, 1208, 1545		1099, 1251	Wetekom	0501	Zenith	0856, 0635
Toshiba	0455, 1284	Van Hunen	1161	Wewa	0455	Zeta Technology	0200
TPS	0820	Vaova	1993	Wharfedale	1284	Zodiac	0396, 0613
		Variosat	0173				

SAT/PVR Combination / SAT/PVR Kombination / Combinazione SAT/PVR / Combinaison SAT/PVR / Combinatie SAT/PVR / Kombinace SAT/PVR

@sat	1300	Gecco	1412	Nokia	1023, 1310	SKY Italia	1848
Allvision	1412	Globo	1412	Opentel	1412	Sky XL	1412
Amstrad	1175	HDT	1159	Orbis	1412	Skymaster	1075, 1545
Atsat	1300	Hirschmann	1412	Pace	1175, 1423, 1693, 1850	Skyplus	1334, 1412
B@ytronic	1412	Humax	1176, 1427, 1675, 1788,	Panasonic	1304	Stream System	1300
British Sky Broadcasting	1175		1808, 2144	Philips	0099	Sumin	1412
BskyB	1175, 1662	Huth	1075	Pilotime	1339	Sunny	1300
Bush	1645	Hyundai	1075, 1159	Rebox	1214	TechniSat	1195, 1197
Canal Satellite	1339	Kathrein	0658, 1561	Samsung	1206, 1570	Telestar	1195, 1197
Comag	1412	LG	1075	Sansui	1545	Thomson	1175, 1534, 1662
Digifusion	1645	Maximum	1334	Sat Control	1300	Topfield	1206, 1545
DigiQuest	1300	Mediacom	1206	Schneider	1206	Xtreme	1300
DMT	1075	Medion	1412	Schwaiger	1075, 1412	Yamada	1993
Dream Multimedia	1237	Microstar	1075	Sedea Electronique	1206	Zehnder	1075, 1412
Echostar	0610	Morgan's	1412	Serd	1412		
eMTech	1214	MySky	1693, 1848, 1850	SKY	1175, 1662, 1693, 1848,		
GbSAT	1214	NEOTION	1334		1850		

DVD

3D LAB	0539	Akai	0788, 0790, 0898, 1115,	All-Tel	1451	Arena	1115
4Kus	1158		1233, 1557, 1695	Altacom	1224	Aria	0893
A-Trend	0714		1005	Amitech	0770, 0850	Arianet	0818, 0893
Acoustic Solutions	0713, 0730, 1316	Akura	0898, 1051, 1140, 1233,	Amoi	0852	Aristona	0539, 0646
AEG	0675, 0770, 0788, 0790,	Alba	1367	Amstrad	0713, 0770, 0790, 1151,	ASCOMTEC	1923
	1233, 1434, 1923		0539, 0672, 0695, 0699,	AMW	1367	Asono	1224
AFK	1051, 1152, 1923		0713, 0730, 0783, 1140,	Ansonic	0872	Astro	1513
Airis	0672, 1005, 1224, 1321		1530, 1695, 1994	Apex Digital	0774, 0831, 1316	Atacom	1224
Aiwa	0533	Alize	1151		0672, 1004	Audiola	1660

DVD							
Audiosonic	1923	Clayton	0713	Durabrand	0675, 0713, 0831, 1502	Grundig	0539, 0551, 0651, 0670, 0695, 0713, 0775, 0790, 1004, 1036, 1128, 1436, 1465, 1643, 1695, 1730, 1832
Audix	0713	CMX	1643	E: max	1233, 1321, 1643		
Autovox	0713	Coby	0730, 0852	eBench	1152		
Auvio	0843	Codex	1233	ECC	0730		
Axion	0730	Commax	1321	Eclipse	0723, 0751	Grunkel	0770, 0790, 0831, 1316
Basic Line	0713, 1994	Conia	0852	Elfunk	0713, 0850		
Baze	0898	Contel	0788	Elin	0770	GVG	0770
BBK	1224, 1452	Continental Edison	0831, 0872	Ellion	0850, 1421	H & B	0713, 0818, 0841, 0850, 1233, 1421
Beep	1163	Crown	0713, 0770, 1115	Elta	0672, 0770, 0788, 0850, 1051, 1115, 1151, 1233		
Bellagio	1004	Cybercom	0831	Eltax	1233, 1321	Hanseatic	0741, 0783, 0790
Belson	1923	CyberHome	0714, 0816, 1502	Emerson	0591	Harman/Kardon	0702
Berthen	1643	Cytron	0651, 0774, 1347, 1423	Energy Sistem	1513	Haus	0786
Binatone	1923	D-Vision	1115, 1367	Enterprise	0591	HCM	0788
Black Diamond	0713	Daenyx	0872	EuroLine	0675, 0788, 1115, 1233, 1643	HE	0730, 1163, 1484, 1923
Blu:sens	1233, 1321	Daewoo	0714, 0770, 0870, 0872, 1436, 1483, 2155	Excello	1513	Henss	0713
Blue Nova International	1321			Fenner	0651	HiMAX	0843
Blue Sky	0651, 0672, 0695, 0713, 0790, 0843, 1423	Dalton	0786, 1036	Ferguson	0651, 0695, 0713, 0898, 1695, 1730	Hitachi	0573, 0664, 0665, 0713, 1664, 1835, 1994
Boghe	1004, 1221	Dansai	0770, 0783, 1115, 1695	Finlux	0591, 0672, 0741, 0751, 0770, 0783	Hiteker	0672, 1923
Boman	0783, 0898, 1005	Dantax	0539, 0713, 0723, 0790	Fintec	1530	Hoeher	0651, 0713, 0831, 1004, 1224, 1530
Bose	2023	Daytek	0872, 1005			Home Electronics	0730, 0770
Brainwave	0770, 1115	Dayton	0872, 1158	Firstline	0713, 0843, 0869, 1530	Home Tech Industries	1224, 1643, 1923
Brandt	0503, 0551, 0651	DCE	0831	Fisher	0670	HotMedia	1152
Broksonic	0695	Decca	0770, 1115	Funai	0675, 0695	Humax	0646
Bush	0672, 0699, 0713, 0723, 0730, 0733, 0831, 0879, 1051, 1128, 1140, 1367, 1419, 1436, 1483, 1695, 1832	Denon	0490, 0634, 1634, 2258	Gateway	1158	HYD	1233
		Denver	0672, 0699, 0788, 0898, 1316, 1321, 1923	Germatic	1051	Hyundai	0850, 1660
		Denzel	0665	Giec	1221	IlSonic	1508
		Desay	0843	Global Link	1224	Im@ge	1513
		Dgtec	0672	Global Solutions	0768	Ingelen	0788
Cambridge Audio	0751, 1109	Diamond	0651	Global Sphere	1152	Inno Hit	0713
Campomatic Digital	1051	Digihome	0713	Go Video	0783, 0869	Irradio	0869, 1115, 1224, 1233
Cat	0699, 0786, 0789, 1421, 1923	DigiLogic	0893	Gold	1513	IRT	0783
CCE	0730	Digital i	1832	GoldStar	0591, 0741	ISP	0695
cello	1730	Digitech	0831	Goodmans	0651, 0713, 0723, 0730, 0783, 0790, 0879, 1004, 1140, 1152, 1221, 1316, 1423, 1530, 1730, 1923, 2014	Jamo	1036
Centrum	0675, 0713, 0779, 0789, 1005, 1227, 1923, 1994	DiK	0788			Jaton	0665
		Dinamic	0831			JDB	0730
CGV	0733, 0751, 1115	Disney	0831, 1557, 1660			JDV	1367
Cinea	0841	DK Digital	0831, 1557, 1660			Jeken	0699
Cinetec	0713, 0872	DMTech	0783, 1271	GoWell	1643	JMB	0695
cineULTRA	0699	Dragon	0831	GPX	0699, 0741	JVC	0503, 0539, 0623, 1164, 1241, 1275, 1550, 1597, 1602, 1701, 1860, 1863, 1940, 2365
CJ Digital	1643	DreamX	1151	Graetz	0665		
Classic	0730, 1730	DSE	1730	Gran Prix	0831, 0898	jWin	1049, 1051
Clatronic	0672, 0675, 0788, 0818, 1233, 1434, 1923	Dual	0651, 0665, 0713, 0730, 0779, 0783, 0790, 0831, 1436, 1530	Grandin	0713, 1233		

Kansas Technologies	1233, 1530	Mark	0713	Norcent	1923	Pye	0539, 0646
Karcher	0783, 1367	Marquant	0770	Nordmende	0774, 0831, 1316	QONIX	0790, 1051
Kendo	0672, 0699, 0713, 0831, 1483	Mastec	1221, 1434	Noriko	0752	Quartek	1648
Kennex	0713, 0770, 0898	Matsui	0651, 0672, 0695, 0713, 1004, 1316, 1695, 1730	Okano	0752	Radionette	0741, 0869, 1906, 2024
Kenwood	0490, 0534	Maxim	0713, 0872, 1367	Olidata	0672	Radiotone	0713
KeyPlug	1643	MBO	0730, 1730	Onkyo	0503, 0627, 1769	Raite	0665
Kiuro	0770	MDS	0713	Oopla	1158	RCA	0522
King Vision	1513, 1643	Mecotek	0770	Optim	0843	REC	0490
Kingavon	0818	Medialine	1271	Optimus	0525	Redstar	0763, 0770, 0788, 0898, 1394, 1923
Kiss	0665, 0841, 1523	Mediencom	0751	Orava	0818	Relisys	1347
Konka	0711, 0719, 0720, 0721	Medion	0630, 0651, 0741, 0774, 0783, 0831, 0879, 1006, 1347, 1423	Orbit	0872, 1643	Reoc	0752, 0768
Kotron	0879	MEI	0790	Orion	0695, 0713, 1128, 1233, 1419, 1434, 1695	Revoy	0699, 0841
Kreisen	1421	Memorex	0831	Oritron	0651	Richmond	1233
KXD	1321, 1923	Messo	1513	Ormond	0713	Roadstar	0672, 0699, 0713, 0730, 0818, 0879, 0898, 1051, 1227, 1434, 1832, 2014
Lawson	0768	Metz	0525, 0571, 0713, 1994	P&B	0818, 1451	Ronin	0710, 0872
Leiker	0872, 1513	MiCO	0723, 0751, 1221, 1223	Pacific	0713, 0768, 0790, 0831	Rotel	0623
Lenco	0651, 0699, 0713, 0770, 0774, 1513	Micromaxx	0695, 1695	Packard Bell	0831, 1321, 1648	Rownsonic	0789
Lenoxx	2014	Micromedia	0503, 0539	Palladium	0695, 0713, 0779, 1906	Saba	0551, 0651
Lenoxx Sound	2014	Micromega	0539, 1005	Panasonic	0490, 1010, 1011, 1579, 1641, 1661, 1834, 1905, 1908	Saivod	0831, 1367
Lexia	0699, 0768	Microsoft	0522, 1708, 2083	Panda	0789	Salora	0741
LG	0591, 0741, 0790, 0869, 1544, 1906	Microstar	0831	Paramount Pictures	0779	Sampo	1321
Lifetec	0651, 0831, 1347	Minato	0752	peekTon	0898, 1224, 1484	Samsung	0199, 0490, 0573, 0744, 1075, 1635, 1932
Limit	0768	Minax	0713	Philco	0733	Sansui	0695, 0751, 1316
LiteOn	1158, 1416	Minoka	0770, 1115	Philips	0503, 0539, 0646, 0675, 1158, 1340, 1354, 1813, 2056, 2084	Sanyo	0670, 0713
LM	1643	Mirror	0752, 0879	Phonotrend	0699	Scan	0850
Lodos	0713	Mitsubishi	0713	Pioneer	0142, 0525, 0571, 0631, 1571, 1965	ScanMagic	0730, 1730
Loewe	0539, 0741	Mizuda	0770, 0818, 1451	PJ	1923	ScanSonic	1695
Logik	0713	Monyka	0665	Play It	1643	Schaub Lorenz	0770, 0788, 1115, 1151, 1643
Logix	0783	MPX	0843	Plu2	0850	Schneider	0539, 0646, 0651, 0713, 0774, 0779, 0783, 0788, 0790, 0831, 0869, 1227, 1367
Loomax	1487	Mustek	0730, 1730	Powerpoint	0872, 1005	Schoentech	0713
Luker	1367	Muvid	1643	Prinz	0831	Schwaiger	0752
Lumatron	0695, 0713, 0741, 1115, 1321, 1832	Mx Onda	0651, 0751, 1223	ProCaster	1004, 1513	Scientific Labs	0768
Lunatron	0741	Mystral	0831	Proline	0651, 0672, 0710, 1004, 1316, 1483	Scott	0651, 0672, 1005, 1036, 1233, 1394, 1423, 1484, 1923
Luxman	0573	NAD	0741	Proscan	0522	Seeltech	1224, 1451, 1513, 1643
Luxor	0713, 1004, 1695, 1730	Naiko	0770, 1004, 1367	Proson	0713	SEG	0665, 0713, 0763, 0872, 1483, 1530, 1994
Magnat	1923	Narita	1367	Prosonic	0699, 0752		
Magnavox	0503, 0539, 0646, 0675, 0713, 1140	Neom	1643	ProVision	0699, 0730, 1163, 1321, 1484, 1923		
Magnex	0723	Neovia	1271				
Magnum	1436, 2014	Neufunk	0665				
Manhattan	0713	Nevir	0672, 0770, 0831, 1484				
Marantz	0539	Nexius	0790				
		Nikkai	1923				
		Nintaus	1051				

DVD							
Shanghai	0672	Star Clusters	1152, 1227	Telefunken	0551	Venturer	0790, 1769
Sharp	0630, 0675, 0713, 0752, 0869, 1419, 2015, 2024, 2250	Starlogic	1005	Teletech	0713, 0768	Vestel	0713, 1530, 1994
		Starmedia	0818, 1005, 1224	Tensai	0651, 0770	Victor	1241
Sherwood	0741	Strato	1152, 1382	Tesco	1316	Vivax	1513
Siemssen	1382	Strong	0713	Tevion	0651, 0898, 1036, 1227, 1382, 1483, 1660, 1730, 1923, 2014	Voxson	0730, 0831
Sigmathek	1005, 1224	Sunkai	0770, 0850			Waitec	0730, 1151, 1224, 1233
Siltex	1224	Sunstech	0831, 1513	Theta Digital	0571	Waltham	0713, 1530
Silva	0788, 0898	Sunwood	0788, 0898	Thomson	0522, 0551	Welkin	0831
Silva Schneider	0741, 0831, 0869, 0898, 1367	Supervision	0768, 1152	Tokai	0665, 0788, 0790, 0898, 1233, 1557	Wellington	0713
		Supratech	0893, 1513			Welltech	1221
SilverCrest	0131, 1152	SVA	0672, 0752	Tom-Tec	0789	Weltstar	0713
Sinudyne	1221, 1316	Sylvania	0675	Top Suxess	1224	Wesder	0699
Sistemas	0672, 1513	Symphonic	0675	Toshiba	0503, 0695, 1045, 1459, 1510, 1769, 2006	Wharfedale	0713, 0751, 0752, 0790, 1115, 1832, 1835
Skantic	0539, 0713	Synn	0768			Wilson	0831, 1233
Skymaster	0730, 0768	Tamashi	1394	Tosumi	1367	Windsor	0713
Skyworth	0898	Tandberg	0713, 1695, 1994	TProgress	0752	Windy Sam	0573
Sliding	1115	Tangent	1321	TRANS-continentals	0831, 0872, 1233, 1321	Woxter	1005, 1151, 1224
SM Electronic	0730, 0768, 1152	Targa	1227, 1906	Tredex	0843	X-Waves	1513
Smart	0713	Tatung	0770, 1695	Trevi	0831	Xbox	0522, 1708, 2083
Sonic Blue	0783	Tchibo	0741	TSM	1224	Xenius	0790
Sony	0533, 0864, 1033, 1070, 1516, 1533, 1536, 1633, 1824, 1934, 1981, 2020, 2043, 2132	TCM	0741, 0790	TVE	0713	Xoro	1183, 1221
		Teac	0741, 0768, 1227	Umax	1151	Yakumo	1004
		Tec	0898	United	0675, 0695, 0699, 0713, 0730, 0788, 1115, 1152, 1233, 1367, 1643, 1832	Yamada	0872, 1004, 1151, 1158, 1416
		Technica	1367, 1695			Yamaha	0490, 0539, 0646
Sound Color	1233	Technics	0490, 1905	Universum	0591, 0713, 0741, 0779, 0790, 0869, 1227, 1530, 1913	Yamakawa	0665, 0710, 0872
Soundmaster	0768	Technika	0770, 0831, 1115, 1316, 1695			Yukai	0730, 1730
Soundwave	0713, 0783	Technisn	1115			Zenith	0503, 0591
Standard	0651, 0768, 0788, 0831, 0898	Technosonic	1051, 1115, 1367	Uptek	0763		
		Techwood	0713, 1530, 1994				

Blu-Ray DVD							
Denon	2258	Panasonic	1641	Pioneer	0142	Sharp	2250
JVC	2365	Philips	2084	Samsung	0199	Sony	1516
LG	0741						

HD DVD							
Integra	1769	Microsoft	1708, 2083	RCA	1769	Xbox	1708, 2083
LG	0741	Onkyo	1769	Toshiba	1769		

DVD-R							
4Kus	1158	Fintec	1530	Mastec	1221	Sinudyne	1221
Airis	1321	Firstline	1530	Matsui	1730	Sony	1033, 1070, 2132
Alba	1530	Funai	0675	MBO	1730	Star Clusters	1227
Aristona	0646	Gateway	1158	Medion	1347	Sylvania	0675
Boghe	1221	Giec	1221	MiCO	0751, 1221	Tangent	1321
Bush	1436	Goodmans	1221, 1530, 1730	Mustek	1730	Targa	1227
Cat	1421	GPX	0741	Oopla	1158	Teac	1227
cello	1730	Grundig	1436, 1730	Packard Bell	1321	Techwood	1530
Centrum	1227	H & B	1421	Panasonic	0490, 1010, 1011, 1579	Tevion	1227, 1730
Classic	1730	Hoehner	1530	Philips	0646, 1158	Thomson	0551
Commax	1321	Humax	0646	Pioneer	0631	Toshiba	1510
CyberHome	1502	JVC	1164, 1275, 1597	ProVision	1321	Universum	1227, 1530
Cytron	1347	Kansas Technologies	1530	Pye	0646	Vestel	1530
Dayton	1158	Kreisen	1421	Quartek	1648	Waltham	1530
DSE	1730	KXD	1321	Relisys	1347	Welltech	1221
Dual	1530	LG	0741	Roadstar	1227	Xoro	1221
Durabrand	1502	Lifetec	1347	Samsung	1635	Yamada	1158, 1416
E: max	1321	LiteOn	1158, 1416	ScanMagic	1730	Yamaha	0646
Ellion	1421	Loewe	0741	Schneider	0646, 1227	Yukai	1730
Eltax	1321	Lumatron	1321	SEG	1530		
Ferguson	1730	Luxor	1730	Sharp	1419		

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino							
AEG	0790, 1923	Finlux	0672	Marquant	0770	Schneider	0779, 0790
AFK	1923	Goodmans	0790, 1923, 2014	MEI	0790	Scott	1923
Akai	0790	Grundig	1832	Metz	1994	SEG	1994
Amstrad	0790	Grunke	0790	Nexius	0790	Sharp	2015, 2024
ASCOMTEC	1923	Hanseatic	0790	Nikkai	1923	Sony	1033, 1070, 1824, 1934,
Audiosonic	1923	Harman/Kardon	0702	Norcent	1923		1981, 2020, 2043, 2132
Basic Line	1994	HE	1923	Onkyo	0627	Tandberg	1994
Belson	1923	Hitachi	1835, 1994	Palladium	0779, 1906	Targa	1906
Binatone	1923	Hiteker	1923	Panasonic	1834, 1905, 1908	Technics	1905
Blue Sky	0790	Home Tech Industries	1923	Paramount Pictures	0779	Techwood	1994
Bose	2023	Irradio	1233	Phillips	1813	Tevion	1923, 2014
Bush	1832		0623, 1701, 1860, 1863,	Pioneer	1965	Thomson	0522
Cat	1923	JVC	1940	PJ	1923	Tokai	0790
Centrum	1923, 1994	KXD	1923	ProVision	1923	Toshiba	2006
Clatronic	1923	Lenoxx	2014	QONIX	0790	United	1832
Dantax	0790	Lenoxx Sound	2014	Radionette	1906, 2024	Universum	0779, 0790, 1913
Denon	0634, 1634	LG	0790, 1906	Redstar	1923	Venturer	0790
Denver	1923	Lumatron	1832	Roadstar	1832, 2014	Vestel	1994
Digitech	1832	Magnat	1923	Samsung	1932	Wharfedale	0790, 1832
Dual	0779, 0790	Magnum	2014	Sanyo	0670	Xenius	0790

TV/DVD Combination / TV/DVD Kombination / Combinazione TV/DVD / Combinaison TV/DVD / Combinatie TV/DVD / TV/DVD kombinace

Akura	1367	Ferguson	0695, 0713	Maxim	1367	Silva Schneider	1367
Alba	0695	Goodmans	0713, 0879	Medialine	1271	Sliding	1115
Amstrad	1367	Grandin	0713	Medion	0879	Technica	1367
Black Diamond	0713	Grundig	0539, 0695	Mirror	0879	Technosonic	1367
Blue Sky	0713	Hitachi	0713	Naiko	1367	Teletech	0713
Bush	0713, 0879, 1367	JDV	1367	Narita	1367	Thomson	0551
Centrum	0713	Karcher	1367	Neovia	1271	Toshiba	0695
Crown	0713	Konka	0719, 0720	Orion	0695	Tosumi	1367
D-Vision	1367	Kotron	0879	Philips	0539	United	0713, 1367
Daewoo	0870, 2155	Logik	0713	Roadstar	0879	Universum	0713
DMTech	1271	Luker	1367	Saivod	1367	Wharfedale	1115
Dual	0713	Luxor	0713	Schneider	1367		
Elfunk	0713	Matsui	0713	SEG	0713		

Amplifier / Verstärker / Amplificatore / Amplificateur / Versterker / Zesilovač

Acurus	1431	Copland	0269	Meridian	0269	RCA	0300
Arcam	0269	Curtis Mathes	0300	Micromega	0269	Revox	0269
Audio Agile	0269	Denon	0272	Myryad	0269	Sony	0689
Audiolab	0269	Goldmund	0269	Naim	0269	Technics	0521
AVI	0269	Grundig	0269	Optimus	0013, 0300	Thorens	0269
Ayon	1714	Harman/Kardon	0269	Panasonic	0521	Universum	0269
Balanced Audio Technology	0269	Linn	0269	Philips	0269, 0892	Wards	0013
Bonnec	0269	Loewe	0269	Pioneer	0269, 0013, 0300	Yamaha	0848
Carver	0269	Magnavox	0269	Quad	0269		
		Marantz	0269, 0892	Radiola	0269		

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino

Panasonic	0521	Sony	0689	Technics	0521
-----------	------	------	------	----------	------

Receiver / Empfänger / Ricevitore / Récepteur / Ontvanger / Přijímač

AEG	1389, 1390	Bang & Olufsen	0799	Clatronic	0797, 1389	Genexxa	0186
AFK	1389	Basic Line	1554	Cosmotron	0797	Goldmund	0189
Aiwa	0121, 0189, 1189, 1269, 1405	Belson	1389	Dantax	1390	GoldStar	0112
Akai	0609, 0804, 1390	Binatone	1389	Denon	0004, 1104, 1360	Goodmans	0609, 0744, 0797, 1389, 1390, 1420, 1611
Alba	1554	Blue Sky	1390	Denver	1389	Grundig	0189, 0797, 1089, 1189, 1344, 1772
All-Tel	1390	Bose	1229, 1355, 1933	Digitech	1772	Grunkel	0744, 1390
Amstrad	0744, 1390	Bush	0797, 1772	DiK	0797	GTX	0112
Anam	0112, 0609	Cairn	0189	DK Digital	1420	Hanseatic	1390
Arcam	0189	Cambridge	0189	Dual	0004, 1220, 1390, 1420	Harman/Kardon	0189, 1189, 1304, 1310
ASCOMTEC	1389	Cambridge Audio	0189	eBench	0744, 0797	Harwood	0744
Audiolab	0189, 1189	Carver	0189	Elta	0744, 0797, 1390	HCM	1390
Audiosonic	1389	Cat	1389	Ferguson	1154	HE	1389
Audiotronic	1189	CCE	1352	Fine Arts	1189		
		Centrum	1220, 1389	Firstline	0797		

Hitachi	1344, 1554, 1801	Metz	1554	QONIX	1390, 1420	Targa	1293
Hitech	0744	Micromaxx	1420	Radiola	0189	TCM	0797
Hiteker	1389	Micromega	0189, 1189	Radionette	1293, 1634	Teac	0112, 0609
Home Tech Industries	1389	Microstar	0797	RCA	1154	Technics	1308, 1309, 1518, 1763, 1765
Intersound	0744	Musicmagic	1089	Recco	0797	Techwood	1554
JBL	1304	Mustek	1352	Redstar	1389	Tevion	1389, 1611
JVC	0074, 1282, 1374, 1643, 1676, 2239, 2336	Mx Onda	0744, 0797	Restek	0189	Thomson	1154, 1354
Kenwood	0186, 1027, 1313	Myryad	0189, 1189	Revox	0186, 0189, 1089	Thorens	0189, 1189
Kioto	0797	NAD	0320, 0609	Roadstar	0797, 1611, 1772	Thorn	0744
Kompernass	0797	Nexius	1390	Samsung	0112, 0665, 1295	Tokai	1390
KXD	1389	Nikkai	1389	Sansui	0189, 0609, 1089	Toshiba	1572
Lenoxx	1611	Nikkei	0744	Sanyo	0744, 1801	United	1390, 1772
Lenoxx Sound	1611	Norcent	1389	Schneider	0744, 1220, 1390	Universum	0112, 0189, 0609, 0744, 0797, 1220, 1390, 1609
LG	1293, 1869	NTDE Geniesom	0744	Scott	1389	Venturer	0797, 1390
Lifetec	0797	Onkyo	0135, 1320	SEG	1554	Vestel	1554
Linn	0189	Optimus	0186, 0744, 1023	Sharp	0186, 0653, 1614, 1634	Victor	0074
Loewe	0189	Orient Power	0744	Sherwood	0653	Waitec	1352
Lumatron	1772	Palladium	0797, 1220, 1293, 1344, 1390	Siemens	0609	Wards	0189
LXI	0744	Panasonic	1308, 1309, 1316, 1518, 1763, 1765, 1779	Silva Schneider	0797, 1390	Watson	0797
M Electronic	0112	Paramount Pictures	1220	Sony	1058, 1112, 1158, 1258, 1441, 1454, 1658, 1722, 1758, 1759, 1822, 1858, 1882	Wellfund	0744
Magnat	1389	Philips	0189, 0891, 1089, 1189, 1269, 1289, 1673	Soundwave	0609	Welltech	0797
Magnavox	0189, 1089, 1189	Pioneer	0186, 1023, 1459, 1623	Stereophonics	1023	Wharfedale	1390, 1772
Magnum	1611	PJ	1389	Sumida	0744	Xenius	1390
Marantz	0189, 0891, 1089, 1189, 1269, 1289, 1346, 2114	Polk Audio	1289	Sunfire	1313	Yamaha	0176, 0186, 0712, 1276, 1331, 1376, 1949
Matsui	0744, 0797	Prima Electronic	0797	Suntech	1420	Yukai	1352
MBO	1352	Proline	0797, 1390	TAG McLaren	1189	Zenith	0744
Medion	0797, 1420	ProVision	1389	Tandberg	1554		
MEI	1390						

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino

AEG	1389, 1390	Cat	1389	Grunkel	1390	LG	1293, 1869
AFK	1389	CCE	1352	Hanseatic	1390	Lumatron	1772
Akai	1390	Centrum	1389	HCM	1390	Magnat	1389
All-Tel	1390	Clatronic	1389	HE	1389	Magnum	1611
Armstrad	1390	Dantax	1390	Hitachi	1344, 1554, 1801	MBO	1352
ASCOMTEC	1389	Denon	0004	Hiteker	1389	Medion	1420
Audiosonic	1389	Denver	1389	Home Tech Industries	1389	MEI	1390
Basic Line	1554	Digitech	1772	JVC	0074, 1374, 1643, 1676, 2239, 2336	Metz	1554
Belson	1389	DK Digital	1420	Kenwood	1313	Micromaxx	1420
Binatone	1389	Dual	1220, 1390, 1420	KXD	1389	Mustek	1352
Blue Sky	1390	Elta	1390	Lenoxx	1611	NAD	0609
Bose	1229, 1933	Goodmans	1389, 1390, 1420, 1611	Lenoxx Sound	1611	Nexius	1390
Bush	1772	Grundig	1344, 1772			Nikkai	1389

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino

Norcent	1389	QONIX	1390, 1420	Silva Schneider	1390	Toshiba	1572
Onkyo	0135	Radionette	1293, 1634	Sony	1454, 1658, 1722, 1758, 1822, 1858, 1882	United	1390, 1772
Palladium	1220, 1293, 1344, 1390	Redstar	1389	Sunstech	1420	Universum	1220, 1390, 1609
Panasonic	1316, 1763, 1765, 1779	Roadstar	1611, 1772	Tandberg	1554	Venturer	1390
Paramount Pictures	1220	Samsung	1295	Targa	1293	Vestel	1554
Philips	1269, 1673	Sanyo	1801	Technics	1763, 1765	Waitec	1352
Pioneer	1459	Schneider	1220, 1390	Techwood	1554	Wharfedale	1390, 1772
PJ	1389	Scott	1389	Tevion	1389, 1611	Xenius	1390
Proline	1390	SEG	1554	Tokai	1390	Yamaha	0712, 1331
ProVision	1389	Sharp	1614, 1634			Yukai	1352

Amplifier / Verstärker / Amplificatore / Amplificateur / Versterker / Zesilovač

Classic	1595	Marantz	0269, 0892	Pioneer	0013, 0300	Technics	0521
Denon	0272	Panasonic	0521	Sony	0689	Weida	1714
Epoch	1431	Philips	0269, 0892	TCL	1591		

Cable Set Top Box / Kabeldigitalempfänger / Decoder (interattivo) / Détecteur Set câblé / Detectorset met kabel / Kabelový set-top-box

ABC	0014	GNI	1466, 1468	Pioneer	0023	TopTV	1465
ADB	1927	Hitachi	0014	Samsung	0000, 0702	Topway	1991
Astro	0316	Jerrold	0014	Skyworth	1464	Toshiba	0000
Cable HK	1374	Jiuzhou	1445	Starcom	0014	Trans PX	0276
Daeryung	0477	LG	0779	StarHub	1927	Visionetics	1374
Fosgate	0276	Pacific	1410	Taepyung	1410	Zenith	0000
General Instrument	0014	Philips	0290	TCL	1445		

Cable/PVR Combination / Kabel/PVR Kompination / Combinazione cavo/PVR / Combinaison câble/PVR / Combinatie kabel/PVR / Kombinace kabel/PVR

Astro	0316
-------	------

Receiver / Empfänger / Ricevitore / Récepteur / Ontvanger / Přijímač

Aiko	2027	JVC	0074, 1282, 1643, 2336, 2239	Philips	0189, 0891, 1189, 1269	Sony	1058, 1258, 1349, 1441, 1759, 1822
Aiwa	0121, 0189, 1405	Kenwood	1313, 0186, 0712, 1027	Pioneer	0289, 1023	Stereophonics	1023
Anam	0112, 0609, 0804	Marantz	0189, 0744, 1189, 1269, 1289, 1346, 2114	Qisheng	1390, 1609	Technics	1308, 1518
Anam National	0112	Mitsubishi	1393	Samsung	0112, 0665	Victor	0074
Bang & Olufsen	0799	Onkyo	0135	Sansui	0189	Yamaha	0176, 0186, 0712, 1276, 1376
Denon	0004, 1360	Panasonic	1308, 1518, 1763	Sharp	0186, 1634		
Fonmix	1360			Shinco	1390		
GoldStar	0112			Silsonic	0176		

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino

Aiko	2027	JVC	1643, 2239, 2336	Sharp	1634	Sony	1822
------	------	-----	------------------	-------	------	------	------

Satellite Set Top Box / Satellitdigitalempfänger / Decoder satellitare / Détecteur Set satellite / Detectorset met satelliet / Satelitní set-top-box

Astro	1816	CNS	1367	Daeryung	0396	Echostar	0396
BSkyB	0847	Dae Young	0735	Draco	1375	Hisense	1535

Satellite Set Top Box / Satellitdigitelemfänger / Decoder satellitare / Détecteur Set satellite / Detectorset met satelliet / Satelitní set-top-box							
Humax	1406, 1407, 1989	MDS	1401	RCA	2108	TCL	1143
Hwalin	0885	Pace	1887	Samsung	0773	TVB	1989
Hyundai	0758, 1416	Pantech	0747	Scientific Atlanta	1980	Zenith	1856, 0635
Indovision	0856, 1887, 1989, 2108	Philips	0200, 0292	SkyLife	0796		
Kuang Yu	0635	Proton	1535	SVA	1455		
Marantz	0200	QNS	1367, 1402, 1404	TaeKwang	0733		

SAT/PVR Combination / SAT/PVR Kombination / Combinazione SAT/PVR / Combinaison SAT/PVR / Combinatie SAT/PVR / Kombinace SAT/PVR	
Humax	1407

DVD							
Aiko	1728	Funai	0675	Nintaus	1051, 1202	Sony	0533, 1033, 1070, 1516, 1633, 1824
Akira	1316	Hitachi	0664, 1664	Onkyo	0627, 1769		
Alco	0790	Hiteker	0672	Panasonic	0490, 1010, 1011, 1641	Sylvania	0675
Apex Digital	0672	JVC	0623, 1164, 1241, 1597, 2365	Panda	1203	TCL	1180, 1182, 1186, 1189, 1225
BBK	1452			Philips	0539, 0646, 1354, 2056, 2084	Toshiba	0503, 1510, 1769
Blue Parade	0571	jWin	1049, 1051	Pioneer	0571, 0631, 1571	Victor	1241, 1597
Byd:sign	0872	Konka	0711, 0719, 0720, 0721	Samsung	0199, 1635	Xbox	0522, 1708, 2083
Changhong	0627, 1061	LG	0741, 1544	Sansui	1695	Xoceco	1231
Denon	0490, 0634, 1634, 2258	Malata	2155	Sharp	0630, 0675, 2024, 2250	Yamaha	0490
Desay	1212	Mastar	1217	Skyworth	0898, 1258		
Emerson	0675	Microsoft	1708, 2083				

Blu-Ray DVD							
Denon	2258	Panasonic	1641	Pioneer	0142	Sharp	2250
JVC	2365	Philips	2084	Samsung	0199	Sony	1516
LG	0741						

HD DVD							
Integra	1769	Microsoft	1708, 2083	RCA	1769	Xbox	1708, 2083
LG	0741	Onkyo	1769	Toshiba	1769		

DVD-R							
Denon	0490	JVC	1164, 1597	Pioneer	0631	Sylvania	0675
Emerson	0675	LG	1544	Samsung	1635	Victor	1597
Funai	0675	Panasonic	0490	Sharp	0630, 0675		
Hitachi	1664	Philips	0646	Sony	1516		

Home Theater in Box / Heimkino Box / Sistema Home Theater in Box / Home Theater in Box / Thuistheater in doos / Domáci kino							
Aiko	1728	Sharp	2024	Sony	1824		

TV/DVD Combination / TV/DVD Kombination / Combinazione TV/DVD / Combinaison TV/DVD / Combinatie TV/DVD / TV/DVD kombinace							
Konka	0719, 0720	Malata	2155				

