

Warnings, Cautions and Others

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT:

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.


IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- 1 Do not remove screws, covers or cabinet.
- 2 Do not expose this appliance to rain or moisture.

CAUTION— (STANDBY/ON) button!

Disconnect the mains plug to shut the power off completely (all lamps and indications go off). When installing the product ensure that the plug is easily accessible. The  button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY lamp lights in red.
- When the unit is turned on, the STANDBY lamp goes off.

The power can be remote controlled.

 
CAUTION

- Do not block the ventilation openings or holes.
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

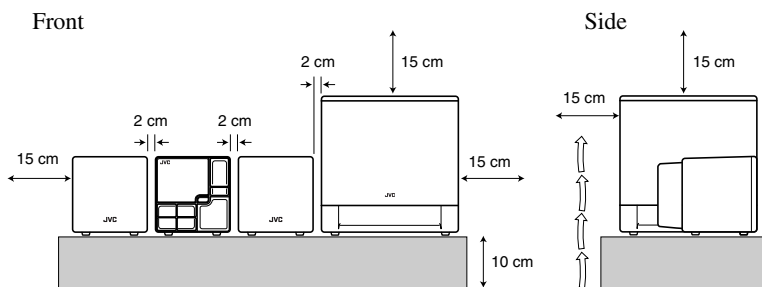

Information for Users on Disposal of Old Equipment

[European Union]



This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Attention:

This symbol is only valid in the European Union.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

(Business users)

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

SAFETY INSTRUCTIONS

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

☆☆

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

☆☆

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws—to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case —this could result in a fatal electrical shock.;
- NEVER guess or take chances with electrical equipment of any kind—it is better to be safe than sorry!

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technology Centre Europe GmbH

P.O. Box 10 05 52

61145 Friedberg

Germany

Contents

Introduction	2
Precautions	2
Getting Started	3
Connection	5
Basic Operations	7
Unit	7
Remote Control	9
Setting the Clock and Daily Timer	11
Setting the Clock	11
Setting the Daily Timer	11
Playing Back from iPod	13
To Connect iPod	13
Basic Operations	14
Playing Back from USB mass storage class device	15
To connect the USB mass storage class device	15
Basic Operations	15
Playing Back from the PC	17
How to install the USB drivers	17
To playback sounds on the PC	18
Playing Back from Other Equipment ..	19
To connect other equipment	19
Troubleshooting	20
Specifications	21

Introduction

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

Precautions

● Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup inside the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

● Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC adaptor.



DO NOT handle the AC adaptor with wet hands.

● Internal heat



For safety, observe the following carefully:

- Make sure there is good ventilation the main unit. Poor ventilation could overheat and damage the System.
- DO NOT block the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

● Others

- Should any metallic object or liquid fall into the System, unplug the AC adaptor and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC adaptor from the wall outlet.
If anything goes wrong, unplug the AC adaptor and consult your dealer.

Getting Started

● Supplied Accessories

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.

- Remote control (1)
- Lithium coin battery CR2025 (1) (The battery has been installed when shipped from the factory.)
- Speaker cords 1.5m (2)
- Speaker cord 2.5m (1)
- AC power cord (1)
- AC adaptor (AA-R2401) (1)
- iPod connection cable (Audio) (1)
- iPod stand (1)

If anything is missing, consult your dealer immediately.

 
CAUTION:

To avoid risk of fire, and to prevent damage.

- Do not use AC adaptors except the supplied AC adaptor.
- Do not use the supplied AC adaptor for other equipment.


● Prepare the Remote Control

When you use the remote control for the first time, pull out the insulation sheet.

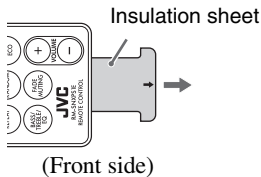

Replacing the Battery in the Remote Control

 Insert the battery into the remote control by matching the polarity (+ and -) correctly.

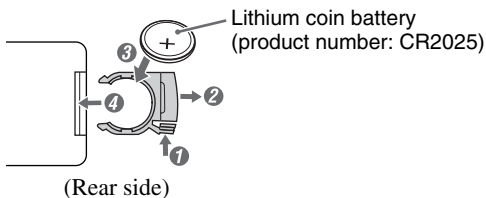

Warning

 
- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose of it in a fire. Doing any of these things may cause the battery to give off heat, crack, or start a fire.
- Do not leave the battery with other metallic materials. Doing this may cause the battery to give off heat, crack, or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack, or start a fire.
- Do not poke the battery with tweezers or similar tools. Doing this may cause the battery to give off heat, crack, or start a fire.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.

CAUTION:

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Connection

Do not connect the AC power cord until all other connections have been made.

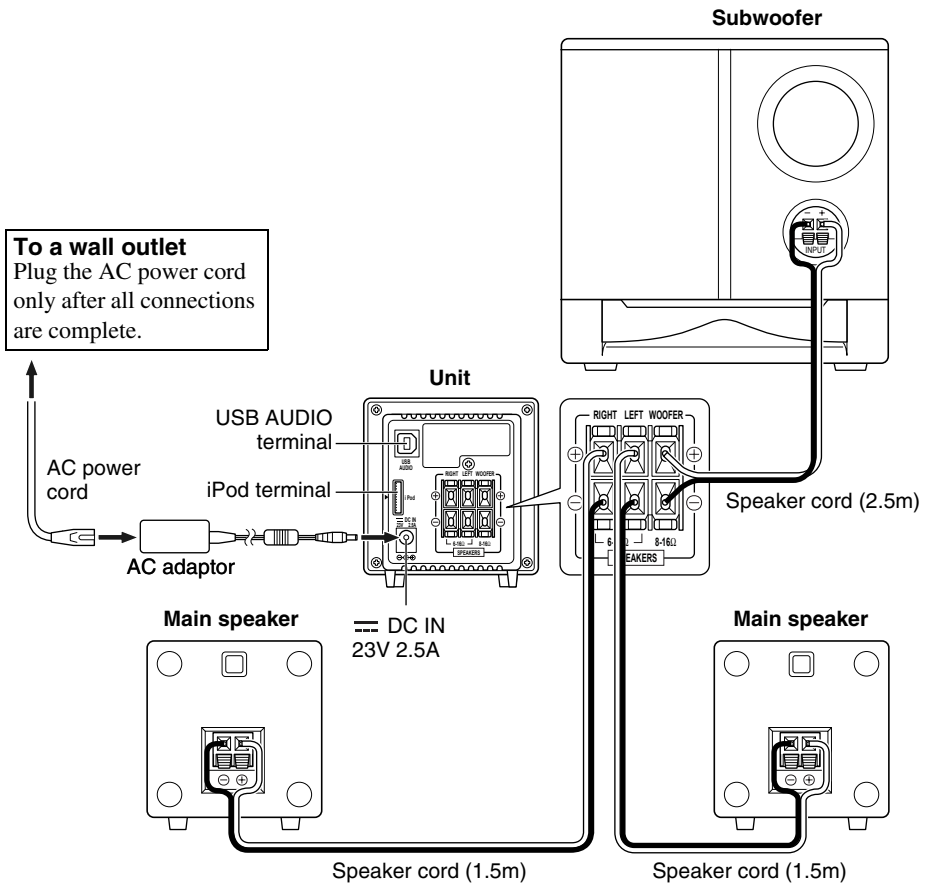

To connect the speaker cords

 
Make sure the unit, main speakers, and subwoofer are connected correctly and firmly.

When connecting the speaker cords, match the polarity of the speaker terminals: white cord to (+) and white cord with black stripe to (-).


NOTES

- DO NOT connect more than one speaker to each terminal.
- DO NOT allow the conductor of the speaker cords to be in touch with the metallic parts of the System.

e.g. Speaker

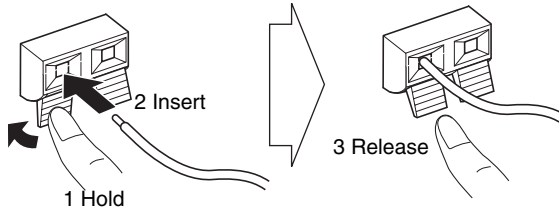


e.g. Unit

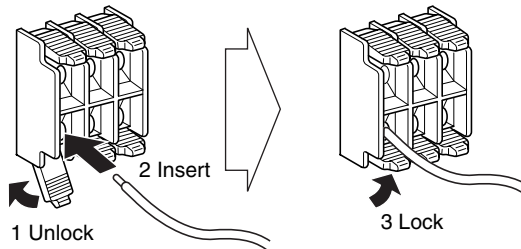 


Basic Operations

 Unit

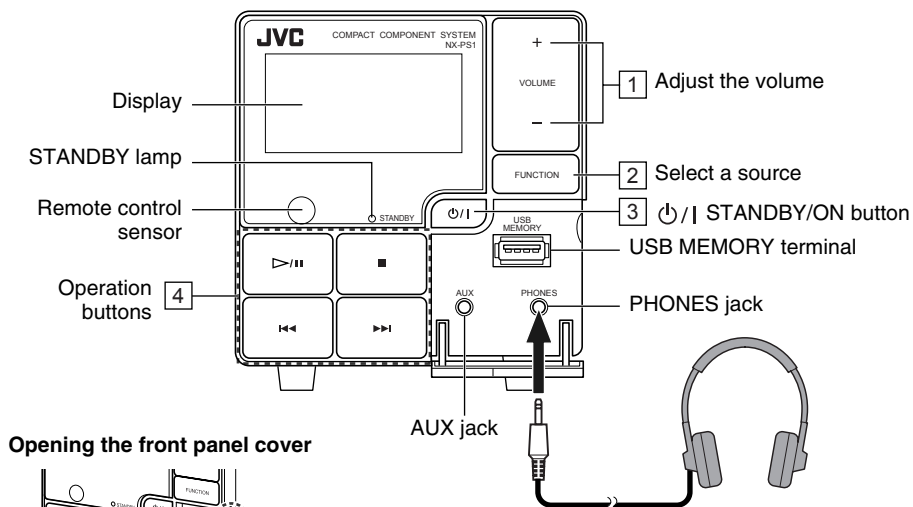

Opening the front panel cover

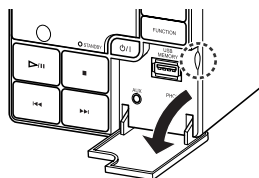 






Using Headphones

Be sure to turn down the volume before connecting or wearing the headphones.

- Connecting the headphones will deactivate the speakers.

 Operating on the Unit

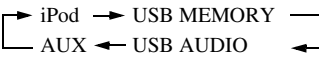Buttons	Functions
<p>1</p> 	Adjusts the volume level VOLUME MIN / 1 to 29 / VOLUME MAX.
<p>2</p> 	<p>Selects a source.</p> <p>  </p> <p>See “Playing Back from iPod” (P.13). See “Playing Back from USB mass storage class device” (P.15). See “Playing Back from the PC” (P.17). See “Playing Back from Other Equipment” (P.19).</p>
<p>3</p> 	Turns on or off (standby) the power.
<p>4</p> 	<p>Operates music.</p> <p>See “Playing Back from iPod” (P.13). See “Playing Back from USB mass storage class device” (P.15).</p>

Display Information



While selecting iPod / USB AUDIO:

VOLUME 10 — Volume level
 iPod — Source name
 CONNECT — Current status \leftrightarrow Clock display

While selecting USB MEMORY:

Volume level

VOL 10 00:05 — Elapsed playing time
 ▶ 0012 T123 — Current track number
 000000000000 — Current group number


File information \leftrightarrow Clock display

While selecting AUX:

VOLUME 10 — Volume level
 AUX — Source name
 — No display \leftrightarrow Clock display

Symbols	Description
RND	Lights when Random Play mode is activated in USB MEMORY mode. (P.17)
\curvearrowright 1/ \curvearrowright ALL/ \curvearrowright GR	Lights when Repeat mode is activated in USB MEMORY mode. (P.17)
FLAT/ROCK/POP/ JAZZ/CLAS(CLASSIC)	Displays an selected EQ setting. (P.10)
\square	Lights when the USB mass storage class device is connected and the USB MEMORY mode is selected.
SLEEP	Lights when the Sleep Timer is activated. (P.10)
\odot	Lights when Daily Timer is set. (P.11)

 Remote Control

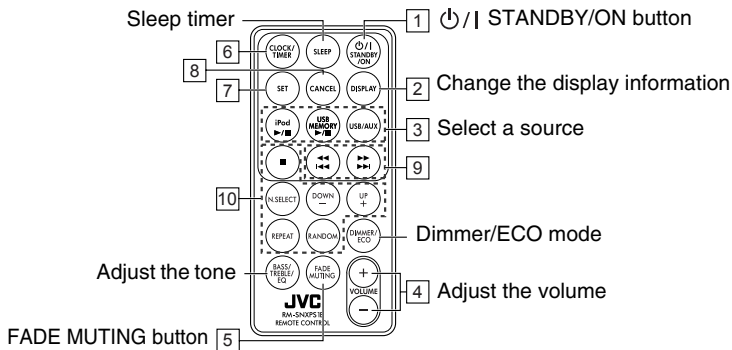

Operating on the Remote Control

Buttons	Functions
1	Turns on or off (standby) the power
2	Changes the display information. USB MEMORY mode : Clock display ⇔ File information Other mode : Clock display ⇔ Source information
	Changes source to iPod. See “Playing Back from iPod” (P.13).
3	Changes source to USB MEMORY. See “Playing Back from USB mass storage class device” (P.15).
	Changes source to USB AUDIO and AUX. See “Playing Back from the PC” (P.17). See “Playing Back from Other Equipment” (P.19).
4	Adjusts the volume level VOLUME MIN / 1 to 29 / VOLUME MAX.
5	Drops the volume in a moment. To restore the volume, press again, or adjust the volume level.

Others

Buttons	Reference pages
6	CLOCK/TIMER set (P.11)
7	CLOCK/TIMER set (P.11) USB MEMORY (P.15) AUX (P.19)
8	CLOCK/TIMER set (P.11) USB MEMORY (P.15)

Buttons	Reference pages
9	CLOCK/TIMER set (P.11) iPod (P.13) USB MEMORY (P.15)
10	USB MEMORY (P.15)

● To dim the display—DIMMER



Press while the System is turned on. “DIMMER ON” appears.

- To cancel this function, press DIMMER/ECO again. “DIMMER OFF” appears.

● To set the ECO mode.

In ECO mode, the display goes off and the least power is consumed.



 
Press While the System is turned off. “ECO ON” appears and then nothing is displayed.

- To cancel this function, press DIMMER/ECO again. “ECO OFF” appears and then the clock is displayed.

● To turn off the System after a certain period of time—Sleep Timer



Press repeatedly to specify the time (in minutes) as follows:



2

 
Wait until the set time goes off.

- To check the time remaining before the shut-off time, press SLEEP once. If you press the button repeatedly, you can change the shut-off time


● To adjust the tone



Selects an item as follows :



 - Adjust the bass and treble level with VOLUME +/- from -5 to +5.
- Select an EQ setting as follows with VOLUME +/-:



ROCK	Boosts low and high frequency. Good for acoustic music.
POP	Good for vocal music.
JAZZ	Good for jazz music.
CLAS (CLASSIC)	Good for classical music.
FLAT	Normal sound.

When the bass or treble level is adjusted, EQ is not effective and EQ symbol disappears.

BASS/TREBLE adjustment will not work at the same time as the EQ. The last setting made will become effective.

Setting the Clock and Daily Timer

 
Setting the Clock

1 

Activate the clock setting mode (“Clock Adjust” appears).

⇨ The hour digit of the time indication blinks on the display.

- If you have already adjusted the clock before, press the button repeatedly until “Clock Adjust” appears.



If the clock has not been adjusted, “Clock Adjust” appears first.

2  or  → 

1 Adjust the hour. ⇨ The minute digits of the time indication blink on the display.

2 Adjust the minute. ⇨ The built-in clock starts working.

- To go back to the previous step, press CANCEL.
- If there is a power failure, the clock loses the setting and is reset to “0:00”. You need to set the clock again.

Setting the Daily Timer

 
Without setting the built-in clock, you cannot use Daily Timer.

Using Daily Timer, you can wake up with music, etc.

Connect the iPod or USB mass storage device, or other equipment, to the Unit beforehand. (P.13, P.15, P.19)

1  (Twice)

Select the timer setting mode.



2  or  → 

1 Adjust the hour then the minute for Daily Timer on-time.

2 Adjust the hour then the minute for Daily Timer off-time.


- The on-time and off-time of the Daily Timer cannot be set to the same time.

3 Select the playback source—“iPod,” “USB MEMORY,” or “AUX.”

- If “USB MEMORY” is selected, select the GROUP number (“001” to “500” and “---”) and then select the TRACK number (“001” to “999” and “---”).

If you select “---,” TRACK1 in GROUP1 is set.

4 Select the volume level (“VOLUME MIN / 1 to 29 / VOLUME MAX”).


⇨ “SET OK” appears briefly followed by setting information, then the  icon appears on the display.

3 

Turn off the System (on standby).


- To exit from the timer setting, press CLOCK/TIMER as required.
- To correct a misentry during the process, press CANCEL. You can return to the previous step.

● To cancel the Daily Timer

1  Select the current timer settings mode.

2  ⇒  icon disappears.

● To turn on the Daily Timer again (Turn on a timer setting you have made beforehand.)

1  Select the current timer settings mode.

2  ⇒  icon appears on the display.

Playing Back from iPod

This system is equipped with an iPod terminal on the rear panel. You can connect your iPod to this terminal and enjoy the sound from your iPod.

Compatible iPod types:

iPod nano 1G/2G/4G
iPod mini
iPod (4th Generation) 20G/40G
iPod photo (4th Generation) 20G/30G/40G/60G
iPod video (5th Generation) 30G/60G

If the iPod does not play correctly, please update your iPod software to the latest version.

- For details about updating your iPod, check on the Apple web site <<http://www.apple.com>>.

 
iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

To Connect iPod


Connect the iPod to the System using the supplied cable.

Make sure the System is turned off when you connect it.

Connect the arrow of iPod terminal and the arrow of the connector facing each other.

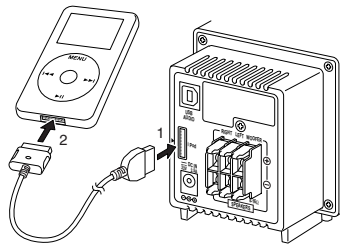


  You can place the iPod on the supplied iPod stand.

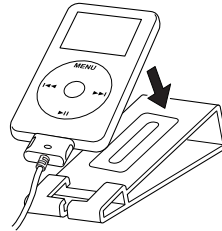





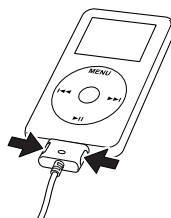

When disconnecting the iPod, make sure that the System is turned off.

To remove the connector from your iPod, squeeze the buttons on the sides and pull.



Basic Operations

Button		Function
On the Unit	On the remote	
		Start playback / Pause Press and hold : The iPod is in sleep mode
		Increase the track numbers Press and hold : Fast forward search
		Decrease the track numbers Press and hold : Fast reverse search (Press this button during playback to jump back to the beginning of the track.)

NOTES

- The iPod battery is charged while the System is turned on or on standby (except in ECO mode). See the iPod instruction manual about battery charging.
- If you connect an iPod to the iPod terminal and a USB mass storage class device to the USB MEMORY terminal at the same time, the system might be overloaded.
- Sound distortion may occur when playing back audio sources with high recording levels. When distortion occurs, it is recommended to turn off the equalizer of the iPod. For information on operating the iPod, see the iPod instruction manual.
- JVC is not responsible for any loss of or damage to iPod that might result from the use of this product.
- When you connect your iPod to the cable, make sure it connects all the way in.
- Do not carry the System with iPod connected. You might drop it down or it might cause damages to the connector part.
- Do not touch or hit the iPod terminal pins or the connector pins directly. It might cause damages to the connector part.
- Remove the iPod from the cable when you do not use.
- Always set volume to the minimum level when connecting or disconnecting the other equipment.

 
Playing Back from USB mass storage class device

This System is equipped with a USB MEMORY terminal on the front panel. You can connect a USB mass storage class device such as a USB flash memory device, Digital Audio Player (DAP), etc. to this System.

This System cannot recognize a USB mass storage class device whose rating exceeds 5V/500mA.

To connect the USB mass storage class device

When connecting a USB mass storage class device, refer also to its manual.

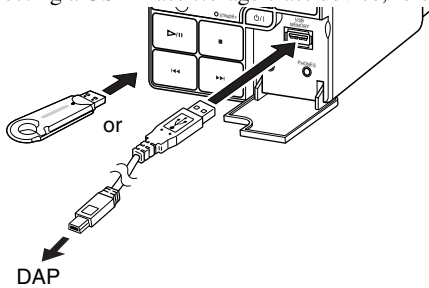

- When disconnecting the USB mass storage class device, make sure that the System is in the stop condition.

Basic Operations

Button		Function
On the Unit	On the remote	
		Starts playback / Pauses
		Stops playback
		Increases the track numbers. Press and hold : Fast forward search
		Decreases the track numbers. Press and hold : Fast reverse search (Press this button during playback to jump back to the beginning of the track.)

● For MP3/WMA playback

1 Set Number select mode.

2 or → Input the Group number, then input the Track number.

VOL 10
G002 T005

└──┬──┘
└──┬──┘
 Group number Track number

3

Start playback.

- To exit from the Number select mode, press CANCEL.


NOTES


- You cannot send any data to your USB mass storage class device from this System.
- Always set volume to the minimum level when connecting or disconnecting the other equipment.
- Connect the USB mass storage class device directly to the system. Using a USB hub may result in malfunction.
- Coded or encrypted tracks in a special method cannot be played on the unit.
- The USB mass storage device's battery is charged while the System is turned on or on standby (except in ECO mode).
- An iPod does not play on the USB MEMORY terminal. "RESTRICT" appears on the display when an iPod is connected to the USB MEMORY terminal while USB MEMORY is selected for the source.
- This System may not playback some USB mass storage devices and does not support DRM (Digital Rights Management).
- Some MP3/WMA files cannot be played back and will be skipped.
This result from their recording processes and conditions.
- This System can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- Some characters or symbols will not be shown correctly on the display.
The maximum character number shown on the display is 32 (without the extension code) for files, and 30 for ID3 tag.
- It is recommended that you make each MP3 file at a sampling rate of 44.1 kHz and at a bit rate of 128 kbps. Similarly each WMA file at a sampling rate of 44.1 kHz and at a bit rate of 96 kbps.
- Playback order of MP3/WMA tracks may be different from the one you have intended while recording.
If a folder does not include MP3/WMA tracks, they are ignored.


Repeat Play

Press repeatedly before you start playback to specify the repeat mode as follows:

1 

 1 Repeats the current track.

 ALL Repeats all tracks.

 GR Repeats all tracks in the current group.

Cancel

2 

Start playback.

Random Play

1 

RND appears on the display before you start playback.

- To cancel, press again.

2 

Playback starts in random order.

Random Play ends when all tracks are played.

- To repeat random play, press REPEAT.

Playing Back from the PC

This System is equipped with a USB AUDIO terminal on the rear panel. You can connect your PC to this terminal and enjoy the sound from your PC. When you connect your PC for the first time, follow the procedure below.

How to install the USB drivers

 
1

Turn on your PC and start running Windows[®] 98SE, Windows[®] Me, Windows[®] 2000, or Windows[®] XP.

- If the PC has been turned on, close all the applications running.

2 


Select USB AUDIO for the source.



- USB AUDIO can be selected also by the FUNCTION button on the unit.

Connect the System to the PC using a USB cable (not supplied).

 3

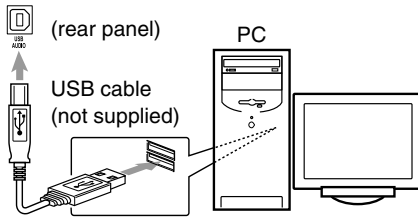

- Use “USB series A plug to B plug” cable.

4

The USB drivers are installed automatically.

NOTE

- Always set volume to the minimum level when connecting or disconnecting the other equipment.

To playback sounds on the PC

Refer to the manuals supplied with the media player application installed on the PC.

* Microsoft[®], Windows[®] 98SE, Windows[®] Me, Windows[®] 2000 and Windows[®] XP are registered trademarks of Microsoft corporation.

 
NOTES

- You cannot send any signal or data to your PC from this System.
- **DO NOT** turn off the unit or disconnect the USB cable while installing the drivers and for several seconds while your PC is recognizing the receiver.
- Use a full speed USB cable (version 1.1).
Recommended cord length is shorter than approximately 2 m.
- If your PC does not recognize the unit, disconnect the USB cable and connect it again. If it does not work yet, restart Windows.
- The installed drivers can be recognized only when the USB cable is connected between the unit and your PC.
- The sound may not be played back correctly—interrupted or degraded—due to your PC settings and PC specifications.

Playing Back from Other Equipment

To connect other equipment

By using a stereo mini plug cord (not supplied), you can connect other equipment with analog audio output jacks, such as Digital Audio Player, a TV, etc.

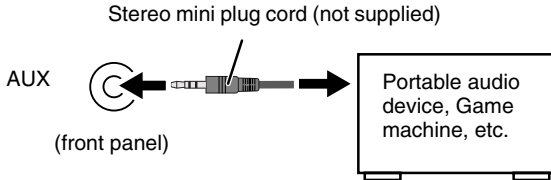

- Refer to the manuals supplied with the other equipment.

 
NOTE

- Always set volume to the minimum level when connecting or disconnecting the other equipment.

To select other equipment for the source



Select AUX for the source.



- AUX can be selected also by the FUNCTION button on the unit.

To adjust the sound input level from other equipment

You can adjust the sound input level from the connected equipment, if the incoming signal is too small or too large.

1

Select AUX for the source.

2



Press and hold until the indicator appears on the display. Then press and hold until setting is changed.



LEVEL 1:

Decreased input level. Suitable for equipment with high output level (such as a DVD player).

LEVEL 2:

Ordinary input level (factory setting). Suitable for equipment with low output level (such as a portable audio device).

Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

● General:

Power does not come on.

- ⇒ Power plug is not inserted securely. Plug in securely.

Adjustments or settings are suddenly canceled before you finish.

- ⇒ There is a time limit. Repeat the procedure again.

Operations are disabled.

- ⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

Unable to operate the System from the remote control.

- ⇒ The path between the remote control and the remote sensor on the System is blocked.
- ⇒ Point it at the remote sensor on the front panel.
- ⇒ Signals cannot reach the remote sensor.
- ⇒ Move closer to the System.
- ⇒ The batteries are exhausted.

No sound is heard from the speakers.

- ⇒ Speaker connections are incorrect or loose (P.5).
- ⇒ Headphones are connected (P.7).

Sound from PC connected with a USB cable has some noise (P.17).

- ⇒ PC is subjected to excessive load due to using other applications. Close the applications you do not use.
- ⇒ PC is connected via USB Hub. Connect the PC directly to the main unit with a USB cable.

● iPod/USB mass storage class device Operations:

The iPod doesn't playback although the display indicates CONNECT.

- ⇒ The battery is empty. Let stand for more than approximately ten minutes on the connecting condition.

● Timer Operations:

Daily Timer does not work.

- ⇒ The System has been turned on when the ontime comes.
Timer starts working only when the System is turned off.
- ⇒ There might have been a power failure.
Set the clock first, then the timer again.

Specifications

Amplifier

Output Power	
Main Speaker	10 W per channel, min. RMS, driven into 6Ω at 1kHz, with no more than 10% total harmonic distortion (IEC268-3)
Subwoofer	30W, min. RMS, driven into 8Ω at 100Hz, with no more than 10% total harmonic distortion (IEC268-3)

Terminals

Input Sensitivity/Impedance (1 kHz)	
AUX IN	LEVEL1 500 mV/47 kΩ LEVEL2 125 mV/47 kΩ
USB AUDIO	Ver. 1.1
USB MEMORY	Ver. 1.1
Compatible device	Mass Storage Class
Compatible file system	FAT16, FAT32
Bus power supply	Max. 5V/500 mA
iPod	
Compatible iPod types	See Page 13
Bus power supply	Max. 5V/500 mA
Speaker terminals	Main speaker 6Ω-16Ω Subwoofer 8Ω-16Ω
PHONES	32Ω - 1 kΩ 15 mW/ch output into 32Ω

Unit

Dimensions	90mm × 96mm × 137mm (W/H/D)
Mass	Approx. 0.5kg

Speaker Specifications

Main speaker SP-NXPS1F (each unit)	
Type	Full range bass-reflex type
Speaker Unit	7.5 cm cone × 1
Power handling Capacity	10 W
Impedance	6Ω
Frequency Range	150 Hz - 20 kHz
Sound pressure level	83 dB/W • m

Dimensions	90mm × 96mm × 90mm (W/H/D)
Mass	Approx. 0.63kg
Subwoofer SP-NXPS1W	
Type	Bass Reflex Type
Speaker Unit	16 cm cone × 1
Power handling Capacity	30 W
Impedance	8Ω
Frequency Range	35 Hz - 150Hz
Sound pressure level	80 dB/W • m
Dimensions	221mm × 221mm × 222mm (W/H/D)
Mass	Approx. 3.5kg

Accessories

See Page 3

Power Specifications

NX-PS1 (System)	
Power Requirements	AC 110V-240V ~ 50Hz/60Hz
Power Consumption	19 W (power on mode) 12 W (in Standby mode) 1 W (in ECO mode)
AC Adaptor (AA-R2401)	
INPUT	AC 110V-240V ~ 50Hz/60Hz 1.5A
OUTPUT	DC 23V = 2.5A, 57.5VA
CA-NXPS1 (Main Unit)	
Power Requirements	DC IN 23V = 2.5A

Design and specifications are subject to change without notice.

JVC