 


BASIC OPERATIONS

 
A DISC/USB

To start playback

1 Load a disc or connect a USB device.

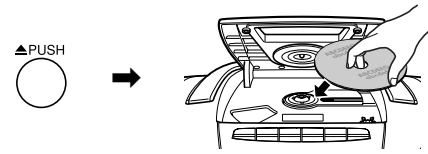

or

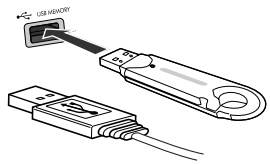

2 Set the source to DISC or USB.



The total number of tracks/chapters/files

3 Start playback.




The current track number


The indicator lights to indicate the playback source.

Indicator	Playback source
USB	USB mass storage class device
MP3	MP3 files
WMA	WMA files
DVD	DVD Video
No indicator	CD/VCD/SVCD/JPEG

 
4 Adjust the volume.




To stop playback

 

To select a track

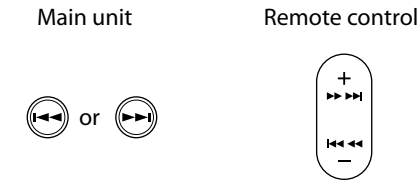 


To select a folder (for MP3/WMA)

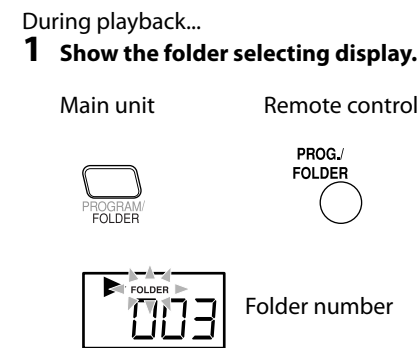 


During playback...

 1 Show the folder selecting display.

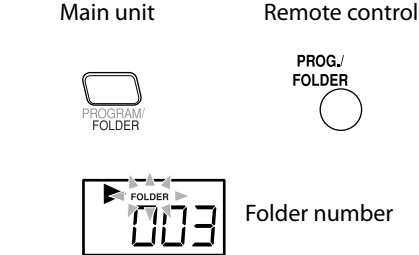

 2 Select the desired folder while the FOLDER indicator is flashing.

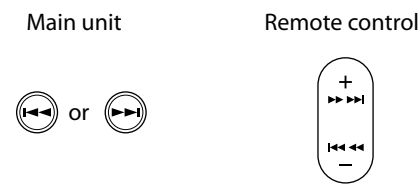


The following playback, see "DISC/FILE PLAYBACK"

Pause	Top menu search
Resume playback	Program playback
Slow-motion playback	Random playback
Zoom	Repeat playback
Fast reverse/fast forward search	A-B repeat playback
Time search	Frame-by-frame playback
Scanning disc or track	


B TUNER

 1 Set the source to TUNER.

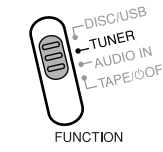


2 Select the band.

 
For Australia — FM/AM

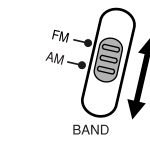


For other countries — FM/SW/MW

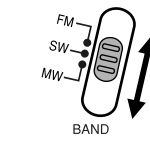 


3 Select a station.

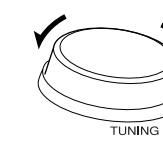 

For Australia

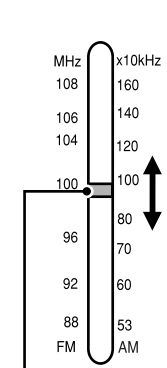 


For other countries

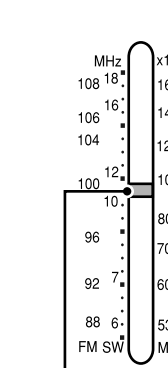 


Moves to indicate the current frequency

For SW reception

 - In SW reception, you can finely tune in a desired station by turning the FINE TUNING knob.

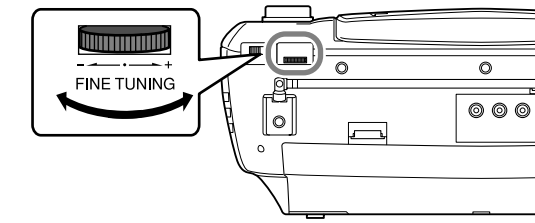


4 Adjust the volume.

 

Improving the FM reception

 
When an FM stereo (FM ST) broadcast is hard to receive or noisy, select the monaural reception (MONO).

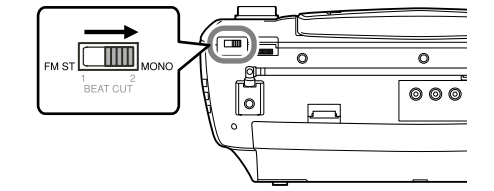

- To restore stereo reception, switch to FM ST.


Adjusting the antenna

 FM/SW

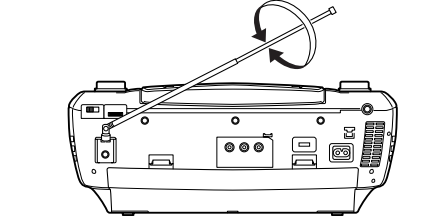

AM/MW

 
The AM/MW antenna is built in, so adjusting the position of the unit may help AM/MW reception.

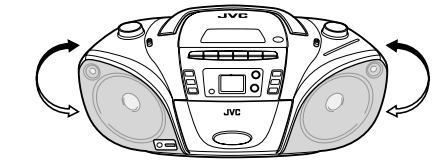


D EXTERNAL DEVICE

To play back an external device, such as a DAP (Digital Audio Player).

 1 Connect the device to the AUDIO IN jack.

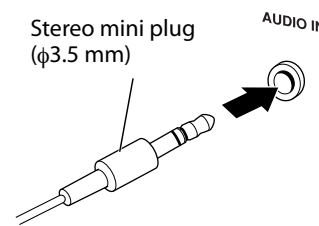


2 Set the source to AUDIO IN.

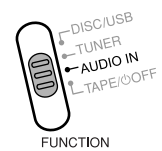 

3 Start playing back the device.

- Play back the device after you have connected it.
- Refer to the instructions supplied with the device.

 
4 Adjust the volume of the unit.



If the AUDIO IN sound is too quiet, turn that volume up.

C Listening with the headphones

 
Connect the headphones with the stereo mini plug (φ3.5 mm) to the PHONES jack on the rear.

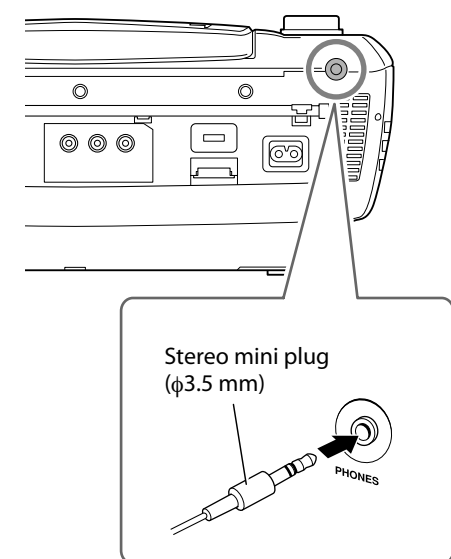


- While the headphones are connected, no sound comes out from the speakers.
- Before connecting the headphones, make sure to turn down the volume.

To start playback

 1 Set the source to TAPE/ OFF.

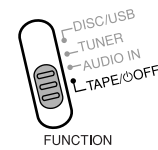

 
2 Open the cassette holder, then load a cassette.

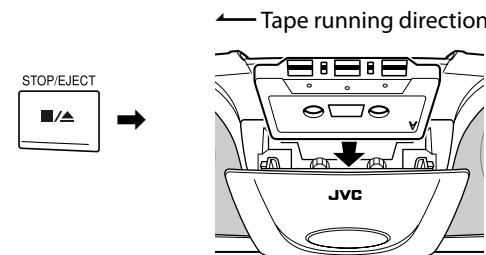

3 Close the cassette holder gently and start playback.



 4 Adjust the volume.



To stop playback



 
- The tape also stops when it reaches its end.

To pause playback



- To resume, press PAUSE again.

To fast-forward/rewind a tape



- When the tape reaches its end, press STOP/EJECT to release FF or REW.

Recording on a tape

 
1 Prepare the recording source.

- For the radio recording: Set the source to TUNER and tune in to a desired station.
- For the disc or USB recording: - Set the source to DISC/USB and load a disc or connect a USB device. - Select a track or program the playback order if necessary. (See "Program playback" in "CONVENIENT PLAYBACK")
- For AUDIO IN recording: - Set the source to AUDIO IN and turn on an external device.

2 Load a blank or erasable cassette.

Use only a type-I (normal) tape.

3 Start recording.



- PLAY is also pushed down together with the REC button.
- When recording from the disc/USB, playback of the disc/USB starts at the same time—Synchronized recording.
- For AUDIO IN recording, start playing back the device.

 
To stop recording



- Recording also stops when the tape reaches its end.
- For disc, USB or AUDIO IN recording: - If the tape reaches its end first, the playback of the disc/USB pauses automatically. However, the playback of an external device continues. - If the playback of the disc, USB device or external device stops first, recording continues. In this case, press STOP/EJECT to stop recording.

To use the beat-cut function

When recording an AM/MW broadcast, beats may occur. In this case, slide the BEAT CUT switch on the rear to select the beat-cut setting, 1 or 2.

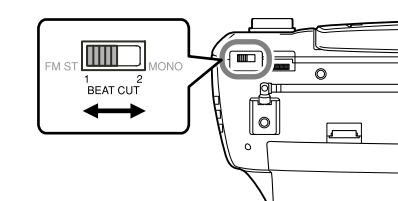

NOTES

 
- It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.
- You can adjust the volume level while recording. The proper recording level is set automatically and it is not affected by the volume level.
- If a TV is turned on and it is too close to the unit while recording, the recorded sound may have excessive noise. While recording, turn the TV off or keep the distance between the TV and the unit.

Erasing a tape

Previous recording is overwritten when a new recording is made.

To erase a tape without making a new recording

1 Set the source to TAPE/ OFF.

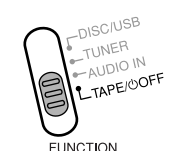

2 Start erasing.

