

JVC

CD PORTABLE SYSTEM

RD-N1

INSTRUCTIONS



MP3/WMA

Thank you for purchasing a JVC product.

Radio Data System (Europe only)

LVT2130-002A [J, C, B, US, A, UX]
0110TMMMDWMTS

©2010 Victor Company of Japan, Limited

CAUTION: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

 
1. Front: No obstructions and open spacing.
2. Sides/Top/Back: No obstructions should be placed in the areas indicated by the dimensions in the illustration.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

ATTENTION: Aération correcte


Pour prévenir tout risque de décharge électrique ou d'incendie et éviter toute détérioration, installez l'appareil de la manière suivante:

1. Avant: Bien dégagé de tout objet.
2. Flancs/ Dessus/ Arrière: Aucun obstacle ne doit être placé dans les zones indiquées par les dimensions dans l'illustration.
3. Dessous: Posez l'appareil sur une surface plane et horizontale. Veillez à ce que sa ventilation correcte puisse se faire en le plaçant sur un support d'au moins dix centimètres de hauteur.

Front view/Face

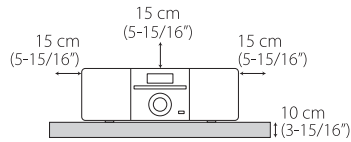

Side view/Côté

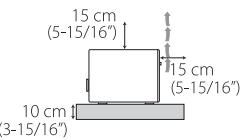 

Specifications

Amplifier section

Output Power: 6 W (3 W + 3 W) at 3 Ω (10% THD)
Audio Input: AUDIO IN: Stereo mini (ϕ 3.5 mm)
250 mV/47 k Ω
USB MEMORY

Digital input:

Tuner

FM tuning range: 87.50 MHz – 108.00 MHz

Disc player

Dynamic range: 80 dB
Wow and flutter: Immeasurable

USB

USB specification: Compatible with USB 2.0 Full Speed
Compatible device: Mass storage class
Compatible system: FAT16, FAT32
Output power: DC 5 V \pm 500 mA

iPod

Output power: DC 5 V \pm 500 mA

General

Speaker type: Bass-Reflex type
Speaker unit: 9 cm (3-9/16 inches) x 2
Speaker impedance: 3 Ω
Power requirements:
For USA and Canadian models AC 120 V / 60 Hz
For European models AC 230 V / 50 Hz
For Australian models AC 240 V / 50 Hz
For other models AC 110 V – 127 V / 220 V – 240 V
adjustable with voltage selector, 50/60 Hz
Power consumption: 35 W (at operation)
1.00 W or less (on standby)

Dimensions (approx.): 400 mm x 141 mm x 211 mm
(15-3/4 inches x 5-9/16 inches x 8-5/16 inches)
(W x H x D)

Mass (approx.): 3.3 kg (7.3 lbs)

Supplied accessories

See "Supplied accessories" in "Getting started."

Design and specifications are subject to change without notice.

For USA-California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Getting started

Supplied accessories

After unpacking, check to make sure that you have all the following items:

- Remote control (x 1)
- Lithium coin battery CR2025 (x 1)
 - The battery has been installed in the remote control when shipped from the factory.
- FM antenna (x 1)
- AC plug adapter (x 1) (Not supplied for USA, Canadian, European, Australian and Saudi Arabian models.)

If anything is missing, consult your dealer immediately.

 
In this manual...

- The remote control buttons are used for explaining the operations unless mentioned otherwise. However, if the System has the same or similar button names, they can also be used for the operations.
- "File" and "track" are used interchangeably.
- All the illustrations of the display used as examples are from the European models.

Prepare the remote control

When you use the remote control for the first time, pull out the insulation sheet.

To replace the battery in the remote control

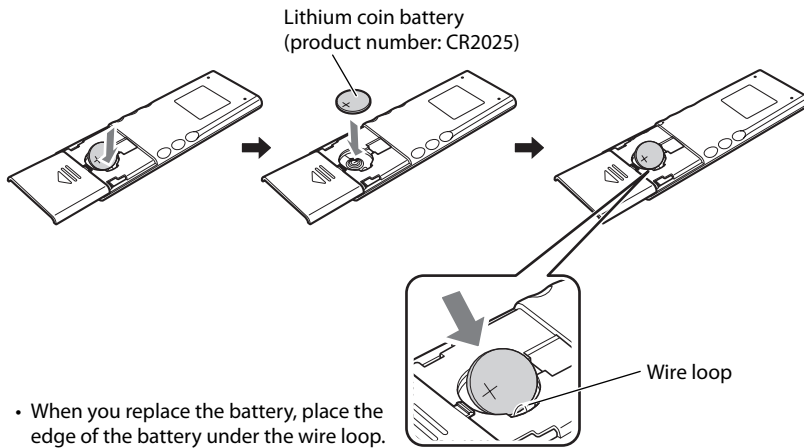

- When you replace the battery, place the edge of the battery under the wire loop.

NOTES:

- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- To prevent the battery from overheating, cracking, or starting a fire:
 - Do not recharge, short, disassemble or heat the battery or dispose of it in a fire.
 - Do not leave the battery with other metallic materials.
 - Wrap the battery with tape and insulate when throwing away or saving it.
 - Do not poke the battery with tweezers or similar tools.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.
- The battery (battery pack or battery installed) shall not be exposed to excessive heat source such as sunshine, fire or the like.

CAUTION:

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

 
Connections

Do not connect the AC power cord until all other connections have been made.

NOTES:

- Make sure the antenna conductors do not touch any other terminals, connecting cords or the power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. Otherwise, it could cause poor reception.

Mains (AC) Line Instruction (Asia and Saudi Arabia only)



CAUTION for mains (AC) line

 
BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

Sound and other adjustments

Initial settings

Setting the clock

You can set the clock only when the System is turned off (on standby).




- If you have already set the clock before, press and hold **CLOCK** until the clock is flashing.

2 Adjust the hour and minute.



- The clock may gain or lose 1 to 2 minutes per month. You may need to readjust the clock periodically.

 To check the current time while the System is turned on



The time is displayed for a few seconds.

If there is a power failure

The clock loses its settings. You need to set the clock again.

 
Timer

Sleep Timer

You can set Sleep Timer only when the System is turned on.



2 Specify the time.

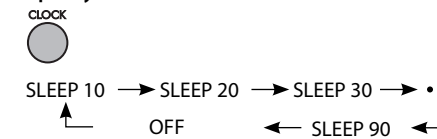

- To check the remaining time until the System shuts off, press and hold **CLOCK**.

Display settings

 
Display information

To display ID3/WMA tag information During playback of MP3/WMA...



ID3 ON \longleftrightarrow ID3 OFF

ID3/WMA tag information is displayed automatically as follows:



Sound adjustments

Fade muting

To drop the volume in a moment



- To restore the volume, press again or adjust the volume.

 
 
Hyper Bass Sound (HBS)

To reinforce the bass sound



Sound Mode

To select the sound mode suitable for your favorite music.



Precautions

Notes on the power cord

- When you go away for an extended period of time, remove the plug from the wall outlet.
- When unplugging the System from the wall outlet, always pull the plug, not the power cord.
- Do not handle the power cord with wet hands.
- Disconnect the power cord before cleaning the System or moving the System.
- Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents.

Avoid moisture, water, dust, and high temperatures

- Do not place the System in moist or dusty places.
- If water gets inside the System, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the System in this state may cause a fire or electrical shock.
- Do not expose the System to direct sunlight or place it near a heating device.

Notes on installation

- Select a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C (41°F and 95°F).
- Do not install the System in a place subject to vibrations.
- Do not put heavy objects on the System.

To prevent malfunction or damage to the System

- Do not insert any metallic objects, such as wires, hairpins, coins, etc. into the System.
- Do not block the vents.

There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.

For customer use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.

Serial No.

Compatible iPod models

iPod model	Audio
iPod nano	✓
iPod nano (2nd Generation)	✓
iPod nano (3rd Generation)	✓
iPod nano (4th Generation)	✓
iPod nano (5th Generation)	✓
iPod mini	✓
iPod mini (2nd Generation)	✓
iPod (4th Generation)	✓
iPod classic	✓
iPod photo (4th Generation)	✓
iPod video (5th Generation)	✓
iPod touch	✓
iPod touch (2nd Generation and Fall '09)	✓

If iPod does not play correctly, update iPod software to the latest version.

- For details about updating iPod, check on the Apple web site <<http://www.apple.com>>.

Maintenance

To get the best performance of the System, keep your discs and the mechanism clean.

Handling discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

To clean the disc:

Wipe the disc with a soft cloth in a straight line from center to edge.

Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it hard.
 - DO NOT wipe it with thinner or benzene.
 - DO NOT apply any volatile substances such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact for a long time.

- If the System does not work correctly, disconnect the AC power cord from the wall outlet, wait for a while, then connect the cord again.
- JVC bears no responsibility for any loss of data in USB mass storage class device or iPod while using this System.

