

Screen Control

Setting the monitor screen.

Screen Control

1 Display the Easy Control Screen

See <Operation on the Playback Screen of Visual Sources> (page 17).

2 Display the Screen Control screen



When the navigation screen is displayed, press the [TEL] button for 1 second or more.

3 Adjust the picture quality



[Bright] Brightness Control

[Tint] Tint Control

Displayed for an NTSC system image on Video, iPod, TV or Camera View.

[Color] Color Control

Displayed on Video, iPod, TV or Camera View screen only.

[Contrast] Contrast Control

[Black] Black Level Adjustment

[Sharpness] Sharpness control

Displayed on Video, iPod, USB, TV or Camera View screen only.

[Dimmer] Dimmer Mode Setup

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function On or Off when the vehicle light control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting.

[Dyn.Brightness] (Dynamic Brightness) The function compensates for Over Exposure and Under Exposure creating a clearer picture.

 
("OFF")

"OFF"/ "1"/ "2"


[Mode] Selects a screen mode.

You can select any of the following screen mode.


"Full": Full picture mode

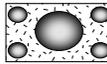


"Just": Justify picture mode

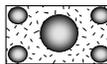 

"Zoom": Zoom picture mode

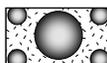 

"Normal": Normal picture mode

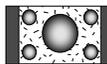 

- The Screen Control screen is displayed only when you have applied the parking brake.
- The picture quality can be set for each source.
- You can set image quality of screens such as menu from <Screen Control> (page 80).

Hands Free Unit Control

Various functions can be used in the Hands Free control mode.

Before Use

- For details on the Bluetooth cell-phone with the hands-free function, see <About the Cell-Phone> (page 8).
- You need to register your cell-phone before using it with this unit. For more details, see <Registering Bluetooth Unit> (page 60).
- If you have registered two or more cell-phones, you need to select one of them. For more details, see <Bluetooth Unit Connection> (page 62).
- To use the Phone Book, it must be downloaded to this unit in advance. For details, see <Downloading the Phonebook> (page 53).
- Sound output speaker can be set. See <Bluetooth Hands-Free/Audio Output Setup> (page 62).

Downloading the Phonebook

Downloads the phonebook data from the cell-phone to this unit so that you can use the Phonebook of this unit.


1 By operating the cell-phone, send the phonebook data to this unit

2 By operating the cell-phone, start the hands-free connection



- For the cell-phones which support auto-download of phonebook: If the phonebook is not downloaded automatically for some reasons, follow the procedure above to download manually.
- For how to operate the cell-phone, refer to the Instruction Manual that comes with your cell-phone.
- Up to 1000 phone numbers can be registered for each registered cell-phone.
- Up to 32 digits can be registered for each phone number along with up to 50* characters representing a name. (* 50: Number of alphabetical characters. Fewer characters can be input depending on the type of characters.)
- Depending on the type of your cell-phone, the following restrictions are placed:
 - The phonebook data cannot be downloaded normally.
 - Characters in the Phonebook are garbled.
- To cancel downloading of the phonebook data, operate the cell-phone.

Receiving a Call

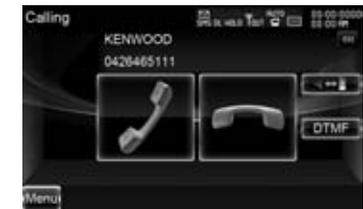

() Answering a Phone Call

() Rejecting an Incoming Call



- While monitoring the camera view, this screen is not displayed even if a call comes in. To display this screen, press the [TEL] button or return the shift knob of car to the drive position.

During a Call

 


() Switches the voice output between phone and speaker.

[DTMF] Outputs dial tone. See <Controlling Tone-based Services> (page 56).

() Disconnecting a call

Adjusting the Voice Volume during a Call

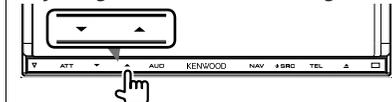

Call Waiting

 


- [] • Answers another incoming call with the current call suspended.
- Switching between the current call and waiting call
Each touch of this button switches the calling party.
- [] Terminates the current call.

Making a Call

Displaying the control screen and using various functions.

1 Display the Hands-Free Control screen

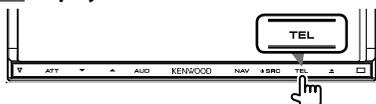

2 Select a dialing method



- 1 Calls the displayed phone number. If you have registered a phone number in the Phonebook, the person's name is displayed.
- [] Calls the displayed phone number.
 - [] Displays the SMS Select screen. See <SMS (Short Message Service)> (page 58).
 - [] Displays the previously called phone number.
 - [**Preset1**], [**Preset2**], [**Home**]
Calls the preset phone number.
For information on how to preset a phone number, see <Phone Number Preset> (page 58).

- [] **Phonebook** Displays the Phonebook Search. See <Calling by Phonebook> (page 55).
- [] **Outgoing Calls** Displays the Outgoing Calls screen. See <Making a Call Using Call Records> (page 56).
- [] **Incoming Calls** Displays the Incoming Calls screen. See <Making a Call Using Call Records> (page 56).
- [] **Missed Calls** Displays the Missed Calls screen. See <Making a Call Using Call Records> (page 56).
- [**Direct Number**] Displays the Dialing Display screen. See <Calling by Entering a Phone Number> (page 55).
- [**BT SETUP**] Displays the Bluetooth SETUP screen. See <Registering Bluetooth Unit> (page 60).
- [**TEL SETUP**] Displays the Hands Free Setup screen. See <Setting Up the Hands-Free Phone> (page 57).



- While your car is moving, some functions are disabled for safety reasons. The buttons associated with the disabled functions become ineffective if pressed.
- When the Hands-Free Control screen appears, the name of the connected cell-phone is displayed for 5 seconds.
- The status icons such as and displayed on the control unit may discord from those displayed on the cell-phone.
- Setting the cell-phone in the private mode can disable the hands-free function.

Calling by Phonebook

You can call a person using his/her phone number that you have registered in the Phonebook.


1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Display the Phonebook screen



3 Select the name to call

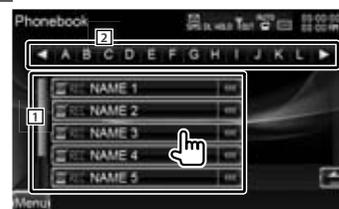

- 1 Phonebook data list.
- 2 Displays the Phonebook name beginning with the character you have touched.

[] When the text is longer, the text display is scrolled by touching it.

4 Select the phone number to call



5 Make a call



- To use the Phonebook, it must have been downloaded from the cell-phone. For more details, see the instruction manual of your cell-phone.

- Characters with no corresponding name will not be displayed.
- During search, a non-accent character such as "u" is searched for instead of an accent character such as "ü".

Calling by Entering a Phone Number

Makes a call by entering a phone number.

1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Display the number input screen



3 Enter a phone number



- 1 Calls the entered phone number.
- [**Clear**] Clears the number.

4 Make a call



You can start talking when the recipient responds.



- You can input up to 32 digits.
- This function is unavailable while driving.


Making a Call Using Call Records

Calls by selecting a phone number from the outgoing, incoming, or missed calls list.

1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Display the Outgoing Calls, Incoming Calls, or Missed Calls screen

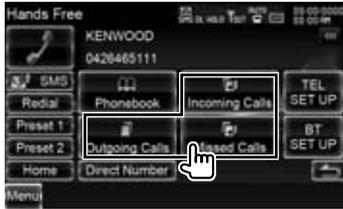


3 Select from calls list

Example : Outgoing Calls screen



Calls the selected phone number.

 4 Make a call

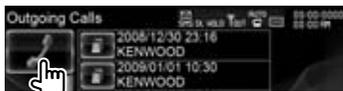

- The Outgoing Calls list screen, Incoming Calls list, or Missed Calls list screen shows the list of the calls originated from or received at this unit. They are not the ones stored in the cell-phone memory.

Controlling Tone-based Services

Uses tone base service using DTMF (Dual Tone Multi Frequency).

1 Display the Talking screen

See <Calling by Entering a Phone Number> (page 55).

2 Display the DTMF input screen



3 You can send tones during a call



Setting Up the Hands-Free Phone

The Hands-Free system can be set as follows.


1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Display the Hands Free Setup screen



3 Set each item

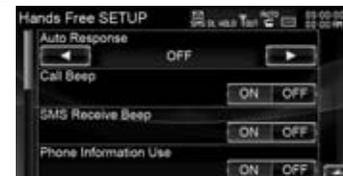

[Auto Response] Sets an automatic response time to pick-up an incoming call. (☑ "OFF")

- "OFF": This function can not use.
- "0-99": Sets to calling ring time (second).

[Call Beep] Sets the beep of the incoming call. (☑ "ON")

- "ON": Beep is heard.
- "OFF": Beep is canceled.

[SMS Receive Beep] Sets the beep of the incoming SMS. (☑ "ON")

- "ON": Beep is heard.
- "OFF": Beep is canceled.

[Phone Information Use] Sets whether to use cell-phone phonebook, outgoing calls list, incoming calls list and missed calls list. (☑ "ON")

- "ON": Yes.
- "OFF": No.

[SMS Use] Sets the SMS function. (☑ "ON")
 "ON": Use SMS function.
 "OFF": SMS not available.

[Sort Order] Sorts the names in the phonebook. (☑ "First")

[Echo Cancel Level] Adjust the level of echo cancellation. (☑ "15")

[Microphone Level] Adjusts the sensitivity of the microphone for a telephone call. (☑ "2")

[Noise Reduction Level] Reduce the noises generated by surrounding environment without changing the microphone volume. Adjust the voice of caller when it is not clear. (☑ "15")

[Restore] Restores the Hands Free SETUP value to the initial value.



- Either the time interval for automatic answer set on this unit or the time interval set on the cell-phone, whichever is shorter, takes effect.

Phone Number Preset

Registers frequently used phone number to Hands Free control screen preset button.

1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Select the Preset number to register



- If no Preset number is registered, pressing this button momentarily moves to the step 3.

3 Select the search destination of the number to register



- [] Registers from SMS received message list.
- [] Registers from SMS sent message list.
- [] Registers from Phonebook.
- [] Registers from outgoing calls list.
- [] Registers from incoming calls list.
- [] Registers from missed calls list.

[Direct Number] Registers by entering phone numbers.

[Memory] Registers the currently displayed phone number.

[Delete] Deletes the currently displayed phone number. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.

4 Search phone number to register with each function

5 Register phone number



SMS (Short Message Service)

Uses SMS function.


1 Display the Hands-Free Control screen

See <Making a Call> (page 54).

2 Display the SMS Select screen



3 Select a function

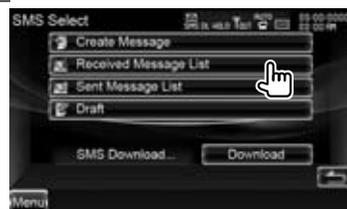

[] Displays the SMS Create Menu screen. See <Create a message>.

[] Displays received message list.

[] Displays sent message list.

[] Displays the SMS Create Menu screen. See <Create a message>. The button will be active when any message has been created after power-on.

[Download] Retrieves SMS messages from the cell-phone.

4 Select a message to display



[1] Calls the number in the selected message.

[DISP] Displays the selected message.

[Read] Reads out the selected message.

5 SMS Message screen



[] Creates a new message for the selected message.

Create a message

1 Input the destination



[] Select a destination from the phonebook.

[Direct Number] Enter the phone number.

[SET] Display the Create SMS Message screen.


[Send] Sends the message.

[Delete] Deletes the Draft message. Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].



- This is displayed only when the Draft message is being edited.

2 Display the Create SMS Message screen

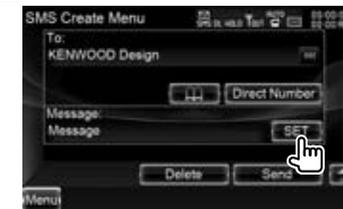

3 Create a message



[1] Enters characters.

[<], [>] Moves the cursor.

[▲], [▼] Switches between key layouts.

[Shift] Toggles between uppercase and lowercase.

[qwe]/ [abc]/ [ALT] Sets the key layout of the character buttons.
 abc : Alphabetical key layout.
 qwe : Qwerty key layout.
 ALT : Alternate key

[Clear] Erases the entered character.

If touched more than 2 seconds, all the input characters are erased.

[Space] Enters a space.

[SET] Determines the message and returns to the SMS Create Menu screen.

4 Send the message

 


Bluetooth Setup

Registering Bluetooth Unit

Registers the Bluetooth unit to be connected.

1 Display the Hands-Free Control screen

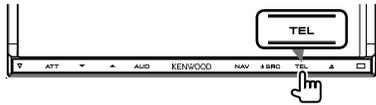

2 Display the Bluetooth Setup screen



3 Display the Connect Device List screen



4 Search for a Bluetooth unit



1 Displays the registered Bluetooth units.

[] When the text is longer, the text display is scrolled by touching it.

[TEL (HFP)] Connects/disconnects cell-phone to use for Hands Free.

[Audio (A2DP)] Connects/disconnects Audio player to use for Bluetooth Audio.

[Remove] Deletes registration (pairing). Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].



- A new device cannot be registered if there are 5 registered Bluetooth units. Delete unnecessary registration. See <Bluetooth Unit Connection> (page 62).

5 Display the PIN Code Set screen



1 Display the PIN Code.


[Search] Searches for a Bluetooth unit.

[Cancel] Cancels searching of Bluetooth unit.

[SP DEV] Registers a Bluetooth unit that cannot be registered by normal register (pairing) operation.

[PIN Code Set] Display the PIN Code Set screen.

6 Enter PIN code

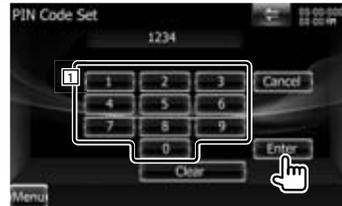

1 Enters a code number.

[Enter] Enter the PIN code specified for the Bluetooth unit to register. This button will not be active until at least four PIN code digits have been entered.

[Cancel] Cancels registration of PIN code.

[Clear] Clears the code number.

7 Select the Bluetooth unit to register



1 Displays the searched Bluetooth unit. Returns to the Connect Device List screen.



- You can also register from the Bluetooth unit side. For the PIN code necessary for registration, see <Registering Bluetooth Unit PIN Code> (page 61).
- If pairing cannot be done even when the PIN code is correct, try <Registering Special Bluetooth Unit>.

Registering Special Bluetooth Unit

Registers Special Bluetooth unit that results in error by normal operation by selecting from model name.

1 Display the Special Device List screen



2 Select a model name



Displays the Bluetooth unit name that can be registered.

3 Confirm whether to register



- Only models in Bluetooth unit name list can be registered.

4 Go through the procedure of <Registering Bluetooth Unit> and complete the registration (pairing)

Registering Bluetooth Unit PIN Code

Sets the PIN code of the Bluetooth unit to enter when registering (pairing) from the cell-phone or audio player side.


1 Display the Bluetooth Setup screen



2 Display the Receiver PIN Code screen



3 Enter PIN code

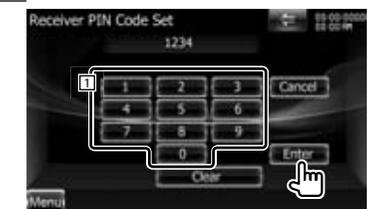

1 Enters a code number.

[Cancel] Cancels registration of PIN code.

[Enter] Enters PIN code.

[Clear] Clears the code number.

Bluetooth Unit Connection

Selects the Bluetooth unit to connect.

1 Display the Bluetooth Setup screen



2 Display the Connect Device List screen



3 Select a registered Bluetooth unit



4 Select the service to use



[TEL (HFP)] Connects/disconnects cell-phone to use for Hands Free.


[Audio (A2DP)] Connects/disconnects Audio player to use for Bluetooth Audio.

[Remove] Deletes registration (pairing). Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

Bluetooth Hands-Free/Audio Output Setup

Selects speakers to output the sound of hands-free phoning (such as phone call voice and ringing tone) and Bluetooth audio.

1 Display the Bluetooth Setup screen

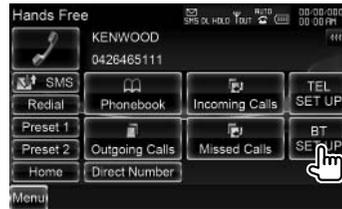

2 Set the item



[Bluetooth HF/Audio] Sets the output speakers.

("Front Only")

 
"Front Only": Outputs from the front speakers.

"All": Outputs from all the speakers.

Audio Control Menu

Displays the Audio Control menu to set the sound effect function of this unit.

1 Display the Source Control Screen

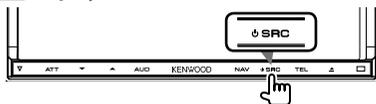

When a video screen is displayed, press the [SRC] button.

2 Display the Audio Control menu



In this manual, the above selection is indicated as: Touch [Left Arrow] > [Right Arrow].

3 Select the Audio Control item



Item	Page
[Audio Control]	64
[Equalizer]	65
└ [EQ]	65
[Zone Control]	67
[SRS WOW]	67
[Position]	66
[Surround Control]	68
[Audio SETUP]	
└ [Speaker Select]	69
└ [Car Type]	70
└ [Channel Level]	71



• [Audio SETUP] options can be locked. The key mark (🔒) is displayed in reverse video for the locked option. See <Setup Memory> (page 77).

Audio Control

You can adjust the front/rear and right/left audio balance.

1 Display the Audio Control screen

Touch [Left Arrow] > [Right Arrow] > [Audio Control]. (page 64)

2 Set each item



- 1 Adjusts the front/back and left/right volume around the touched area.
- [Left Arrow], [Right Arrow] Adjusts the right and left volume balance.
- [Up Arrow], [Down Arrow] Adjusts the front and rear volume balance.

[Volume Offset] Finely adjust the volume of the current source to minimize the difference in volume between different sources.



• If you have increased the volume first, then reduced the volume using the "Volume Offset", the sound generated if you suddenly switch to another source may be extremely loud.

[Subwoofer Level] Adjusts the subwoofer volume.

The setting is available when subwoofer is set to any item other than "None". See <Speaker Setup> (page 69).

[Supreme] Turns ON/OFF the Supreme function. Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding. This function works on DVD, USB and iPod sources.

Equalizer Control

You can set up the equalizer.

1 Display the Equalizer screen

Touch [Left Arrow] > [Right Arrow] > [Equalizer]. (page 64)

2 Select EQ curves



[Natural], [Rock], [Pops], [Easy], [Top40], [Jazz], [Game], [iPod], [User]

Selects an equalizer curve type. You can select any of the following equalizer curves.



• [iPod]
During iPod source only.

[EQ] Displays the Graphic Equalizer setup screen. (page 65)


Graphic Equalizer Setup

You can Manually set the equalizer curve.

1 Display the Equalizer screen

Touch [Left Arrow] > [Right Arrow] > [Equalizer]. (page 64)

2 Display the Graphic Equalizer screen

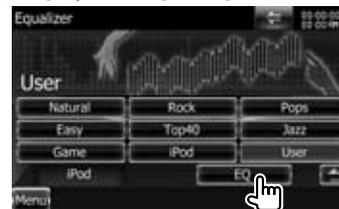

• When "iPod" is selected in <Equalizer Control>, the [EQ] button is deactivated. "iPod" uses its equalizer function.

3 Select the channel to be adjusted



- [F] Front speaker
- [R] Rear speaker
- [C] Center speaker

4 Set the Graphic Equalizer



- 1 Gain level can be adjusted by touching the each frequency bar.
- [Left Arrow], [Right Arrow] Sets a frequency.
- [Up Arrow], [Down Arrow] Sets a gain level.

[EQ Init] Returns to the previous level which the gain level is adjusted.

[Flat] Tone curve becomes flat.

[Bass EXT] Bass Extend settings.

When turned on, the frequency lower than 62.5 Hz is set to the same gain level as 62.5Hz.

[SW Level] Adjusts the subwoofer volume.

The setting is available when subwoofer is set to any item other than "None". See <Speaker Setup> (page 69).

Listening Position

You can adjust the sound effects according to your listening position.

1 Display the Position screen

Touch [Left Arrow] > [Speaker Icon] > [Position]. (page 64)

2 Set the Position Control



[P1] - [P3] Stores the present adjustment setup in memory, or recalls it from memory.

To store your adjustment in memory:

Continue to touch [P1] to [P3] more than 2 seconds.

To call your adjustment from memory:

Touch [P1] to [P3] of your adjustment you wish to recall from memory.

[Left Arrow], [Right Arrow] Sets a listening position.

You can select any of "Front R" (Right front), "Front L" (Left front), "Front All" (All front), "All" (All), and "User" (User) positions.

[DTA] Displays the Position DTA (Digital Time Alignment) screen.

3 Exit Position Control



- The final distance is adjusted to the total of Car Type Set Up value (page 70) and Position Setup (both Position and Position DTA) value.
- If you change the Car Type Set Up value (page 70), the position is set to "All".
- Only the adjusted distance of position setup (Position and Position DTA values) is stored in memory. Therefore, the final adjustment distance changes if you change the Car Type Set Up value (page 70).


Position DTA Control

You can fine-adjust your listening position.

1 Display the Position DTA screen



2 Select a speaker you wish to adjust

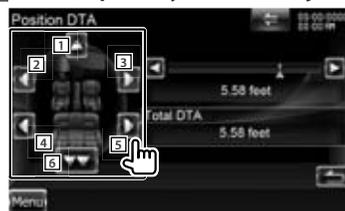

- 1 Center speaker
- 2 Left front speaker
- 3 Right front speaker
- 4 Left rear speaker
- 5 Right rear speaker
- 6 Subwoofer

[Left Arrow], [Right Arrow] Finely adjusts the value set with the Position function.

[Total DTA] Indicates setup distance. The adjusted distance (Position and Position DTA values), and the total of the distance adjusted by Car Type Set Up (page 70) and the adjustment distance for position setup are indicated.

3 Finely adjust the distance



Finely adjust the value set with the Position function.

Zone Control

You can set the front and rear audio source.

1 Display the Zone Control screen

Touch [Left Arrow] > [Speaker Icon] > [Zone Control]. (page 64)

2 Set the Zone Control



[Single Zone] Sets the unit to single zone.

[Dual Zone] Sets the unit to dual zone.

[Front Source] Sets the front audio source.

[Rear Source] Sets the rear audio source.



- When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source.

[Rear VOL.] Adjusts the volume of the rear channel.



- There are following limitations when zone function is set to "ON".
 - There is no output from the subwoofer or center speaker.
 - "Subwoofer Level", "Bass Boost", and "Supreme" of <Audio Control> (page 64) is not available.
 - <Equalizer Control> (page 65), <Listening Position> (page 66), <SRS WOW Control> (page 67), and <Surround Control> (page 68) are not available.
 - <Speaker Setup> (page 69), <Car Type (DTA) Setup> (page 70), and <Channel Level> (page 71) are not available.

SRS WOW Control

You can set up the SRS WOW effect.

1 Display the SRS WOW Control screen

Touch [Left Arrow] > [Speaker Icon] > [SRS WOW]. (page 64)

2 Set the SRS WOW Control



1 Selects SRS WOW setting.

SRS WOW User Setup

1 Display the SRS WOW Adjust screen



2 Adjust the SRS settings



1 Selects a speaker to be set (Front, Rear or Center speaker).

[TruBass] Sets the TruBass effect level.

[FOCUS] Sets the FOCUS effect level.

[SRS 3D] Sets the SRS 3D effect level.



- FOCUS: Adjusts the vertical position of the speaker and sound image by virtual adjustment.
- TruBass: Assists the playback for the super bass sound.
- SRS 3D: Makes a natural 3D sound field.
- Some items cannot be adjusted depending on the selected speaker.
- SRS WOW control is not available in TV source and HD Radio source.
- When Surround Control is Dolby Pro Logic II, SRS WOW control is not available.

Surround Control

You can set up the sound field.

1 Display the Surround Control screen

Touch [Source] > [Surround Control].
(page 64)

2 Set the Surround Control



1 Sets a sound field.

You can select any of the following sound fields. "Bypass" / "Bypass+Center" / "Dolby Pro Logic II Movie" / "Dolby Pro Logic II Music" / "Dolby Pro Logic II Matrix"

[Stream Information] Displays the present source information.

The stream (Dolby Digital, dts, Linear PCM, MPEG, SDDS, AAC or MP3/WMA), input channels (front or rear channels), and sampling frequency are displayed.



- When you have selected the TV source and when you set the Dolby PL, we recommend you to select the "Dolby PLII Matrix" mode. If you select another Dolby PLII mode, the sound is NOT output from rear speakers when you receive monaural broadcasting sounds.
- Surround control can be set for each source.

Dolby Pro Logic II Music Adjustment

1 Display the Dolby Pro Logic II Music Adjust screen



2 Adjust the sound field



[Dimension Control] Sets the surround position by adjusting the front and rear volume balance.

[Center Width Control] Sets the vocal image position by adjusting the right and left vocal volume level.

[Panorama Mode] Turns the Panorama mode On or Off.



- You cannot use the <Surround Control Adjustment> during playback of a Multi-channel source.

Speaker Setup

You can select a speaker type and its size to get the best sound effects.

1 Display the Speaker Select screen

Touch [Audio SETUP] > [Speaker Select]. (page 64)

2 Select a speaker you wish to adjust

When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



- 1 Center speaker
- 2 Front speaker
- 3 Rear speaker
- 4 Subwoofer

[Tweeter] You can set the tweeter when you are selecting front speakers.

If you are using a tweeter together with the front speakers, set the tweeter to "ON". In the "ON" position, the Equalizer is adjusted to its best position.

[X'over] Displays the Speaker Crossover Setup screen.

You can adjust the crossover setup that was set automatically when you selected the speaker type.

3 Select a speaker type



You can select any of the following speaker types.

- "Center"** None, 2-3/4x1-9/16 inch, 2 inch, 4 inch, 5 inch, 6-1/2 inch over
- "Front"** OEM, 4 inch, 5 inch, 6-1/2 inch, 6-3/4 inch, 7 inch, 4x6, 5x7, 6x8, 6x9, 7x10
- "Rear"** None, OEM, 4 inch, 5 inch, 6-1/2 inch, 6-3/4 inch, 7 inch, 4x6, 5x7, 6x8, 6x9, 7x10
- "Subwoofer"** None, 6 1/2 inch, 8 inch, 10 inch, 12 inch, 15 inch over



- Select "None" if you have no speakers.
- If you set the center speaker to "None" even in a short time when you are setting the Surround Control to "Bypass+Center", the Surround Control is set to "Bypass" automatically. See <Surround Control> (page 68).
- If you set the center and rear speakers to "None" when you are setting the Surround Control to "Dolby PL II", the Surround Control is set to "Bypass" automatically. See <Surround Control> (page 68).

Crossover Network Setup

You can set a crossover frequency of speakers.

1 Select the speaker to set the crossover



- 1 Sets the High Pass Filter of the center speaker.
- 2 Sets the High Pass Filter of the front speaker.
- 3 Sets the High Pass Filter of the rear speaker.
- 4 Sets the Low Pass Filter of the subwoofer.

2 Display the Crossover setup screen



3 Set the crossover



[Phase] Sets the phase of subwoofer output. The phase is reversed 180 degrees when set to "Reverse". (Only when "Subwoofer" is set to any item other than "None" in Speaker Setup)

[HPF FREQ] High Pass Filter adjustment. (When front, center or rear speaker is selected on Speaker Select screen)

[LPF FREQ] Low Pass Filter adjustment. (When Subwoofer is selected on Speaker Select screen)

[Slope] Sets a crossover slope.

Car Type (DTA) Setup


You can setup the car type and speaker network, etc.

1 Display the Car Type Setup screen

Touch > > [Audio SETUP] > [Car Type]. (page 64)

2 Setup the Car Type

If your car type is selected, the Digital Time Alignment and Equalizer is set automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.

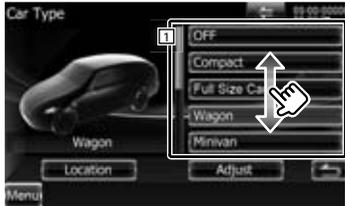

1 Sets up the car type you use together with this unit.

You can choose according to type of your car. "OFF", "Compact", "Full Size Car", "Wagon", "Minivan", "SUV", "Minivan (Long)"

[Location] Sets the locations of the speakers.

[Adjust] Displays the Car Type Adjust screen. You can adjust the digital time alignment that was set automatically when you selected the car type.

Speaker Location setup

1 Display the Speaker Location Setup screen



2 Set the speaker locations



[Front Speaker] Sets the location of the front speaker. "Door", "On Dash", "Under Dash"

[Rear Speaker] Sets the location of the rear speaker. "Door", "Rear Deck" "2nd Row", "3rd Row" (Minivan, Minivan (Long))

Car Type Adjust

You can manually set the sound output timing of each channel.

1 Display the Car Type Adjust screen




2 Select a speaker you wish to adjust



- 1 Center speaker
- 2 Front speaker
- 3 Rear speaker
- 4 Subwoofer

3 Set a delay time

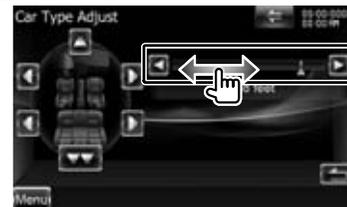


Make fine adjustment of the delay time of the speaker output specified at <Setup the Car Type> to have a more suitable environment for your vehicle.

The settings of the delay time are automatically identified and compensated by specifying the distances of each speaker from the center of the vehicle interior.

- 1 Set the front and rear positions and the height of the reference point to the position of the ears of the person sitting in the front seat, and set the right and left positions to the center of the vehicle interior.
- 2 Measure the distances from the reference point to the speakers.

3 Calculate the distance difference in accordance with the farthest speaker.

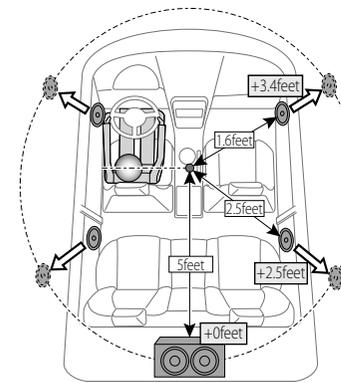


Channel Level

You can set the volume at each setup position.

1 Display the Car Type Setup screen

Touch > > [Audio SETUP] > [Channel Level]. (page 64)

2 Select a speaker you wish to adjust

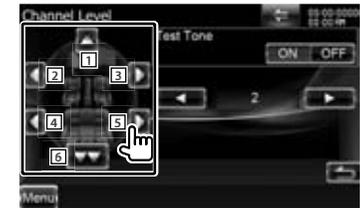

- 1 Center speaker
- 2 Left front speaker
- 3 Right front speaker
- 4 Left rear speaker
- 5 Right rear speaker
- 6 Subwoofer

[Test Tone] Starts or stops test signal tone output for setup check.

3 Adjust the volume



 
Setup Menu

You can set up various receiver parameters.

How to Display SETUP Menu Screen


Displays the Setup menu to set various functions.

1 Display the Source Control Screen

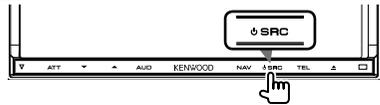

When a video screen is displayed, press the [SRC] button.

2 Display the Setup Menu Screen

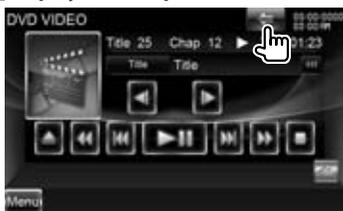

In this manual, the above selection is indicated as: Touch .

3 Select the setup item



- [AV-IN SETUP], [Navigation] and [Audio SETUP] options can be locked. The key mark (🔒) is displayed in reverse video for the locked option. See <Setup Memory> (page 77).

Item	Page
[DivX(R) SETUP]	73
[System]	
[User Interface]	74
[Touch]	75
[Clock]	75
[Security]	76
[EXT SW]	76
[SETUP Memory]	77
[Display]	
[Screen Adjust]	80
[Angle]	76
[Color]	79
[Background]	78
[SIRIUS SETUP]	86
[DVD SETUP]	82
[iPod SETUP]	85
[USB SETUP]	85
[TV SETUP]	88
[AV-IN SETUP]	80
[Navigation]	82
[Software]	73
[AV-OUT Interface]	81
[Camera SETUP]	81

DivX Setup

Checks the registration code. This code is needed when making a disc which has DRM (Digital Rights Management).

1 Display the DivX Setup screen

Touch [DivX(R) SETUP]. (page 72)



Displays the registration code.



- Disabled when a DVD is being played.
- When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen such as the one above. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction. When the remaining number of viewing reached 0, a warning message appears and the file cannot be played.

Deactivating DivX Code

1 Display the DivX Deactivation Confirm screen



2 Cancel the registration



Touching the screen displays a confirmation message. Touch [OK].

To cancel clearing, touch [Cancel].

Software Information

Checks the software version of this unit.

1 Display the Software Information screen

Touch [Software]. (page 72)



Displays the software version.



- For how to update the software, refer to the relevant update procedure manual which comes with the software.

User Interface

You can setup user interface parameters.

1 Display the User Interface screen

Touch > > [System] > [User Interface]. (page 72)

2 Set each item



[Beep] Turns the key touch tone On or Off. (☑ "ON")

[Remote Sensor] Selects a remote control signal. (☑ "ON")
When turned "OFF", the remote control of TV reception is rejected.

[Language] Select the language used for the control screen and setting items. See <Language Setting> (page 74).

[Text Scroll] Allows scrolling of text display on the Source Control screen. (☑ "Manual")
"Auto": Scrolls the screen automatically.
"One": Scrolls the screen only once.
"OFF": Allows you to scroll the screen manually.

[Drawer Close] Sets whether to close the function bar automatically. (☑ "Auto")

[AUD Key Longer than 1 Second] Sets the function of the [AUD] button. (page 12)
"V.OFF": Press the [AUD] button for longer than 1 second to turn the display off.
"CAM": Press the [AUD] button for longer than 1 second to switch to camera view.

[Animation] Sets whether to display animation. (☑ "ON")

[Panel Switch Sensitivity] Adjusts the sensitivity of the buttons (touch sensors) on the front panel. (☑ "Middle")

 
Language Setting

You can select the display language for the control screen and audio file tags.

1 Display the User Interface screen

Touch > > [System] > [User Interface]. (page 72)

2 Display the Language Setting screen

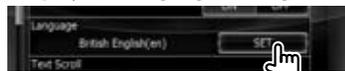

3 Select a language



[ASR] Selects whether to use the voice control function. (page 51) (☑ "Enabled")
Touching [Disabled] allows you to select languages for respective items.

"Enabled": Voice control is activated.
"Disabled": Voice control is deactivated.

[Language Select] Selects a language. (☑ "American English (en)")

[Enter] Determines the selected language.

[Cancel] Cancels the selected language.

When [ASR] is set to "Disabled"



[GUI Language Select] Selects the display language used for the control screen and so forth. (☑ "American English (en)")

[Navigation Language Select] Selects the language used for navigation. (☑ "American English (en)")

[Text Language Select] Selects the language used for tag text (song information). (☑ "American English (en)")


Touch Panel Adjustment

You can adjust the touch panel operations.

1 Display the Touch panel Adjustment screen

Touch > > [System] > [Touch]. (page 72)

2 Adjust the Touch panel

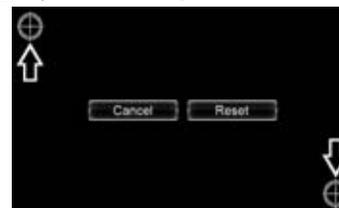

Follow the instruction on the screen and touch the center of .

[Cancel] Cancels the Touch Panel Adjust.

[Reset] Resets to the initial status.


Clock and Date Setup

You can adjust the clock time.

1 Display the Clock Setup screen

Touch > > [System] > [Clock]. (page 72)

2 Setup the Clock

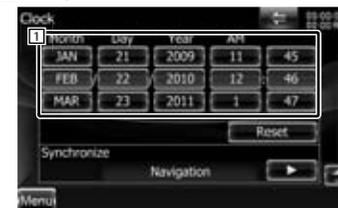

1 Adjusts month, day, year, hours, and minute.

[Reset] Sets "00" minute.

Setup examples: 3:00 – 3:29 ➔ 3:00
3:30 – 3:59 ➔ 4:00

[Synchronize] Sets the clock time in synchronization with the time data sent from the navigation system or the Radio Data System station. (☑ "Navigation")
"OFF"/"RDS"/"Navigation"
When the synchronized mode is set, the clock cannot be adjusted manually.

3 Adjust the date or clock time




Security Setup

A red indicator will blink on the unit after the ACC is set to OFF, warning potential thieves.

1 Display the Security screen

Touch [Left Arrow] > [Right Arrow] > [System] > [Security]. (page 72)

2 Setup the SI (Security Indicator)

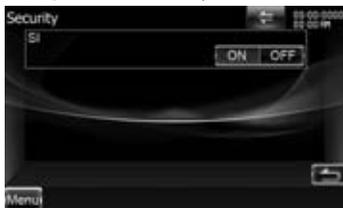

[SI] Turns the SI function on or off. If turned "ON", the security indicator on the front panel flashes when the vehicle ignition is off. (ON)

Monitor Angle Control

You can adjust the position of the monitor.

1 Display the Angle Setup screen

Touch [Left Arrow] > [Right Arrow] > [System] > [Angle]. (page 72)

2 Set the Monitor Angle



1 Sets the Monitor angle. **[Off Position]** Stores the current monitor angle as the angle during power off.

EXT SW Setup

Sets up the external switch power mode.

1 Display the EXT SW screen

Touch [Left Arrow] > [Right Arrow] > [System] > [EXT SW]. (page 72)

2 Perform EXT SW Setup



[SW1 Name]/ [SW2 Name] Sets the name of the external device. See <How To Use the Character Entry Screen> (page 77) for information on how to enter a name.

[Output Pattern] Sets the power signal output mode.

(EXT SW1: Pulse, EXT SW2: Level)

"Pulse": Generates a single power signal pulse.

"Level": Continues output of high power signal.

Sets to turn output on/off each time the button on the EXT SW Control screen is touched. See <External Device Power Supply Control> (page 50).

[Pulse Set] Sets the Pulse signal output time. Outputs 500ms when "1" is set. Increases by 200ms with each step. Up to 100 steps can be set.

How To Use the Character Entry Screen



- 1** Enters characters.
- [Left Arrow], [Right Arrow]** Shifts the cursor.
- [Up Arrow], [Down Arrow]** Switches between key layouts.
- [Shift]** Toggles between uppercase and lowercase.
- [qwe]/ [abc]** Sets the key layout of the character buttons.
abc : Alphabetical key layout.
qwe : Qwerty key layout.
- [Clear]** Clears the character.
If you erase a character, locate the cursor on it and touch this button.
- [Space]** Enters a space.



You can enter characters only after you have applied the parking brake.

Setup Memory

Audio Control, AV-IN SETUP, AV Interface, Navigation, and Audio SETUP settings can be memorized. The memorized settings can be recalled at any time. For example, even when the settings are cleared due to replacement of the battery, the settings can be restored.

1 Display the SETUP Memory screen

Touch [Left Arrow] > [Right Arrow] > [System] > [SETUP Memory]. (page 72)

2 Start Setup Memory



[Lock] Locks the AV-IN SETUP, Navigation, and Audio SETUP settings. When [Lock] is selected, you cannot change the AV-IN SETUP, Navigation,

and Audio SETUP settings.
[Yes] Memorizes or recalls the settings.
[No] To cancel the function, touch [No]. To cancel memorization, touch [No]. The SETUP Menu screen appears again.

3 Select a desired function



[Recall] Recalls the memorized settings.
[Memory] Memorizes the current settings.
[Clear] Clears the currently memorized settings.

4 Memorize or recall the settings

When memorizing the Audio Setup and AV Interface settings:



If settings have already been memorized, a confirmation message appears. Touch [Yes]. To cancel memorization, touch [No].

When recalling the memorized settings:



Touching the screen displays a confirmation message. Touch [Yes]. To cancel recalling, touch [No].

When clearing the currently memorized settings:



Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

5 Quit memorization/recalling of settings



Changing Background image

Loads an image from the connected USB device and sets it for the background image.

1 Connect the device which has the image to load

2 Display the Background screen

Touch [Left Arrow] > [Right Arrow] > [Display] > [Background], (page 72)

3 Change Standby



4 Display the Background Memory screen



[Change] Selects an image for background.

[Delete] Deletes the background image.

Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

5 Select the image to load



6 Load the image



[Clockwise Arrow] Rotates counter clockwise.

[Counter-clockwise Arrow] Rotates clockwise.

7 Select Background Change screen



8 Select an image for background



1 Returns to the initial background.

9 Set the image as the background



- See <About Picture files> (page 6) for readable image specifications.
- The [Memory] button on the "Background" screen becomes active only in STANDBY source mode.
- Pressing the [Memory] button on the "Background" screen switches the AV OUT source to OFF. For resetting the AV OUT source, refer to <AV Output Interface Setup> (page 81).


Panel Color Coordinate

Sets the button illumination color.

1 Display the Color screen

Touch [Left Arrow] > [Right Arrow] > [Display] > [Color]. (page 72)

2 Display the Panel Color Coordinate screen

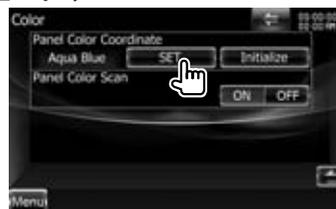

[Initialize] Initialization resets the settings made using the Panel Color SET process to the default settings set at the factory.

[Panel Color Scan] When set to "ON", the illumination color of the screen and buttons changes one after another.



- When touching [SET] or [Initialize], make sure [Panel Color Scan] is set to "OFF".

3 Select a color

 


1 Sets to the touched color.

[Adjust] Sets and registers favorite color to the preset buttons ([Preset1] – [Preset3]).

To register your original color

1 Start the RGB coordinate

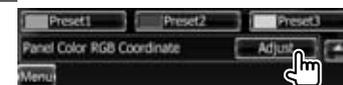

2 Adjust each color value



1 Selects a preset number to register.

[Red Value] Adjusts the Red value.

[Green Value] Adjusts the Green value.

[Blue Value] Adjusts the Blue value.

3 Select a Preset number to register



Adjusted color is registered to the selected Preset button.

4 Complete the color coordination




Screen Control

You can adjust the screen mode of the monitor.

1 Display the Screen Control screen

Touch > > [Display] > [Screen Adjust]. (page 72)

2 Set each item

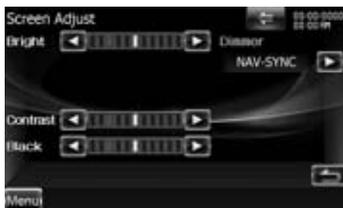

[Bright] Brightness Control

[Contrast] Contrast Control

[Black] Black Level Adjustment

[Dimmer] Dimmer Mode Setup

("SYNC")

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function On or Off when the vehicle light control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting.



• In this Screen Control screen, you can perform setups for the menu screen. Setups for videos such as DVD can be performed on the <Screen Control> (page 52).

AV Input Setup

You can set AV input parameters.

1 Display the AV-IN Setup screen

Touch > > [AV-IN SETUP]. (page 72)

2 Set each item



[AV-IN Interruption] Sets an image display of the system that is connected via the AV INPUT port. ("OFF")

"OFF": When the image source is switched, an image entered via the AV INPUT port is displayed.

"ON": When an image signal is entered via the AV INPUT port, this image is displayed.

[iPod AV Interface Use] You can determine the use of iPod/AV-IN3 input terminal. ("iPod")

"iPod": Select when connecting the iPod using the KCA-iP302 for iPod.

"AV-IN3": Select to play an AV component connected to the iPod/AV-IN3 input terminal.

[AV-IN1 Name], [AV-IN2 Name], [AV-IN3 Name]

Sets a name to be displayed when you select a system that is connected via the AV INPUT port. ("VIDEO")



- [iPod AV Interface Use]
This item can be set when in STANDBY source and also the iPod is disconnected.
- [AV-IN Name]
Two AV-IN names are displayed when "iPod" is selected in [iPod AV Interface Use] and three are displayed when not selected.

AV Output Interface Setup

You can set AV output parameters.

1 Display the AV-OUT Interface screen

Touch > > [AV-OUT Interface]. (page 72)

2 Set each item



[AV-OUT] Selects an AV source to be output at the AV OUTPUT port. ("VIDEO1")



- USB source cannot be selected when two iPods are connected.

Camera Setup

You can set Camera parameters.

1 Display the Camera Setup screen

Touch > > [Camera SETUP]. (page 72)

2 Set each item



[Rear Camera] Selects the type of rear camera to use. ("Other")

"CMOS-300": When the CMOS-300 with ID 1 set is connected.

"Other": When the other camera is connected.

[R-CAM Interruption] Sets a method to switch to the rear view camera video display. ("OFF")

"ON": Switches to the rear view camera video display when engaging the shift knob of car to "Reverse" and then pressing the [AUD] button for longer than 1 second.

"OFF": Switches to the rear view camera video display, press the [AUD] button for longer than 1 second.



- The function of the [AUD] button needs to be set to "CAM" in [AUD Key Longer than 1 Second] beforehand.

[R-CAM Settings] Adjusts the CMOS-300 with ID 1 set. For details, see the option manual.

[Front Camera] Turn this setting on when the CMOS-300 with ID2 set is connected. ("OFF")

[F-CAM Settings] Adjusts the CMOS-300 with ID 2 set. For details, see the option manual.

Navigation Setup

You can set Navigation parameters.

1 Display the Navigation Setup screen

Touch > [Navigation]. (page 72)

2 Set each item



[NAV Interrupt Speaker] Selects speakers used for voice guidance of the navigation system.

() "Front All"

"Front L": Uses the front left side speaker for voice guidance.

"Front R": Uses the front right side speaker for voice guidance.

"Front All": Uses both front speakers for voice guidance.

[NAV Voice Volume] Adjusts the volume for voice guidance of the navigation system.

() "25"

[NAV Mute] Mutes the volume of rear speakers during voice guidance of the navigation system.

() "ON"

When turned "ON", the volume level drops for voice guidance.

DVD Setup

You can set up the DVD play.

1 Display the DVD Setup screen

Touch > [DVD SETUP]. (page 72)

2 Set each item



[Menu Language]*1 Selects a disc menu language. See <DVD Language Setup> (page 83).

[Subtitle Language]*1 Selects a subtitle language. See <DVD Language Setup> (page 83).

[Audio Language]*1 Selects an audio language. See <DVD Language Setup> (page 83).

[Dynamic Range Control]*1 Sets the dynamic range. () "Dialog"
The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Dialog". "Dialog" makes the total sound volume becomes larger as compared with "Wide" and "Normal", allowing you to listen to the movie's dialog more clearly.

This is effective only when you are using a Dolby Digital software.

The operation is available during the play stop mode.

[Angle Mark] Sets an angle mark display. () "ON"

[Screen Ratio]*1 Selects the screen display mode. () "16:9"

"16:9": Displays wide pictures.

"4:3 LB": Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).

"4:3 PS": Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).

[Parental Level]*1 Displays the Parental Lock screen. () "OFF"
See <DVD Parental Level Setup> (page 84).

[Disc SETUP] Makes the settings related to the disc media. See <Disc Setup> (page 84).

[Stream Information]



*1 Disabled when a DVD is being played.

DVD Language Setup

Selects a language you use for the speech and menus.

1 Display the DVD Setup screen

Touch > [DVD SETUP]. (page 72)

2 Select the language item to set



3 Enter a language code

See <DVD Language Codes> (page 99) and select the desired language.



[1] Enters a language code.

[Cancel] Cancels the language setup and returns to the "DVD SETUP" screen.

[Enter] Sets the language and returns to the "DVD SETUP" screen. (It appears after you have entered a language code.)

[Original] Sets the DVD's original language (only when setting an audio language).

[Clear] Clears the language code.

4 Set the language you use



DVD Parental Level Setup

Sets a parental level.

1 Display the DVD Setup screen

Touch    > [DVD SETUP]. (page 72)

2 Display the Parental Level code number screen



3 Enter the code number



1 Enters a code number.

[Cancel] Cancels the current setup and returns to the "DVD SETUP" screen.

[Level] Indicates the present parental lock level.

 
[Enter] Determines the code number and displays the Parental Level setup screen.

[Clear] Clears the code number.




- The number you enter first is set as your code number.

4 Display the Parental Level SETUP screen

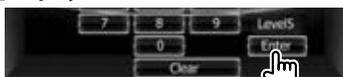

5 Select a parental level and complete the setup

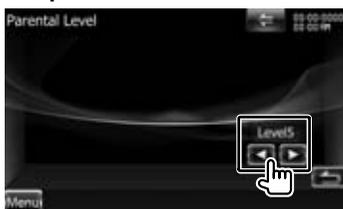

Selects a parental level.



- If a disc has higher parental lock level, you need to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, anybody can play it back even when you have set the parental lock.

Disc Setup

Performs setup when using disc media.

1 Display the DVD Setup screen

Touch    > [DVD SETUP]. (page 72)

2 Display the Disc Setup screen



3 Set each item



[CD Read] Sets a music CD playback. (☑ "1")

"1": Automatically recognizes and plays back an Audio file disc, a DVD or a music CD.

"2": Forcibly plays back a disc as a music CD.

Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.

[On Screen DVD] Sets an on-screen display of the DVD Playback screen. (☑ "OFF")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is not displayed.



- [CD Read] Disabled when a disc is in the unit. You cannot play an Audio file/VCD disc in the "2" position. Also, you may not play some music CDs in the "2" position.

USB Setup

Performs setup when using USB.

1 Display the USB Setup screen

Touch    > [USB SETUP]. (page 72)

2 Set each item

Example : USB Setup screen



[Picture Display Time] Selects a picture display time. (☑ "Long")

The Display of a JPEG picture is changed. ("Short", "Middle", "Long")

[On Screen USB] Sets an on-screen display of the USB Playback screen. (☑ "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is displayed when you touch on the screen.

iPod Setup

Performs setup when using iPod.

1 Display the iPod Setup screen

Touch    > [iPod SETUP]. (page 72)

2 Set each item



[AudioBook Speed] Sets the Audio book playback speed. (☑ "Normal")

[Wide Screen] Sets Wide Screen on or off. (☑ "OFF")

[On Screen iPod] Sets an on-screen display of the iPod Playback screen. (☑ "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is displayed when you touch on the screen.



- "Wide Screen" cannot be set while the iPod is connected.

SIRIUS Parental Code Setup

Sets a SIRIUS Parental code. (with the optional accessory SIRIUS Tuner connected only)

1 Display the SIRIUS Setup screen


Touch [Left Arrow] [Right Arrow] [Right Arrow] [Right Arrow] [SIRIUS SETUP]. (page 72)

2 Display the Parental Code screen



- If you have already completed the code registration, [Change] is displayed.

3 Enter the Parental Code number

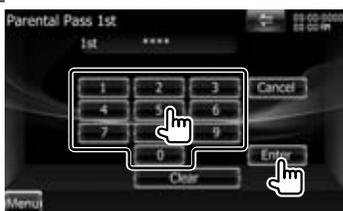

1 Enters a code number.

[Cancel] Cancels the current setup and returns to the SIRIUS Setup screen.

[Enter] Determines the code number.

[Clear] Clears the code number.

4 Confirm the code number

Enter the same code number as you input in step 3.



SIRIUS Parental code is now set, and the display returns to SIRIUS Setup screen.

Change the Parental Code

1 Display the Parental Code screen




[Clear] Clears the Parental Code.



- Pressing [Clear] for 5 seconds or longer deletes the code.

2 Enter the current code number

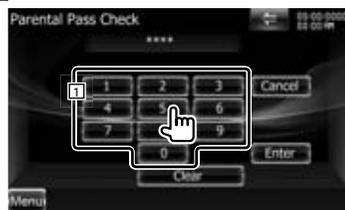

3 Enter the new code number



4 Confirm the code number

Enter the same code number as you input in step 3.

SIRIUS Parental code is now set, and the display returns to SIRIUS Setup screen.

SIRIUS Parental Lock Setup

Selects the channel to enable SIRIUS Parental lock function.

1 Display the SIRIUS Setup screen

Touch [Left Arrow] [Right Arrow] [Right Arrow] [Right Arrow] [SIRIUS SETUP]. (page 72)

2 Display the Parental Code screen



- You need to complete <SIRIUS Parental Code Setup> beforehand.

3 Enter the code number

Enter the same code number as you originally input <SIRIUS Parental Code Setup> (page 86).



4 Display the Parental Code screen



5 Enter the code number



6 Select a category



1 Category list
Displays all the channels in the selected category.

[All Channel] Displays all the channels.

7 Set the parental lock for each channel



1 Channel list

2 Sets the Parental lock function on or off for each channel.

3 Selects a channel.

[Info Change] Switch the sequence of the channel list. (Channel name, Song title, Artist name, Composer name, and Category name)

[UP] Moves to SIRIUS Category Select screen.

SIRIUS Skip Channel Select

Sets the undesired channels unselected.

1 Display the SIRIUS Setup screen

Touch [Left Arrow] > [Right Arrow] > [SIRIUS SETUP]. (page 72)

2 Display the Skip Category Select screen



3 Select a category




1 Category list

Displays all the channels in the selected category.

[All Channel] Displays all the channels.

4 Set the skip for each channel

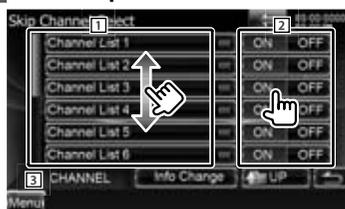

1 Channel list

2 Sets the skip function on or off for each channel.

3 Selects a channel

[Info Change] Switch the sequence of the channel list. (Channel name, Song title, Artist name, Composer name, and Category name)

[UP] Moves to SIRIUS Category Select screen.


TV Setup

The TV signal receiving areas can be set. (with the optional accessory TV Tuner connected only)

1 Display the TV SETUP screen

Touch [Left Arrow] > [Right Arrow] > [TV SETUP]. (page 72)

2 Set each item

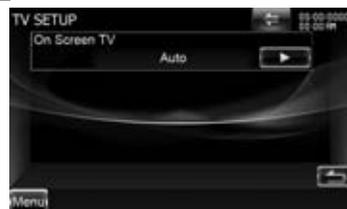

[On Screen TV] Sets an on-screen display of the TV screen.

("Auto") (with the optional accessory TV tuner connected only)

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is displayed when you touch on the screen.

Remote Controller


This unit can be operated using the Remote Controller supplied with this unit.

CAUTION

- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result, if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.

Battery installation


Use two "AAA"/"R03"-size batteries. Insert the batteries with the + and - poles aligned properly, following the illustration inside the case.

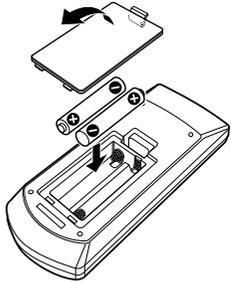

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace the both batteries with new ones.

Remote Controller mode switch

The functions operated from the remote controller differ depending on the position of the mode switch.

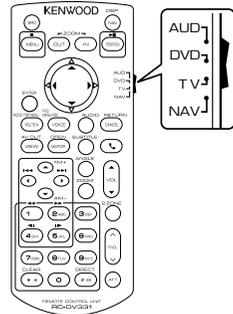

AUD mode

Switch to this mode when controlling a selected source or tuner source, etc.

DVD mode

Switch to this mode when playing DVDs or CDs etc. with the player integrated in this unit.

TV mode

Switch to this mode when controlling TV.

NAV mode

Switch to this mode when controlling Navigation unit.

 


- The position of the remote control mode switch is indicated in the title of each mode, e.g., "(AUD mode)".
- When controlling a player that is not integrated in the unit, select "AUD" mode.

Common operations (AUD mode)


Source switching

Switches to the source to be played.

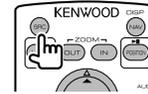


Volume control

 Adjusts the volume.

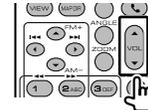


Volume attenuator

 Press the key once to lower the volume. Press again to restore the previous volume.

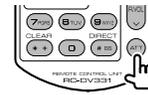


Dual Zone

 Switches the Dual Zone function ON and OFF.

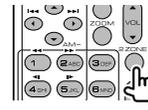

Rear volume control

Adjusts volume at rear when the Dual Zone function is ON.

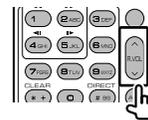

V.SEL

Switches to the navigation screen.



 
Display angle

Switches the display angle each time it is pressed.




Hands-free communication

When a call comes in, it answers the call.

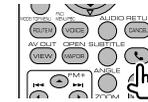

Function

 
Switches the function screen.

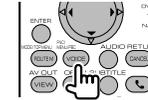

MODE

Switches the screen mode.

 Screen mode changes each time you press this key.

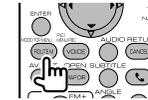

AV Output

 
Selects an AV source to be output.



DVD/VCD (DVD mode)

Track search and file search


Selects the track or file to be played.

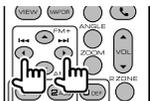

Play/Pause

Pauses the track.

 
Press again to resume playing.

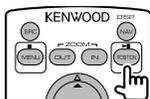


Stop

Memorizes the last point where the disc stopped.

 When pressed again, the last point is deleted.

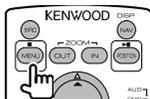

Direct search

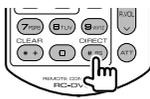 

Pressing this key switches the features that can be searched directly.

DVD-VIDEO

Title number
Chapter number
Play time
Item number*
Cancel

* You may not be able to use this function with some discs or scenes.

VCD 1.X, VCD 2.X (PBC OFF)


Track number
Cancel

VCD 2.X (PBC ON)

Scene number
Number
Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [ENTER] key.


Numeric keypad

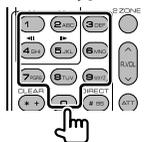

- Specify the number to search in direct search.
- Press **1** **2ABC** to fast forward/backward. Switches the fast forward/backward speed each time you press this key.
- Press **4REW** **5FWD** to slow forward/backward. Switches the slow playback speed each time you press this key.

DVD Top Menu

 
Returns to the DVD top menu.

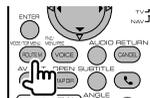

DVD Menu


Displays the DVD menu.

 Turns the playback control on or off while playing VCD.

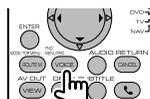


SUBTITLE

 Switches the subtitle language.

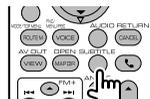


ZOOM

 Switches the zoom ratio each time you press this key.

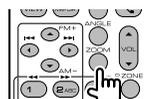


Picture Angle

 Switches the picture angle each time you press this key.

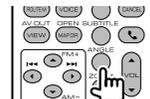

AUDIO

 
Switches the voice language each time you press this key.

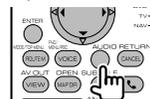

Music CD/Audio file/Video file/ Picture file (AUD mode)

Folder search

Selects the folder to be played.

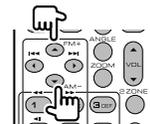

Track search and file search

 
Selects the track or file to be played.




Play/Pause

Pauses the track or file.

Press again to resume playing.

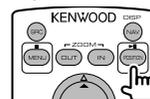

Direct search

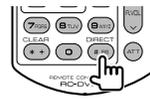 

Pressing this key switches the features that can be searched directly.

Music CD


Track number
Play time
Cancel

Audio files in DVD/CD disc

Folder number
File number
Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [▶||] key.

Numeric keypad

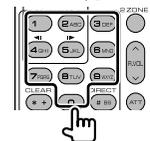


- Specify the number to search in direct search.

iPod (AUD mode)

Music/Video search

 
Selects the music/video to be played.

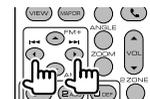

Play/Pause

Pauses the music/video.

 
Press again to resume playing.

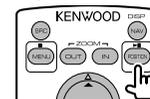


HD Radio (AUD mode)

FM band switching

 Switches to bands received by the unit.

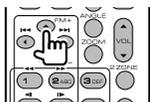


AM band

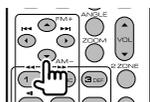 


Station selection

 Switches to broadcast stations received by the unit.

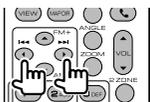


Seek mode switching

 Switches the Seek mode (AUTO1, AUTO2, MANU).

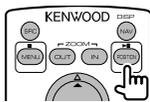


Direct tuning


After pressing this keypad, use the key to specify the broadcast station you wish to receive.

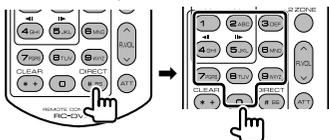

Example: 92.1MHz (FM)

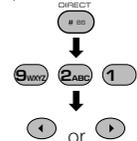


Example: 810kHz (AM)

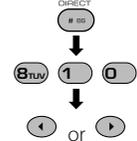


Direct channel search

After pressing this key, use the keypad to specify the channel you wish to receive.

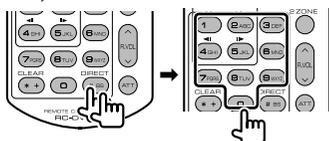

Example: 2 channel

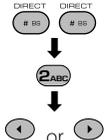 

Numeric keypad



- To use preset tuning, press the number of a programmed broadcast station. (1 - 6MIND)

Navigation (NAV mode)

 
Cursor key

Scrolls the map, or moves the cursor.




ENTER

Performs the selected function.

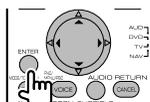


ZOOM

 Zooms in or out the navigation map.

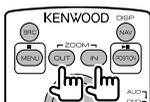


MENU

 Displays Main menu.

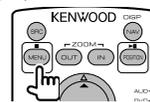


CANCEL

 Displays previous screen.

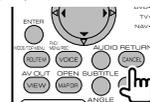


POSITION

 Displays the current position.

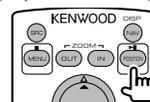


ROUTE M

 Displays Route Option menu.

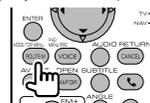


VIEW

 Switches between 2D and 3D map displays.

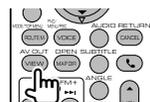


VOICE

 Plays Voice guidance.

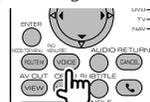

MAP DIR

 
Switches between the heading up navigation and north up navigation map displays.

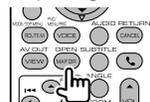

TV (TV mode)


Switching Band/Video

 It switches between the station of the TV band to receive and video input.

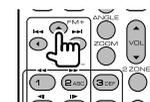


Channel Selection

 The TV channel to receive is selected.

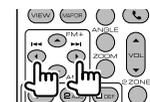


Direct tuning (NTSC TV type only)

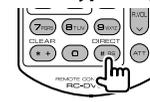 

Press this key first, and then specify the station to receive with the numeric keypad.

 Example: In case of Channel 6 (2-digit)

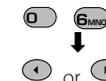

Numeric keypad



- The number of the memorized station is selected. (1 - 6MIND)
- Press the direct tuning key first, then specify the channel of the station to receive.

Initial Setup

When pressing the Reset button or turning on the unit for the first time, the Initial SETUP screen is displayed.

Initial Setup

1 Turns the power On

2 Set each item



[Language] Select the language used for the control screen and setting items. (page 74)

[Angle] You can adjust the position of the monitor. (page 76)

[iPod AV Interface Use] You can determine the use of iPod/AV-IN3 input terminal. (☑ "iPod")
"iPod": Select when connecting the iPod using the KCA-iP302 for iPod.

"AV-IN3": Select to play an AV component connected to the iPod/AV-IN3 input terminal.

[Color] Sets the button illumination color. (page 79)

[EXT SW] Set the controls for the external devices. (page 76)

[Camera] Set the parameters for the Camera. See <Camera Setup> (page 81).

3 End initial setup



- The settings above can be changed in <Setup Menu> (page 72).

Status bar Indicator items

Shown below is a list of indicators displayed on the Status bar.



Source	Display	Overview	
General	"ATT"	Indicates that the attenuator is active.	
	"DUAL"	Turns on the Dual zone function.	
	"TEL"	Indicates the connection state of the Bluetooth hands-free unit. (White: Connected. Orange: Not connected.)	
DVD/CD	"FO-REP"	Indicates that the Folder repeat function is ON.	
	"IN"	Indicates that a disc is inserted. (White: A Disc is inside the unit. Orange: Error at the disc player.)	
	"VIDEO"	Identifies the video file.	
	"MUSIC"	Identifies the music file.	
	"RDM"	Indicates that the Random function is ON.	
DVD-Video	"REP"	Indicates that the Repeat function is ON.	
	"C-REP"	Indicates that the Chapter repeat function is ON.	
VCD	"T-REP"	Indicates that the Title repeat function is ON.	
	"1chLL"	Identifies the left audio output of channel 1.	
	"1chLR"	Identifies the monaural audio output of channel 1.	
	"1chRR"	Identifies the right audio output of channel 1.	
	"1chST"	Identifies the stereo audio output of channel 1.	
	"LL"	Identifies the left audio output.	
	"LR"	Identifies the monaural audio output.	
	"RR"	Identifies the right audio output.	
	"ST"	Identifies the stereo audio output.	
	"PBC"	Indicates that the PBC function is ON.	
	"SVCD"	Identifies the Super Video CD.	
	"VER1"	Indicates that the Video CD version is 1.	
	"VER2"	Indicates that the Video CD version is 2.	
	"REP"	Indicates that the Repeat function is ON.	
	USB	"FO-REP"	Indicates that the Folder repeat function is ON.
		"VIDEO"	Identifies the video file.
		"MUSIC"	Identifies the music file.
		"PICTURE"	Identifies the image file.
"RDM"		Indicates that the Random function is ON.	
iPod	"REP"	Identifies that the Repeat function is ON.	
	"PLST"	Indicates that the Play list mode is selected now.	
	"MUSIC"	Identifies the music file.	
	"VIDEO"	Identifies the video file.	
	"RDM"	Indicates that the Random function is ON.	
	"A-RDM"	Indicates that the Album random function is ON.	
	"REP"	Indicates that the Repeat function is ON.	

Source	Display	Overview
HD Radio	"AUTO1"	Indicates that Seek mode is set to Auto1.
	"AUTO2"	Indicates that Seek mode is set to Auto2.
	"MANU"	Indicates that Seek mode is set to Manual.
	"HD"	Indicates that HD Radio station is being received.
	"M/S"	Indicates whether the reception channel is main or sub. (Orange: Sub channel White: Main channel)
	"ANALOG"	Indicates that analog broadcast is being received.
	"DIGITAL"	Indicates that digital broadcast is being received.
	"ST"	Indicates that stereo broadcast is being received.
	"TI"	Indicates the reception state of traffic information. (Orange: TP is being received. White: TP is not being received.)
	"TAG"	Indicates that Tagging is enabled.
	SIRIUS/ XM	"SCN"
"SEEK1"		Indicates that Seek mode is set to 1.
TV	"SEEK2"	Indicates that Seek mode is set to 2.
	"AUTO1"	Indicates that Seek mode is set to Auto1.
	"AUTO2"	Indicates that Seek mode is set to Auto2.
	"MANU"	Indicates that Seek mode is set to Manual.

DVD Language Codes

Code	Language
aa	Afar
ab	Abkhazian
af	Afrikaans
am	Amharic
ar	Arabic
as	Assamese
ay	Aymara
az	Azerbaijani
ba	Bashkir
be	Byelorussian
bg	Bulgarian
bh	Bihari
bi	Bislama
bn	Bengali, Bangla
bo	Tibetan
br	Breton
ca	Catalan
co	Corsican
cs	Czech
cy	Welsh
da	Danish
de	German
dz	Bhutani
el	Greek
en	English
eo	Esperanto
es	Spanish
et	Estonian
eu	Basque
fa	Persian
fi	Finnish
fj	Fiji
fo	Faroese
fr	French
fy	Frisian
ga	Irish
gd	Scots Gaelic
gl	Galician
gn	Guarani
gu	Gujarati
ha	Hausa
he	Hebrew
hi	Hindi
hr	Croatian
hu	Hungarian
hy	Armenian
ia	Interlingua
ie	Interlingue
ik	Inupiak
id	Indonesian
is	Icelandic
it	Italian
ja	Japanese
jv	Javanese
ka	Georgian

Code	Language
kk	Kazakh
kl	Greenlandic
km	Cambodian
kn	Kannada
ko	Korean
ks	Kashmiri
ku	Kurdish
ky	Kirghiz
la	Latin
lb	Luxembourgish
ln	Lingala
lo	Laotian
lt	Lithuanian
lv	Latvian, Lettish
mg	Malagasy
mi	Maori
mk	Macedonian
ml	Malayalam
mn	Mongolian
mo	Moldavian
mr	Marathi
ms	Malay
mt	Maltese
my	Burmese
na	Nauru
ne	Nepali
nl	Dutch
no	Norwegian
oc	Occitan
om	(Afan) Oromo
or	Oriya
pa	Punjabi
pl	Polish
ps	Pashto, Pushto
pt	Portuguese
qu	Quechua
rm	Rhaeto-Romance
rn	Kirundi
ro	Romanian
ru	Russian
rw	Kinyarwanda
sa	Sanskrit
sd	Sindhi
sg	Sangho
sh	Serbo-Croatian
si	Singhalese
sk	Slovak
sl	Slovenian
sm	Samoan
sn	Shona
so	Somali
sq	Albanian
sr	Serbian
ss	Siswati
st	Sesotho

Code	Language
su	Sundanese
sv	Swedish
sw	Swahili
ta	Tamil
te	Telugu
tg	Tajik
th	Thai
ti	Tigrinya
tk	Turkmen
tl	Tagalog
tn	Setswana
to	Tongan
tr	Turkish
ts	Tsonga
tt	Tatar
tw	Twi
uk	Ukrainian
ur	Urdu
uz	Uzbek
vi	Vietnamese
vo	Volapuk
wo	Wolof
xh	Xhosa
yo	Yoruba
zh	Chinese
zu	Zulu

Help? Troubleshooting

Some functions of this unit may be disabled by some settings made on this unit.

- ❗ **Cannot set up the subwoofer.**
- ❗ **Cannot set up subwoofer phase.**
- ❗ **No output from the subwoofer.**
- ❗ **Cannot set up the low pass filter.**
- ❗ **Cannot set up the high pass filter.**

- ▶ Subwoofer is not set to On.
☞ <Speaker Setup> (page 69)
- ▶ The Dual zone function is enabled.
☞ <Zone Control> (page 67)

- ❗ **Cannot select the output destination of the subsource in the Dual zone.**
- ❗ **Cannot adjust the volume of the rear speakers.**

- ▶ The Dual zone function is disabled.
☞ <Zone Control> (page 67)

- ❗ **Cannot play audio files.**

- ▶ "CD Read" of <Disc Setup> (page 84) is set to "2".

- ❗ **Cannot Folder select.**

- ▶ The Random play function is enabled.

- ❗ **Cannot perform Repeat play.**

- ▶ The PBC function of the Video CD is enabled.

- ❗ **Cannot set up the equalizer.**
- ❗ **Cannot set up the crossover network.**

- ▶ The Dual zone function is enabled.
☞ <Zone Control> (page 67)

What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

General

- ❗ **The Touch Sensor Tone doesn't sound.**

- ✓ The preout jack is being used.
- ☞ The Touch Sensor Tone can't be output from the preout jack.

Tuner source

- ❗ **Radio reception is poor.**

- ✓ The car antenna is not extended.
- ☞ Pull the antenna out all the way.
- ✓ The antenna control wire is not connected.
- ☞ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

Disc source

- ❗ **The specified disc does not play, but another one plays instead.**

- ✓ The specified CD is quite dirty.
- ☞ Clean the CD.

- ✓ The disc is severely scratched.
- ☞ Try another disc instead.

Audio file source

- ❗ **The sound skips when an Audio file is being played.**

- ✓ The media is scratched or dirty.
- ☞ Clean the media, referring to the CD cleaning of the section on <Handling discs> (page 4).
- ✓ The recording condition is bad.
- ☞ Record the media again or use another media.

Help? Error

When the unit fails to operate correctly, the cause of the failure appears on the display.

"Protect" :

- Protective circuit has been activated because a speaker cord has shorted or it has come in contact with the car chassis.
- ☞ Wire or insulate the speaker cord as appropriate and then push the Reset button.

"Hot Error" :

- When the internal temperature of this unit rises to 60°C or more, the protection circuit is activated and you may not be able to operate the unit. At such times this message will appear.
- ☞ Use the unit again after reducing the temperature inside the vehicle.

"Mecha Error" :

- The disc player is malfunctioning.
- ☞ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.

"Disc Error" :

- An unplayable disc is inserted.

"Read Error" :

- Disc is quite dirty.
- ☞ Clean the disc, referring to the section on <Handling discs> (page 4).
- Disc is upside down.
- ☞ Load the disc with the labeled side up.

"Region code Error" :

- The disc you wanted to play has a region code that cannot be played with this unit.

"Parental level Error" :

- The disc you wanted to play has a higher level than the parental level you set.

"Error 07-67" :

- The unit is not operating correctly due to some reason or other.
- ☞ Push the unit's Reset button. If the "Error 07-67" message does not disappear, see your nearest Kenwood dealer.

"No Device" (USB device):

- The USB device is selected as a source although no USB device is connected.
- ☞ Change the source to any source other than USB/iPod. Connect an USB device, and change the source to USB again.

"Disconnected" (iPod, Bluetooth audio player):

- The iPod/Bluetooth audio player is selected as a source although no iPod/Bluetooth audio player is connected.
- ☞ Change the source to any source other than iPod/Bluetooth. Connect an iPod/Bluetooth audio player, and change the source to iPod/Bluetooth again.

"No Music" :

- The connected USB device contains no playable audio file.
- Media was played that doesn't have data recorded that the unit can play.

"USB Device Error!!" :

- The connected USB device is rated a current capacity higher than the allowable limit.
- ☞ Check the USB device.
- Some trouble may have occurred to the connected USB device.
- ☞ Change the source to any source other than USB. Remove the USB device.

"Authorization Error" :

- Connection to the iPod has failed.
- ☞ Remove the iPod and then reconnect it.
- The unit does not support the iPod.
- ☞ Refer to <iPod/iPhone that can be connected to this unit> (page 7).

"Update your iPod" :

- The iPod's software is an older version which the unit can not support.
- ☞ Confirm that the software for the iPod is the latest version. Refer to <iPod/iPhone that can be connected to this unit> (page 7).

"You only can connect one iPod" :-

- More than one iPod are connected to this unit.
- ☞ Connect only one iPod to the USB terminal with iPod tag.

"Update your USB database" :

- The USB device is different from the previous one or the contained audio files are replaced.
- ☞ Update your database. Refer to <Source Control Screen> (page 24) of USB Device Control.

"Navigation Error. Please turn on power again later." :

- The communication error has occurred due to severely cold temperature.
- ☞ Turn on power again after warming your car interior.

Help? Error

"CHECK SIRIUS" :

The unit cannot recognize the connected SIRIUS Tuner Box.

- ➔ Check the connection of the SIRIUS Tuner Box.

"ANTENNA ERROR" :

Something is wrong with the antenna.

- ➔ Check the connection of the antenna.

"ACQUIRING SIGNAL" :

The unit cannot receive any signal.

- ➔ Move the vehicle to the area where the unit can receive signal.

"FIRMWARE UPDATING" :

Updating the firmware of SIRIUS tuner.

- ➔ Operation is invalid until the update is completed.

"CHANNELS UPDATING **% COMPLETE" :

Updating the SIRIUS Channel Map.

- ➔ Operation is invalid until the update is completed.

"SUBSCRIPTION UPDATED" :

Updating the subscription information.

- ➔ Operation is invalid until the update is completed.

"INVALID CHANNEL" :

The selected channel is invalid.

- ➔ Select a different channel.

"CALL 888-539-SIRIUS TO SUBSCRIBE" :

The selected channel is not subscribed.

- ➔ Call the displayed number for subscription.

"Check XM Tuner" :

The unit cannot recognize the connected XM Tuner.

- ➔ Check the connection of the XM Tuner.

"No Signal" :

The unit cannot receive any signal.

- ➔ Check the connection of the antenna.

"Check Antenna" :

Something is wrong with the antenna.

- ➔ Check the connection of the antenna.

"Ch Unavailable" :

The selected channel is invalid.

- ➔ Select a different channel.

"Ch Unauthorized" :

The selected channel is not subscribed.

"Channel Off Air" :

The broadcast of the selected channel has finished.

Specifications

Monitor section

Picture Size

: 6.95 inches (diagonal) wide
: 156.6 mm (W) x 81.6 mm (H)

Display System

: Transparent TN LCD panel

Drive System

: TFT active matrix system

Number of Pixels

: 1,152,000 (800H x 480V x RGB)

Effective Pixels

: 99.99 %

Pixel Arrangement

: RGB striped arrangement

Back Lighting

: LED

DVD player section

D/A Converter

: 24 bit

Audio Decoder

: Linear PCM/ Dolby Digital/ dts/ MP3/ WMA/ AAC

Video Decoder

: MPEG1/ MPEG2/ DivX

Wow & Flutter

: Below Measurable Limit

Frequency Response

Sampling frequency;
96 kHz : 20 – 22,000 Hz
48 kHz : 20 – 22,000 Hz
44.1 kHz : 20 – 20,000 Hz

Total Harmonic Distortion

: 0.008 % (1 kHz)

S/N Ratio (dB)

: 98 dB (DVD-Video 96 kHz)

Dynamic Range

: 98 dB (DVD-Video 96 kHz)

Disc Format

: DVD-Video/ VIDEO-CD/ CD-DA

Sampling Frequency

: 44.1/ 48/ 96 kHz

Quantifying Bit Number

: 16/ 20/ 24 bit

USB interface section

USB Standard

: USB 2.0 High speed
iPod: USB 1.1 Full speed

File System

: FAT 16/ 32

Maximum Power Supply Current

: 500 mA

D/A Converter

: 24 Bit

Video Decoder

: MPEG1/ MPEG2/ MPEG4/ H.264/ WMV

Audio Decoder

: MP3/ WMA/ AAC/ WAV (Linear PCM)

Bluetooth section

Technology

: Bluetooth Ver.2.1 + EDR Certified

Frequency

: 2.402 – 2.480 GHz

Output Power

: +4dBm (MAX), 0dBm (AVE), Power Class2

Maximum Communication range

: Line of sight approx. 10m (32.8 ft)

Profile

HFP (Hands Free Profile),
SPP (Serial Port Profile),
HSP (Headset Profile),
OPP (Object Push Profile),
PBAP (Phonebook Access Profile),
SYNC (Synchronization Profile),
A2DP (Advanced Audio Distribution Profile),
AVRCP (Audio/Video Remote Control Profile)

Specifications

FM tuner section

Frequency Range (200 kHz space)
: 87.9 MHz – 107.9 MHz

Usable Sensitivity (S/N : 30 dB)
: 9.3 dBf (0.8 μ V/ 75 Ω)

Quieting Sensitivity (S/N : 50 dB)
: 15.2 dBf (1.6 μ V/ 75 Ω)

Frequency Response (\pm 3.0 dB)
Digital: 20 Hz – 20 kHz
Analog: 30 Hz – 15 kHz

S/N Ratio (dB)
Digital: 70 dB (STEREO)
Analog: 70 dB (MONO)

Selectivity (\pm 400 kHz)
: \geq 80 dB

Stereo Separation
: 40 dB (1 kHz)

AM tuner section

Frequency Range (10 kHz space)
: 530 kHz – 1700 kHz

Usable Sensitivity (S/N : 20 dB)
: 28 dB μ (25 μ V)

Video section

Color System of External Video Input
: NTSC

External Video Input Level (mini jack)
: 1 Vp-p/ 75 Ω

External Audio Max Input Level (mini jack)
: 2 V/ 25 k Ω

Video Output Level (RCA jacks)
: 1 Vp-p/ 75 Ω

Audio Output Level (RCA jacks)
: 1.2 V/ 10 k Ω

Audio section

Maximum Power (Front & Rear)
: 50 W x 4

Full Bandwidth Power (Front & Rear)
(4 Ω , 14.4 V, 1 % THD)
: 22 W x 4

Preout Level (V)
: 5 V/ 10 k Ω

Preout Impedance
: 80 Ω

Speaker Impedance
: 4 – 8 Ω

DSP Section

Graphics equalizer

Band: 13 Band
Frequency (BAND1 – 13)
: 62.5/ 100/ 160/ 250/ 400/ 630/ 1k/ 1.6k/ 2.5k/ 4k/
6.3k/ 10k/ 16k Hz
Channel: Front/ Rear/ Center

Gain

: -9/ -8/ -7/ -6/ -5/ -4/ -3/ -2/ -1/ 0/ 1/ 2/ 3/ 4/ 5/ 6/ 7/
8/ 9 dB

X'over

High pass filter

Frequency: Through, 30/ 40/ 50/ 60/ 70/ 80/ 90/ 100/
120/ 150/ 180/ 220/ 250 Hz

Slope: -6/ -12/ -18/ -24 dB

Low pass filter

Frequency: 30/ 40/ 50/ 60/ 70/ 80/ 90/ 100/ 120/ 150/
180/ 220/ 250 Hz, Through

Slope: -6/ -12/ -18/ -24 dB

Time alignment

Front/ Rear/ Subwoofer
: 0 – 20.01 ft (0.07 ft Step)
Center: 0 – 11.15 ft (0.07 ft Step)

Position

: 0 – 5.68 ft (0.07 ft Step)

Channel Level

Front/ Rear/ Center : \pm 10 dB
Subwoofer : -50 – +10 dB

Navigation section

Receiver

: High-sensitivity GPS receiver

Reception Frequency

: 1575.42 MHz (C/A code)

Acquisition Times

Cold : < 38 seconds
Factory Reset : < 45 seconds
(On average for a stationary receiver with a clear view
of the sky)

Accuracy

Position : < 10 meters typical
Velocity : 0.05 m/sec. RMS

Position Method

: GPS

Antenna

: External GPS antenna

External SW

Maximum Power Supply Current
: 500 mA

General

Operating voltage

: 14.4 V (10.5 – 16 V allowable)

Maximum Current Consumption

: 15 A

Dimensions (W x H x D)

: 181.7 x 100.0 x 180 mm
7-3/16 x 3-15/16 x 7-1/8 inch

Operational Temperature Range

: -10 $^{\circ}$ C – +60 $^{\circ}$ C

Storage Temperature Range

: -20 $^{\circ}$ C – +85 $^{\circ}$ C

Weight

: 2.54 kg (5.6 lbs)

Specifications subject to change without notice.

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.

 is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

The "AAC" logo is a trademark of Dolby Laboratories.

 is a trademark of SRS Labs, Inc. WOW technology is incorporated under license from SRS Labs, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iTunes is a trademark of Apple Inc.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

• "Adobe Reader" is a trademark of Adobe Systems Incorporated.

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC (Industry Canada) Notice

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specification were met.

CALIFORNIA, USA ONLY

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

Kenwood Corporation
2967-3, ISHIKAWA-MACHI,
HACHIOJI-SHI
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT
CONFORMS TO DHHS REGULATIONS NO.21 CFR
1040. 10, CHAPTER 1, SUBCHAPTER J.

Location : Top Panel



This symbol mark indicates that Kenwood manufactured this product so as to decrease harmful influence on the environment.

KENWOOD