



Keep these instructions for future reference: they contain important information.

**IMPORTANT: Please read all "Consumer Information" before operating your vehicle.**

**CAUTION:  
ELECTRICALLY OPERATED PRODUCT**

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**ADULT SUPERVISION REQUIRED.**

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

**Consumer Information:**

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

**CONTENTS**

- Vehicle
- Transmitter Contoller
- Antenna for Transmitter Contoller
- 7.2V 1800mAh Ni-Cd Battery Pack**
- Charger for 7.2V Ni-Cd Battery Pack (120V AC 60Hz)**
- 6 X "AA" Batteries (already installed in the controller unit)
- Audio cable (For connecting audio device)

Caution: Components to be unpacking have small parts (or sharp point); Keep the packing components out of the reach of children until unpacking is complete.

The "AA" batteries prior installed in the controller are intended for demonstration. Recommend to replace fresh batteries before use.

**Before use**

Please remove the "try me" cable from the controller and the vehicle. (see diagram 1)

**Safety Tips**

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Avoid collisions with wall or hard surfaces.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Battery charger used with the toy to be regularly examined for damage to cord plug enclosure and other parts: and in the event of such damage. Toy must not be used with the battery charger until such damage has been repaired.
- For transformer toys and toys with battery boxes: toy is not to be connected to more than recommended number of power supplies.

- Do not collides with humans or any animals, to avoid accident happen.
- Recommended rechargeable battery 7.2V 1800mAh Ni-Cd.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operation.

**BEFORE BATTERY INSTALLATION**

Your new R/C is designed to work with standard R/C 7.2V 1800mAh Ni-Cd batteries and charger. Controller is designed to work with 6 (six) "AA" batteries.

For detailed information regarding Ni-Cd battery charging and safety, please follow the specific instructions that came with your battery pack and charger.

**BATTERY CHARGING:**

(When using 7.2V 1800mAh Ni-Cd Battery Pack)

**\*\*RECHARGEABLE BATTERIES ARE TO BE CHARGED BY ADULT ONLY\*\***

(The rechargeable Ni-Cd battery pack is not charged, please charge battery for 4 (four) hours prior to use)

1. Plug the wall pack battery charger into wall outlet.
2. Connect the cables leading from the Battery Pack and the charger together by snapping the jack and the socket tightly. (See diagram 2)
3. To disconnect cables, press down on the clip and pull apart. (See diagram 2)
4. After charging for 4 (four) hours, the battery will be warm. This condition is normal for fully charged batteries. DO NOT overcharge the battery.
5. After use, the battery pack will be hot!!! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

**INSTALLING BATTERIES IN THE R/C**

7.2V 1800mAh Ni-Cd

1. Push the ON/OFF switch to "OFF" position on vehicle.
2. Carefully lay the vehicle on its side and locate the battery compartment which is on the bottom of the vehicle chassis. (See diagram 3)
3. Rotate the battery compartment lock so it is in unlock position. Remove battery compartment door.
4. Plug the battery pack into the cable by snapping the socket lightly.
5. Replace the battery compartment door and rotate the battery compartment locking device to lock the compartment door.

**INSTALLING CONTROLLER - 6 X "AA" BATTERIES**

1. PUST THE ON/OFF switch to "OFF" position at the back of the controller. (See diagram 4)
2. To install batteries, use a Philips screwdriver (not included) to open the battery cover at the back of the controller.
3. Install 6pcs "AA" batteries with polarity (+/-) as shown inside the battery compartment.
4. Close the battery cover.

**FUNCTION DESCRIPTION**

**Multi Channel operations Tips:**

- Your vehicle features the advanced Jada Toys, Multi channel system. This system lets you race your vehicles head to head against up to two of your friends (up to 3 drivers total) without any radio interference from your friends' transmitters or vehicles. You must play with another multi channel racer equipped vehicle for this feature to work.

- There's one Multi channel selector switch on your vehicle chassis, and another one on your transmitter. The vehicle switch has 3 positions: One for each Multi Channel setting. (see diagram 3)



The transmitter switch has 3 positions: One for each Multi Channel setting. (see the diagram 5)



 
- For successful operations, the vehicle switch and the transmitter switch must be set to the same Multi Channel setting. When you're driving by yourself, you can set the switches to any of he Multi Channel settings (as long as they match).
- When you want to play head to head, just make sure that each driver (up to 3 driver's total) has a vehicle and transmitter set to a different Multi Channel setting.
- To operate our vehicle, just turn the vehicle ON; then set the transmitter switch to the desired Multi Channel setting. Push any transmitter control and you will be able to play and control your vehicle.
- You must be playing against another Jada Toys Multi Channel - equipped vehicle, running on the same frequency as your vehicle, may interfere with operation of your vehicle. If you are playing against a non - Multi Channel vehicles, make sure that vehicle operates on a frequency different from yours.
- If you need to change the Multi Channel setting, first make sure that your vehicle is turned OFF. Change the switch position as desired, making sure to change both the transmitter and the vehicle switches. Then turn your vehicle back ON for more playing action. Note: Make certain you're not pressing a transmitter control while changing selector switch position.

**Try me mode**

- Press "security alert button" for alternate "alert" and "engine start-up" sound;
- Press "Horn sound button" for horn sound;
- Press "play hip-hop music button" for hip-hop music.



**Normal play mode**

- Insert correct batteries;
- Turn on the controller and the vehicle;
- Press "security alert button" to activate the vehicle, will have "engine start-up" sound, press this button again to lock the vehicle, an "alert" sound will come, all the functions will be boarded. Press the same button to re-activate the vehicle. (See diagram 5)
- Press "play hip-hop music button" for hip-hop music;
- Press "Horn sound button" for horn sound;
- Use the provided cable to connect audio device (MP3) to the vehicle body to play music. Engine sound will be boarded with the cable plugged. (See diagram 6)

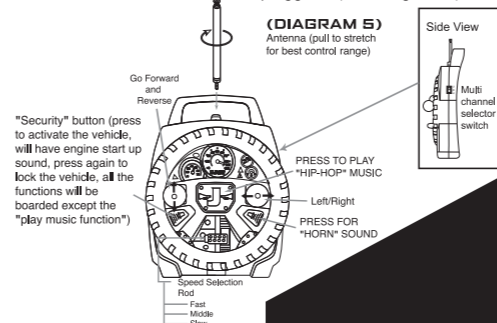


**(DIAGRAM 1)**

  Simply pull out to remove this "try me" cables from the controller and the vehicle.

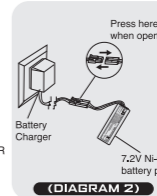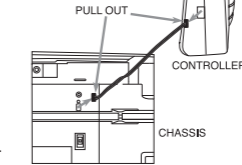


**(DIAGRAM 3)**

 ON/OFF switch (push to off before installing battery)

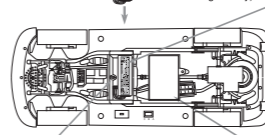

**(DIAGRAM 4)**

 On/off switch, push to "off" before installing batteries.

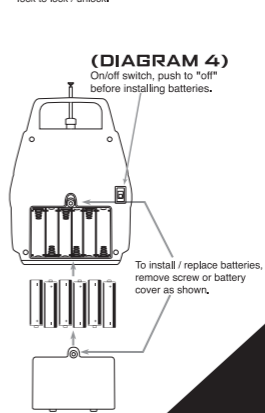

Connect the audio device, plug-in to play music note.  
1. The vehicle will still play music even when the vehicle is locked by the "security" button.  
2. When audio cable is plugged in, the engine sound will be boarded.



©2005 Jada Toys, Inc.  
City of Industry, CA 91748 USA  
DUB CITY® and R/C ROLLERS™ are trademarks of Jada Toys, Inc.  
All Rights Reserved.

903834S-US01