 


## TROUBLE SHOOTING

PROBLEM	SOLUTION																				
Car will not START	<p>1. Power switch is off. Turn on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Charge batteries and/or install new batteries. 4. Check Multi Channel Selector switches and change switch position of needed. (Multi Channel settings must match.)</p> <p><b>Correct Channel selection</b></p> <table style="margin-left: 40px;"> <tr> <td>Transmitter Channel (A)</td> <td>↔</td> <td>Vehicle Channel (A)</td> <td>✓</td> </tr> <tr> <td>Transmitter Channel (B)</td> <td>↔</td> <td>Vehicle Channel (B)</td> <td>✓</td> </tr> <tr> <td>Transmitter Channel (C)</td> <td>↔</td> <td>Vehicle Channel (C)</td> <td>✓</td> </tr> <tr> <td>Transmitter Channel (D)</td> <td>↔</td> <td>Vehicle Channel (D)</td> <td>✓</td> </tr> </table> <p><b>Example for wrong Channel selection</b></p> <table style="margin-left: 40px;"> <tr> <td>Transmitter Channel (A)</td> <td>↔</td> <td>Vehicle Channel (B)</td> <td>X</td> </tr> </table>	Transmitter Channel (A)	↔	Vehicle Channel (A)	✓	Transmitter Channel (B)	↔	Vehicle Channel (B)	✓	Transmitter Channel (C)	↔	Vehicle Channel (C)	✓	Transmitter Channel (D)	↔	Vehicle Channel (D)	✓	Transmitter Channel (A)	↔	Vehicle Channel (B)	X
Transmitter Channel (A)	↔	Vehicle Channel (A)	✓																		
Transmitter Channel (B)	↔	Vehicle Channel (B)	✓																		
Transmitter Channel (C)	↔	Vehicle Channel (C)	✓																		
Transmitter Channel (D)	↔	Vehicle Channel (D)	✓																		
Transmitter Channel (A)	↔	Vehicle Channel (B)	X																		
Car does not respond to controls.	<p>1. Transmitter controller battery is drained. Replace the 9V controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.</p>																				
Car does not drive straight.	<p>1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.</p>																				

**WWW.JADATOYS.COM**

# Important! Problems?

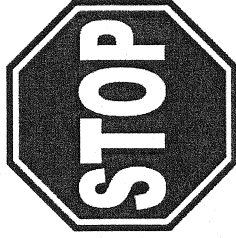

Before taking your new R/C back to the retailer, call our friendly R/C technicians at:  
**1-800-679-5232**  
between the hours of 9 am to 5 pm Pacific Time.

In California: (626) 810-8382  
**WWW.JADATOYS.COM**

Questions or problems with your vehicle?

**DO NOT RETURN IT TO THE STORE!**

U.S.A. & Canada  
60-Day Limited Warranty  
Jada Toys R/C Products

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for sixty (60) days from the date of purchase. Jada Toys will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage pre-paid and insured, to the address below.

 
Enclose your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair or replacement, and return shipment, will be free of charge. Please return on the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)

Hours: 9:00 A.M. – 5:00 P.M. Pacific Time; Monday – Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number.

Address for Returns:  
Consumer Relations, Jada Toys, Inc.  
938 Hatcher Ave.  
City of Industry, CA 91748



# BIG TIME™

## M U S C L E™

### R/C RADIO CONTROL

Keep these instructions for future reference: they contain important information.

**IMPORTANT:** Please read all "Consumer Information" before operating your vehicle.

#### Consumer Information:

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

#### CONTENTS

- Vehicle
- Transmitter Controller
- Antenna for Transmitter Controller

**Caution:** Components to be unpacking have small parts (or sharp point); Keep the packing components out of the reach of children until unpacking is complete.

#### Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

#### BEFORE BATTERY INSTALLATION

Your new R/C is designed to work with standard 3 (three) "AAA" alkaline batteries, sold separately.

#### INSTALLING BATTERIES IN THE R/C

1. (three) "AAA" Alkaline batteries (Not included)
1. Push the ON/OFF to "OFF" position on vehicle.
2. Using a Philips screwdriver (not included), to remove the battery compartment door underneath the vehicle. (see Diagram 3)
3. Insert the 3 (three) "AAA" alkaline, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door and use Phillips screwdriver to lock the compartment door.

#### INSTALLING CONTROLLER – 9 VOLT BATTERY

1. (one) 9V Alkaline battery (Not included)
1. Open the battery cover as shown (See Diagram 4)
2. Install one 9V battery with polarity (+/-) as shown inside battery compartment.
3. Replace battery cover.

#### Multi Channel operations Tips:

- Your vehicle features the advanced Jada Toys, Multi channel system. This system lets you race your vehicles head to head against up to three of your friends (up to 4 drivers total) without any radio interference from your friends' transmitters or vehicles. You must play with another multi channel racer equipped vehicle for this feature to work.
- There's one Multi channel selector switch on your vehicle chassis, and another one on your transmitter. The vehicle switch has 4 positions: One for each Multi Channel setting. (see diagram 1)



The transmitter switch has 4 positions: One for each Multi Channel setting. (see diagram 2)



- For successful operations, the vehicle switch and the transmitter switch must be set to the same Multi channel setting. When you're driving by yourself, you can set the switches to any of the Multi channel settings (as long as they match).
- When you want to play head to head, just make sure that each driver (up to 4 driver's total) has a vehicle and transmitter set to a different Multi Channel setting.

- To operate your vehicle, just turn the vehicle ON; then set the transmitter switch to the desired Multi Channel setting. Push any transmitter control and you will be able to play and control your vehicle.

- You must be playing against another Jada Toys Multi Channel – equipped vehicle, running on the same frequency as your vehicle, may interfere with operation of your vehicle. If you are playing against a non – Multi Channel vehicles, make sure that vehicle operates on a frequency different from yours.
- If you need to change the Multi Channel setting, first make sure that your vehicle is turned OFF. Change the switch position as desired, making sure to change both the transmitter and the vehicle switches. Then turn your vehicle back ON for more playing action. Note: Make certain you're not pressing a transmitter control while changing selector switch position.

#### Battery Safety Information

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Dispose of batteries safely. Do not dispose of batteries in fire, (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.

#### Battery Performance Note:

- When using alkaline batteries, battery life may vary depending on battery brand.

#### OPERATIONS TIPS:

Locate the transmitter antenna mount on the top of the transmitter. Insert the antenna into the mount opening and rotate in a clockwise direction until snug.

Car: ON / OFF switch located on the bottom of the car.

Transmitter: ON / OFF switch located on the front of the transmitter.

When you ready to run, please make sure push the ON / OFF switches to "ON" position on both. Go to get fun.

#### QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings; or CB radios. Try to stay away from these!
- Point your transmitter controller; antenna up – not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- The maximum range for the vehicle should be between 20 to 30 feet (7 to 10 meters when operating outdoor).
- Don't drive your vehicle in sand or through water or snow.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

 
**COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
2. THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.


This device generates and used radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

#### FCC Warning:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such change or modifications could void the User's authority to operate the equipment.

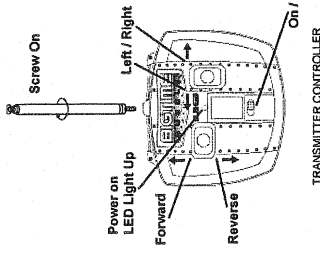

(DIAGRAM 5)  
TO REPLACE BATTERIES  
REMOVE SCREW ON BATTERY  
COVER AS SHOWN  
ILLUSTRATION AND  
REPLACE BATTERIES

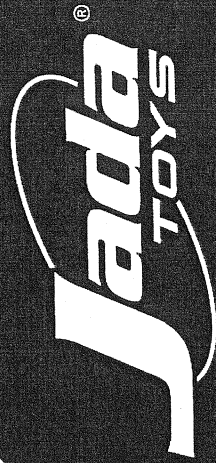 

©2005 Jada Toys, Inc.  
City of Industry, CA 91748 USA  
CHUB CITY™ is a trademark of Jada Toys, Inc.  
All Rights Reserved.