Date: 2 Mag Prepared By: Ming	Scale: Material Code:	Description:		1	1
2 May 2013 Ming	7" F84172-0000-ISH-EN01A	RC Instruction Sheet		ada.	
	Remarks:	Approved QA Engineer	Ant Dept Approved Engineer	(Hc	
				(Hong Kong Office use only) Signature Date of ap	Output
	Ī	Ī		e use only) Date of approval	Approva



MICKEY'S ROADSTER RADIO CONTROL CAR

mportant information. (eep these instructions for future reference: they contain

Information" before operating your vehicle. IMPORTANT: Please read all "Consumer

Do not operate vehicle through water or snow. Surfaces may become hot and cause burns if electronics get wet.

CONTENTS

with your child.

- Transmitter Controller x 1

Safety Tips

- Avoid collisions with wall or hard surfaces.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- To avoid accidental operation, remove all batteries when not in use.
- Please avoid unintended play with electric wire (soft antenna) as it may defect product or result in strangulation.

BEFORE BATTERY INSTALLATION

Your new R/C is designed to work with standard 3 (three) "AA" Controller is designed to work with standard 2 (two) "AAA" alkaline alkaline batteries, sold separately. atteries, sold separately.

INSTALLING BATTERIES IN THE R/C (Diagram 1)

- 3 (three) "AA" alkaline batteries (Not included) Push the ON/OFF to "OFF" position on vehicle.
- Remove battery cover (Use a screwdriver to remove screw - Not Included) and unclip.
- Insert the 3 "AA" alkaline batteries, with polarity (+/-) Remove the used batteries (if any).
- as snown inside pattery compartment.
- 5. Snap the battery compartment door back into place and

dry battery compartment.

replace screw


ADULT SUPERVISION REQUIRED. and fun, please review all operating instructions and safety rules Note to Adults: to ensure that the child's play is both safe Consumer Information: Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operation. NEVER drive your vehicle on streets! They're for real cars! DO NOT pick up vehicle while in motion. Adult supervision is recommended when this vehicle is being Battery Safety Information 2 (two) "AAA" alkaline batteries (Not included) INSTALLING BATTERIES IN THE CONTROLLER (Diagram 2) Do not recharge non-rechargeable batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable Dispose of batteries safely. Do not dispose of batteries (or Do not short-circuit terminals. Do not mix old and new batteries. Use only batteries of the type recommended (or equivalent). Insure that battery polarity is correct. possible leakage. vehicle will not be used for a long period of time to prevent Remove used-up batteries immediately. Remove batteries if (nickel-cadmium) batteries. batteries may explode or leak. products containing non-replaceable batteries) in fire, as Snap the battery compartment door back into place and Insert the 2 "AAA" alkaline batteries, with polarity (+/-) as Remove the used batteries (if any). Remove battery cover (Use a screwdriver to remove lebiace sciew shown inside battery compartment. screw - Not Included) and unclip.

QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or vehicle's running time may change depending on your driving performance. It's time for fresh batteries (or a recharge). Your
- Radio interference can make your vehicle run badly. Interference stay away from these! frequency; electrical wires, large buildings; or CB radios. Try to can be caused by other R/C vehicles running on the same
- Point your transmitter controller antenna up not down toward your vehicle. If your vehicle gets too far away, it won't work
- Don't store your vehicle near heat or in direct sunlight. Don't drive your vehicle in sand or through water or snow.
- Always turn switches OFF and remove all batteries for storage If the vehicle resets automatically, the batteries are weak and need to be changed.

Let the toy completely dry up before putting batteries back into clean. clean with wet cloth using plain water. Wipe dry. DO NOT IMMERSE IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy Cleaning instruction:

To install batteries, remove battery cover (Use a screwdriver to remove screw - Not Included) and unclip. Insert new batteries as shown. **BOTTOM OF VEHICLE** DIAGRAM 1 3 x AA alkaline battery (Not Included) -H 0 FRONT REAR

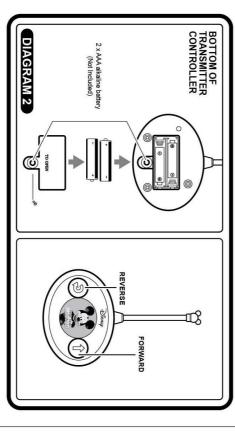



We reserve the right to improve or amend color product content specifications. Colors may vary.

Jada oval mark is a registered trademark of Jada Toys, Inc.

Not for children under 3 years. CHOKING HAZARD - Small parts. ©Disney Visit DisneyJunior.com WARNING:

F84172-0000-ISH-EN01A

ared By: Ming QA Enginee Approved Engineer Approved Final Output Approval (Hong Kong Office use only) Date of approval

TROUBLE SHOOTING

PROBLEM	SOLUTION
Car will not START	Power switch is off. Turn on. Batteries are installed with incorrect polarities. Check the and - markings to make sure the batteries are properly aligned. Batteries are crained. Charge batteries and/or install new batteries.
Car does not respond to controls.	Transmitter controller battery is drained. Replace 2 (two) "AAA" alkaline batteries on controller. Vehicle is out of range. Bring controller closer to the vehicle. Interference from surrounding electrical machinary. Bring to a wide open space.
Car does not move	Release the trigger immediately, and rest your car for a few minutes.

WWW.JADATOYS.COM

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. NOTE: This equipment has been tested and found to ONLY) THIS DEVICE COMPLIES WITH PART 15 OF THE comply with the limits for a Class B digital device, pursuant for RCR RULES. OPERATION IS SUBJECT TO THE to Part 15 of the FCC Rules. These limits are designed to FOLLOWING TWO CONDITIONS:

- 1. THIS DEVICE MAY NOT CAUSE
- 2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference. This device generates and uses radio frequency energy

FCC Warning:

CAUTION:

equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. interference caused by unauthorized modifications to this The manufacturer is not responsible for any radio or TV

> more of the following measures: and used in accordance with the instructions, may cause harmful interference to radio communications. However, interference to radio or television reception, which can be there is no guarantee that interference will not occur in a provide reasonable protection against harmful interference

- Increase the separation between the equipment and

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or particular installation. If this equipment does cause harmful and can radiate radio frequency energy and, if not installed in a residential installation. This equipment generates, uses

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be Jaded Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for thirty (30) days from the date of purchase. Jada Toys, will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

Enclose your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair or replacement, and return shipment, will be free of charge. Please return the defective part or unit, packed securely. This varrenty does not cover damage resulting from unauthorized modification, accident, nisuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty. solved in this manner. If necessary, you will be instructed to return the product (postage pre-paid and insured by the consumer) to the address below.

at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. Valid only in U.S.A. and Canada. This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you. Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement

Hours: 9:00 A.M. – 5:00 P.M. Pacific Time; Monday – Friday. Expect some delay in January following the holiday season Please be patient and keep trying the toll-free number. TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)

Consumer Relations, Jada Toys, Inc 938 Hatcher Ave. City of Industry, CA 91748, USA Address for Returns:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

mportant! **Problems?**



DO NOT RETURN IT TO THE STORE!

First, call our friendly technicians at:

1-800-679-5232

between the hours of 9 am to 5 pm Pacific Time; Monday - Friday, or check our website

WWW.JADATOYS.COM

U.S.A & Canada

30-Day Limited Warranty Jada Toys R/C Products