



Keep these instructions for future reference: they contain important information.

IMPORTANT: Please read all "Consumer Information" before operating your vehicle.

CAUTION:

ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

ADULT SUPERVISION REQUIRED.

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

Consumer Information:

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

Safety Tips

- · NEVER drive your vehicle on streets! They're for real cars!
- · DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Battery charger used with the toy to be regularly examined for damage to cord plug enclosure and other parts: and in the event of such damage. Toy must not be used with the battery charger until such damage has been repaired.
- For transformer toys and toys with battery boxes: toy is not to be connected to more than recommended number of power supplies.
- Recommended rechargeable battery 9.6V 700mAH Ni-Cd.

Battery Safety Information

- · Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
- · Do not recharge non-rechargeable batteries.
- · Do not short-circuit terminals.
- · Remove rechargeable batteries before recharging.
- · Rechargeable battery must be charged by adult only.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- · Do not disassemble the battery pack.
- Battery pack can be charged for much longer periods without harm. However, we recommend unplugging the battery pack if battery pack will not be used for several days.

Battery Performance Note:

 When using alkaline batteries, battery life may vary depending on battery brand.

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- 2. THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

CONTENTS

Vehicle

Transmitter Controller

Antenna for Transmitter Controller

9.6V Ni-Cd Battery Pack

Charger for 9.6V Ni-Cd Battery Pack (120V AC 60Hz)

BEFORE BATTERY INSTALLATION

Your new R/C is designed to work with standard R/C 9.6-volt Ni-Cd batteries and charger.

Controller is designed to work with a 9-volt alkaline battery.


For detailed information regarding Ni-Cd battery charging and safety, please follow the specific instructions that came with your battery pack and charger.

BATTERY CHARGING:


(When using 9.6V Ni-Cd Battery Pack)

RECHARGEABLE BATTERIÉS ARÉ TO BE CHARGED BY ADULT ONLY


(The rechargeable Ni-Cd battery pack is not charged, please

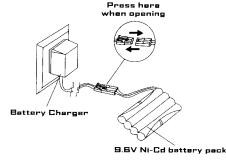

(DIAGRAM I)

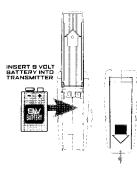

(DIAGRAM 3)

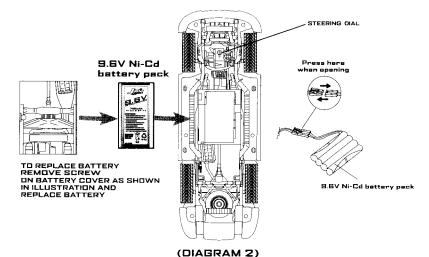

(BIABICAIN

1. Plug the wall pack battery charger into wall outlet.

charge battery for 4 (four) hours prior to use)

- Connect the cables leading from the Battery Pack and the charger together by snapping the jack and the socket tightly. (See diagram 1)
- To disconnect cables, press down on the clip and pull apart. (See diagram 1)
- After charging for 4 (four) hours, the battery will be warm. This condition is normal for fully charged batteries.
- 5. After use, the battery pack will be hot!!! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

INSTALLING BATTERIES IN THE R/C 9.6V Ni-Cd

- 1. Push the ON/OFF to "OFF" position on vehicle.
- To install the 9.6V Ni-Cd battery, use a Phillips screwdriver (not included), to remove the battery compartment door underneath the vehicle. (See diagram 2)
- 3. Remove the battery compartment door.



©2004 Jada Toys, Inc. City of Industry, CA 91748 USA DUB CITY® and R/C ROLLER\$™ are trademarks of Jada Toys, Inc. All Rights Reserved.

- 4. Plug the battery pack into the cable by snapping the jack and socket lightly.
- Replace the battery compartment door and use Phillips screwdriver to lock the compartment door.

INSTALLING CONTROLLER – 9 VOLT BATTERY

- 1. Open the battery cover as shown (See Diagram 3)
- Install one 9V battery with polarity (+/-) as shown inside battery compartment.
- 3. Replace battery cover

QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries (or a recharge). Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run badly.
 Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings; or CB radios. Try to stay away from these!
- Point your transmitter controller antenna up not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't drive your vehicle in sand or through water or snow.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

TROUBLE SHOOTING

PROBLEM	SOLUTION
Car will not START	 Power switch is off. Turn on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Charge batteries and/or install new batteries.
Car does not respond to controls.	Transmitter controller battery is drained. Replace the 9V controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinary. Bring to a wide open space.
Car does not drive straight.	Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.

WWW.JADATOYEGOM

Important! Problems?



Before taking your new R/C back to the retailer, call our friendly R/C technicians at:

1-800-679-5232

between the hours of 9 am to 5 pm Pacific Time.

MDD.ZYDTADAL.WWW

Questions or problems with your vehicle?

DO NOT RETURN IT TO THE STORE!

U.S.A & Canada 60-Day Limited Warranty Jada Toys R/C Products

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for sixty (60) days from the date of purchase. Jada Toys will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage pre-paid and insured, to the address below.

Enclose your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect.

Repair or replacement, and return shipment, will be free of charge. Please return on the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. Valid only in U.S.A. and Canada. This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)

Hours: 9:00 A.M. – 5:00 P.M. Pacific Time; Monday – Friday. Expect some delay in January following the holiday season.

Please be patient and keep trying the toll-free number.

Address for Returns: Consumer Relations, Jada Toys, Inc 938 Hatcher Ave. City of Industry, CA 91748