 


# Important! Problems?

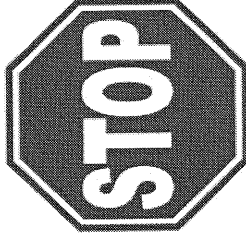

Before taking your new R/C back to the retailer, call our friendly R/C technicians at:  
**1-800-679-5232**  
between the hours of 9 am to 5 pm Pacific Time; Monday - Friday.

**WWW.JADATOYS.COM**

Questions or problems with your vehicle?

**DO NOT RETURN IT TO THE STORE!**

U.S.A & Canada  
60-Day Limited Warranty  
Jada Toys R/C Products

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for sixty (60) days from the date of purchase. Jada Toys will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage pre-paid and insured, to the address below. Enclose your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect.

Repair or replacement, and return shipment, will be free of charge. Please return on the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)  
Hours: 9:00 A.M. - 5:00 P.M. Pacific Time, Monday - Friday. Expect some delay in January following the holiday season.  
Please be patient and keep trying the toll-free number.

Address for Returns:  
Consumer Relations, Jada Toys, Inc  
938 Hatcher Ave.  
City of Industry, CA 91748

## Cleaning Instruction:

To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy clean with wet cloth using plain water. Wipe dry. DO NOT IMMERSE IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry up before putting batteries back into clean, dry battery compartment.

## COMPLIANCE WITH FCC REGULATIONS

(VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
2. THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

## FCC Warning:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such change or modifications could void the User's authority to operate the equipment.

- ### Battery Safety Information
- Insure that battery polarity is correct.
  - Use only batteries of the type recommended (or equivalent).
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
  - Do not recharge non-rechargeable batteries.
  - Do not short-circuit terminals.
  - Remove rechargeable batteries before recharging.
  - Rechargeable battery must be charged by adult only.
  - Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
  - Do not disassemble the battery pack.
  - Do Not overcharge the battery. Use only the charger provided. Do Not use other chargers to charge battery. Like any other rechargeable battery, explosion may occur, if improperly charged.

 
### QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries (or a recharge). Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings, or CB radios. Try to stay away from these!
- Point your transmitter controller antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't drive your vehicle in sand or through water or snow.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

## TROUBLE SHOOTING

PROBLEM	SOLUTION
Car will not START	1. Power switch is off. Turn on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Charge batteries and/or install new batteries.
Car does not respond to controls.	1. Transmitter controller battery is drained. Replace the 9V controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.
Car does not drive straight.	1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.
Car does not move	1. Release the trigger immediately, and rest your car for few minutes.

**WWW.JADATOYS.COM**

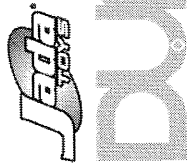

**R/C ROLLERS™**  
A JADA COMPANY

Keep these instructions for future reference; they contain important information.

**IMPORTANT:** Please read all "Consumer Information" before operating your vehicle.

**CAUTION:**  
**ELECTRICALLY OPERATED PRODUCT**

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**ADULT SUPERVISION REQUIRED.**

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

**Consumer Information:**

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

**CONTENTS**

- Vehicle
- Transmitter Controller
- Antenna for Transmitter Controller
- 9.6V Ni-MH Battery Pack
- Charger for 9.6V Ni-MH Battery Pack (120V AC 60Hz)
- 6 X "AA" Batteries (already installed in the controller unit)
- Audio cable (For connecting audio device)

**Caution:** Components to be unpacking have small parts (or sharp points). Keep the packing components out of the reach of children until unpacking is complete.

The "AA" batteries prior installed in the controller are intended for demonstration. Recommend to replace fresh batteries before use.

**Before use**

Please remove the "try me" cable from the controller and the vehicle. (see diagram 1)

**Safety Tips**

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Avoid collisions with wall or hard surfaces.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Battery charger used with the toy to be regularly examined for damage to cord plug enclosure and other parts; and in the event of such damage, Toy must not be used with the battery charger until such damage has been repaired.

- For transformer toys and toys with battery boxes: toy is not to be connected to more than recommended number of power supplies. Do not collide with humans or any animal.
- To avoid accident happen.
- Recommended rechargeable battery 9.6V 1200mAh Ni-MH.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operation.

**BEFORE BATTERY INSTALLATION**

Your new R/C is designed to work with standard R/C 9.6-volt Ni-MH batteries and charger. Controller is designed to work with 6 (six) "AA" batteries.

For detailed information regarding Ni-MH battery charging and safety, please follow the specific instructions that came with your battery pack and charger.

**BATTERY CHARGING:**

(When using 9.6V Ni-MH Battery Pack)  
**\*\*RECHARGEABLE BATTERIES ARE TO BE CHARGED BY ADULT ONLY\*\***

(The rechargeable Ni-MH battery pack is not charged, please charge battery for more than 4 (four) hours prior to use)

1. Plug in the wall pack battery charger into wall outlet.
  2. Plug in the battery pack with the correct direction shown in (see diagram 2) until a "click" sound appear.
  3. A light-up red LED indicates that the battery pack is placed correctly and under charging. Make sure that the Plus (+) Minus (-) marking on the Battery Pack match the markings on the charging cradle.
  4. After charging for more than 4 (four) hours, the battery will be warm. This condition is normal for fully charged batteries. DO NOT overcharge the battery.
  5. Push to release the battery from the charger (see diagram 2)
  6. After use, the battery pack will be hot!!! Wait at least 20 minutes until the battery cools before recharging.
- Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

**INSTALLING BATTERIES IN THE R/C**

- 9.6V Ni-MH
1. Push the ON/OFF switch to "OFF" position on vehicle.
  2. Carefully lay the vehicle on its side and locate the battery compartment which is on the bottom of the vehicle chassis. (see diagram 3)
  3. Rotate the battery compartment lock so it is in the "open" position. Remove battery compartment cover.
  4. Take a moment to examine the battery pack. You will notice that it has "L" shaped notches on the back part of each side. These notches lock into identical notches in the battery compartment. You will also notice two metal contacts on one end. When the battery pack is properly installed into the battery compartment these metal contacts will touch two metal contacts in the battery compartment.
  5. Insert the fully charged 9.6V Ni-MH battery pack into the battery compartment so that the battery pack "L" shaped notches will lock into the compartment.

**INSTALLING CONTROLLER - 6 X "AA" BATTERIES**

 
 
 
 
 
 
 
 
1. Push the ON/OFF switch to "OFF" position at the back

2. To install batteries, use a Phillips screwdriver (not included) to open the battery cover at the back of the controller.
3. Install 6pcs "AA" batteries with polarity (+/-) as shown inside the battery compartment.
4. Close the battery cover.

**FUNCTION DESCRIPTION**

**Try me mode**

- Press "security alert button" for alternate "alert" and "engine start-up" sound;
  - Press "Horn sound button" for horn sound;
  - Press "play hip-hop music button" for hip-hop music.
- Normal play mode**
- Insert correct batteries;
  - Turn on the controller and the vehicle;
  - Press "security alert button" to activate the vehicle, will have "engine start-up" sound, press this button again to lock the vehicle, an "alert" sound will come, all the functions will be boarded. Press the same button to re-activate the vehicle. (see diagram 5)
  - Press "play hip-hop music button" for hip-hop music;
  - Press "Horn sound button" for horn sound;
  - Use the provided cable to connect audio device (MP3, CD) to the vehicle body to play music. Engine sound will be boarded with the cable plugged. (see diagram 6)

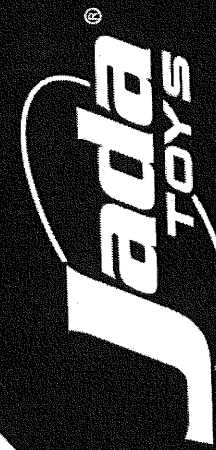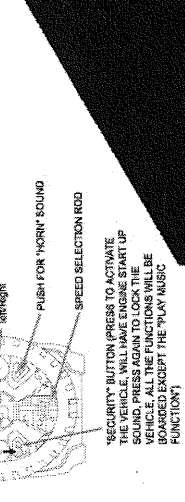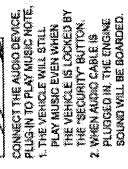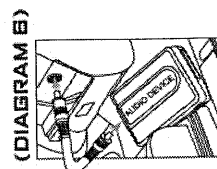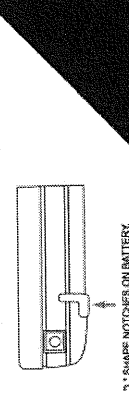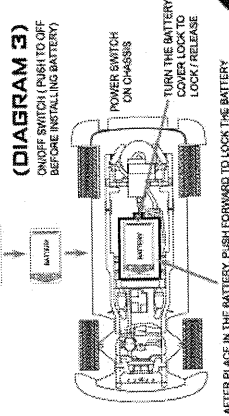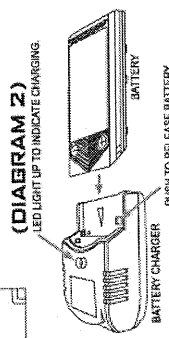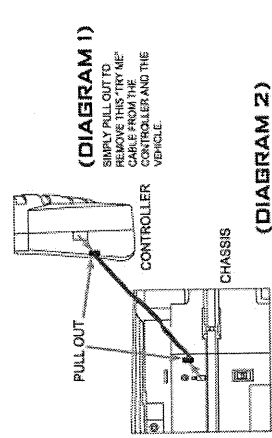

©2005 Jada Toys, Inc.  
City of Industry, CA 91748 USA  
DUB CITY® and R/C ROLLERS™ are trademarks of Jada Toys, Inc.  
All Rights Reserved.