

210mm




5+ **CAUTION:**  
 ADULT SUPERVISION REQUIRED  
 ALWAYS PLAY IN SAFE SURROUNDINGS,  
 AWAY FROM STREETS OR MOVING VEHICLES.

# MXS® REMOTE CONTROL SUPER STUNT BIKE


## INSTRUCTIONS

### CONTENTS

(1) MXS® RC STUNT BIKE AND RIDER (97036RX)

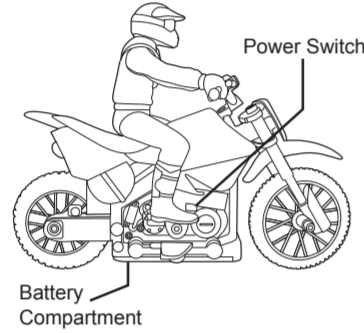

(1) TRANSMITTER (97036TX)

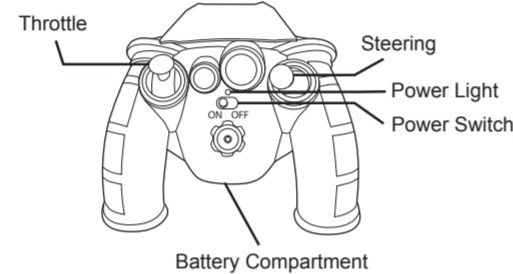


## BATTERY INSTALLATION Adult Installation Required


### STUNT BIKE

Requires 4 AA (LR6) alkaline batteries (not included).


1. Locate Battery Compartment on the underside of the Stunt Bike. Using a Phillips Head screwdriver, remove the screw and lift away the Battery Cover.

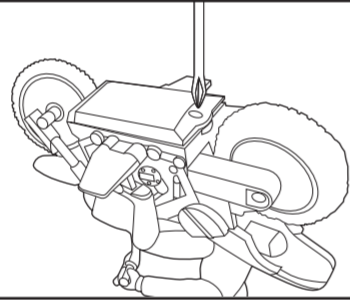


2. If replacing batteries, remove old batteries before pulling out the Battery Hub.

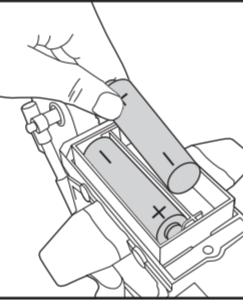


3. Holding onto the center wall, remove the Battery Hub.

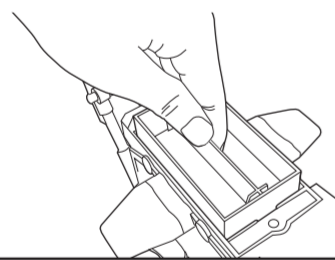

4. Install fresh batteries into the Battery Hub, making sure they are aligned as shown.

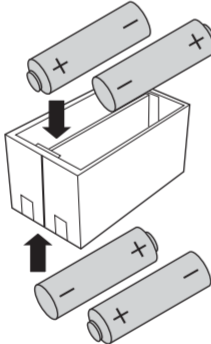


5. Replace the Battery Hub with its contacts facing the front wheel of the Stunt Bike. Replace the Battery Cover and the screw.

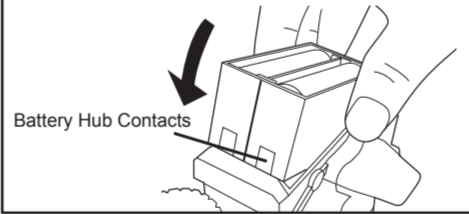

### TRANSMITTER

Requires 2 AA (LR6) alkaline battery (not included)


1. Locate Battery Compartment on the bottom of the Transmitter.

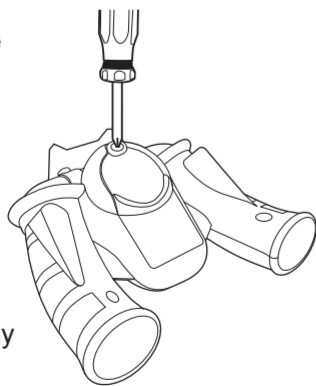

2. Using a Phillips Head screwdriver, remove the screw and lift away the Battery Cover.

3. Install the battery, as shown.

4. Replace the Battery Cover and the screw.

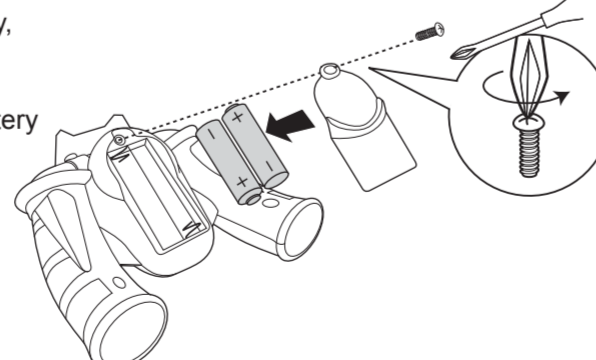

### Important Safety Information

- NEVER drive near traffic, buildings, trees, people, animals or other obstructions.
- NEVER operate during weather storms of other adverse weather conditions.
- NEVER touch the rear wheel or pick up Stunt Bike while it is in motion.
- ALWAYS point away from face, eyes, people, animals and property while driving.
- ALWAYS keep fingers, hair and eyes away from Stunt Bike's wheels while it is in the "ON" position.
- ALWAYS use alkaline batteries only.


297mm

210mm


## USING YOUR MXS® REMOTE CONTROL SUPER STUNT BIKE

1. Turn the Transmitter power switch to the "ON" position.
2. Turn the power switch located on the right front side of the Stunt Bike to the "ON" position.
3. When the Stunt Bike and Transmitter are turned on, the power light on the Transmitter will flash to sync with the Stunt Bike. When the power light stops flashing and turn off, the sync is complete.
4. When you push buttons, the power light will turn on.

### HOW TO DRIVE

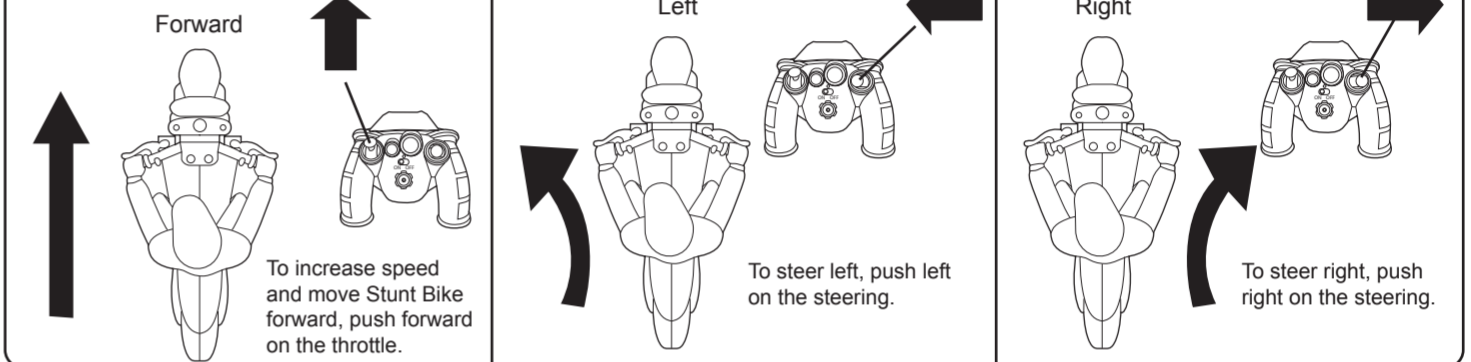


### DRIVING FORWARD

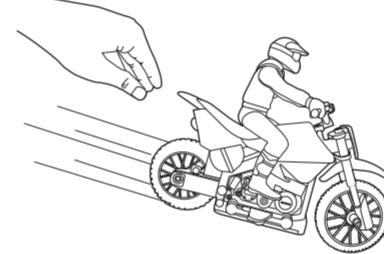

1. Hold the seat of the Stunt Bike and give the Transmitter forward throttle.
  2. As the rear wheel speeds up, place the Stunt Bike on the ground and give it a gentle push forward.
- Note: Works on the rough surface. When performance diminishes, replace with fresh batteries.

### STARTING FROM A LEANING POSITION

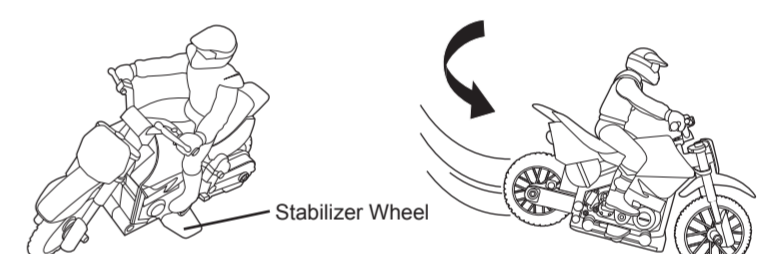

1. If the Stunt Bike stalls or slows down enough to lean on one of the stabilizer wheels, increase the throttle, and it will drive toward the direction it is leaning.
2. As it drives in circles, steer the Stunt Bike in the opposite direction of the circle to go straight again.

### ADDITIONAL INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### BATTERY SAFETY INFORMATION

**WARNING!** Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. Leaking batteries may make "popping" sounds. Dispose according to Local, State or Federal Batteries Laws.

### REQUIRED BATTERIES:

- RC Stunt Bike: 4 "AA (LR6)" Alkaline batteries
- Transmitter: 2 "AA (LR6)" Alkaline battery

TM & © 2016 MANUFACTURED BY JAKKS PACIFIC, INC., 2951 28TH STREET, SANTA MONICA, CA 90405 U.S.A. MADE IN CHINA.

Contents may vary in style, color, shape and decoration from images shown on package or in advertising. Questions or comments? www.jakks.com, consumers@jakks.com, or 1-877-875-2557 in North America. Retain packaging since it contains important information. ATTENTION! Remove and discard packaging ties and fasteners before giving toy to child.

97036-R1

### JAKKS Pacific® Battery, Solar or Electrically-Operated Product 90 DAY LIMITED WARRANTY

Thanks for purchasing a great JAKKS Pacific® product! Please immediately register your product online at www.jakks.com/warranty. Registration is not required for the effectiveness of this limited warranty.

**IMPORTANT NOTICE TO CONSUMER:** This 90 DAY LIMITED WARRANTY applies to the original product purchaser, provided the product: 1) was purchased from an authorized JAKKS™ distributor/retailer, and 2) is returned at your expense, postage pre-paid and insured, along with the original dated sales receipt to the address noted below. Please save a copy of your original sales receipt, as the original receipt will not be returned to you.

If you return the product to us without the original dated sales receipt, this warranty coverage will not apply. If the product is determined by JAKKS to be defective and returned to JAKKS within the 90 day warranty period, we will (at our option) repair or replace it. Return shipment to you may take up to 6 weeks, depending upon your location. If your product is repaired or replaced, it will be warranted for the longer of the original warranty or for 30 days after warranty service.

**SCOPE OF LIMITED WARRANTY:** The product is warranted to be: a) tested and inspected before shipment, and to be free of defects in material and workmanship for 90 days from date of purchase. If a covered defect occurs within the warranty period, then at our sole option, we will repair or replace the product or provide you with another product of equal value.

**WHAT IS NOT COVERED BY LIMITED WARRANTY:** THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN MODIFIED OR REPAIRED BY USER OR OTHERS OR IF IT HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, IMPROPER INSTALLATION, NEGLIGENCE, ABUSE, MISUSE, BATTERY LEAKAGE, IMPROPER BATTERY INSTALLATION, UNAUTHORIZED SERVICE, LOSS OF PARTS, WEATHER, ACTS OF GOD, ANY ACTION OR OMISSION WHICH CONSTITUTES A DEVIATION FROM THE OPERATING INSTRUCTIONS, OR ANY OTHER CAUSES NOT ARISING OUT OF DEFECTS IN WORKMANSHIP OR MATERIALS.

**EXCLUSIONS FROM LIMITED WARRANTY:** THIS WARRANTY IS EXCLUSIVE OF AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES RELATED TO THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARISING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT ARE EXCLUDED BOTH FOR PROPERTY DAMAGE AND PERSONAL INJURY TO THE EXTENT LEGALLY PERMITTED.

**ADDITIONAL LEGAL RIGHTS:** This warranty provides specific legal rights. You may have other or different rights in your state or country.

**QUESTIONS OR COMMENTS:** If you experience product difficulties or have questions or comments, you may contact our Consumer Relations department as follows:  
 Phone: 877-875-2557 (toll-free, North America only) or 909-594-7771 (Monday-Friday, 7:30AM-4:30PM Pacific GMT)  
 Email: JAKKS\_Consumer\_Relations\_21749\_Baker\_Parkway\_Walnut\_California\_USA\_91789  
 Email: consumers@jakks.com

**WHEN WRITING TO US:** Please include: 1) product name; 2) item number; 3) purchase date; 4) description of the problem being experienced; and 5) your name, address and phone number. Additionally, if sent under the warranty and so advised, include the original dated sales receipt, also include the defective product and the ORIGINAL dated sales receipt evidencing product purchase. Please retain a copy of your receipt.

### TO AVOID BATTERY PROBLEMS:

- NEVER mix old and new batteries or different brands of batteries.
- NEVER mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium) batteries with this product.
- NEVER dispose of batteries in fire, as they may leak and explode.
- ALWAYS remove exhausted batteries from toy.
- ALWAYS have an adult install batteries consistent with installation instructions.
- ONLY use batteries specified by manufacturer.
- Batteries are to be inserted with the correct Polarity.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.



www.jakks.com - Nasdaq: JAKK