


6.4.10 JAN-9202


CWA-246 26inch Display Unit Mount Kit

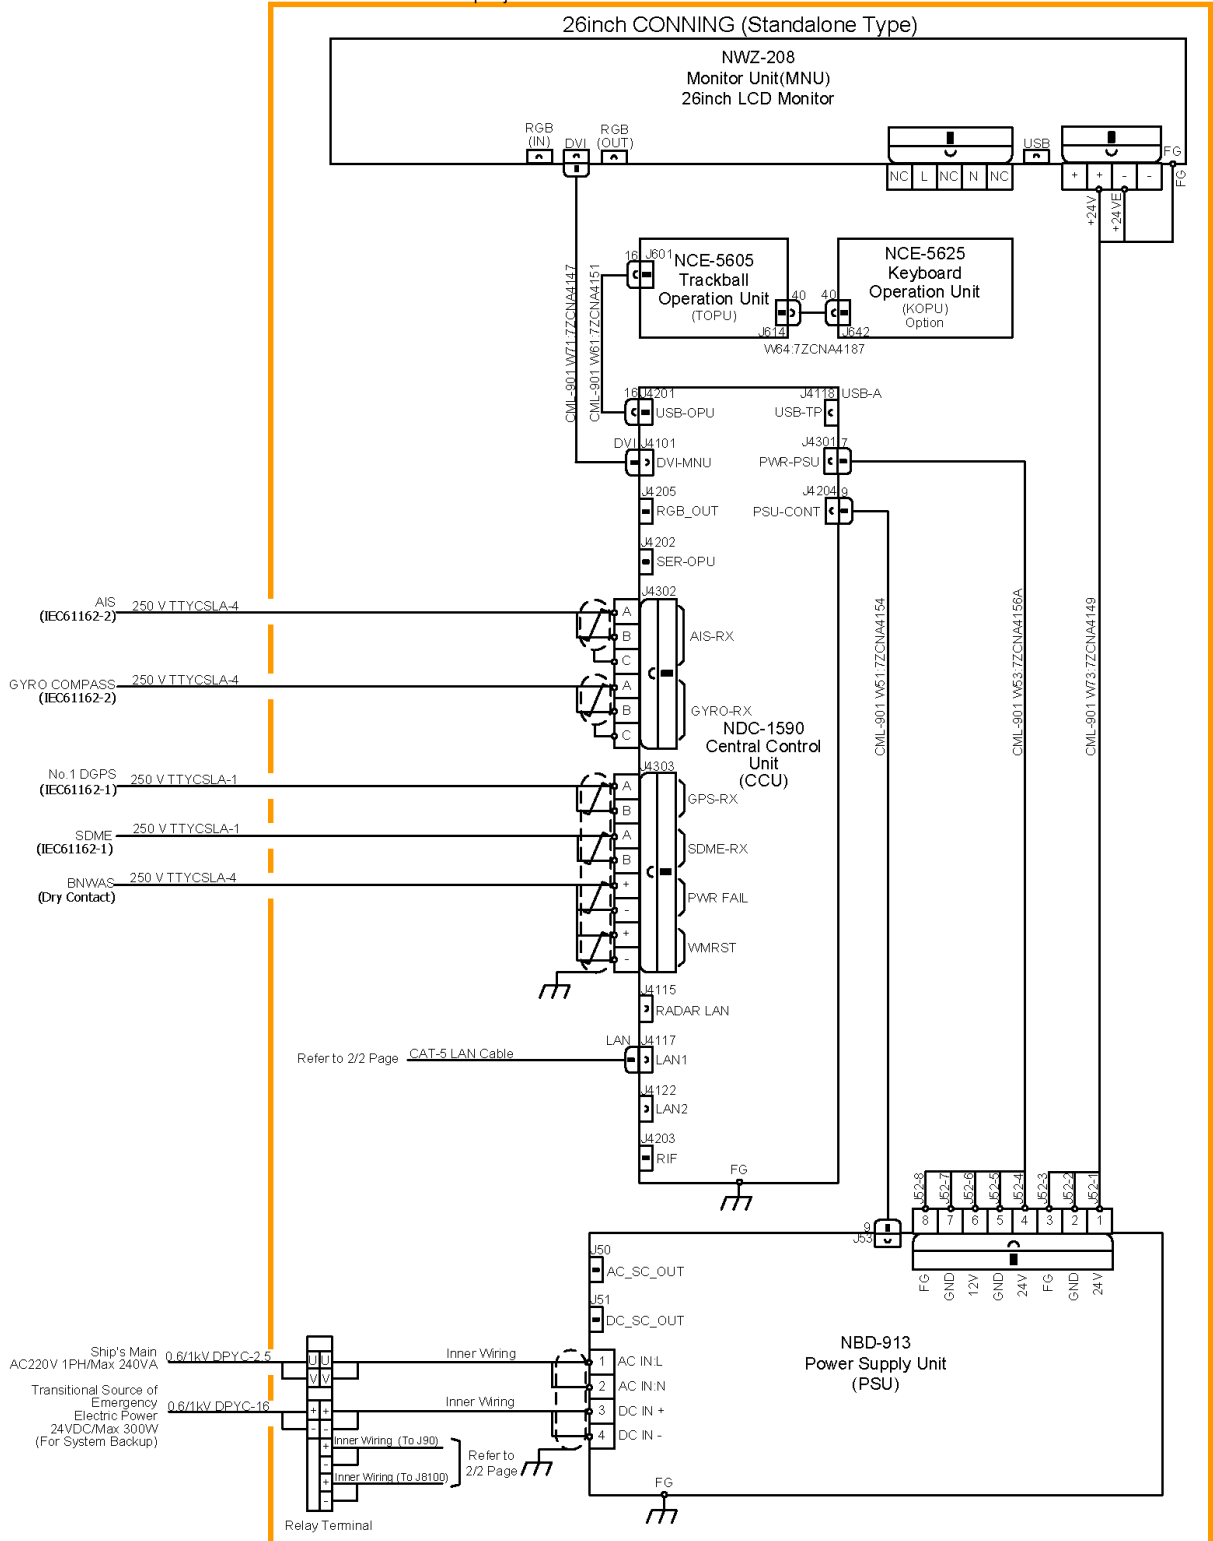

Interconnection Diagram of JAN-9202 CONNING (1/2)


6.4.11 JMR-7210-6X/6XH

CWA-245 19inch Display Unit Mount Kit

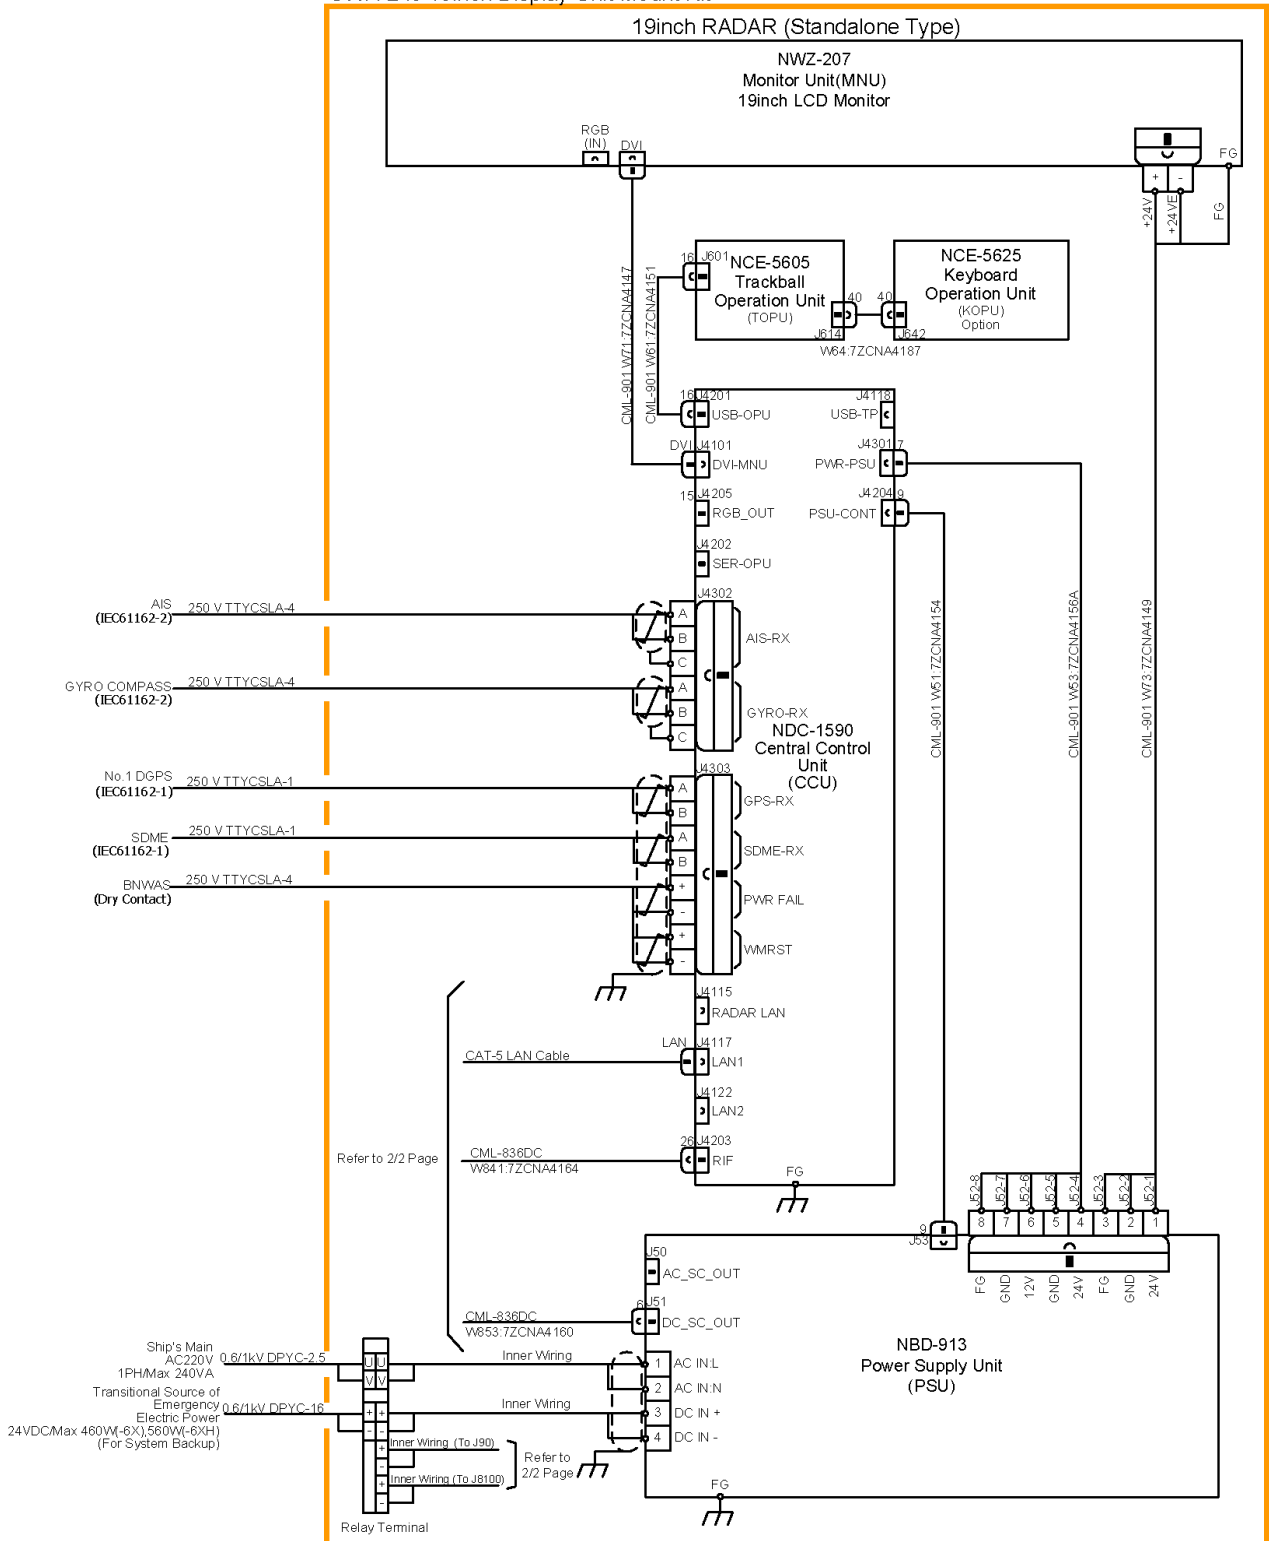


Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

6.4.12 JMR-7225-6X/9X

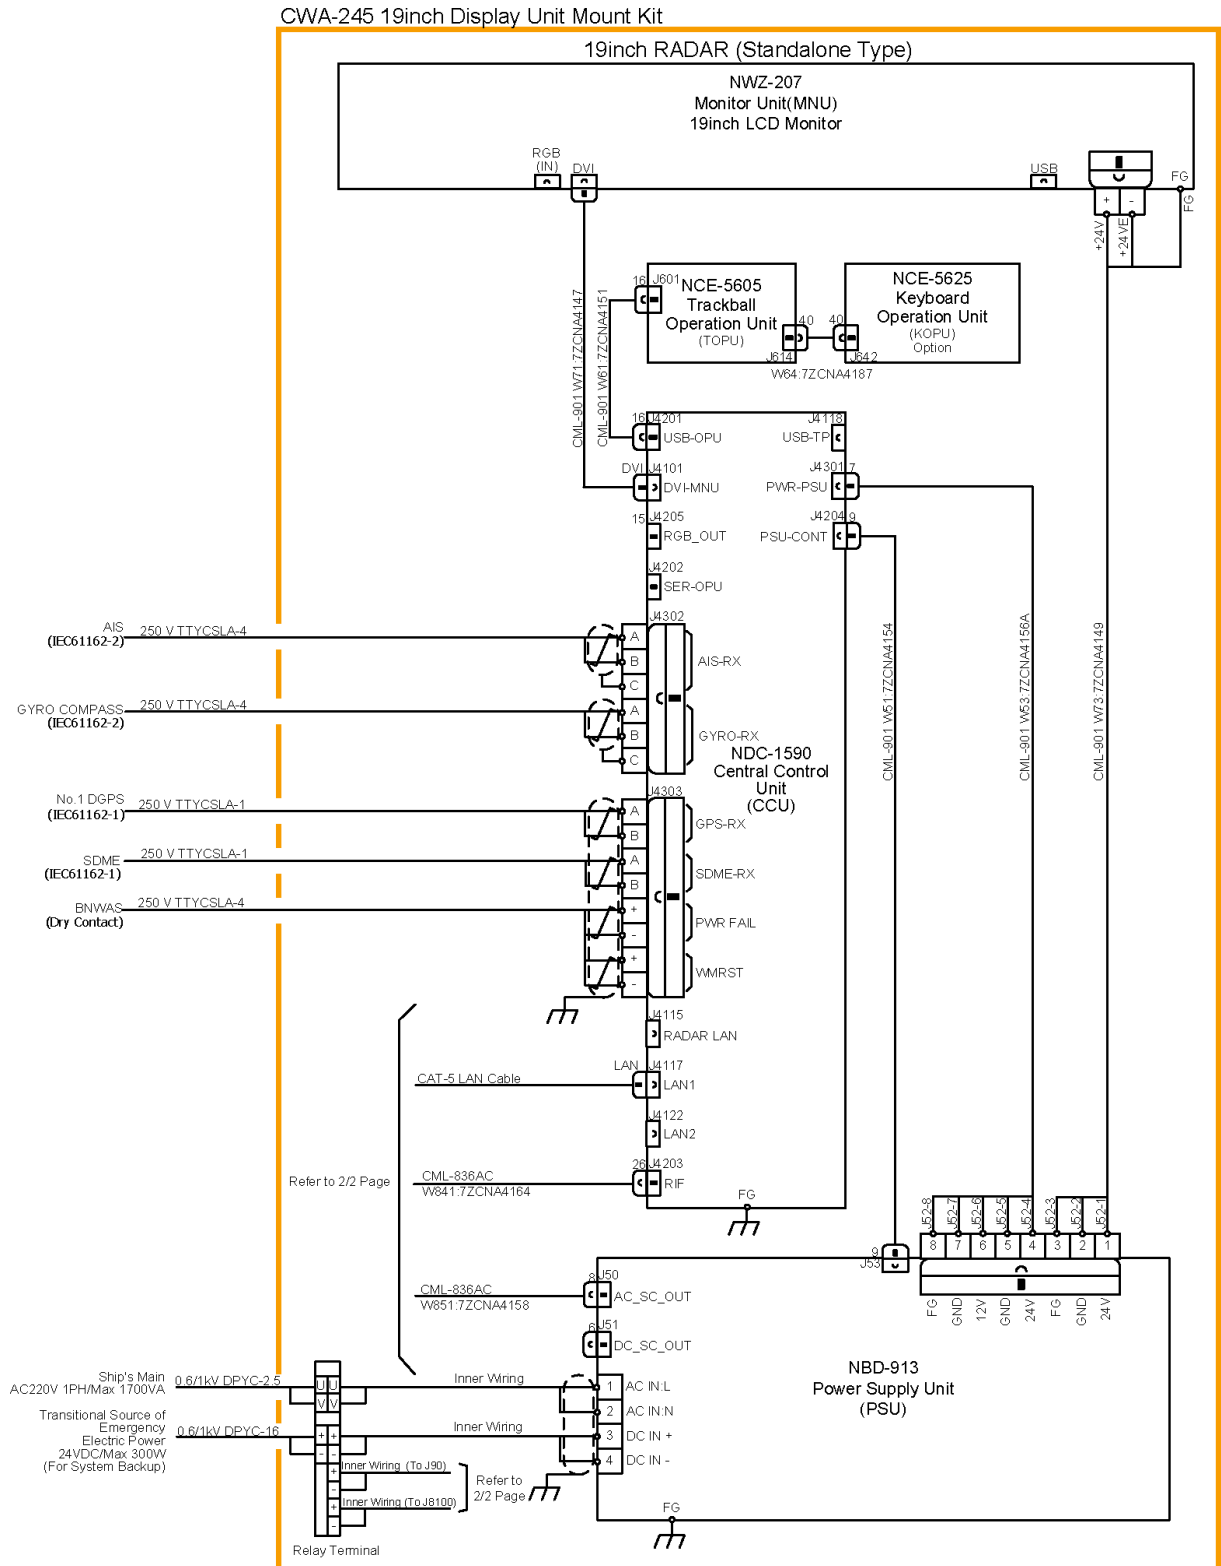

Interconnection Diagram of JMR-7225-6X/9X RADAR (1/2)


CWA-245 19inch Display Unit Mount Kit

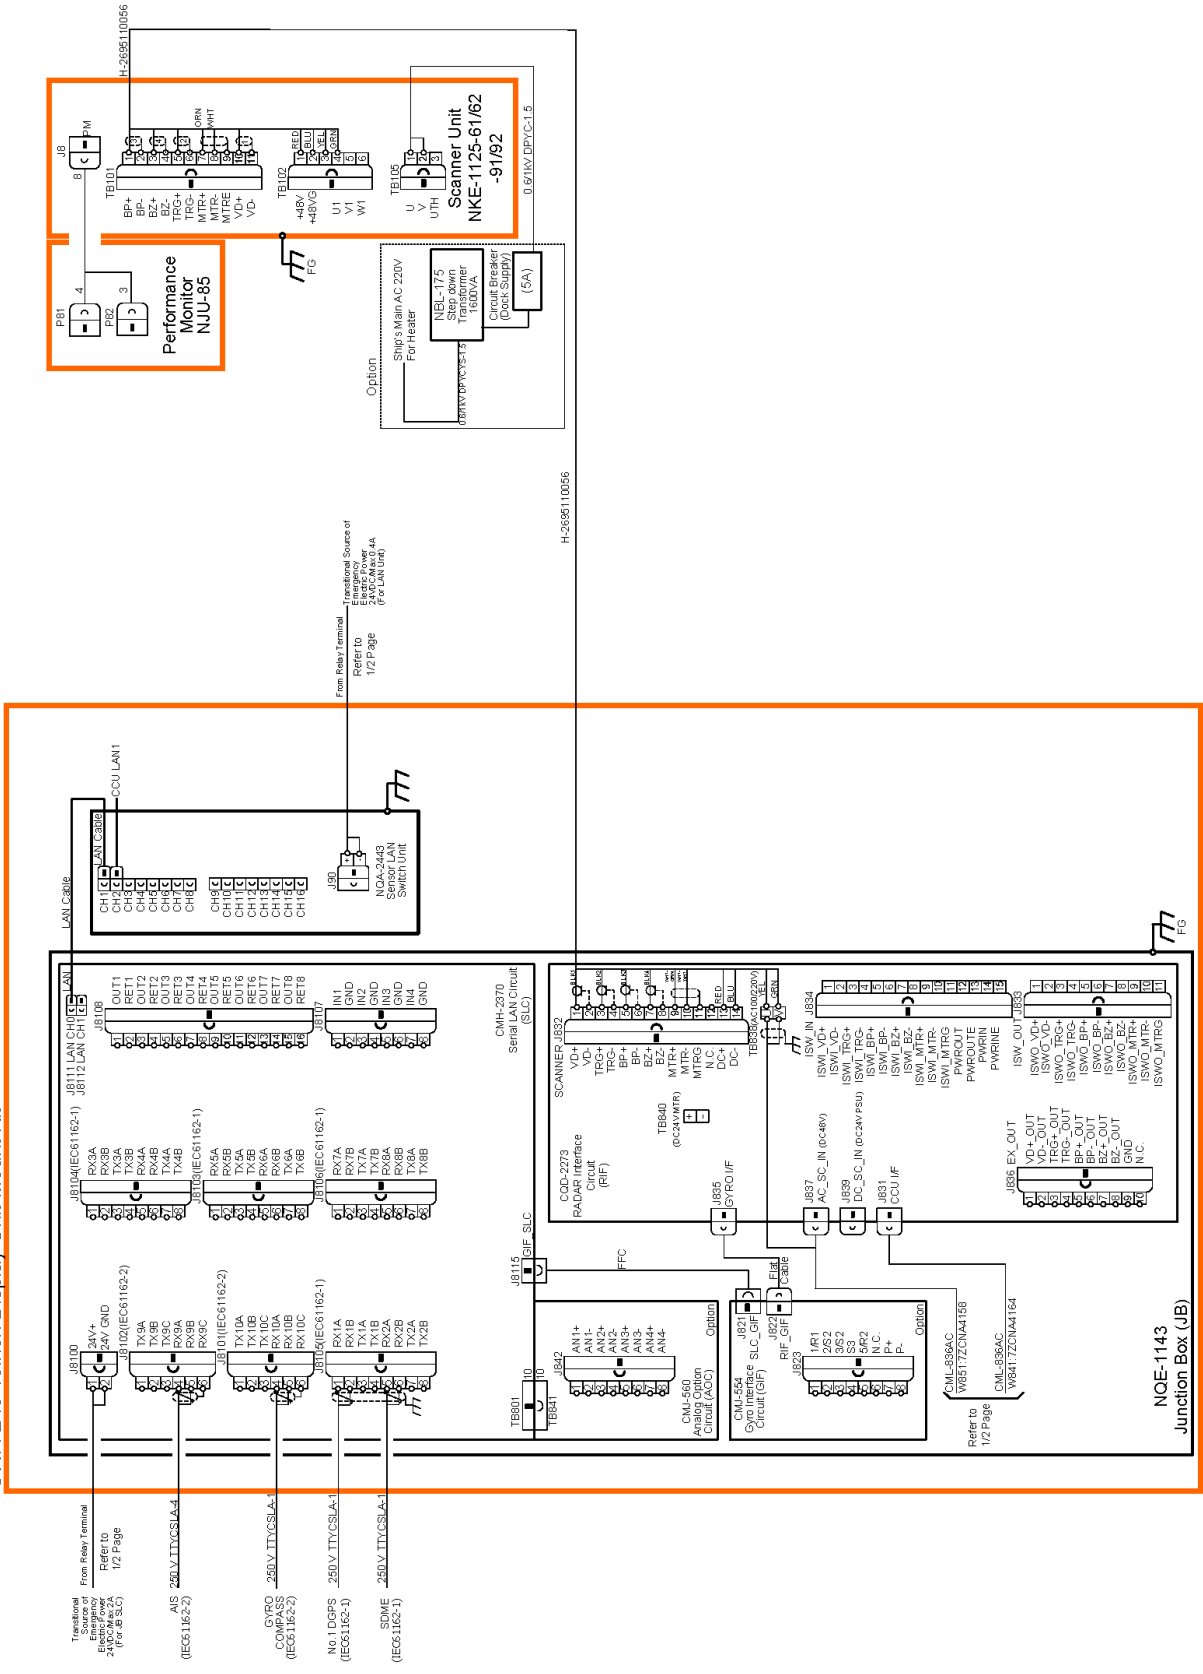

Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)


6.4.13 JMR-7225-6XH

CWA-245 19inch Display Unit Mount Kit

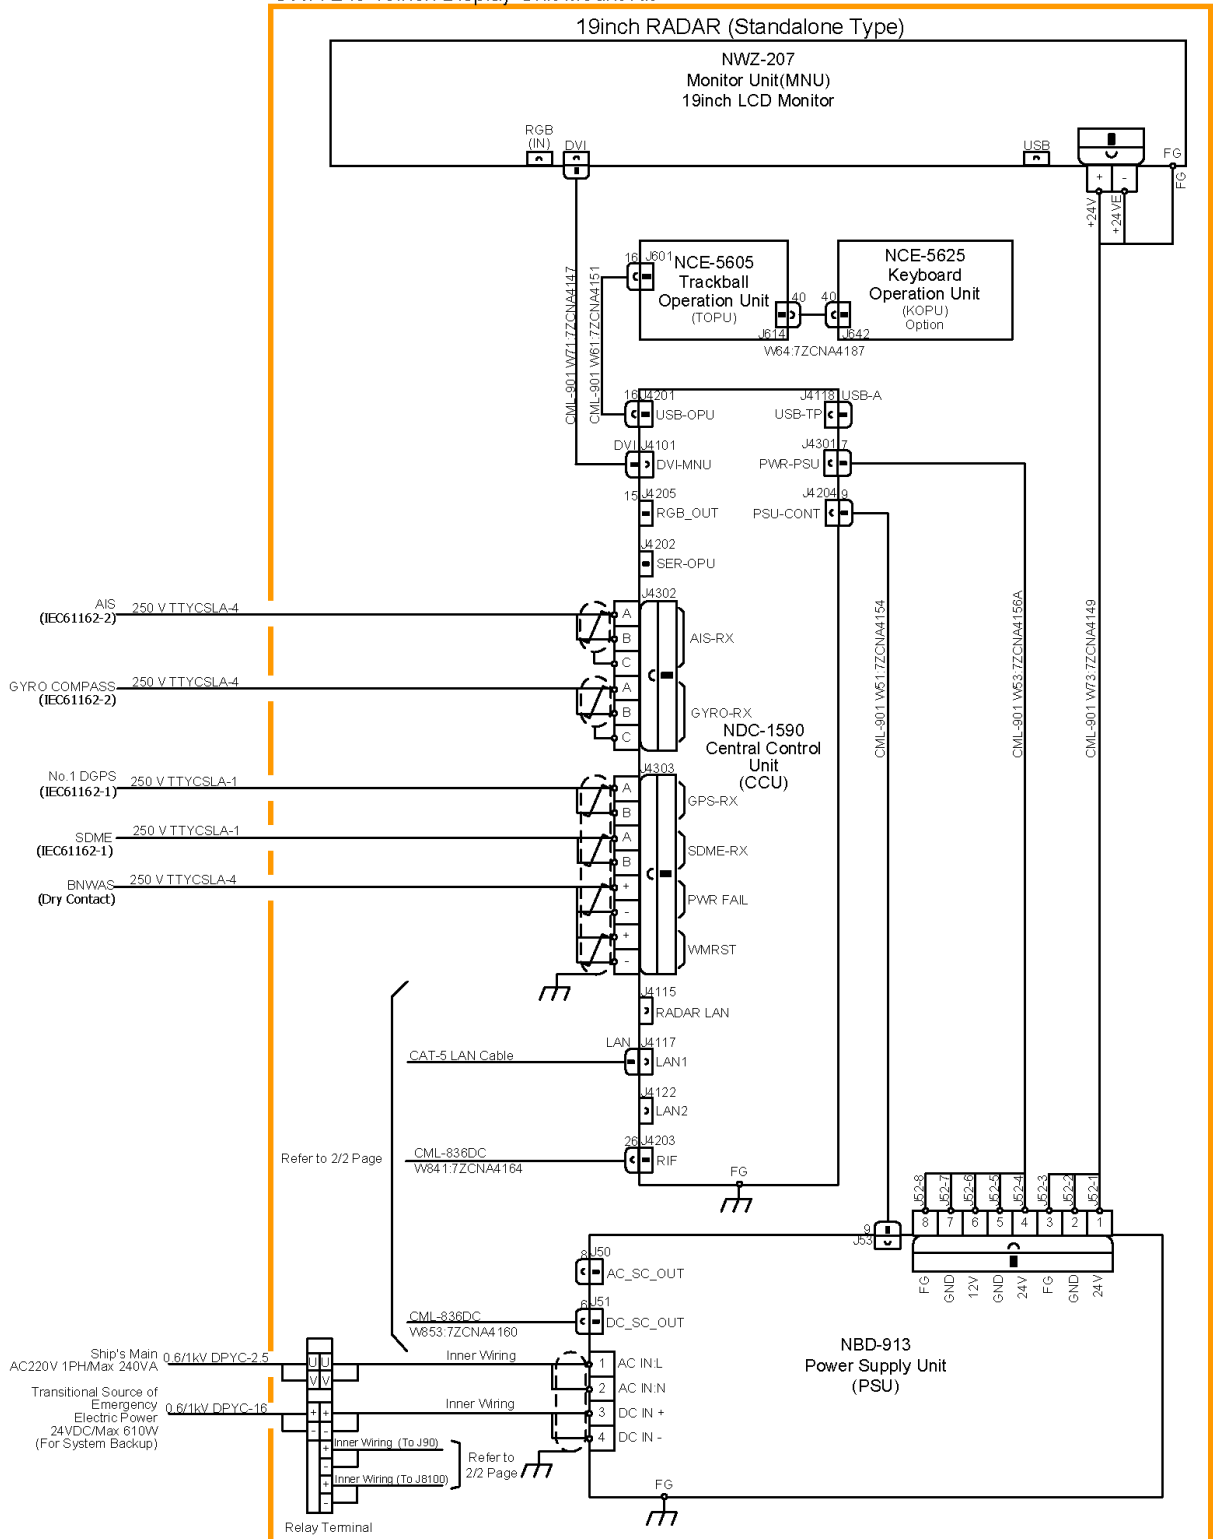


Interconnection Diagram of JMR-7225-6XH RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

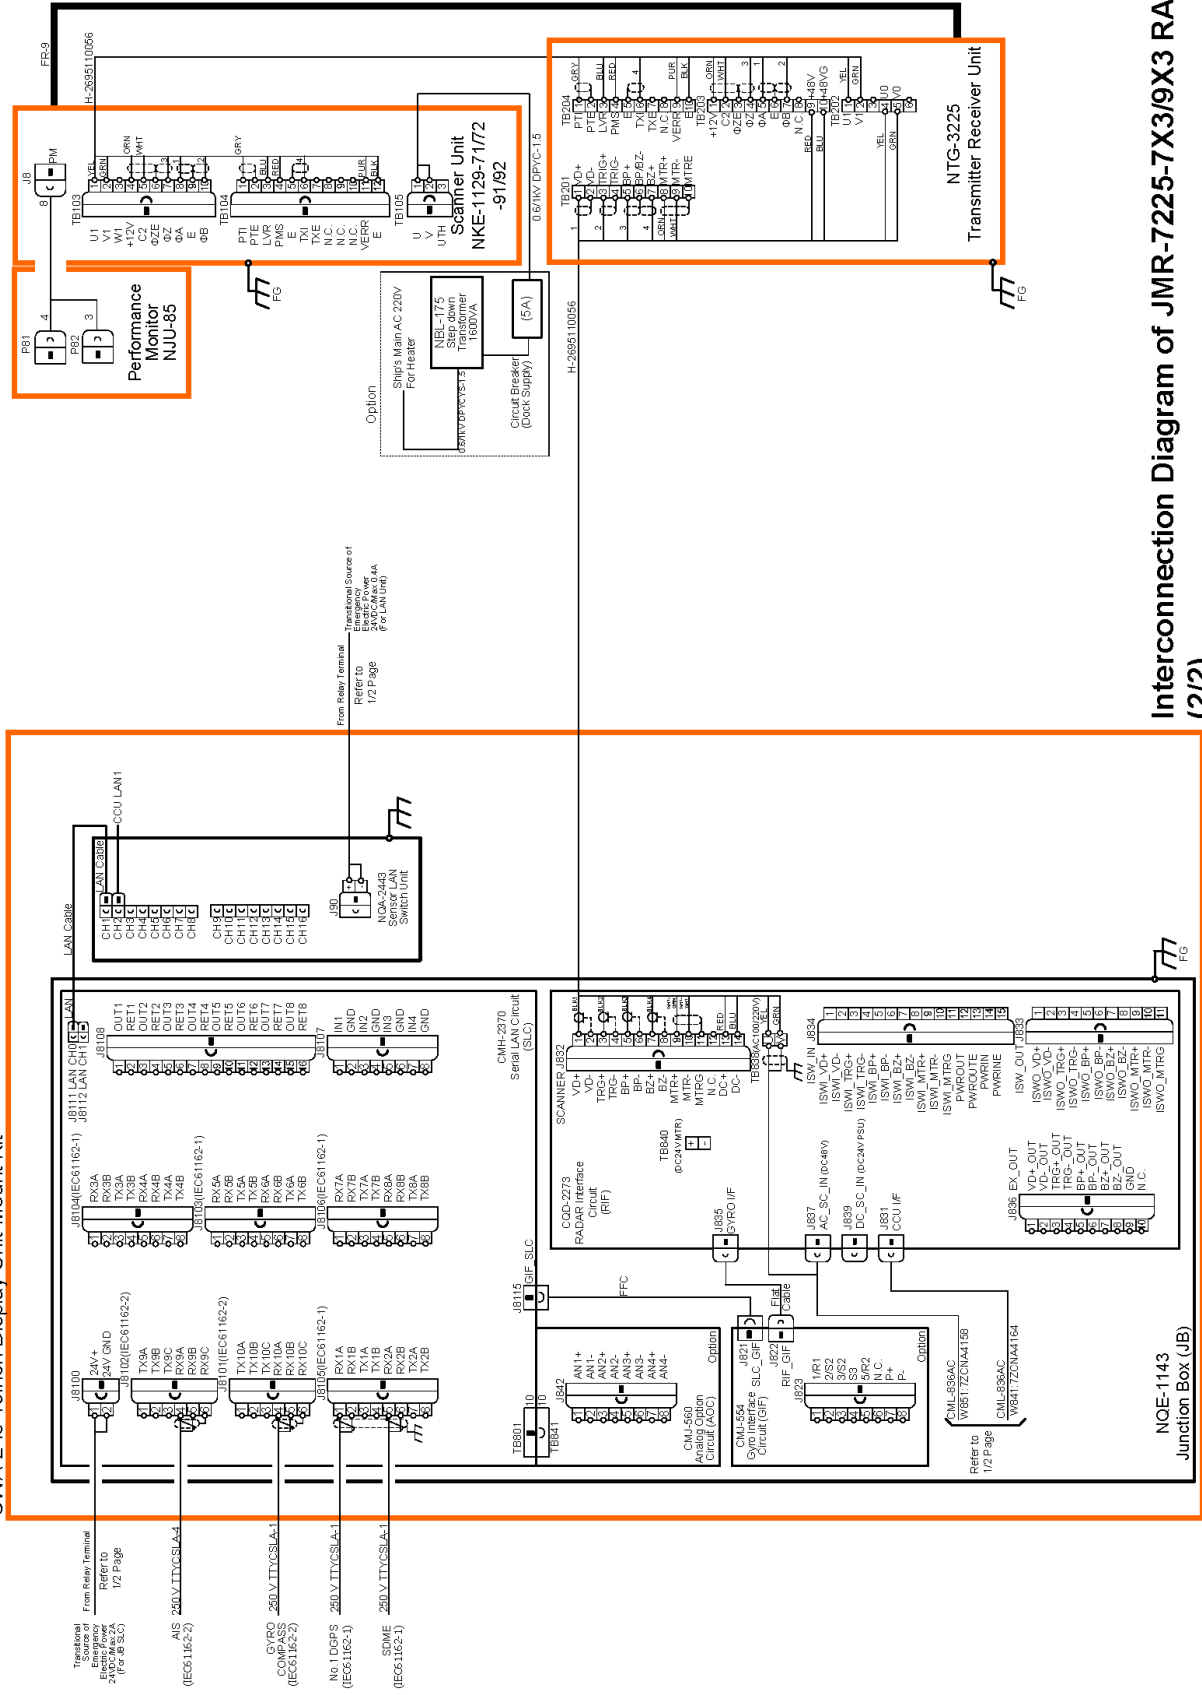


Interconnection Diagram of JMR-7225-7X319X3 RADAR (2/2)

6.4.15 JMR-7230-S

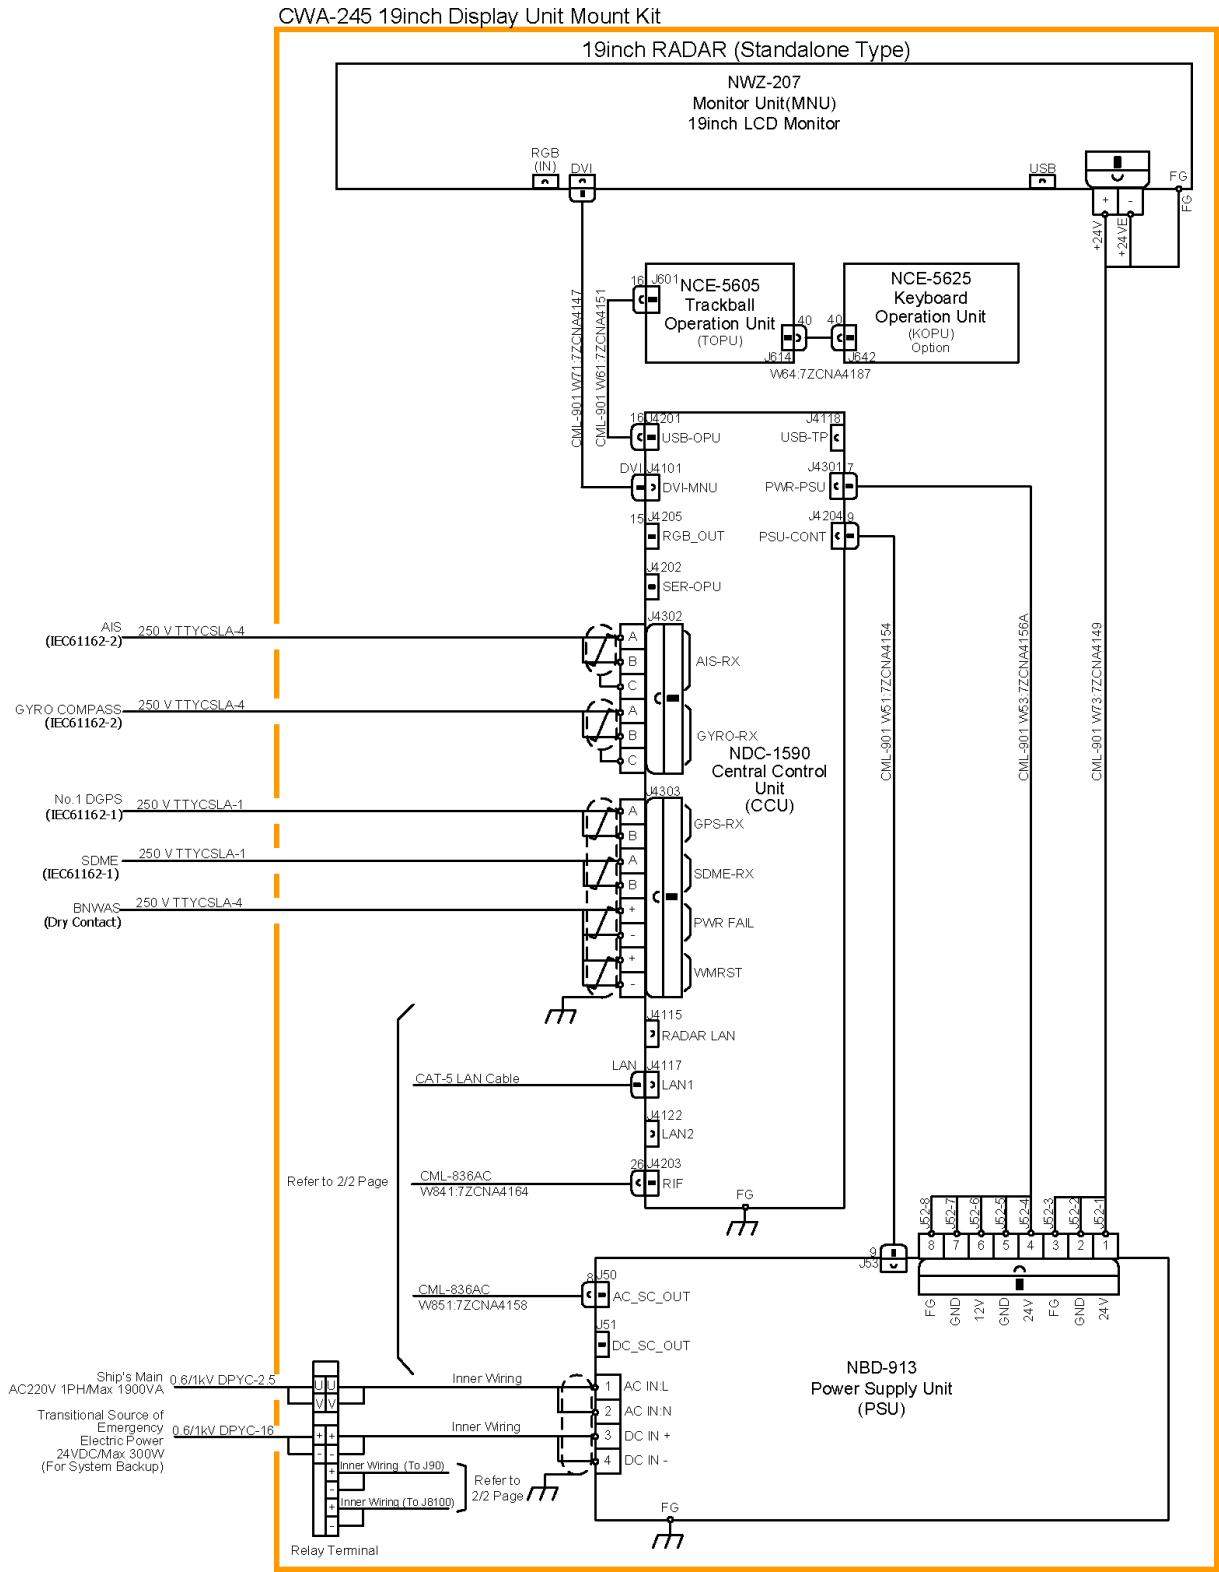


CWA-245 19inch Display Unit Mount Kit

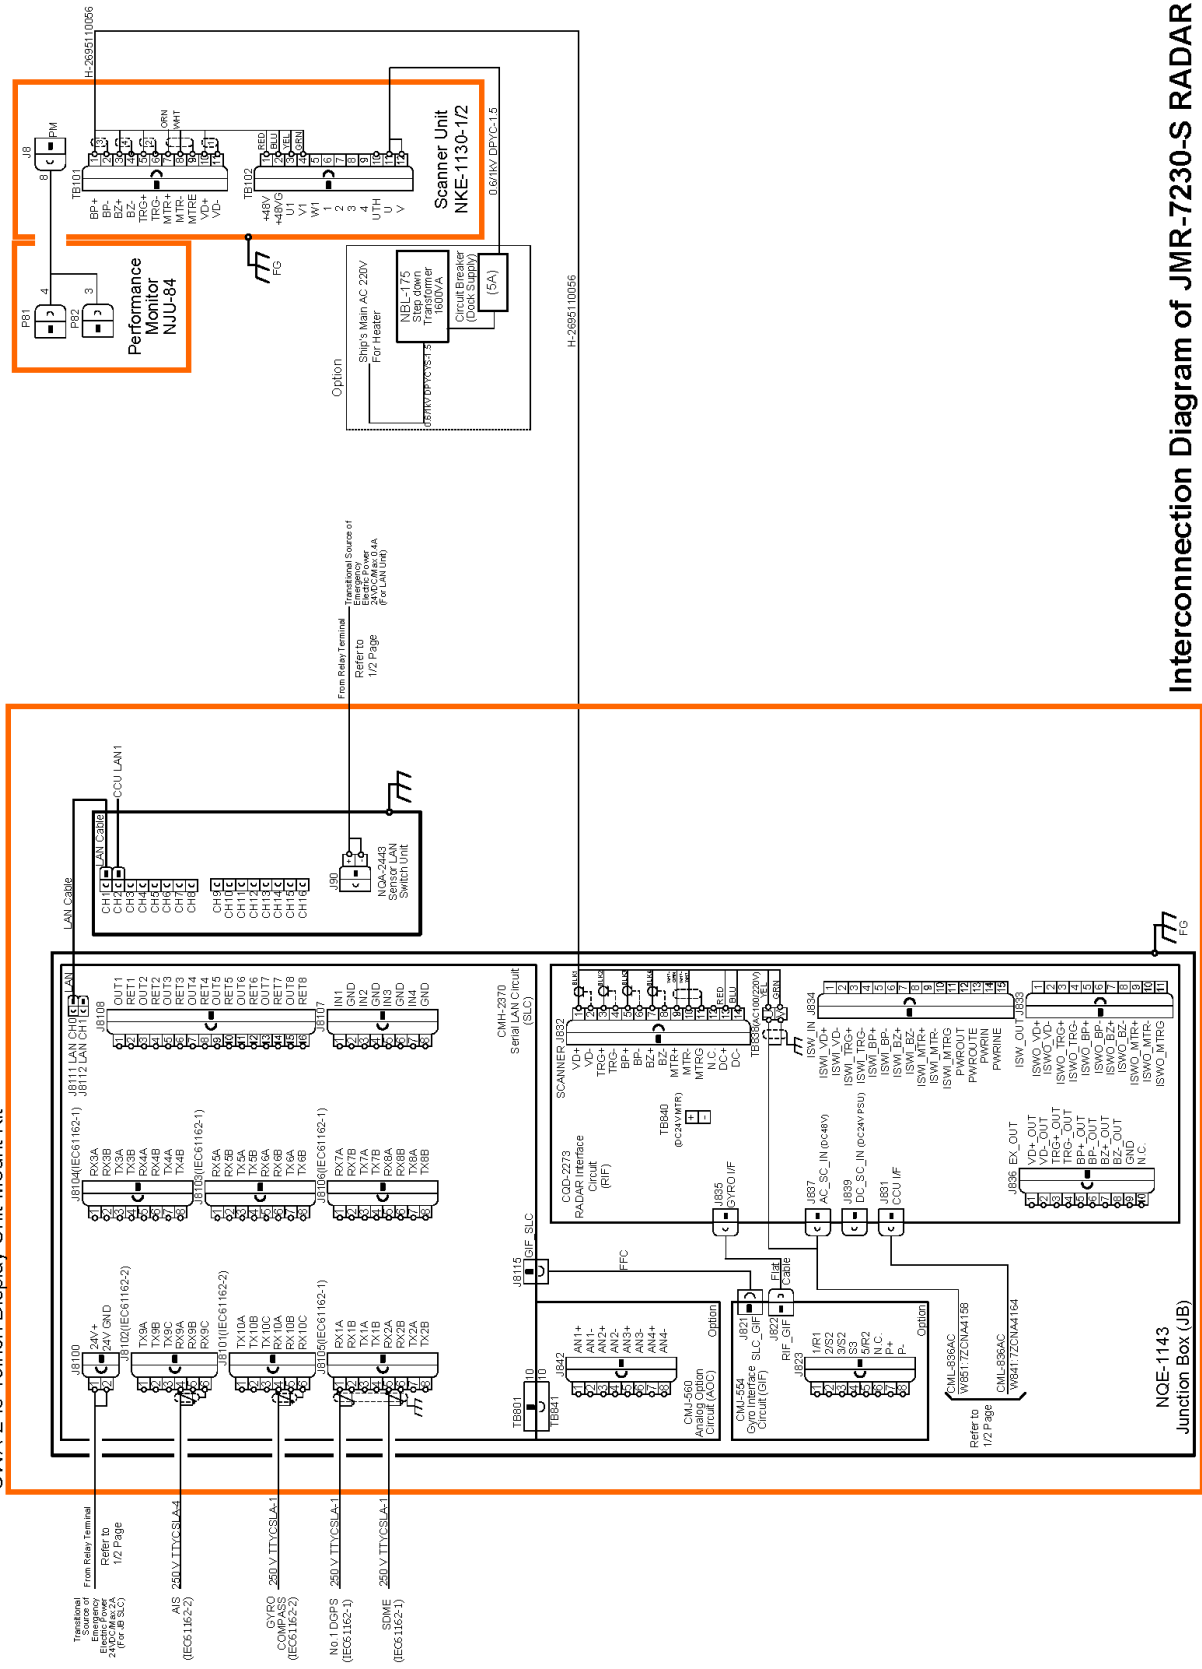


Interconnection Diagram of JMR-7230-S RADAR (2/2)

6.4.17 JMR-7272-S

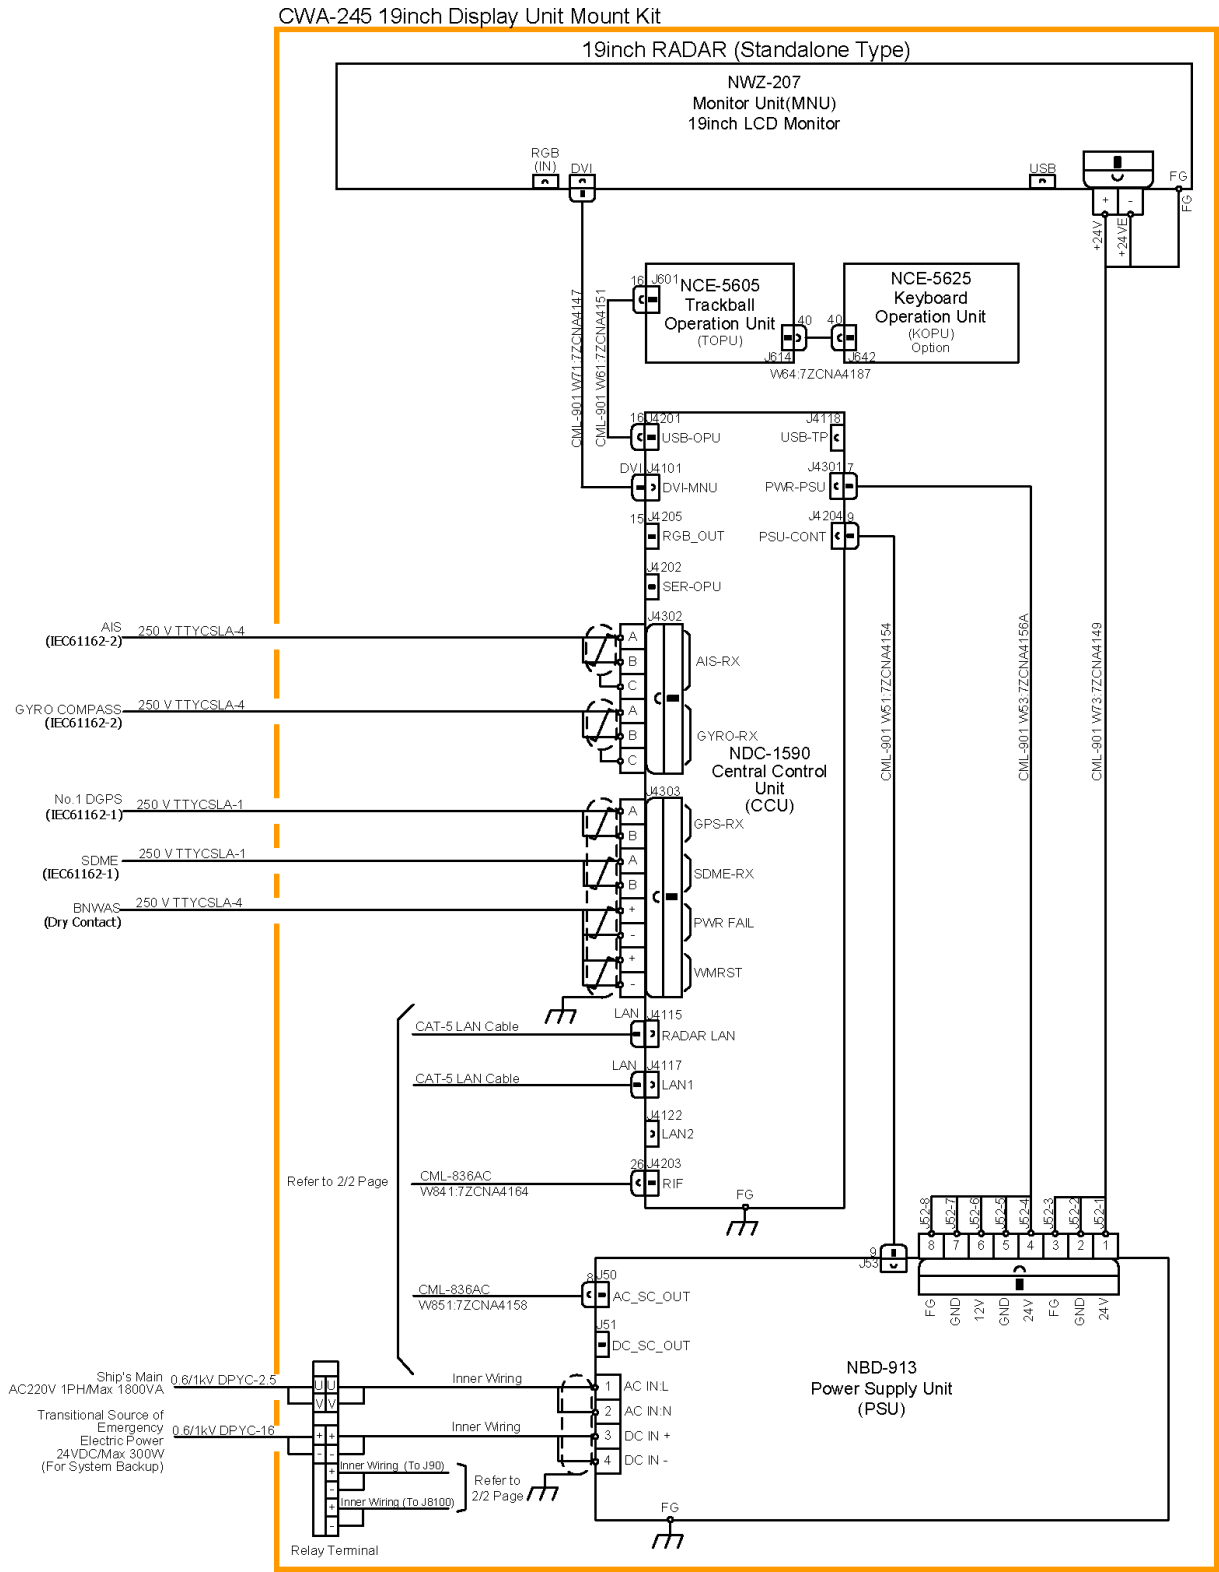


Interconnection Diagram of JMR-7272-S RADAR (1/2)


6.4.18 JMR-7282-S/SH

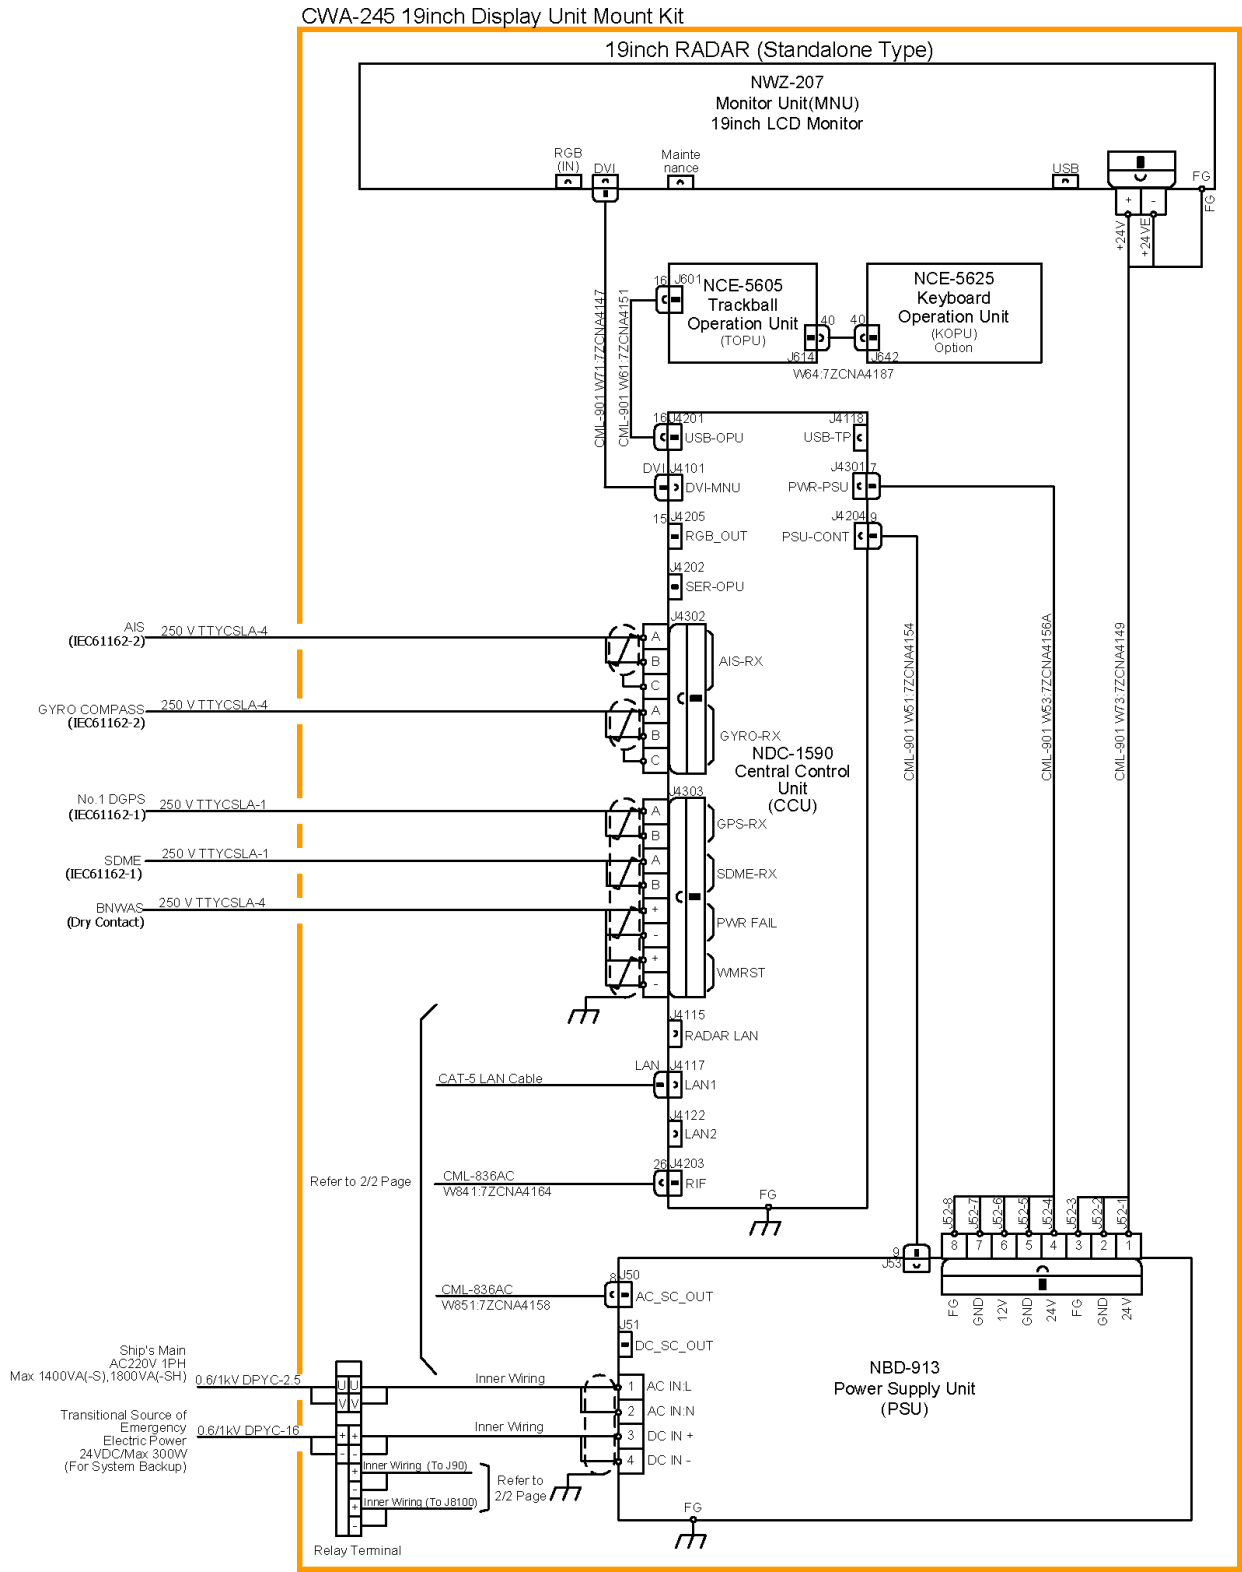


CWA-245 19inch Display Unit Mount Kit

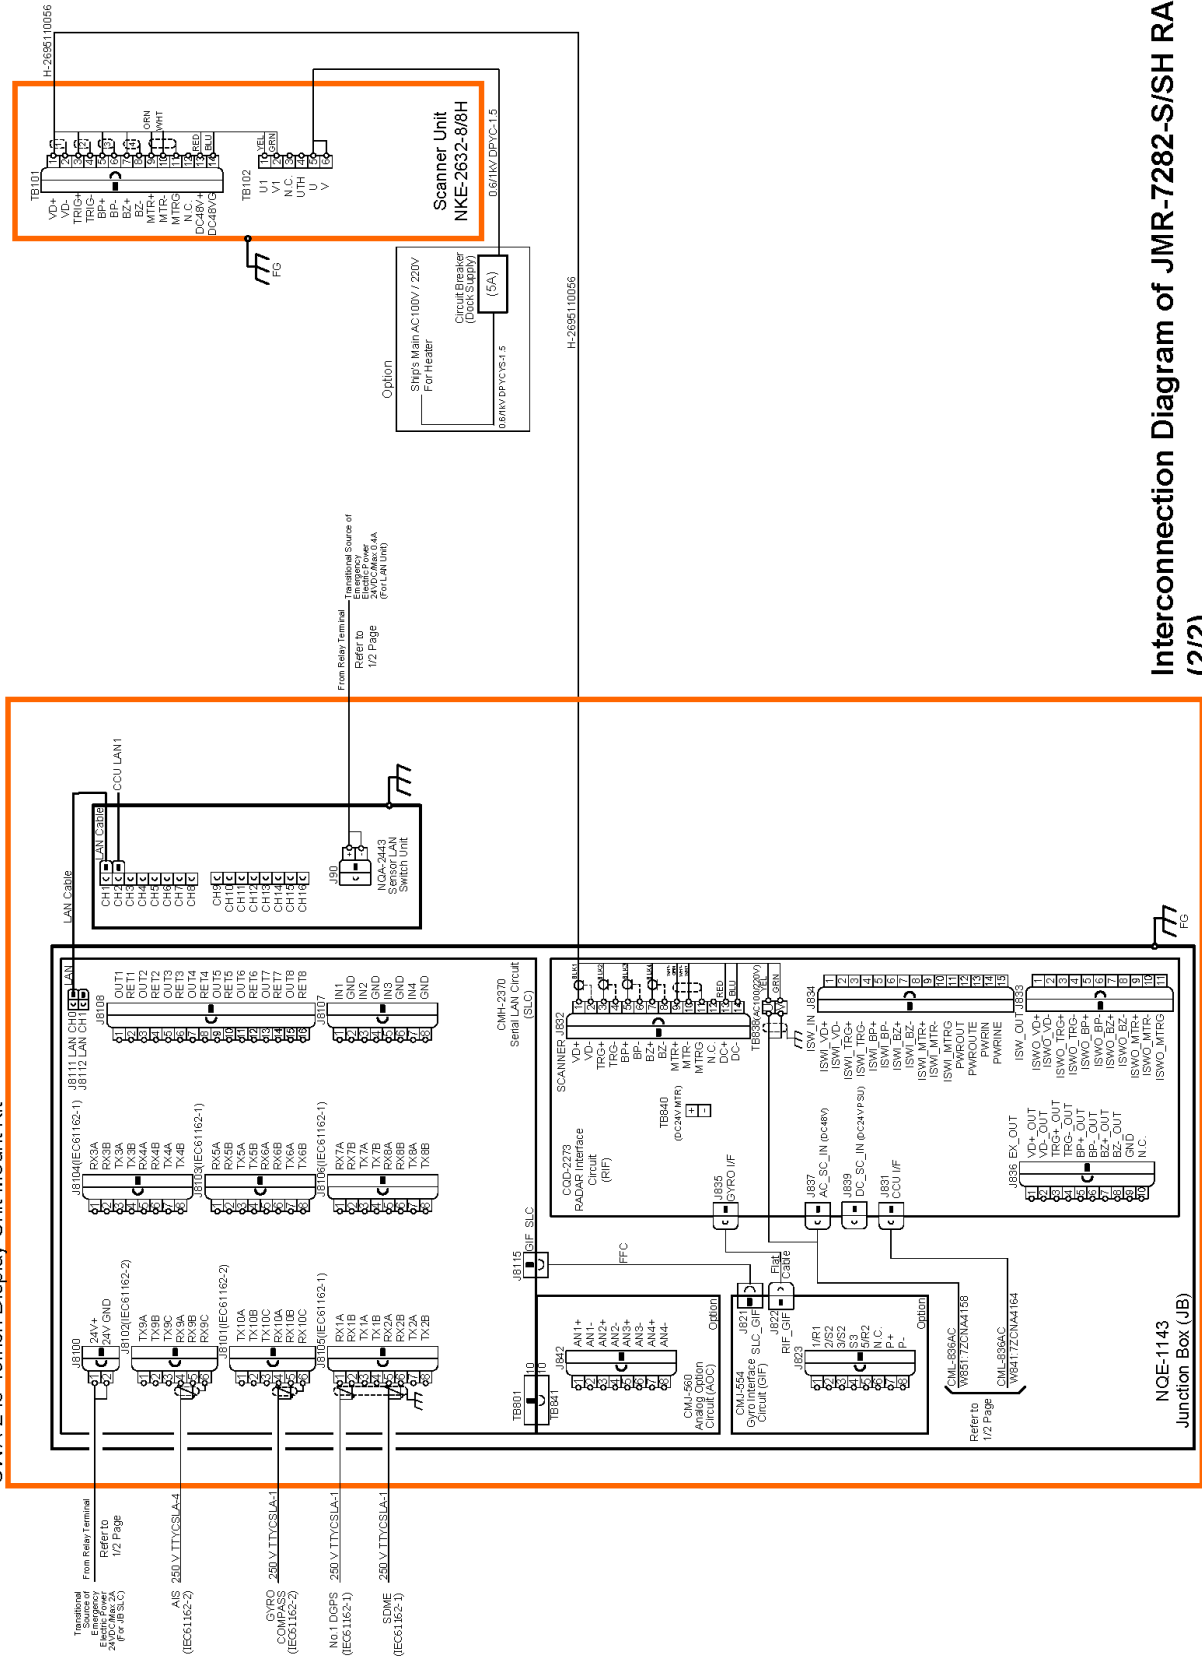


CWA-245 19inch Display Unit Mount Kit

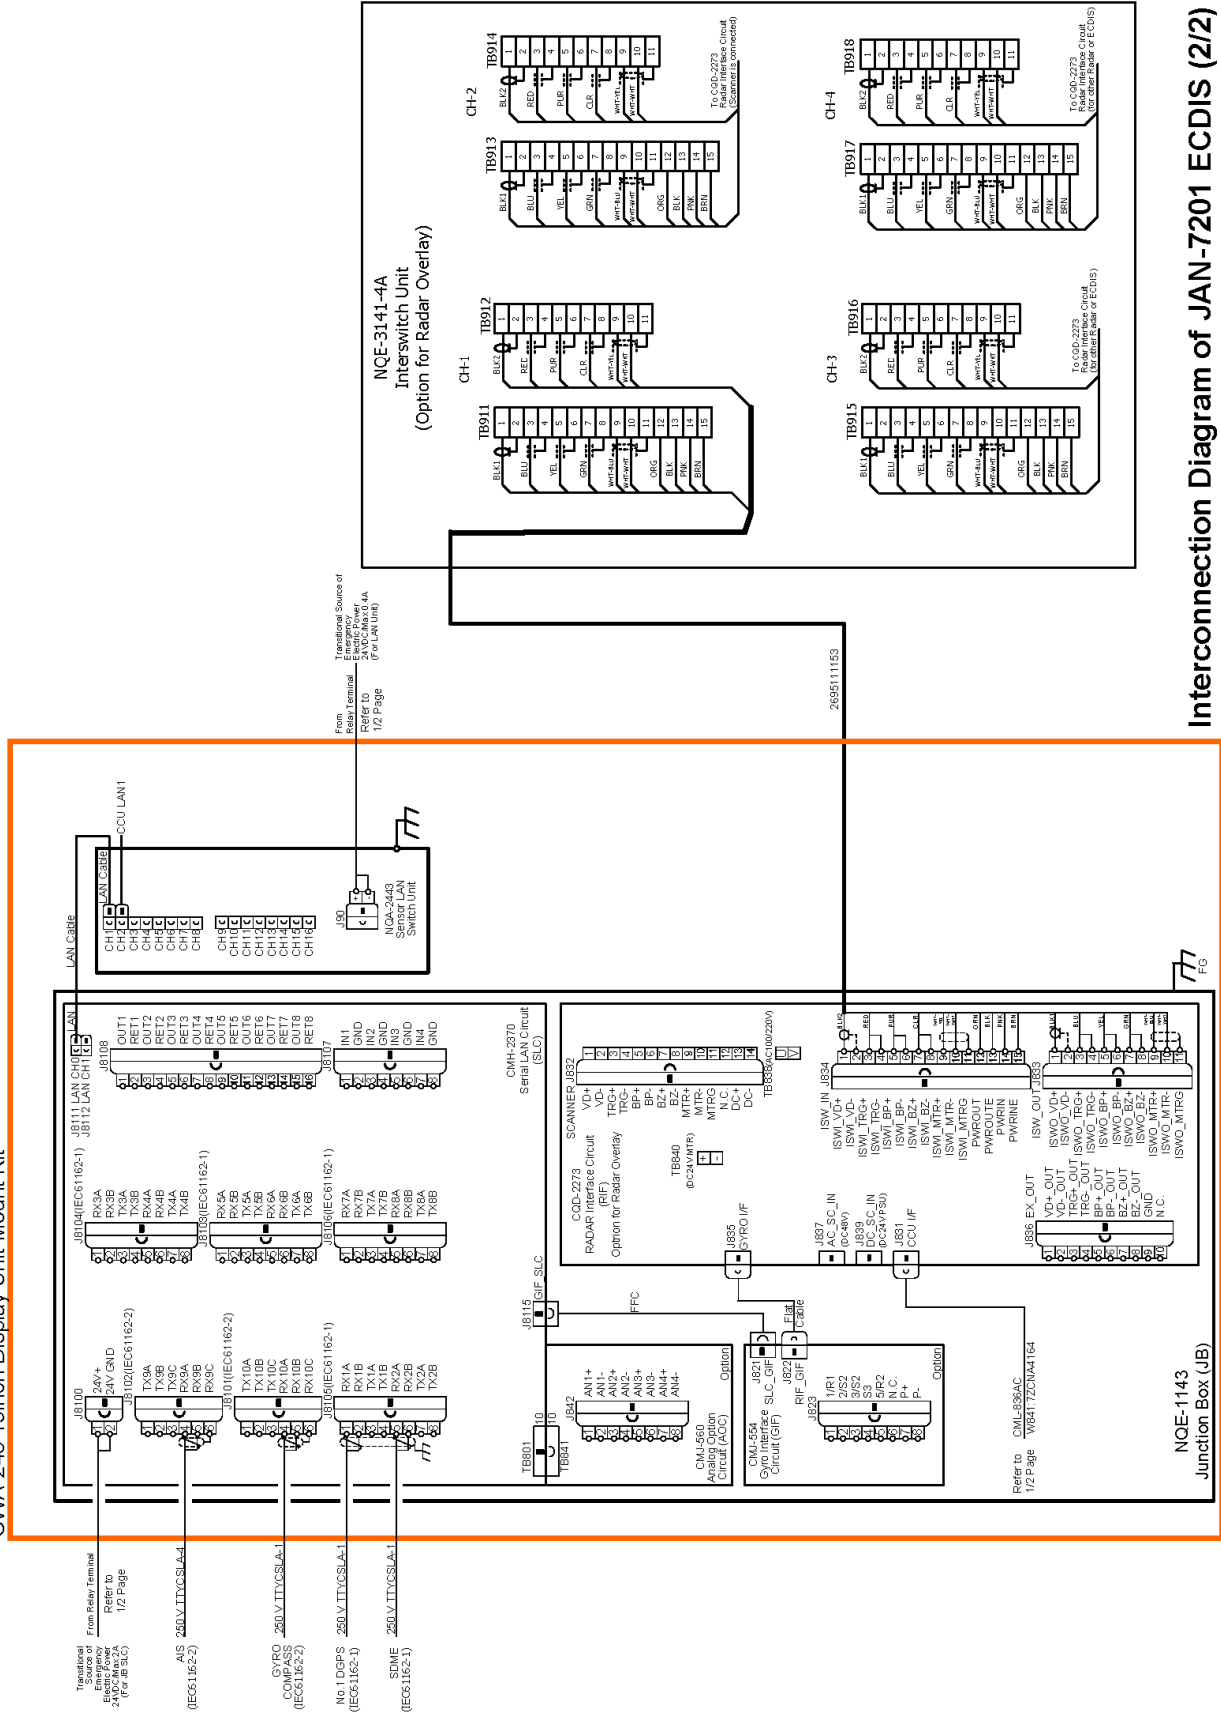


Interconnection Diagram of JAN-7201 ECDIS (2/2)

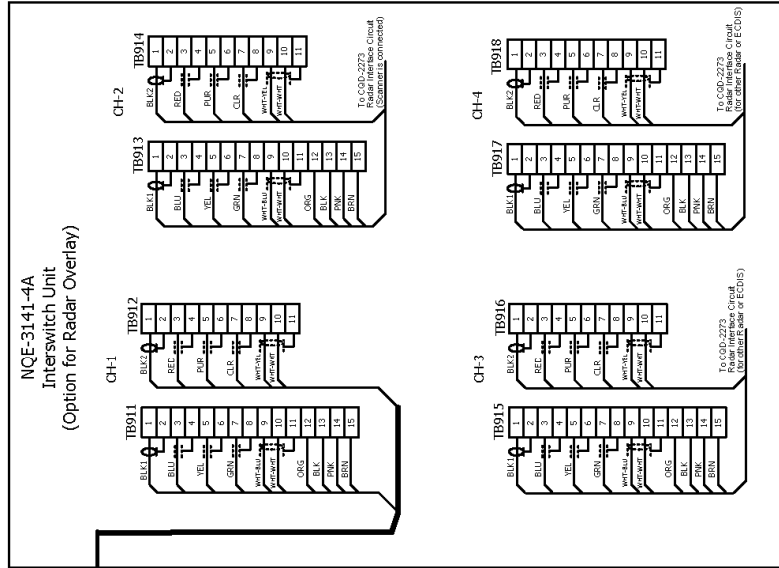

6.4.20 JAN-7202

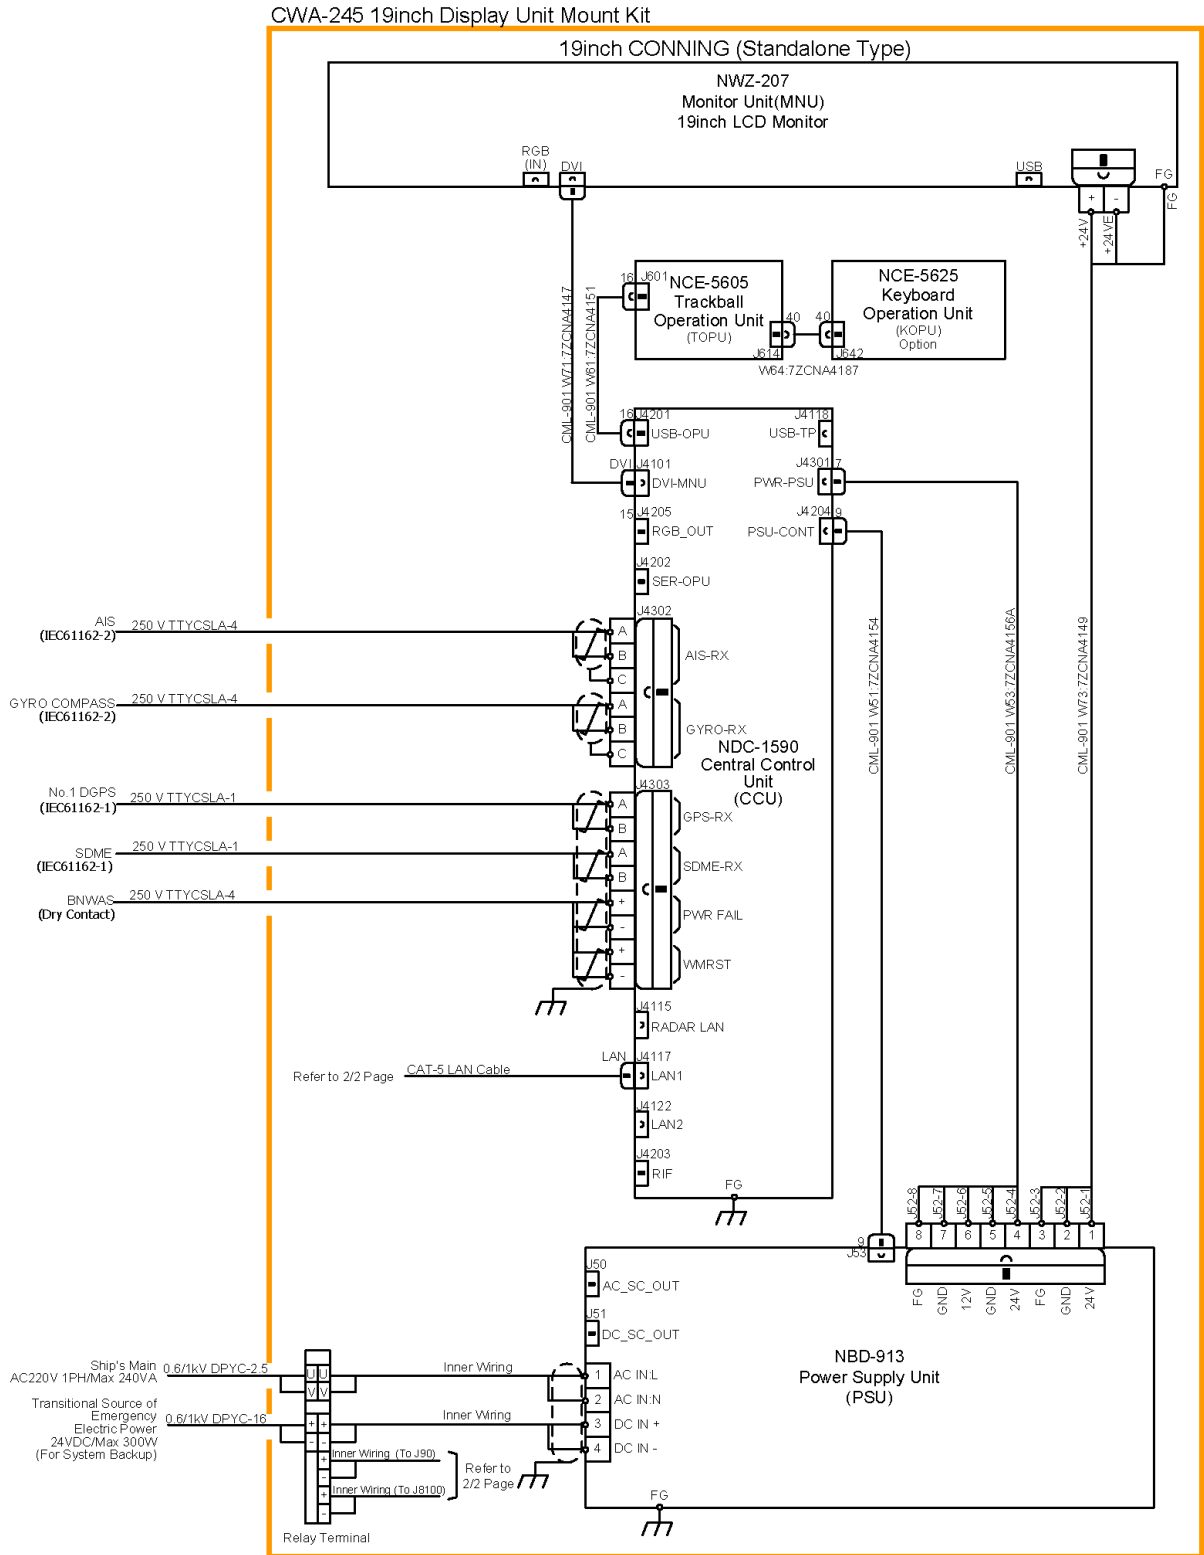


CWA-245 19inch Display Unit Mount Kit

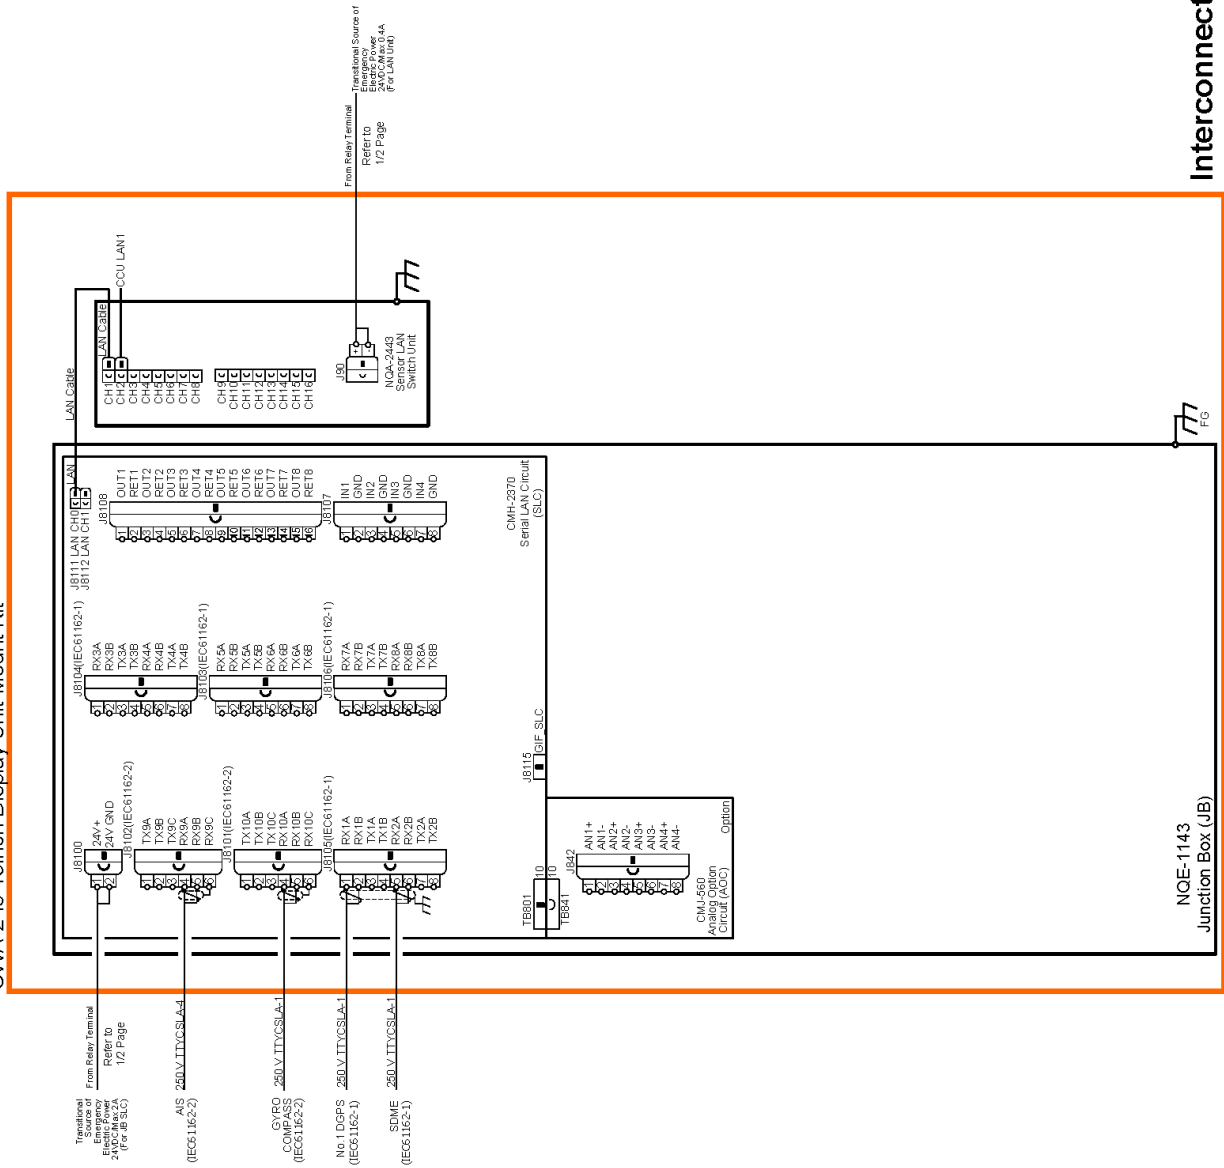

Interconnection Diagram of JAN-7202 CONNING (2/2)


6.5 Interconnection Diagram of Desktop Type

6.5.1 JMR-9210-6X/6XH

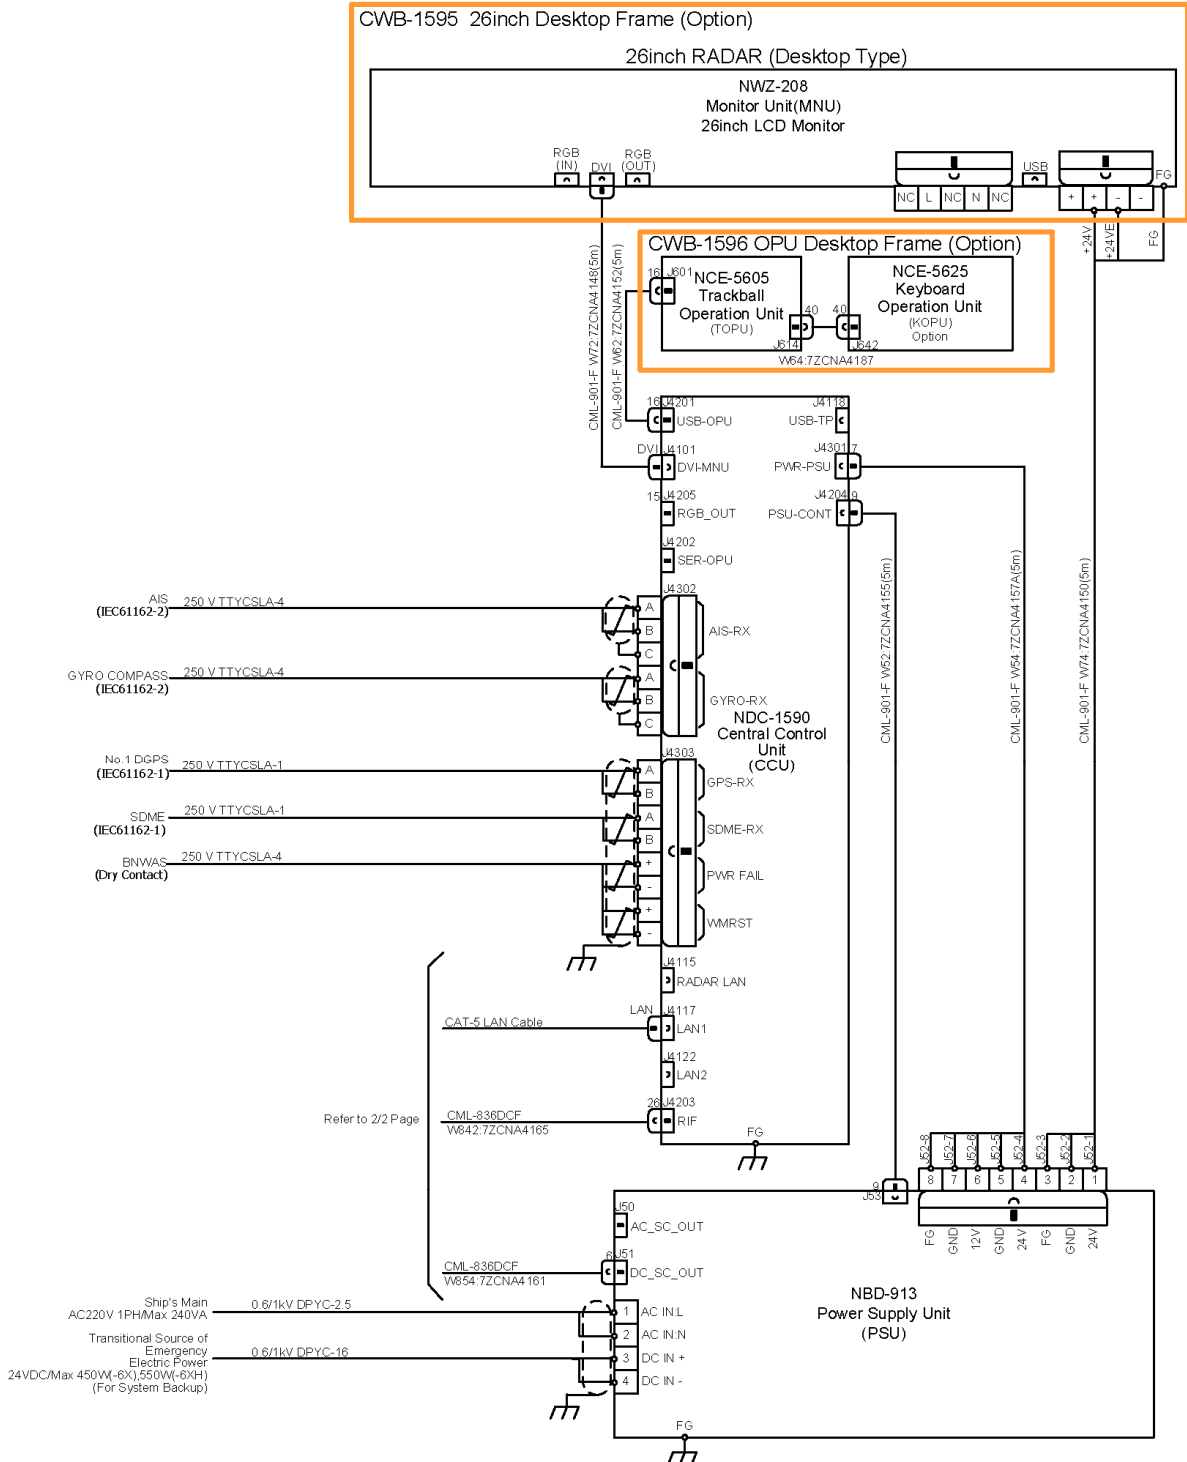


Interconnection Diagram of JMR-9210-6X/6XH RADAR (1/2)

6.5.2 JMR-9225-6X/9X

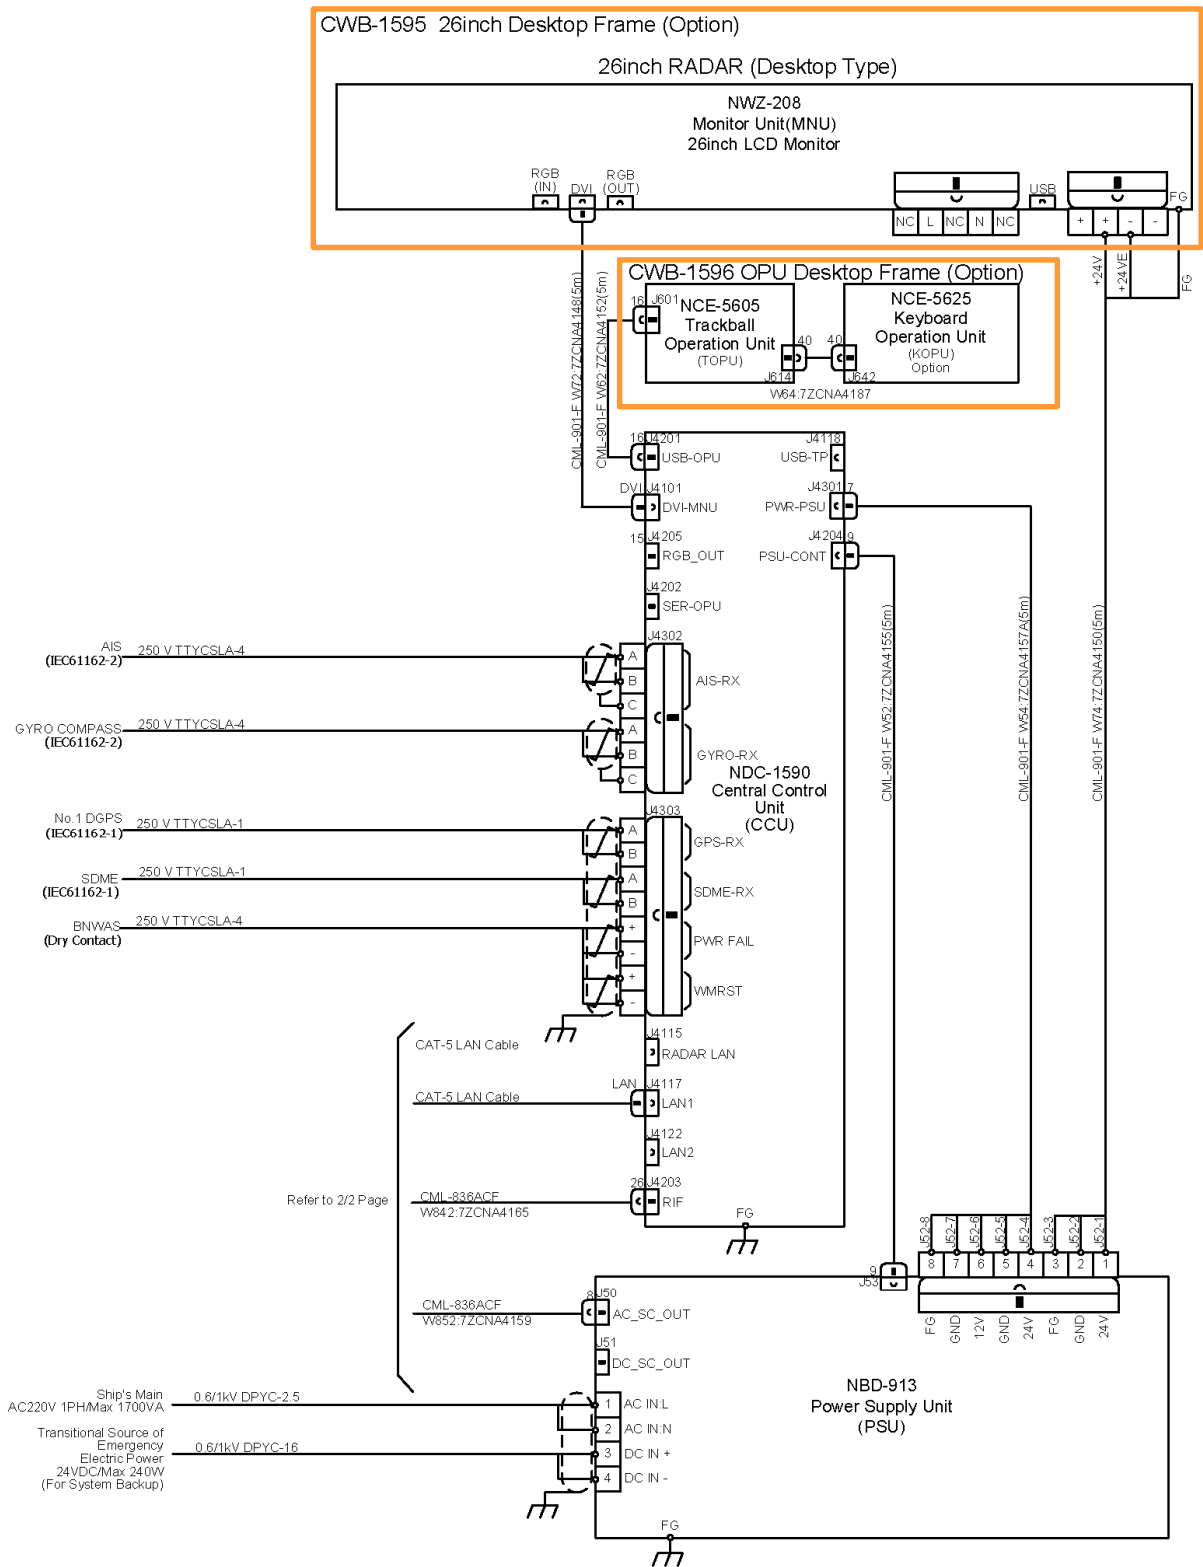


Interconnection Diagram of JMR-9225-6X/9X RADAR (1/2)

6.5.3 JMR-9225-6XH

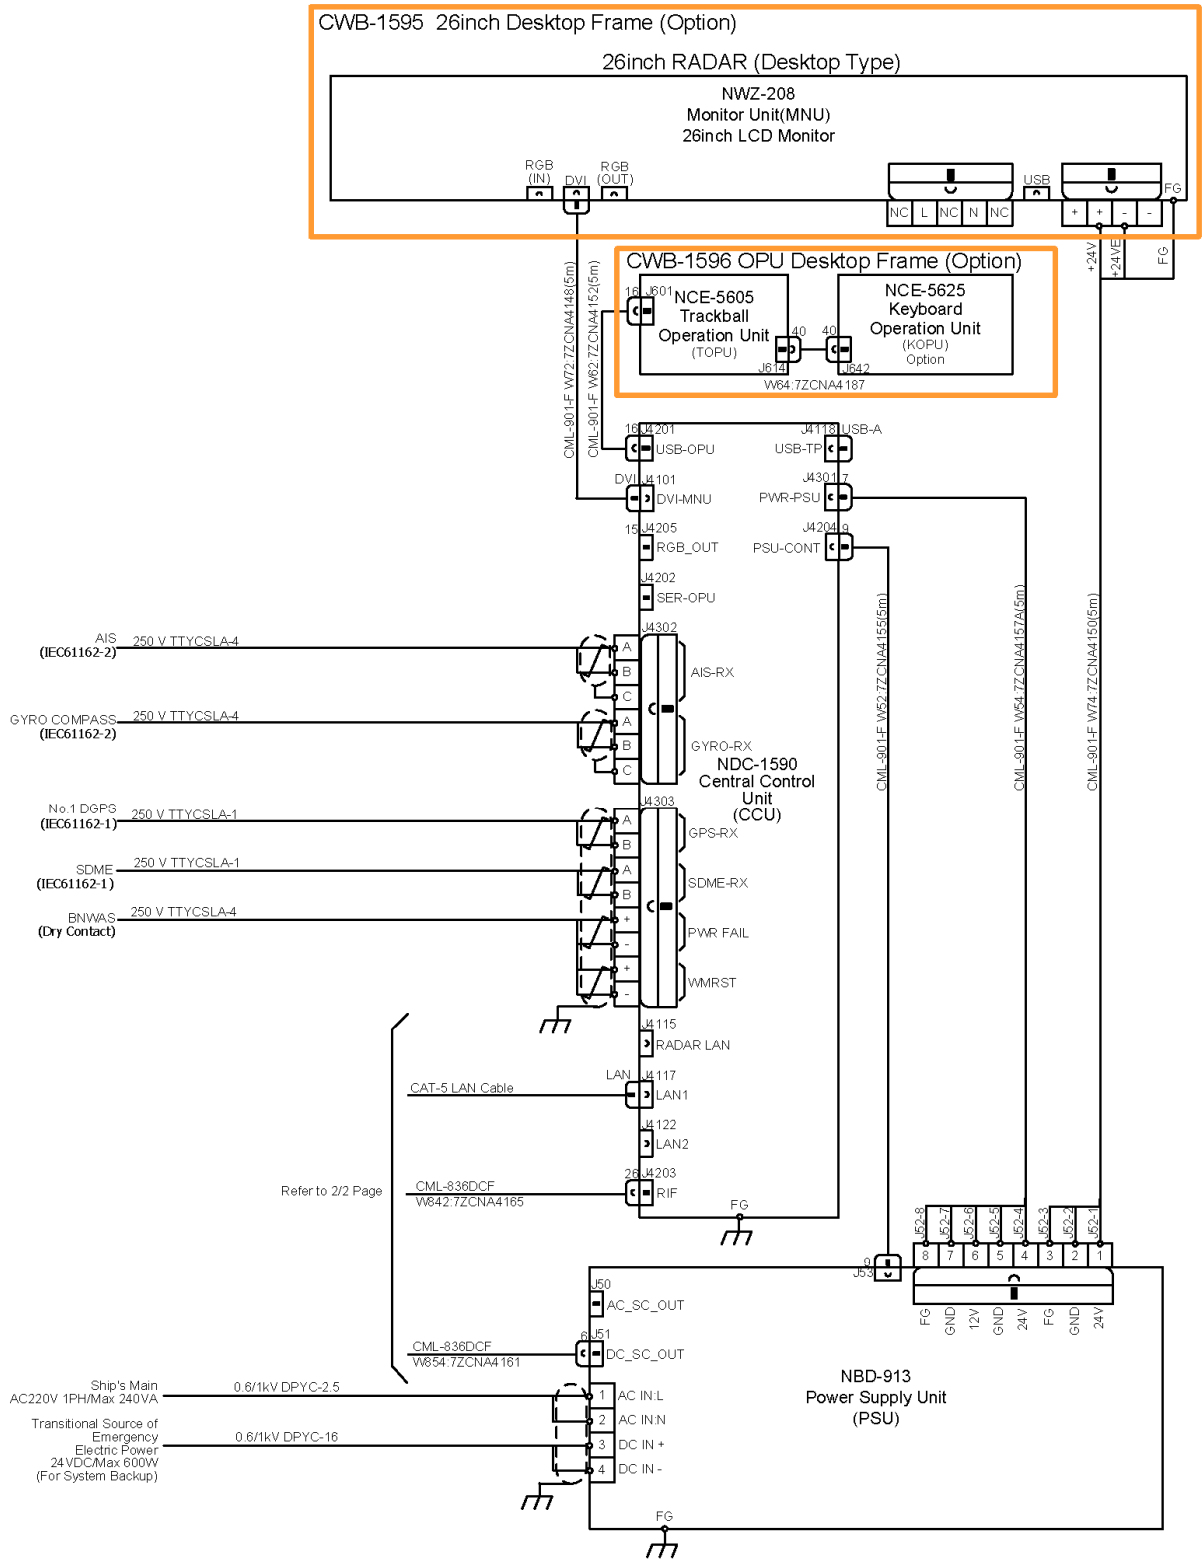


Interconnection Diagram of JMR-9225-6XH RADAR (1/2)

6.5.4 JMR-9225-7X3/9X3

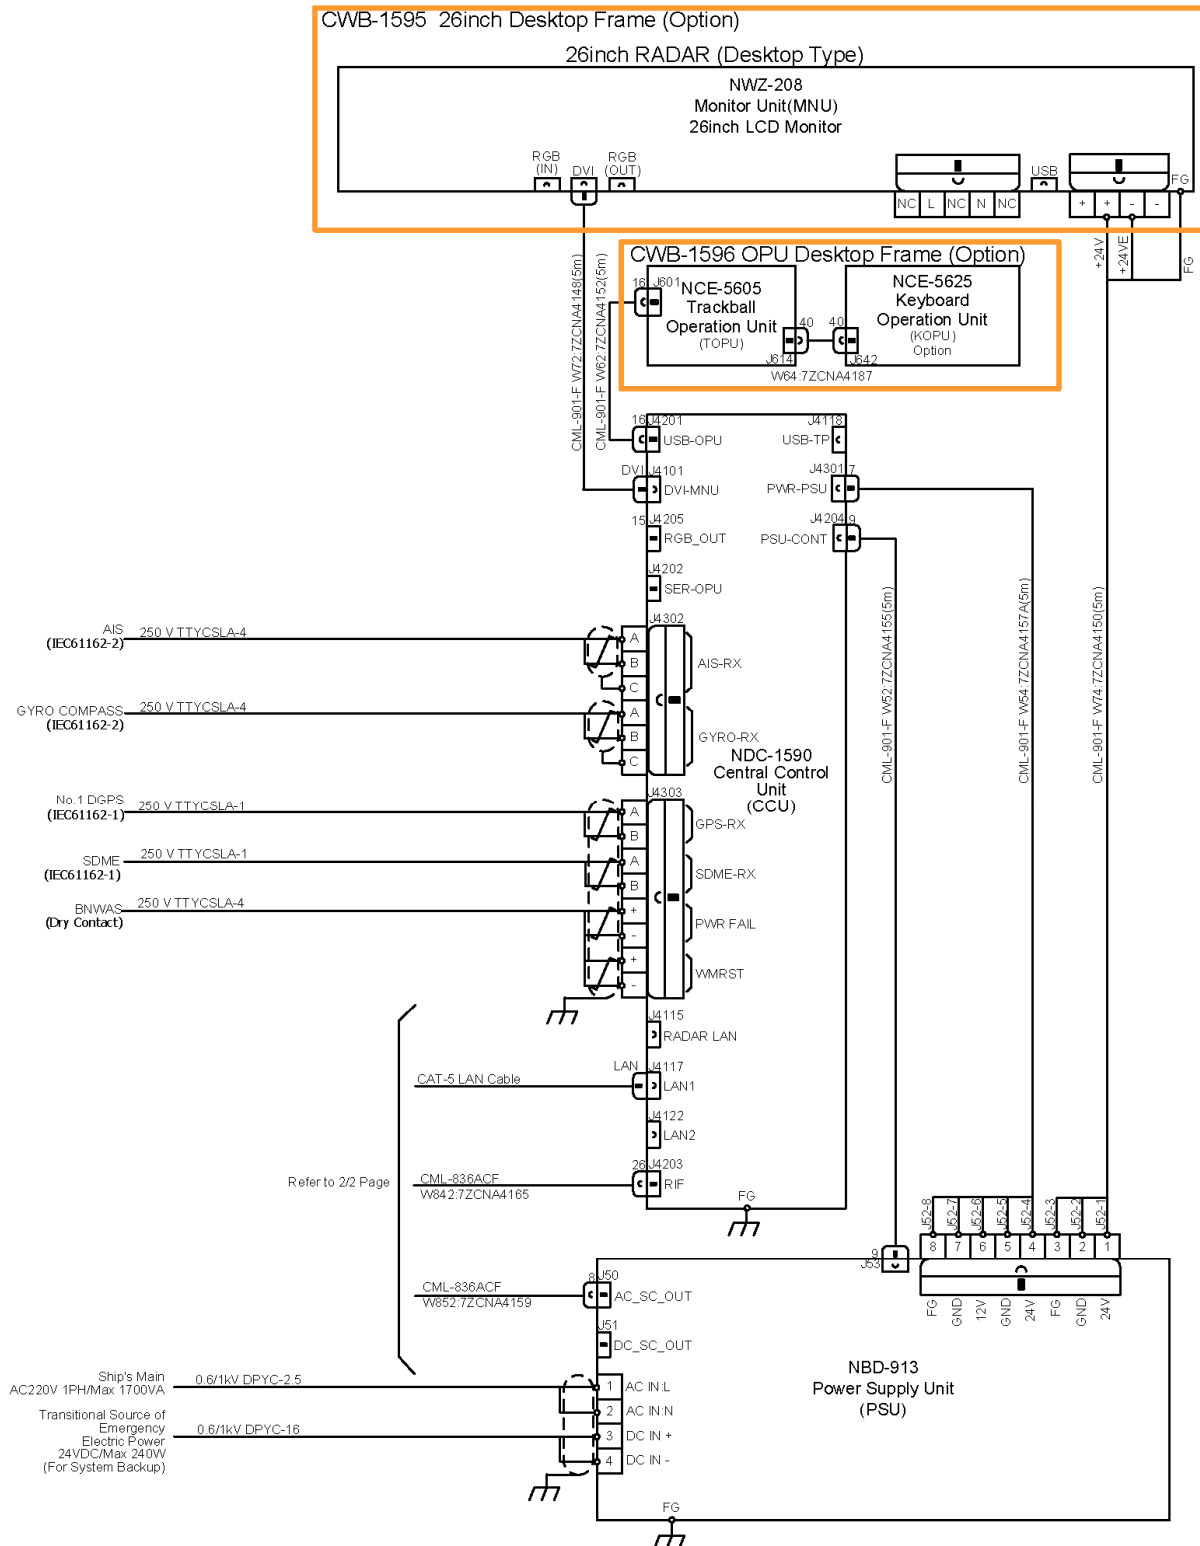


Interconnection Diagram of JMR-9225-7X3/9X3 RADAR (1/2)

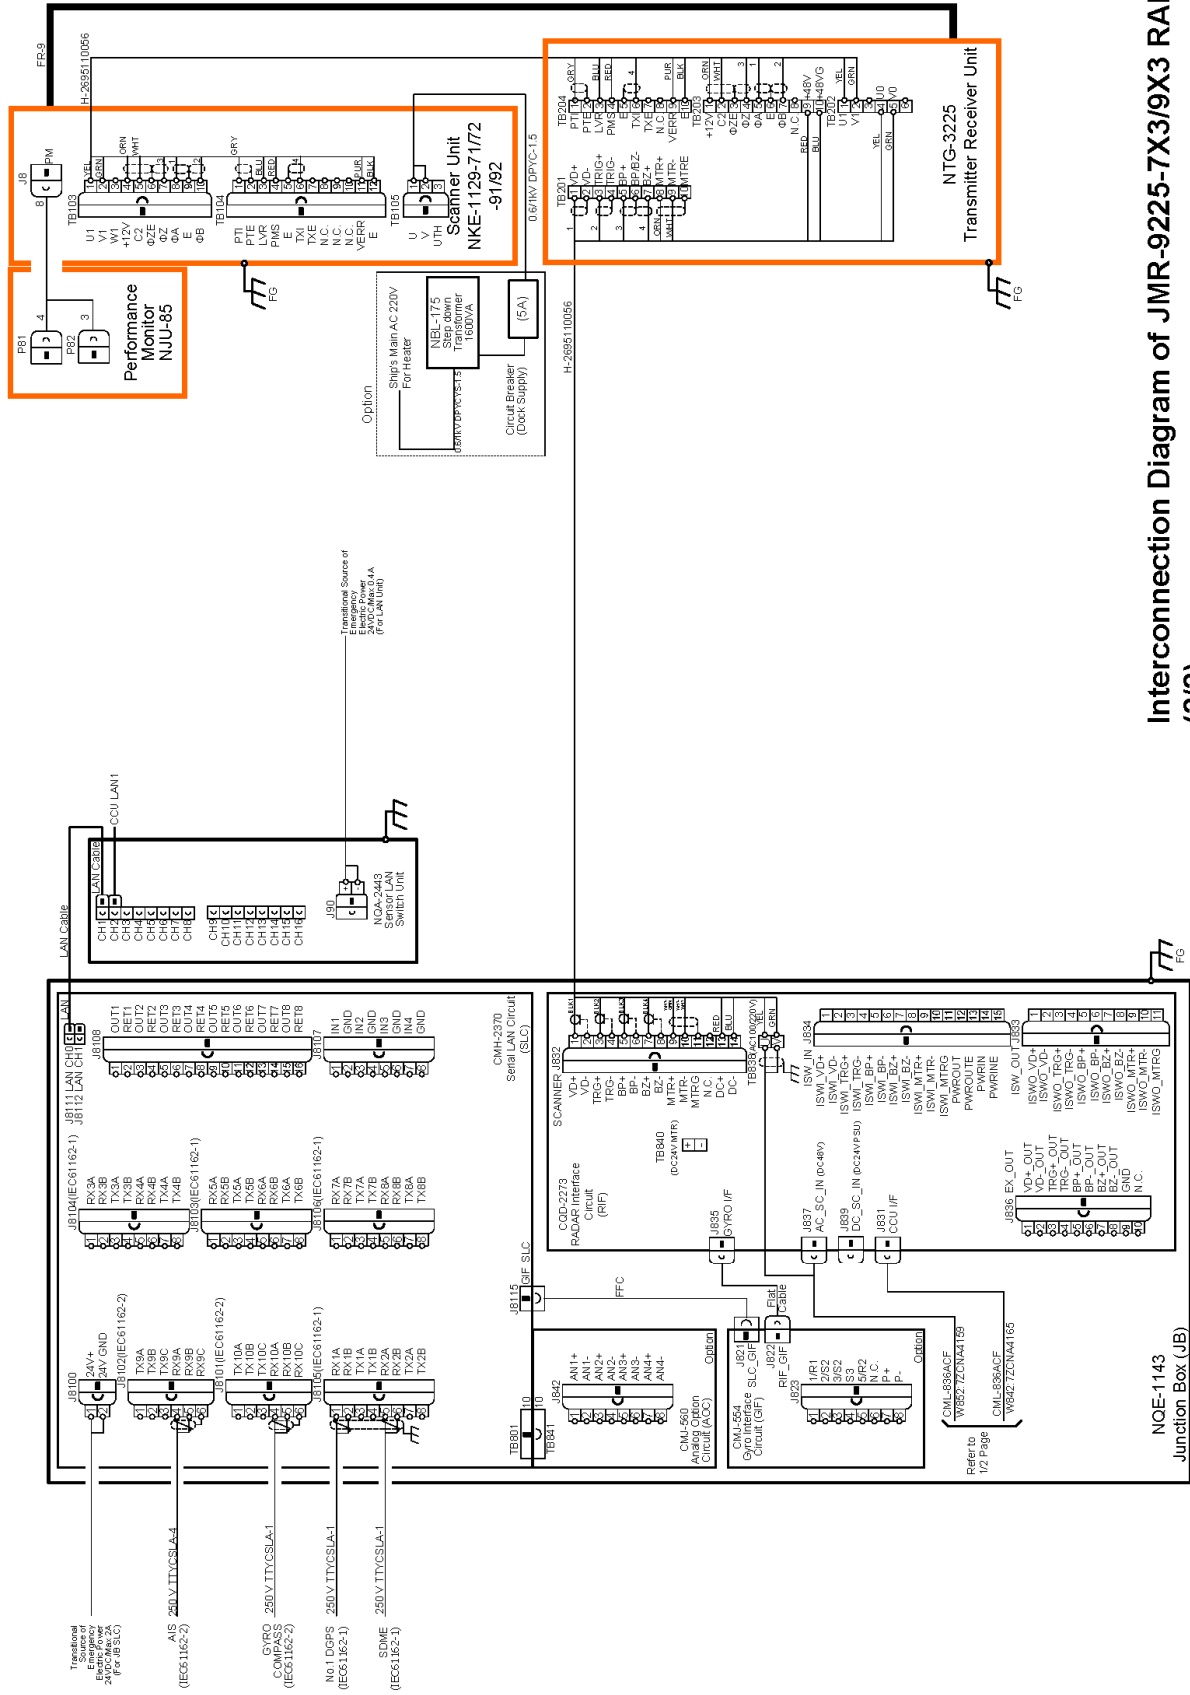


Interconnection Diagram of JMR-9225-7X3/9X3 RADAR (2/2)


6.5.5 JMR-9230-S

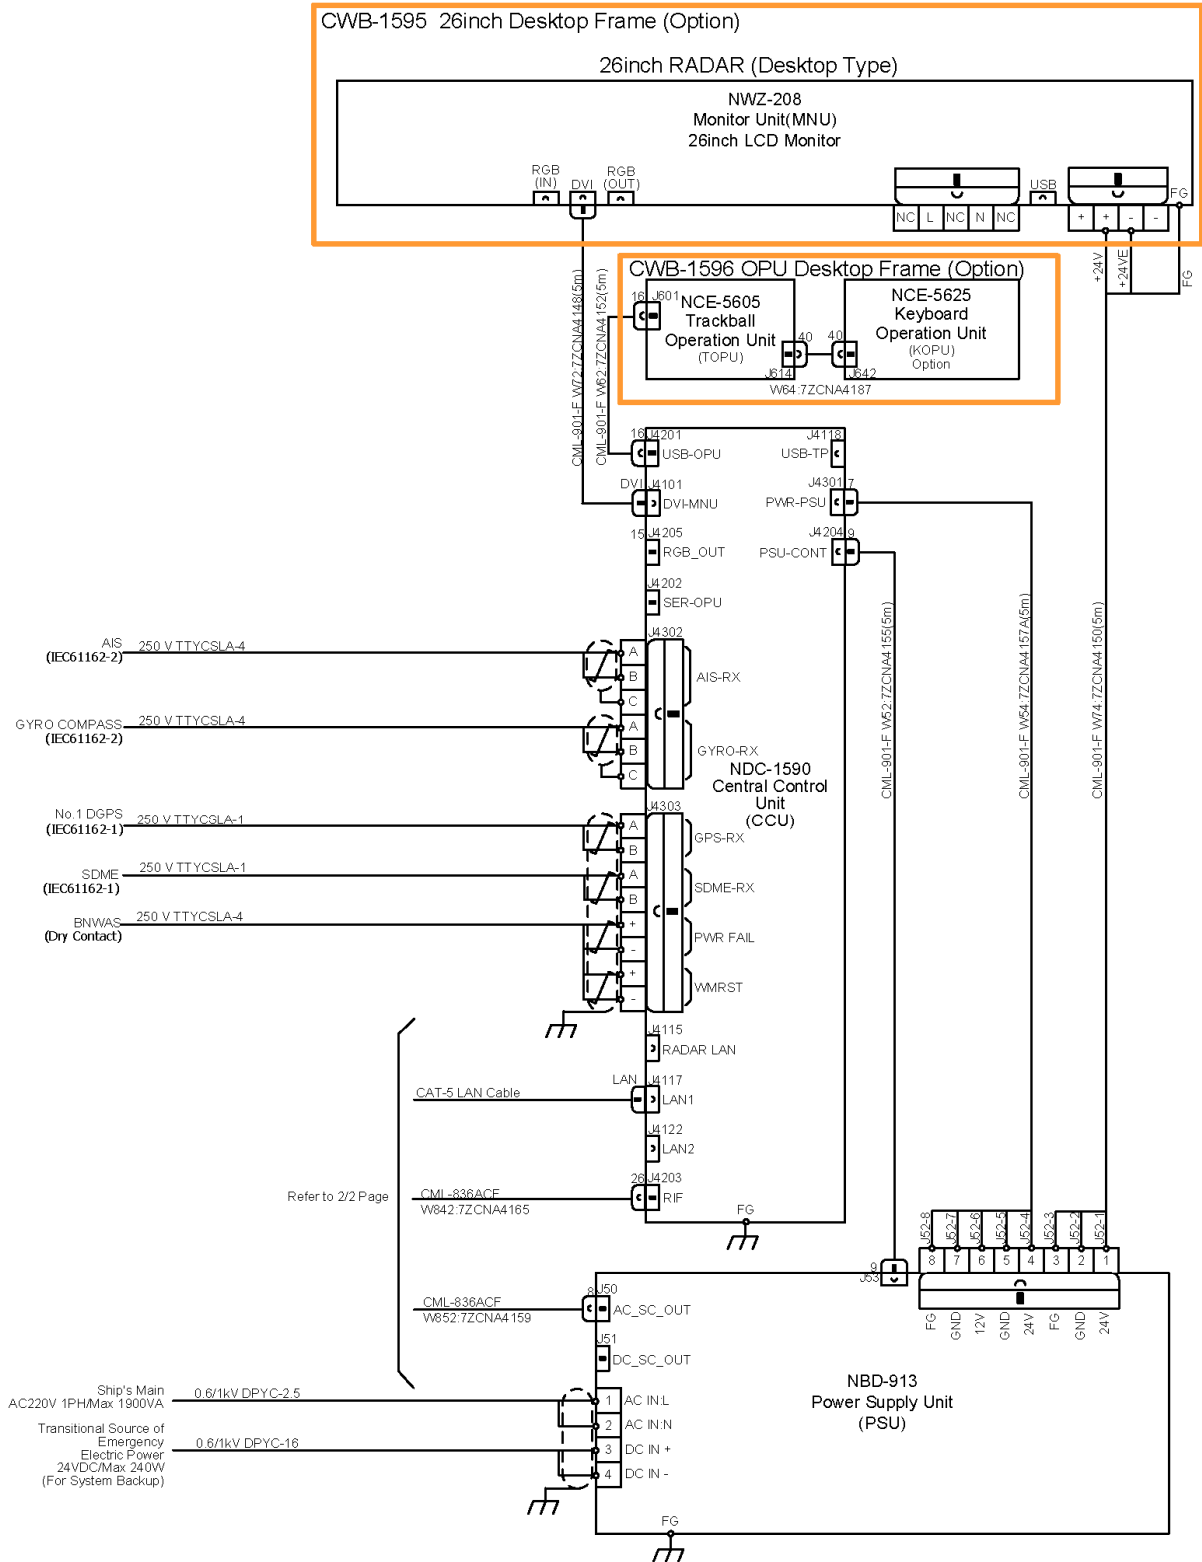

Interconnection Diagram of JMR-9230-S RADAR (1/2)

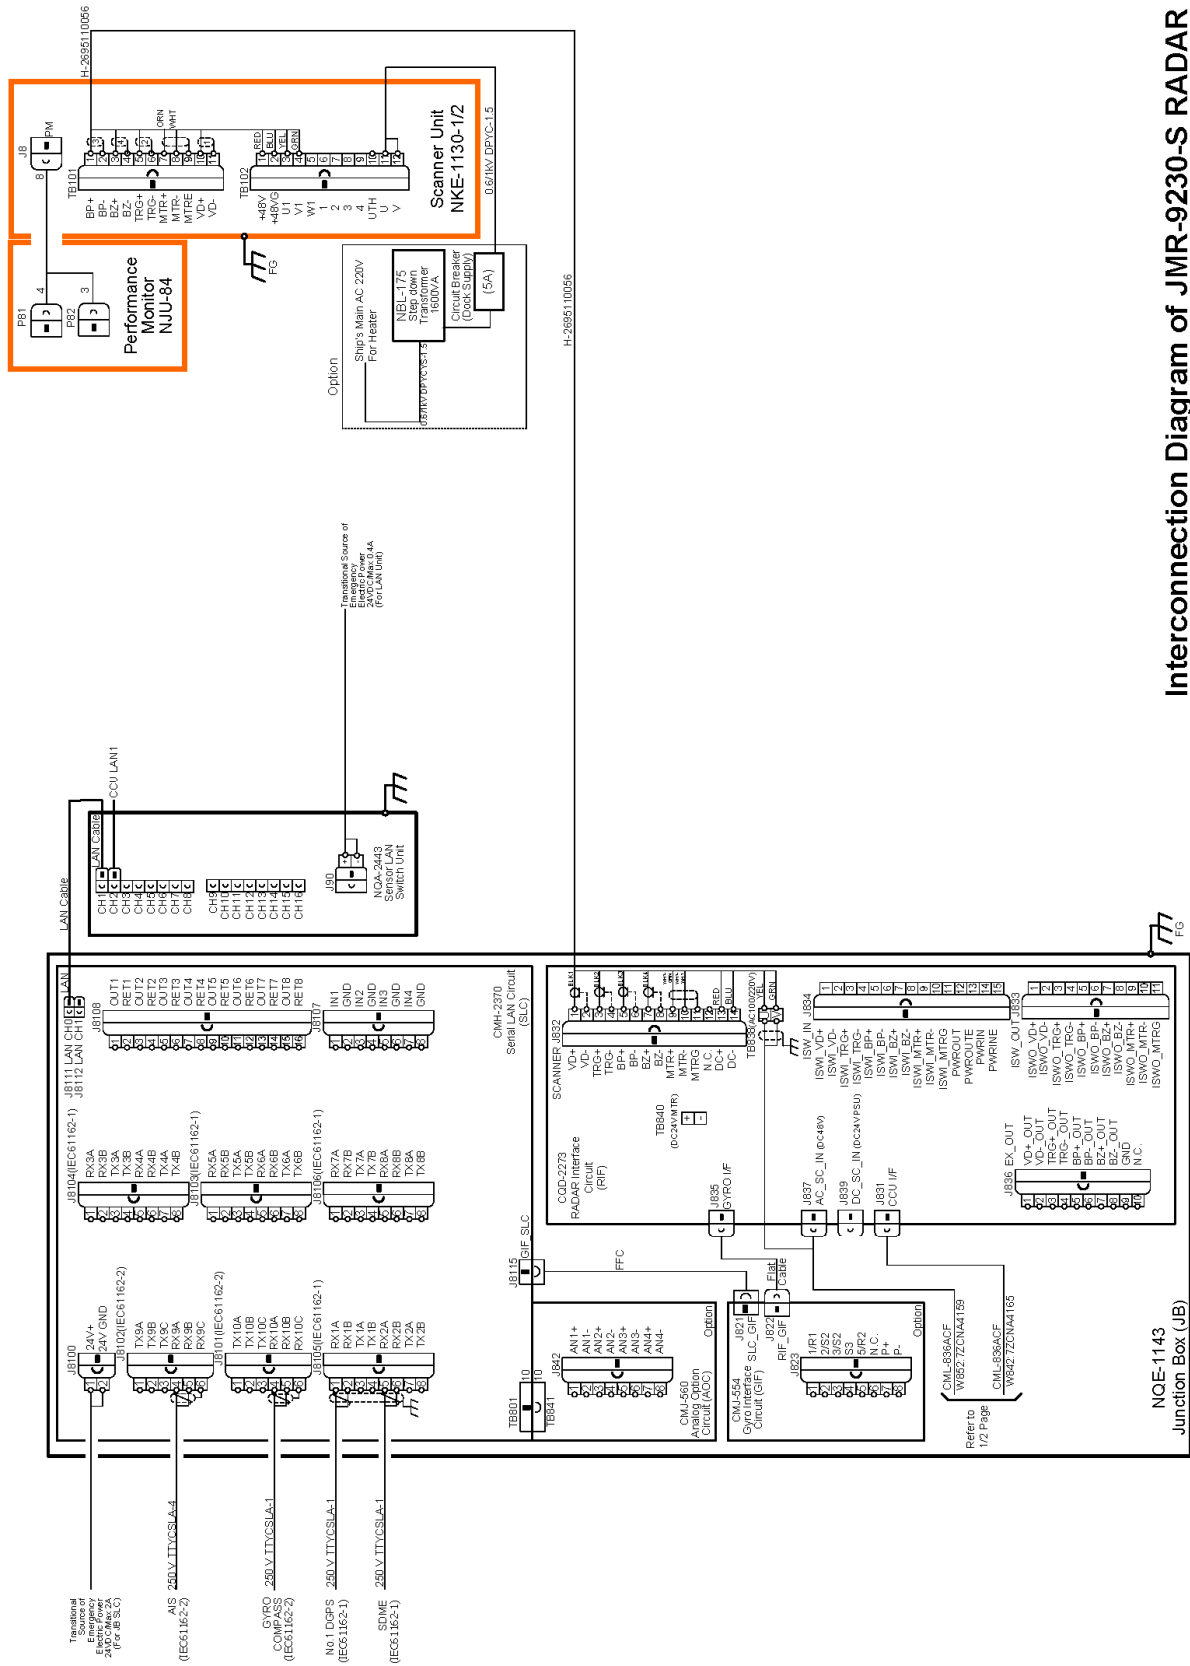


Interconnection Diagram of JMR-9230-S RADAR (2/2)

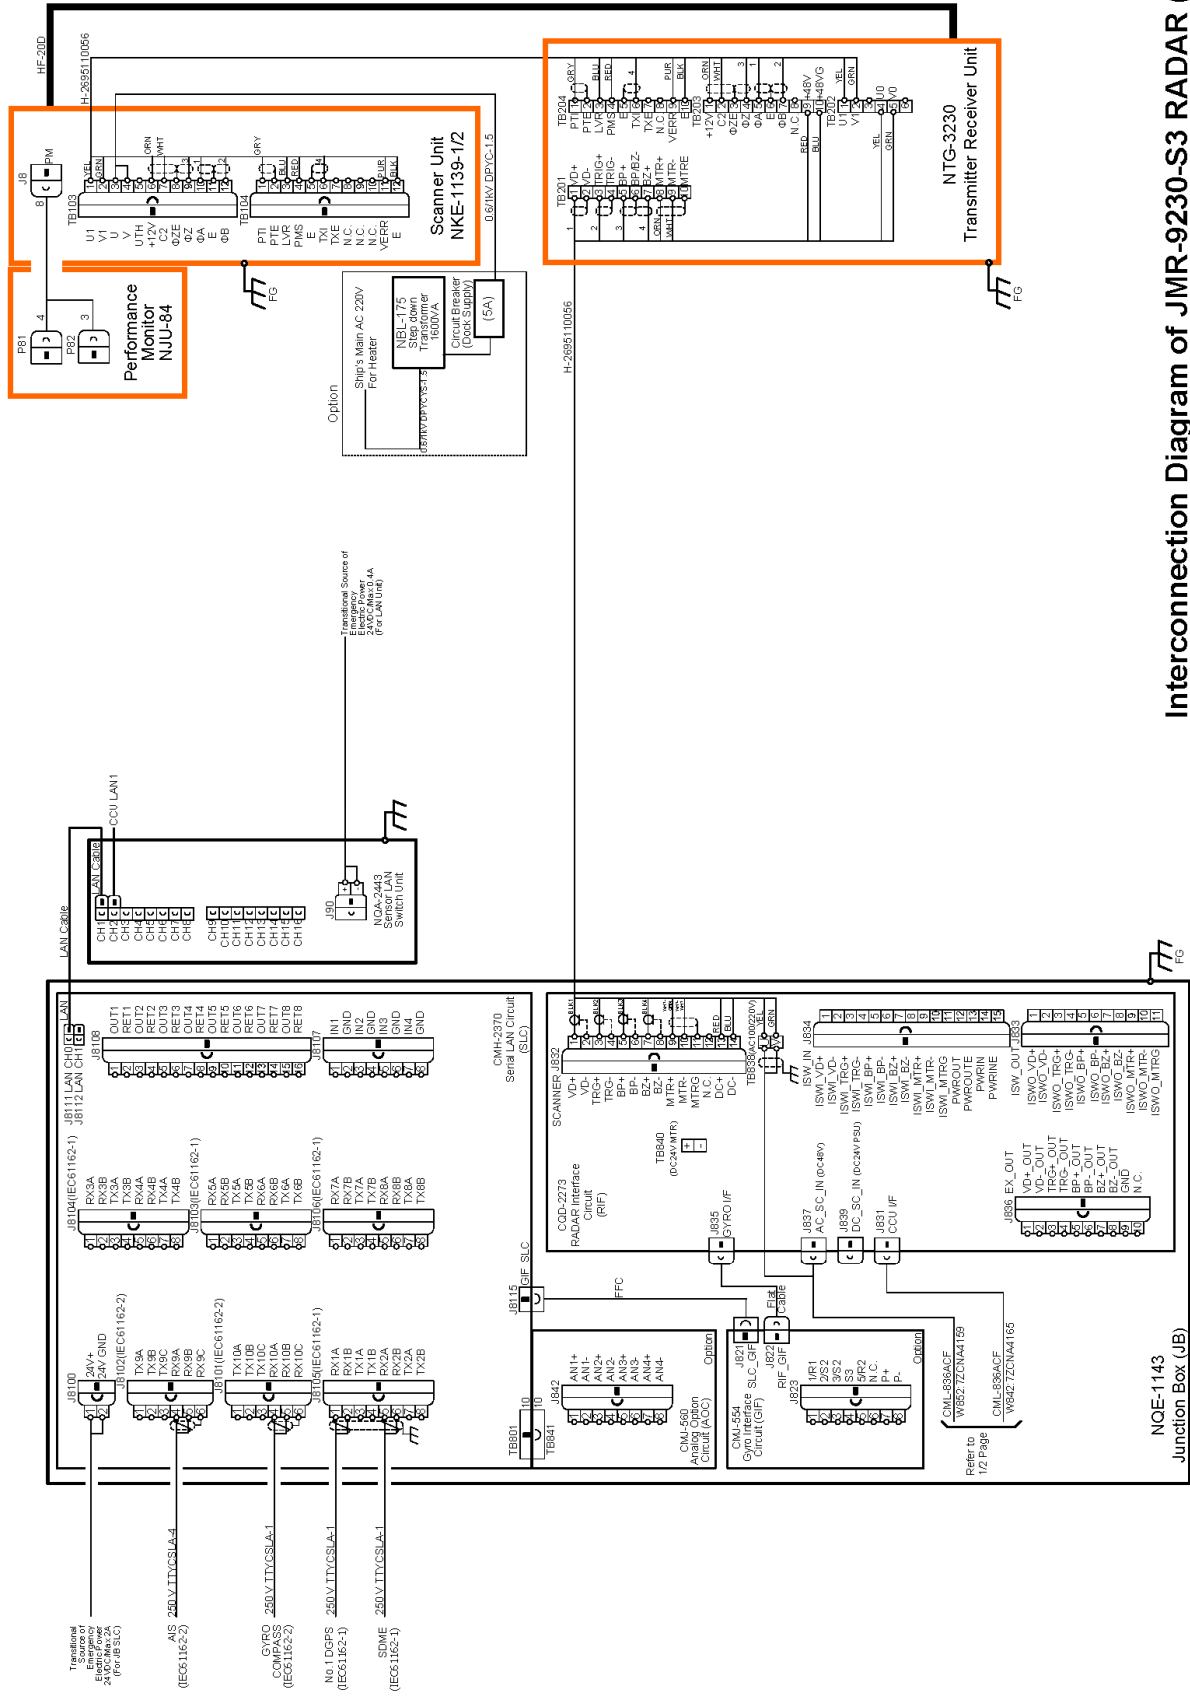


Interconnection Diagram of JMR-9230-S3 RADAR (2/2)


6.5.7 JMR-9272-S

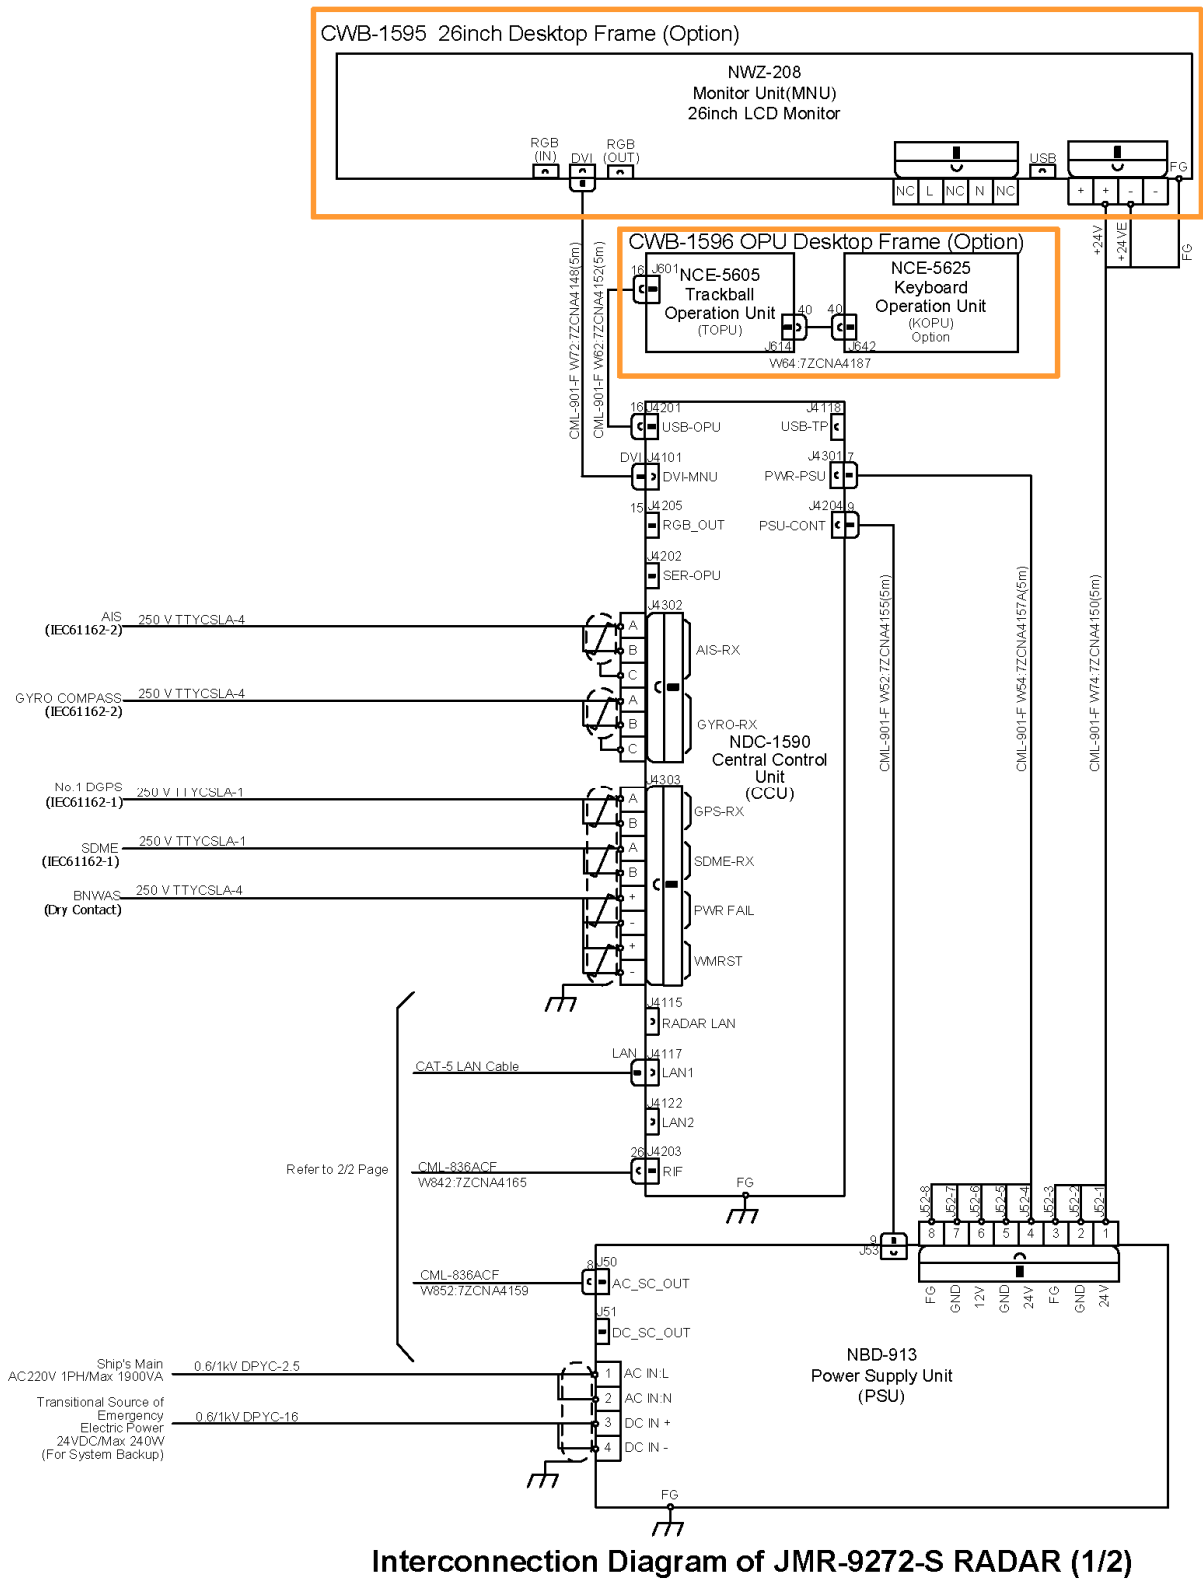


Interconnection Diagram of JMR-9272-S RADAR (1/2)

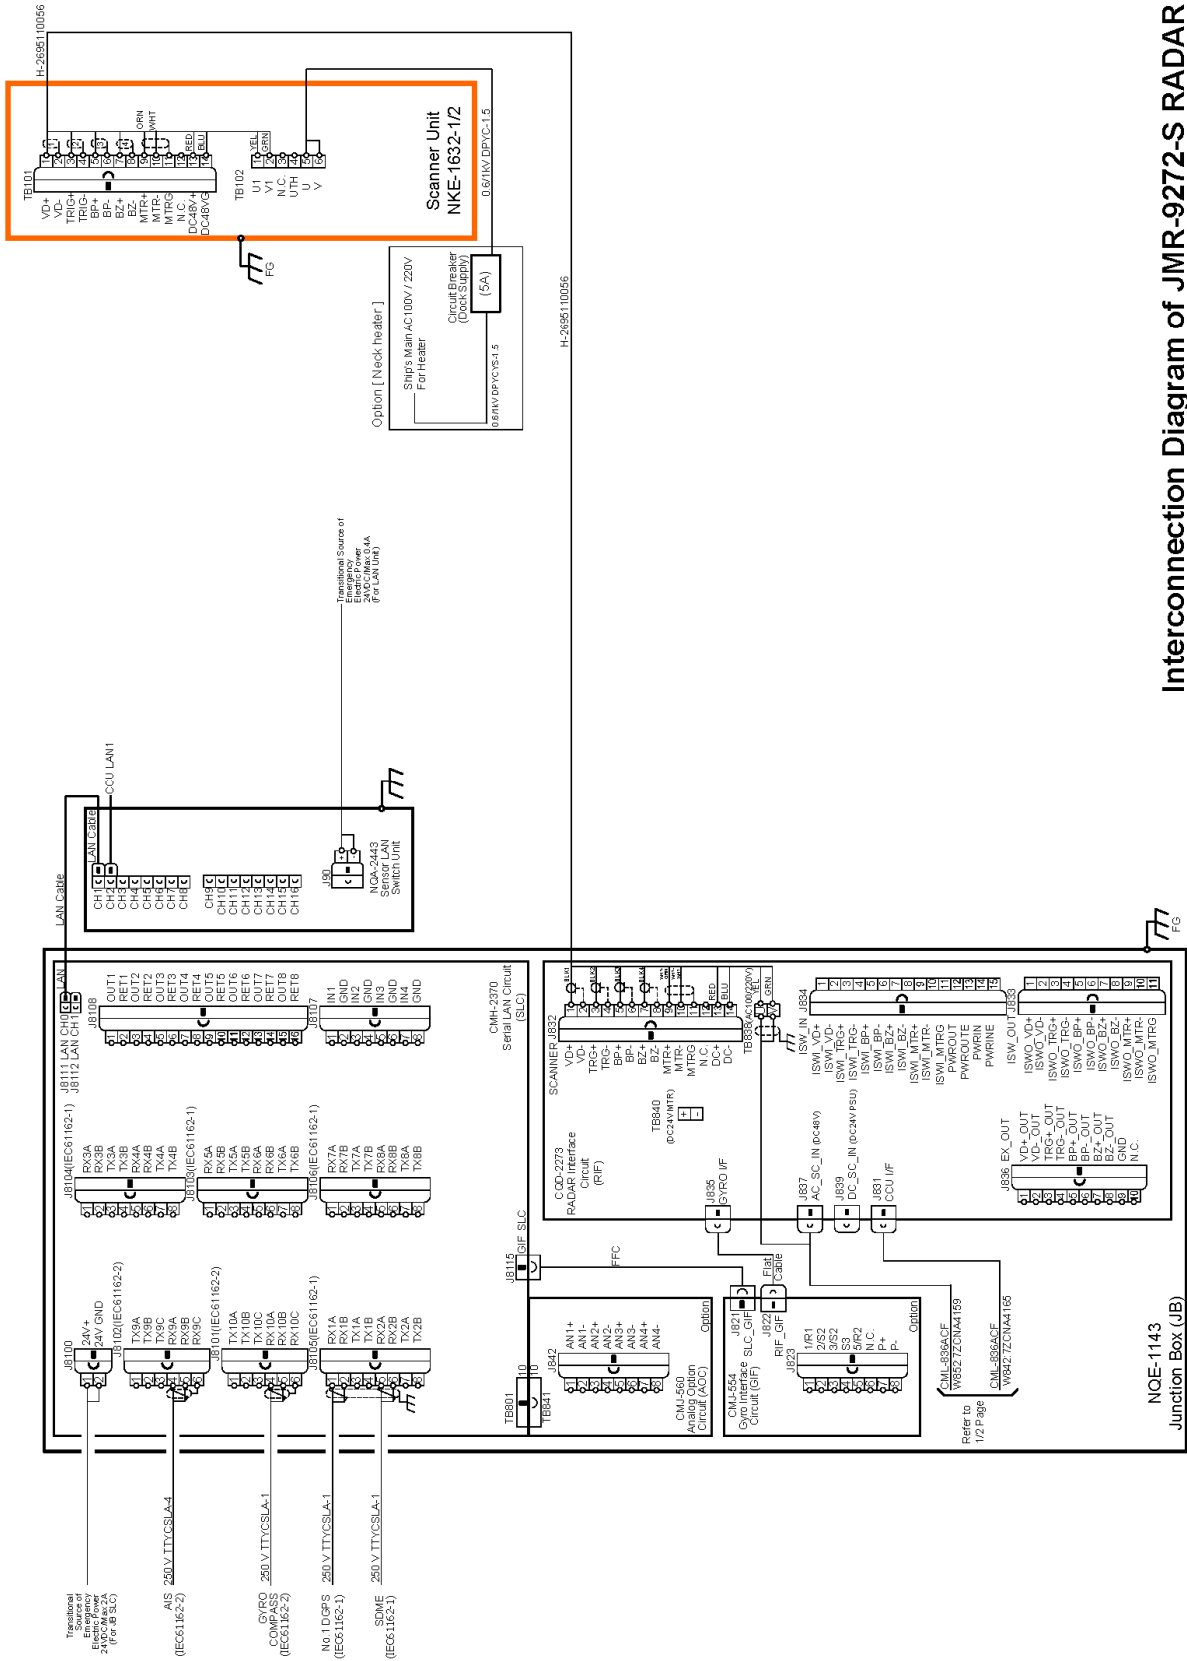

6.5.8 JMR-9282-S/SH

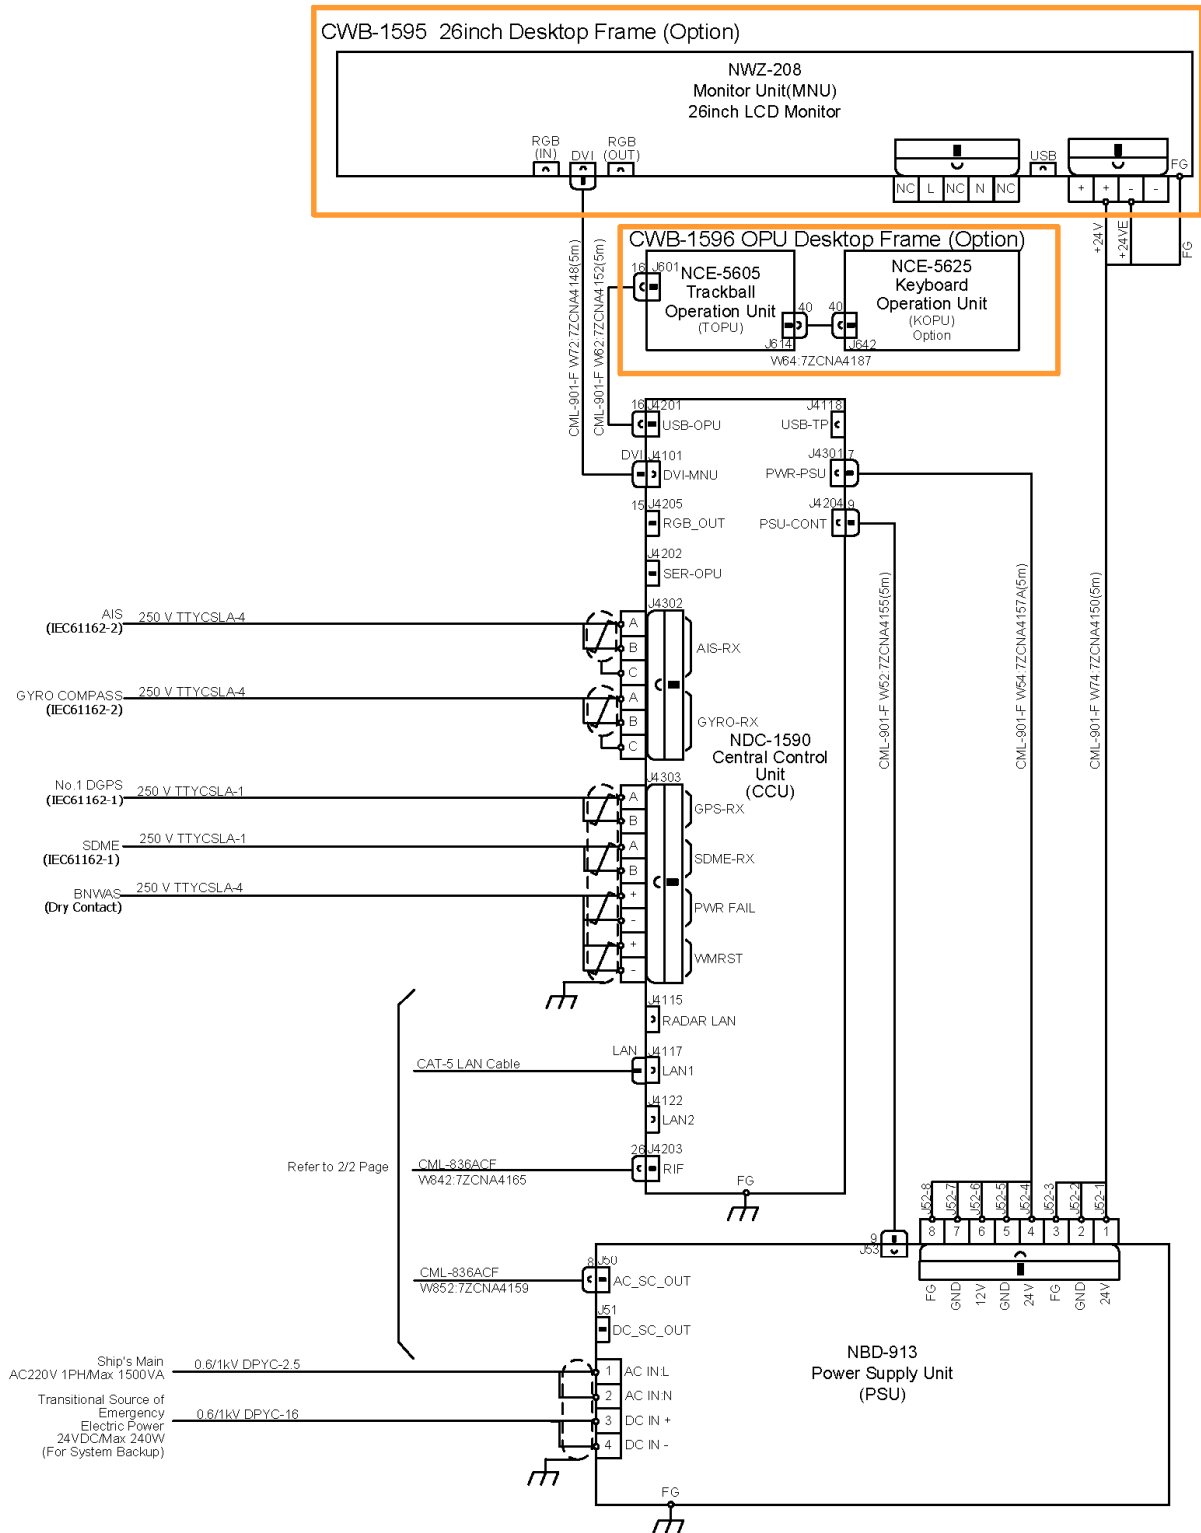


Interconnection Diagram of JMR-9282-S/SH RADAR (1/2)

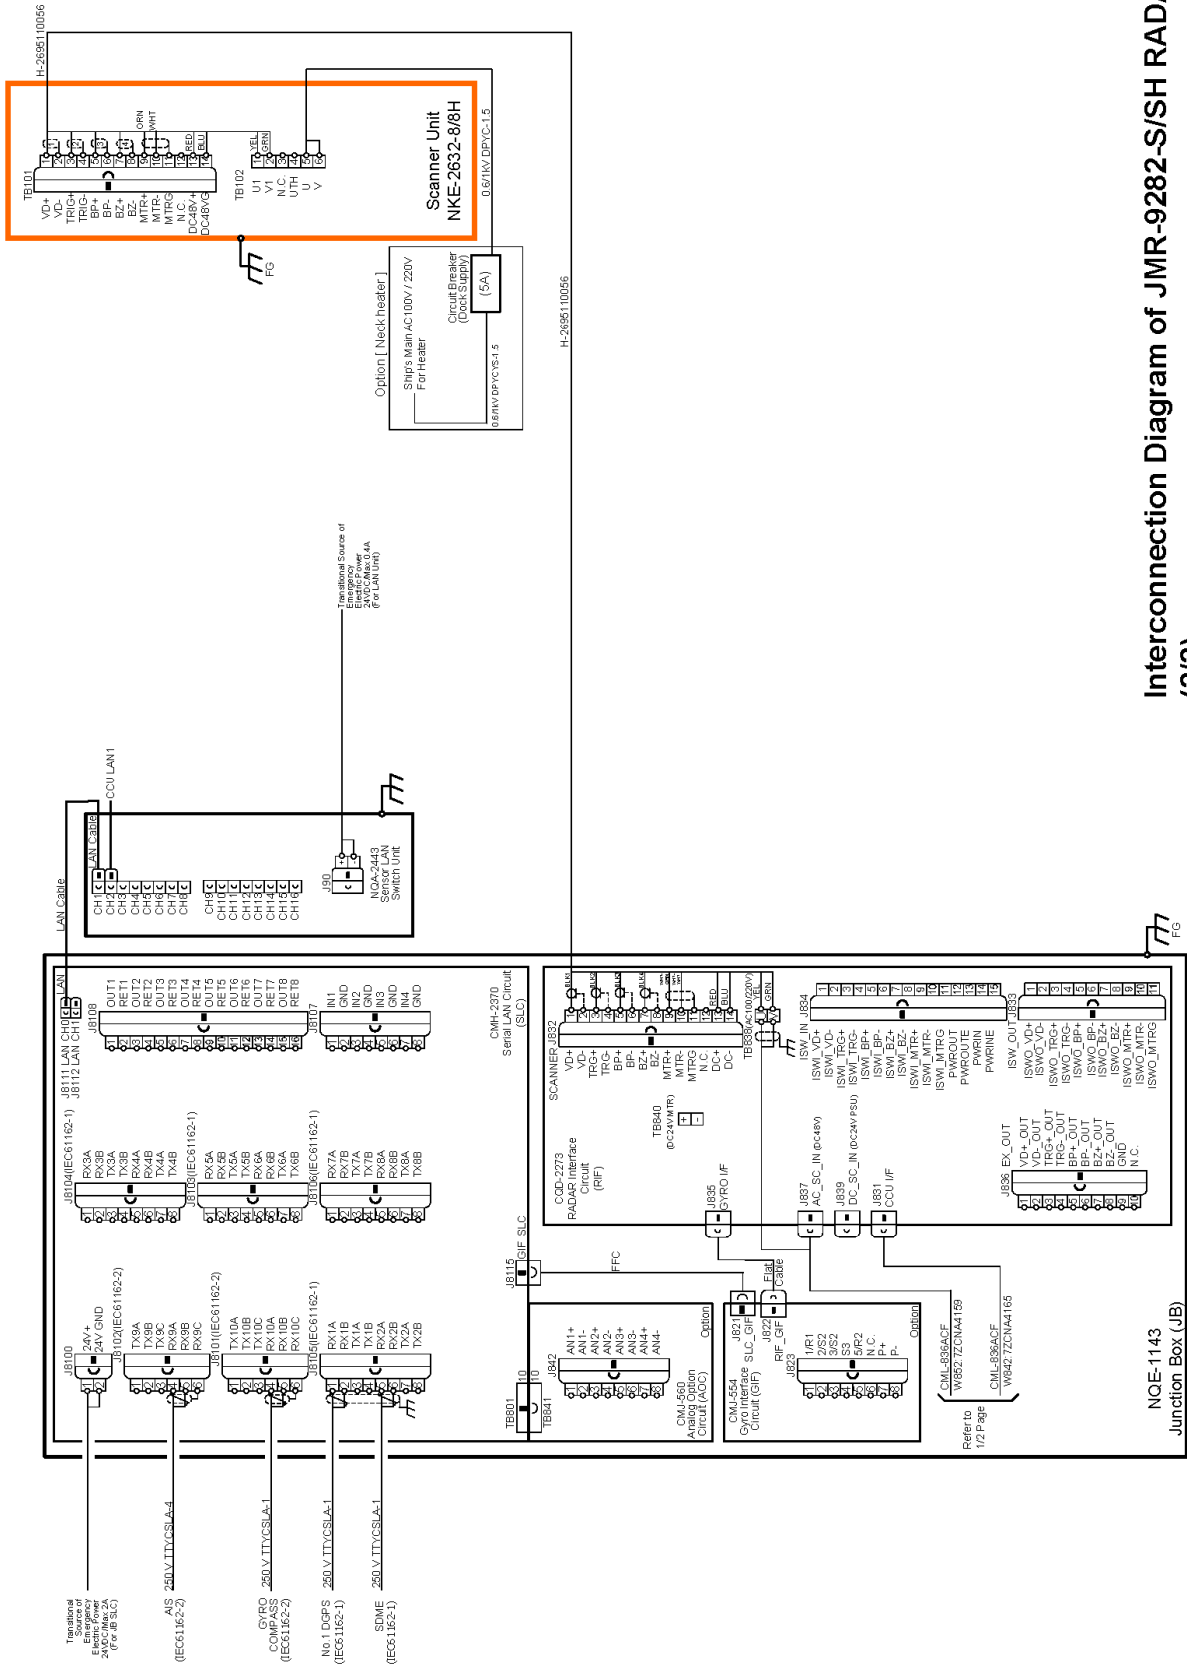


Interconnection Diagram of JMR-9282-S/SH RADAR (2/2)

6.5.9 JAN-9201

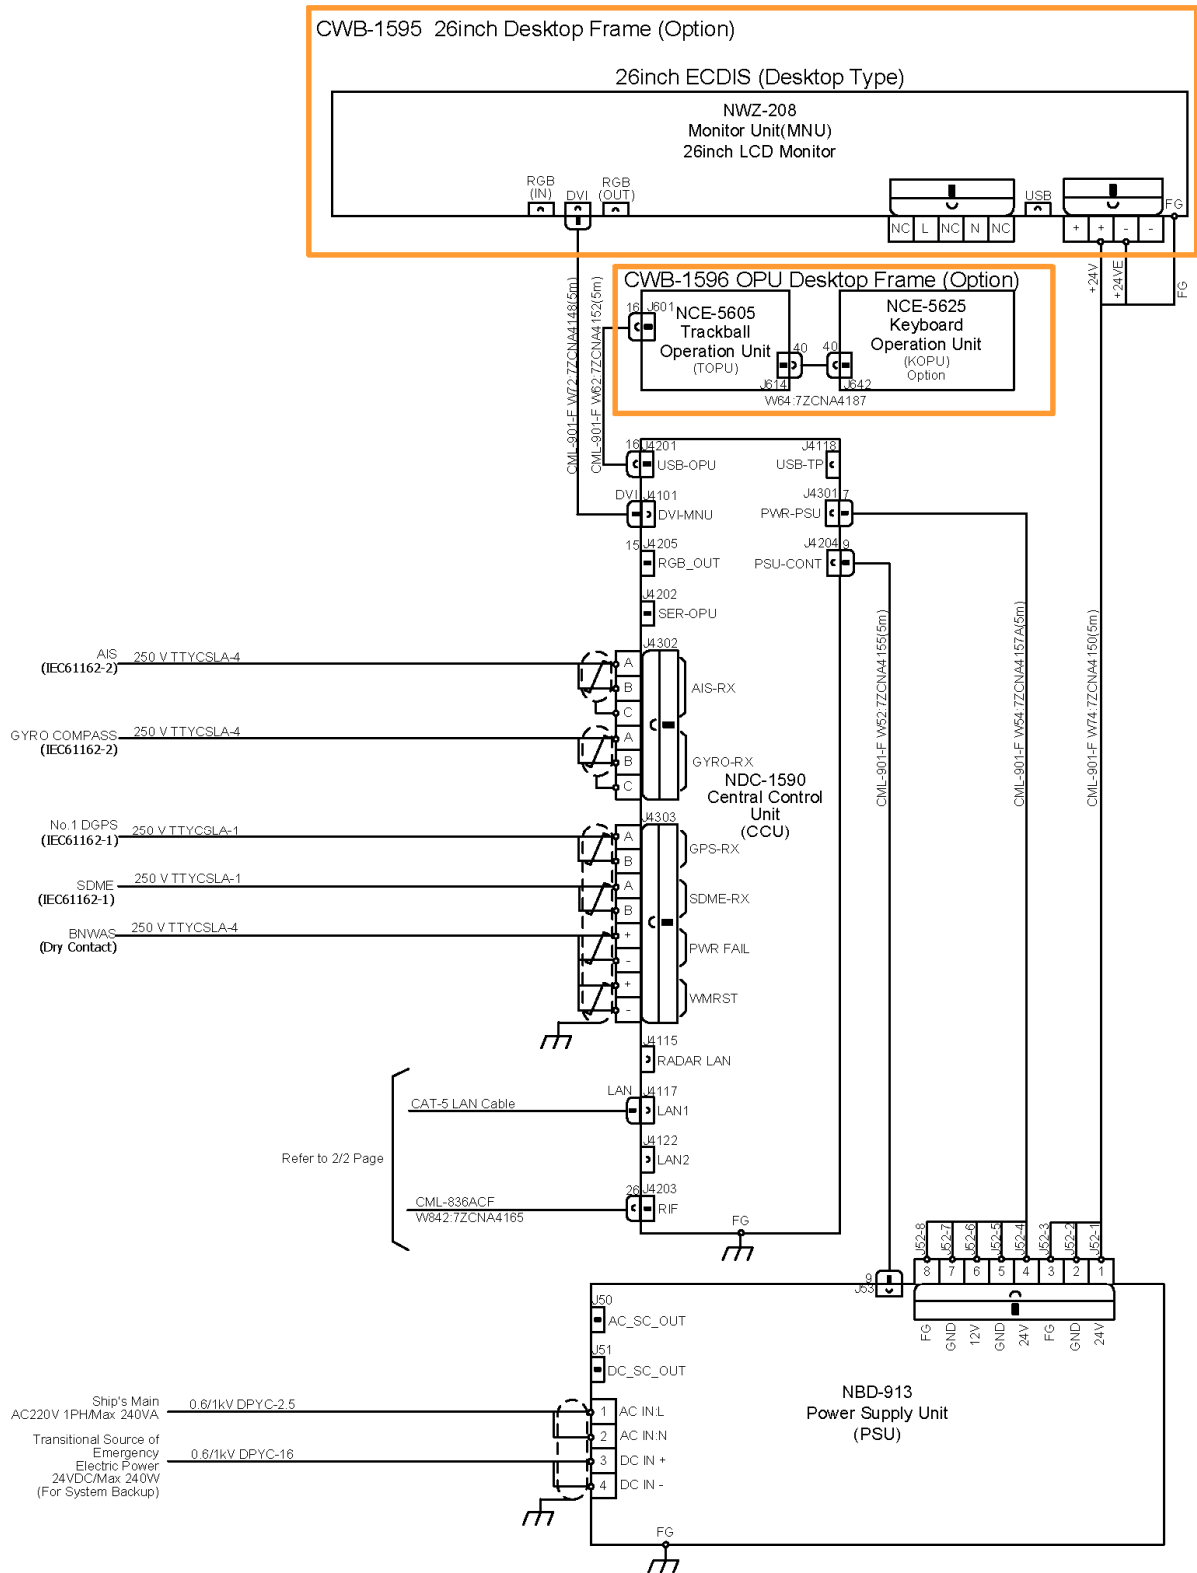


Interconnection Diagram of JAN-9201 ECDIS (1/2)

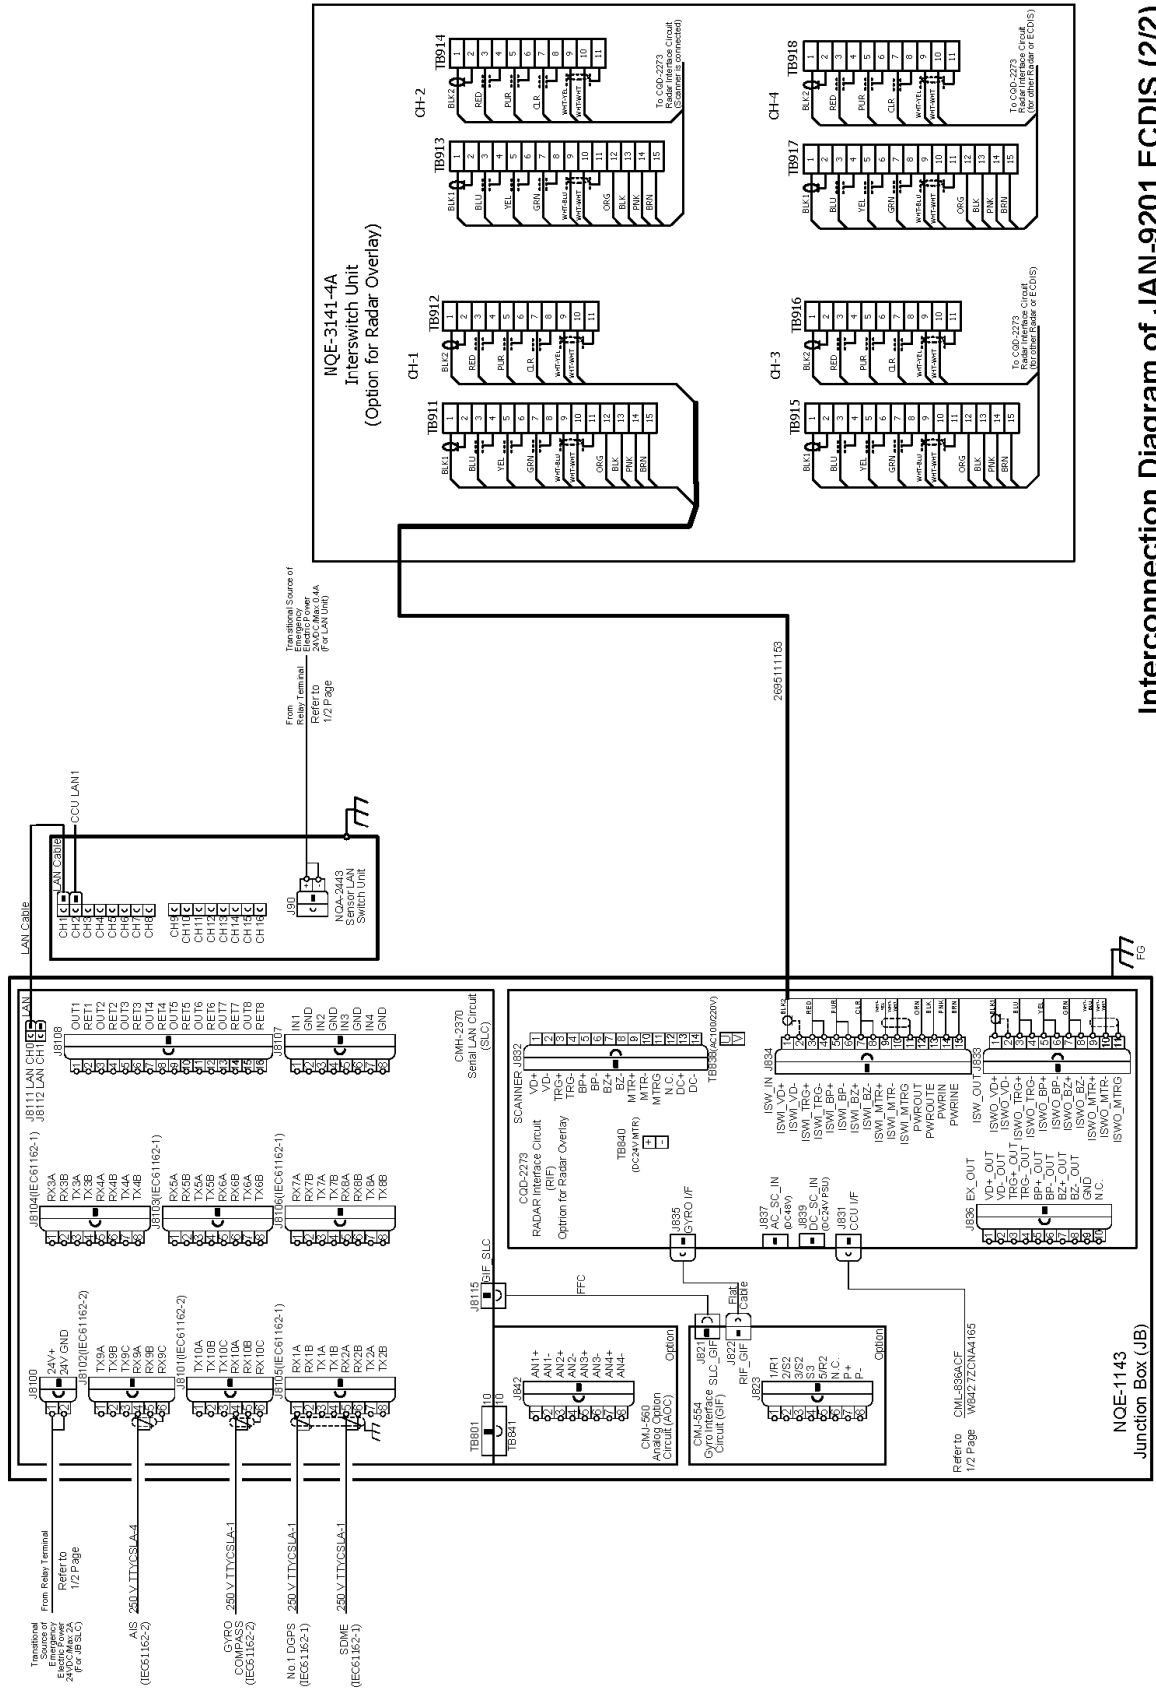


Interconnection Diagram of JAN-9201 ECDIS (2/2)

6.5.10 JAN-9202

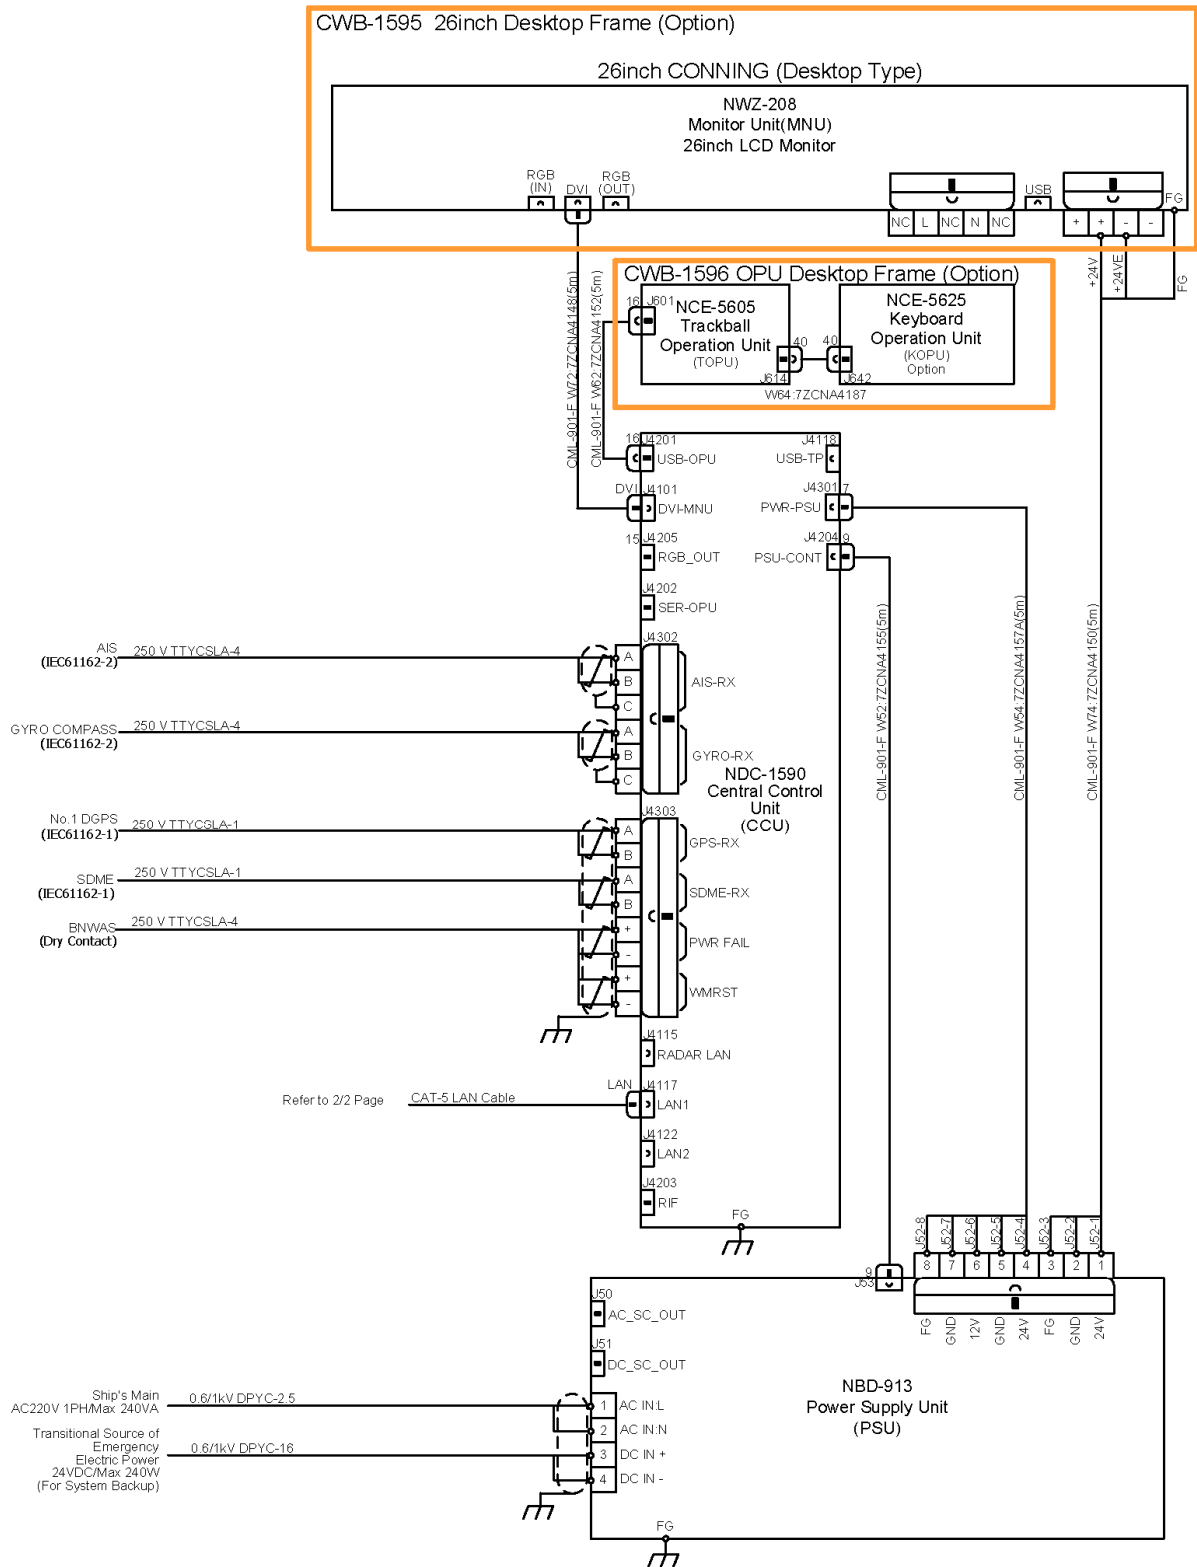


Interconnection Diagram of JAN-9202 CONNING (1/2)

6.5.11 JMR-7210-6X/6XH

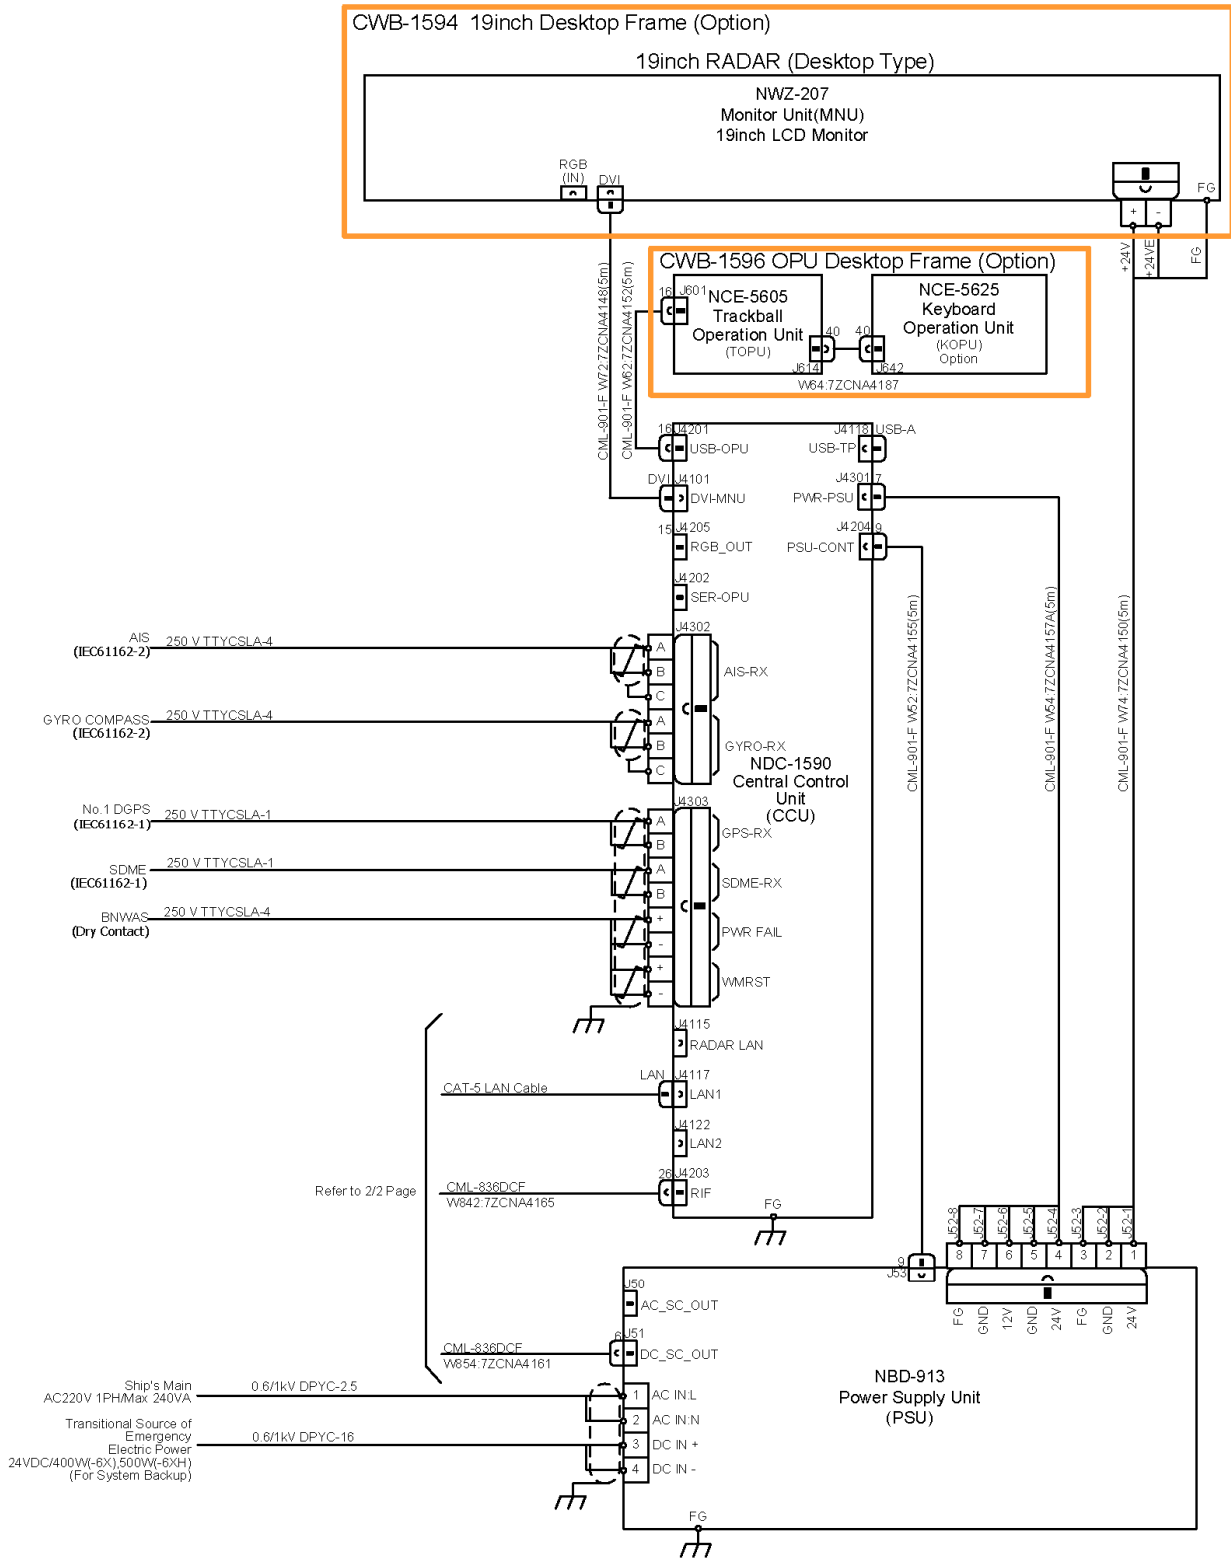


Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

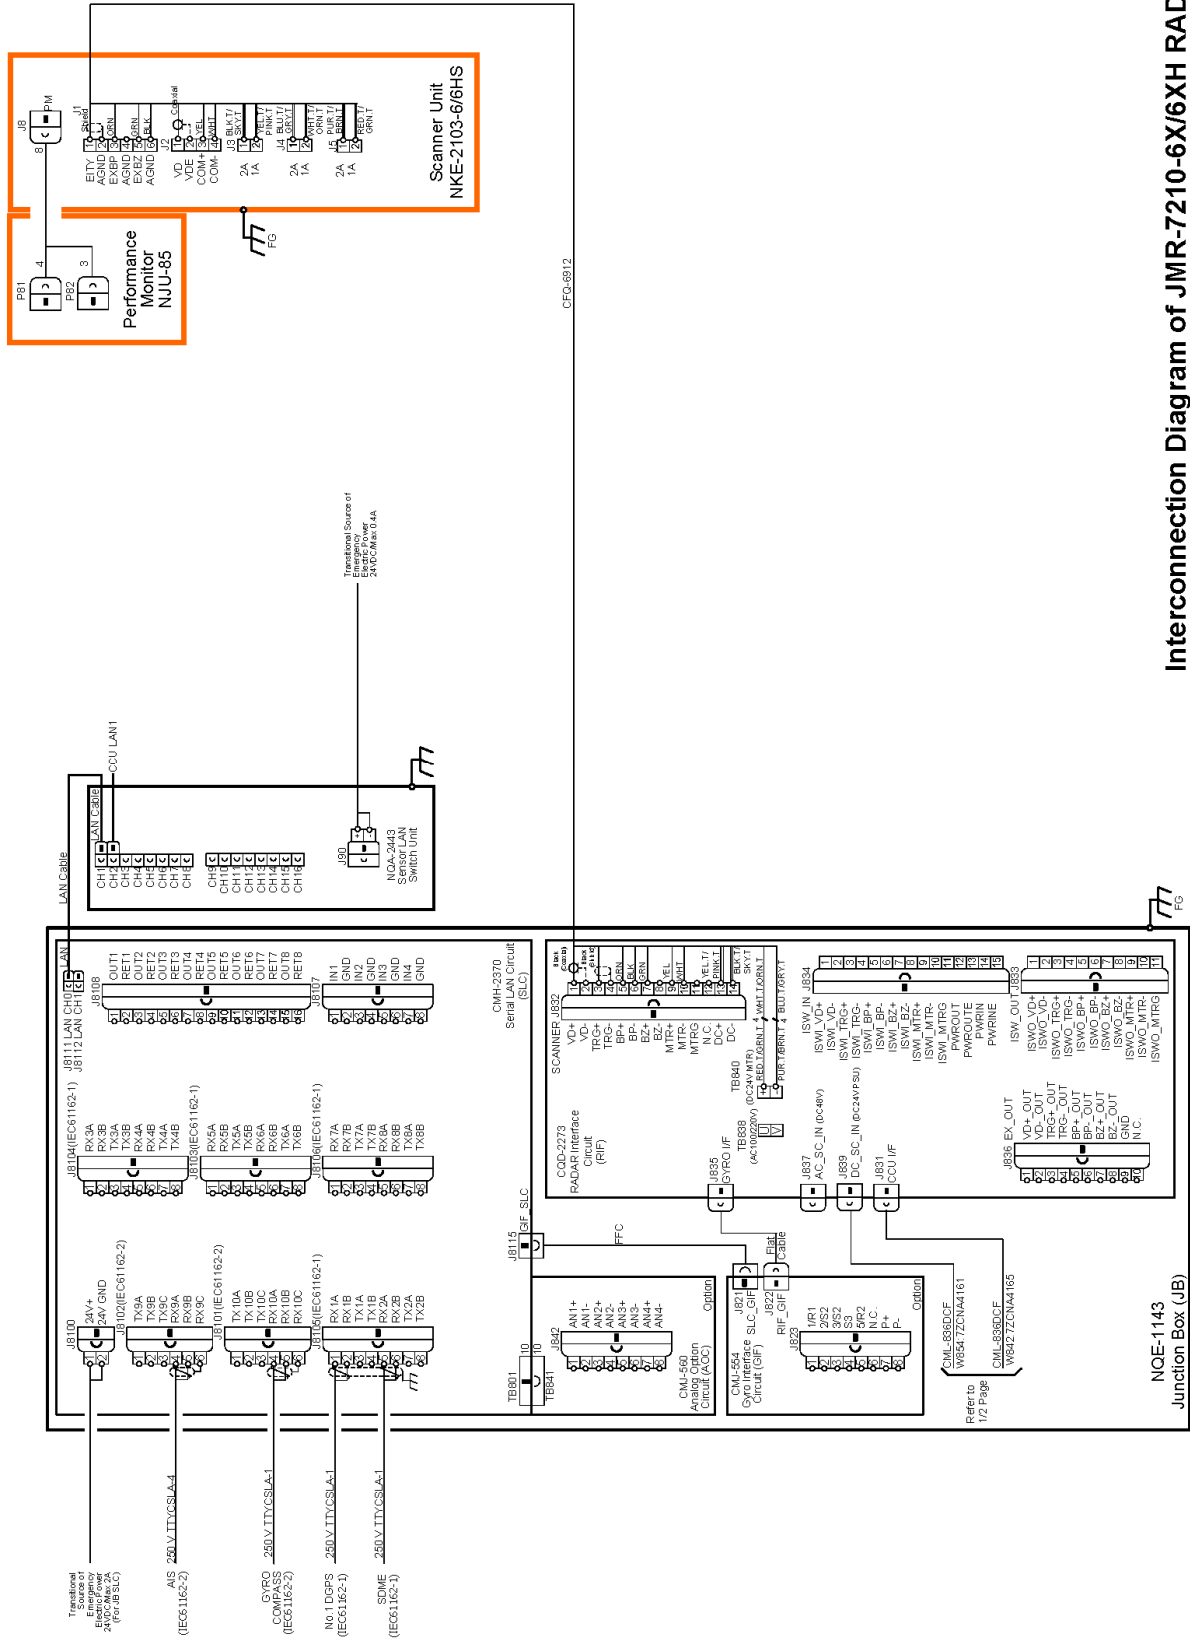


Interconnection Diagram of JMR-7210-6X/6XH RADAR (2/2)

6.5.12 JMR-7225-6X/9X

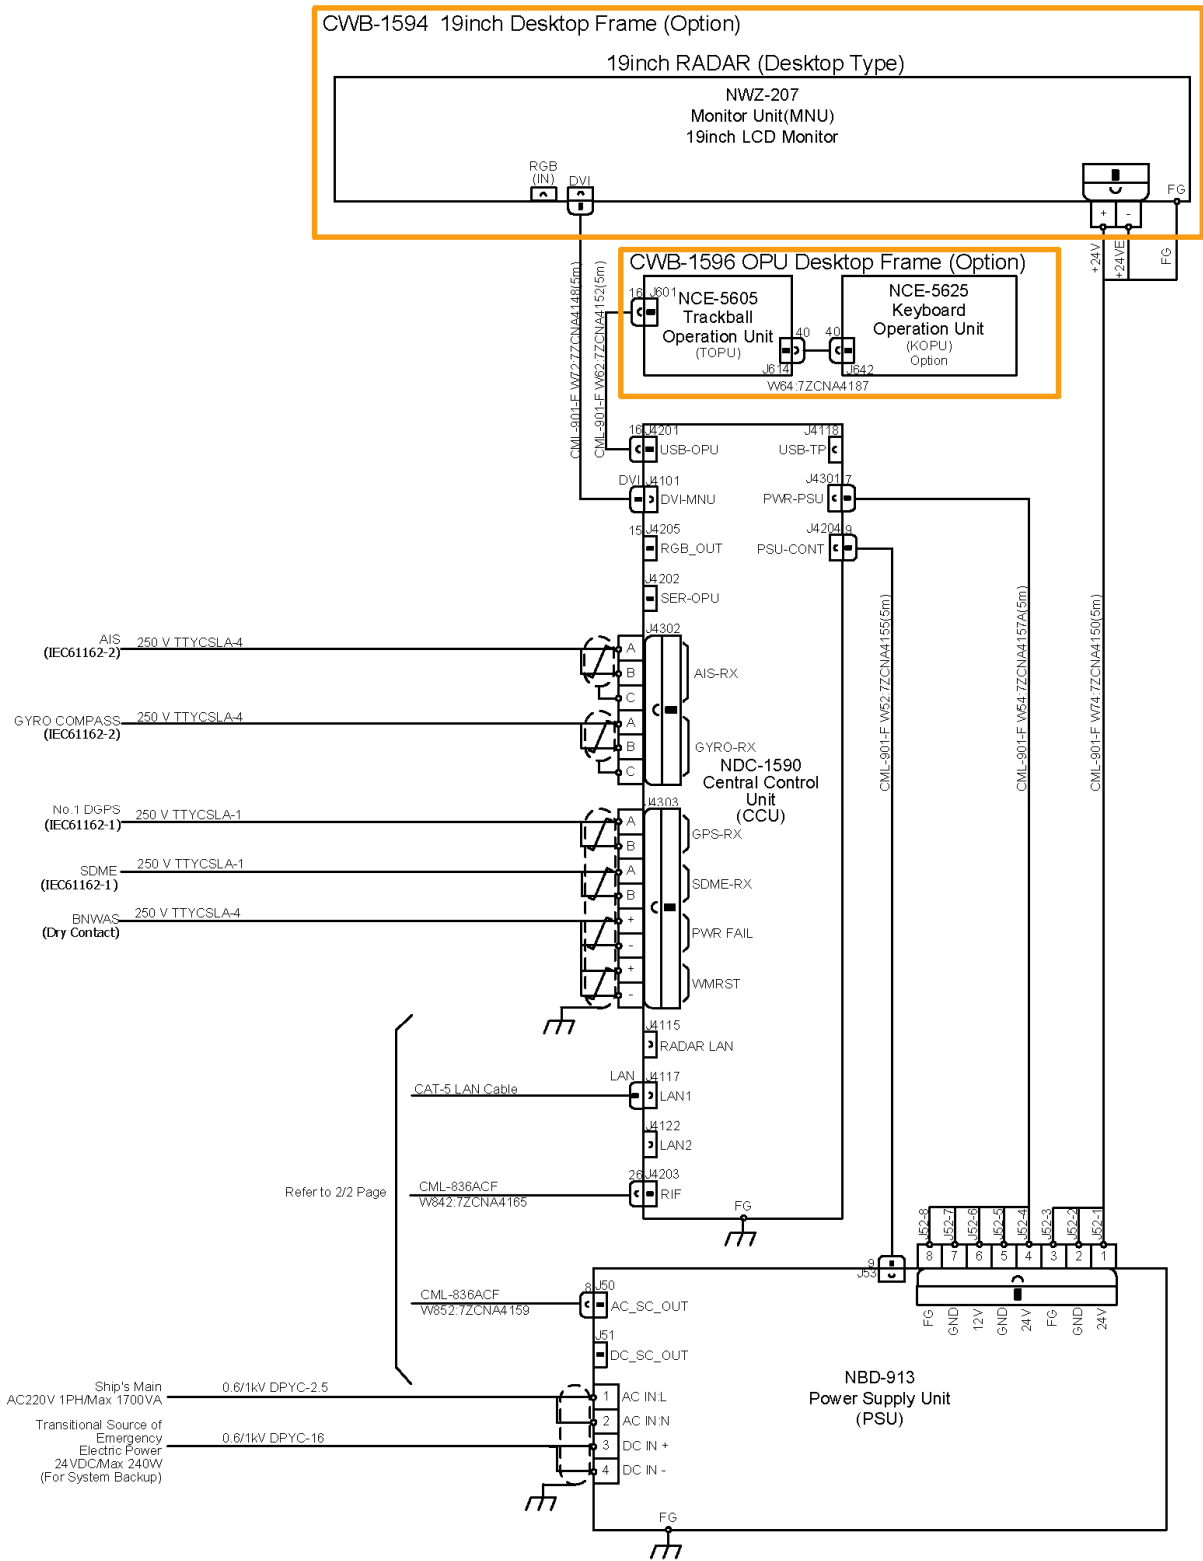


Interconnection Diagram of JMR-7225-6X/9X RADAR (1/2)

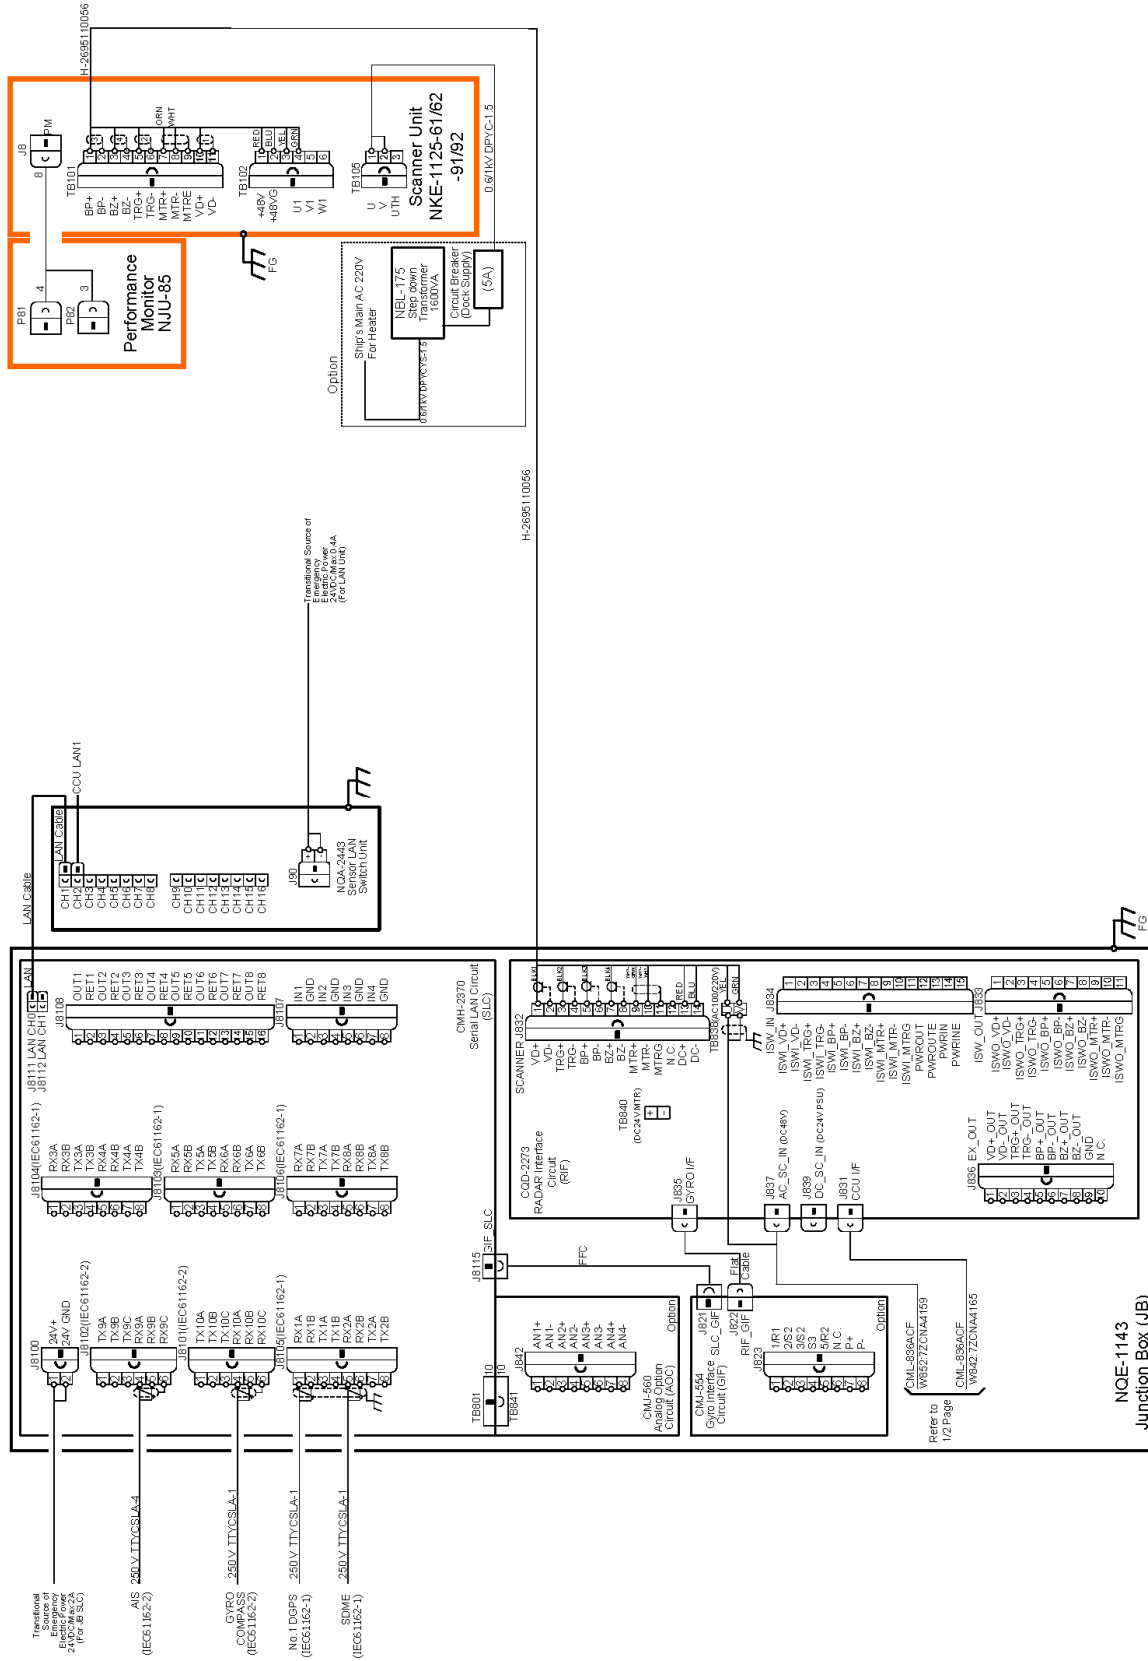


Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)

6.5.13 JMR-7225-6XH

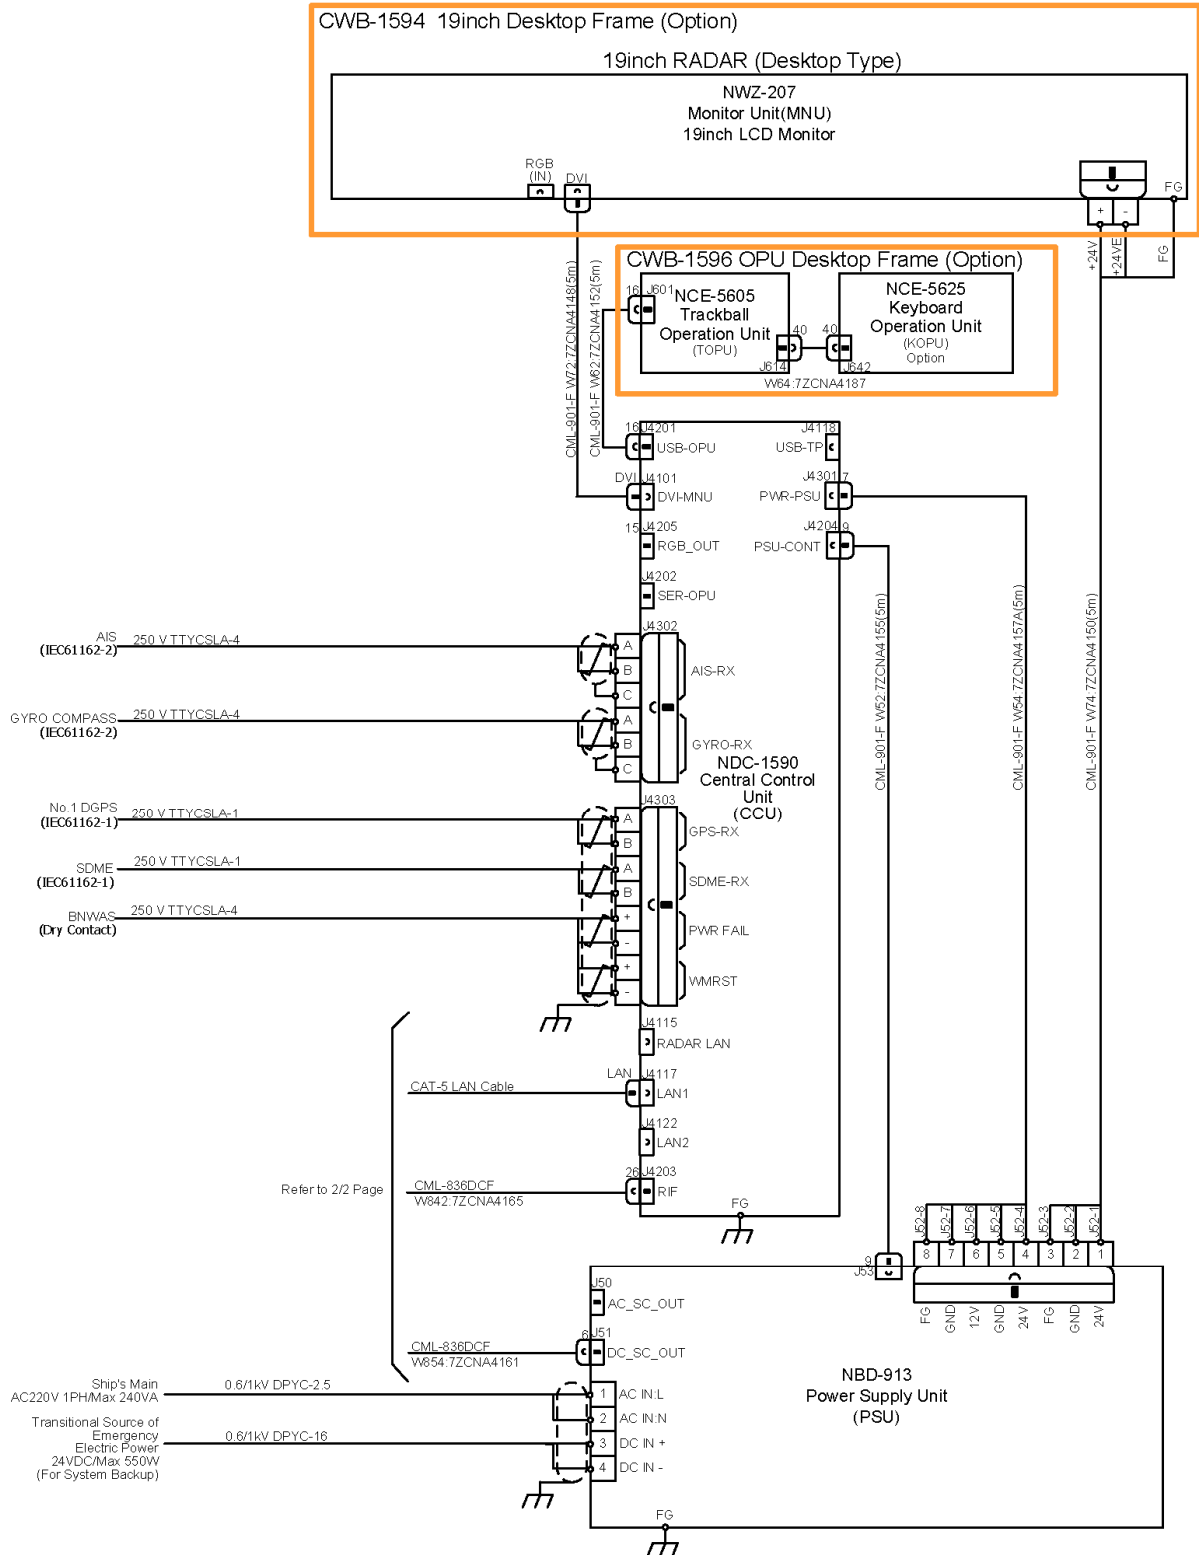


Interconnection Diagram of JMR-7225-6XH RADAR (1/2)

6.5.14 JMR-7225-7X3/9X3

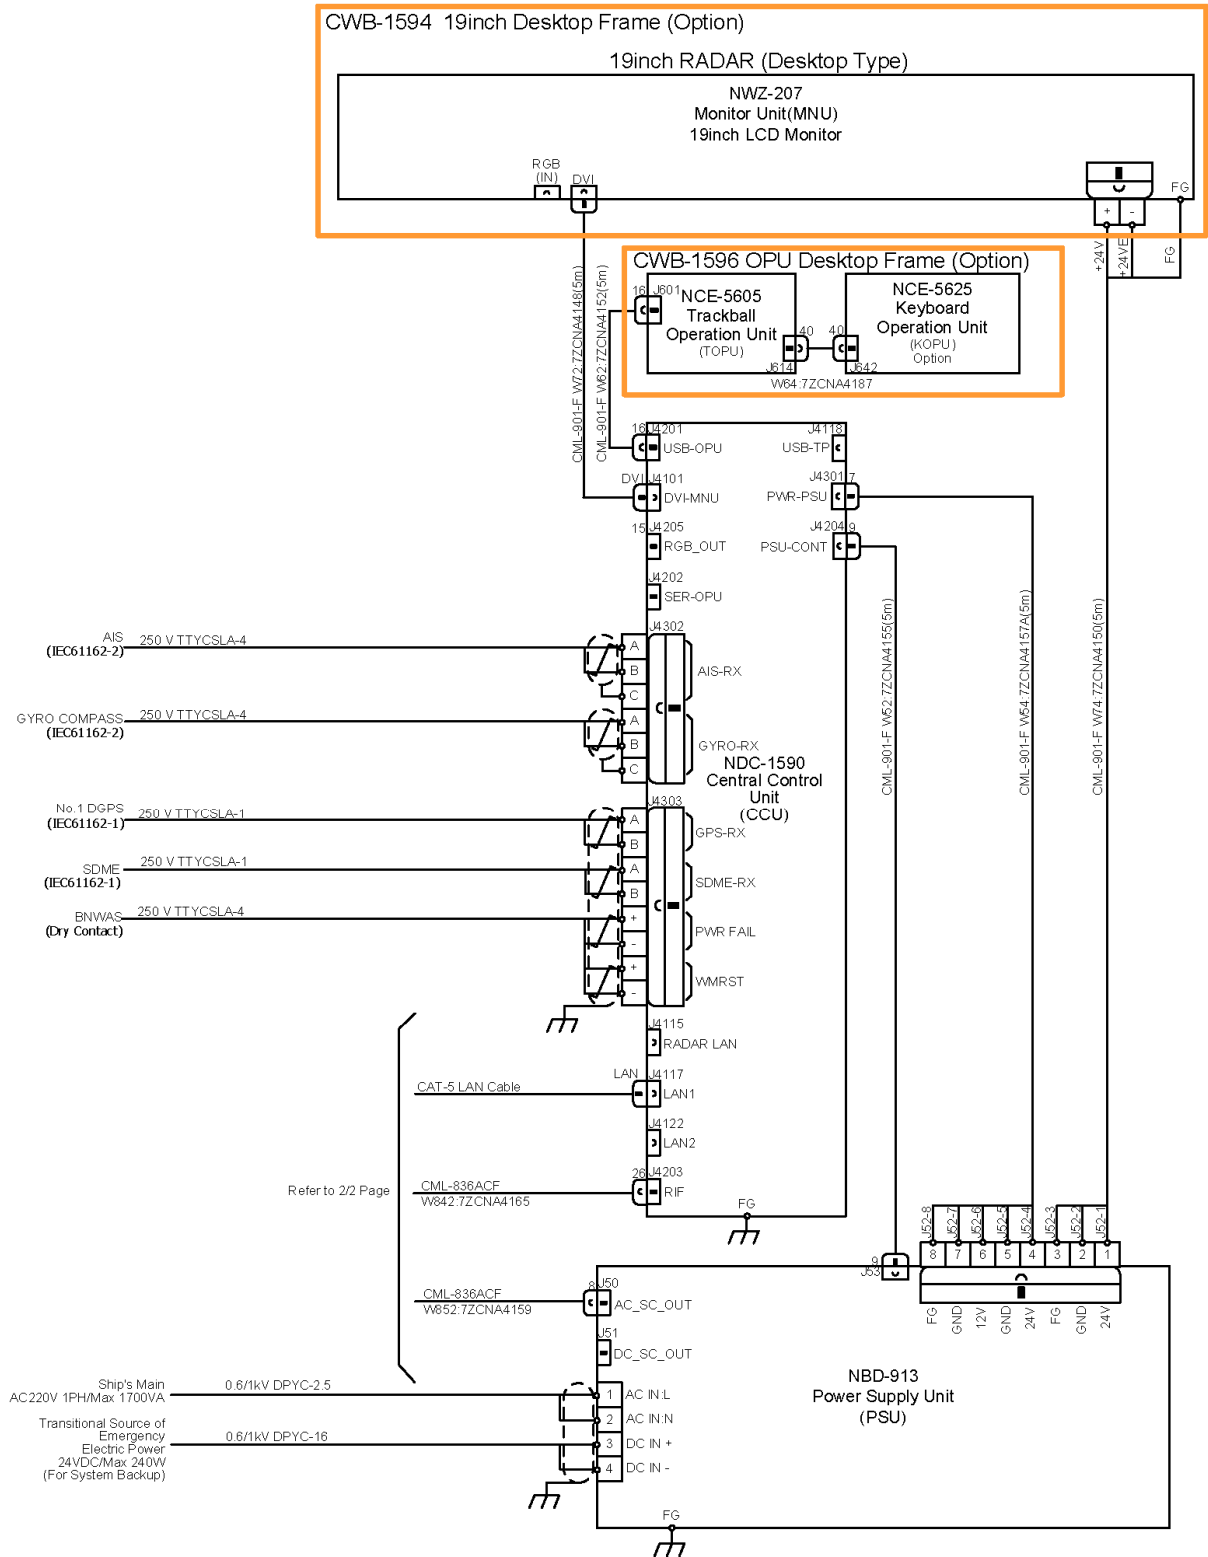


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (1/2)

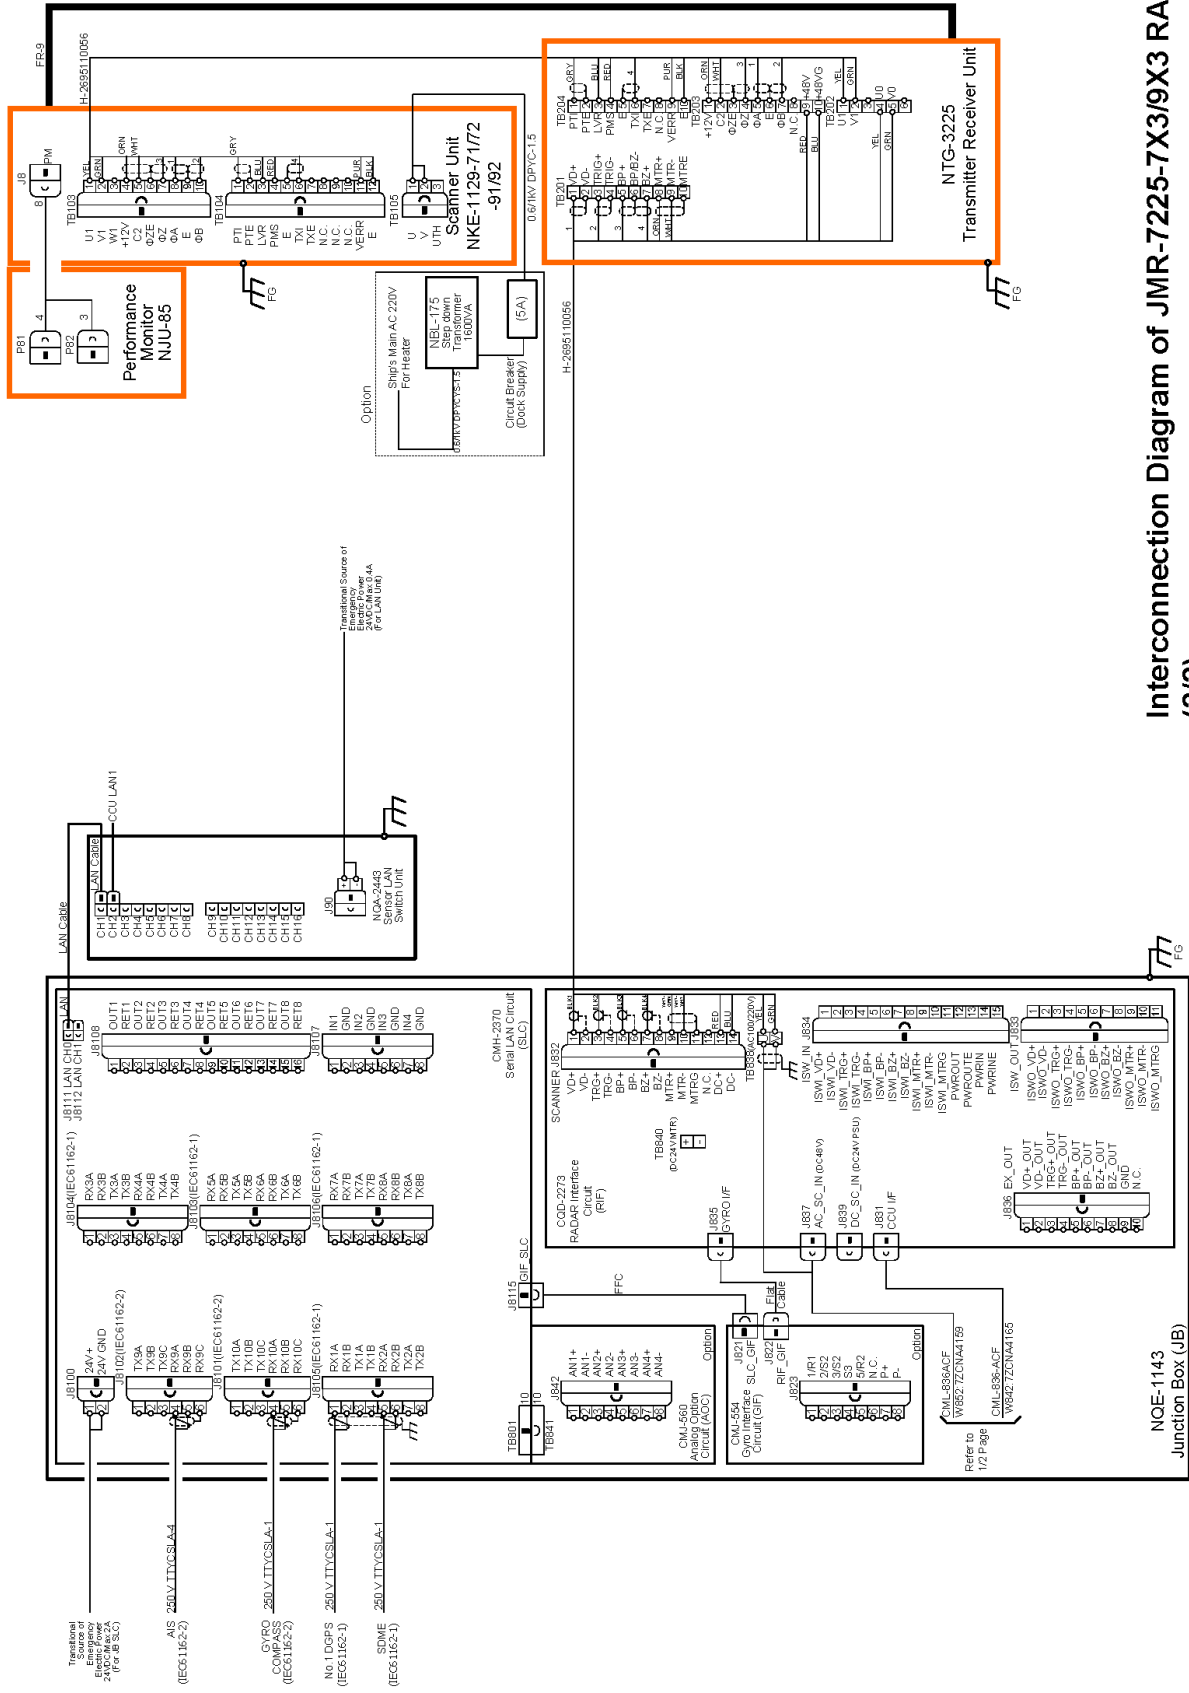


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (2/2)

6.5.15 JMR-7230-S

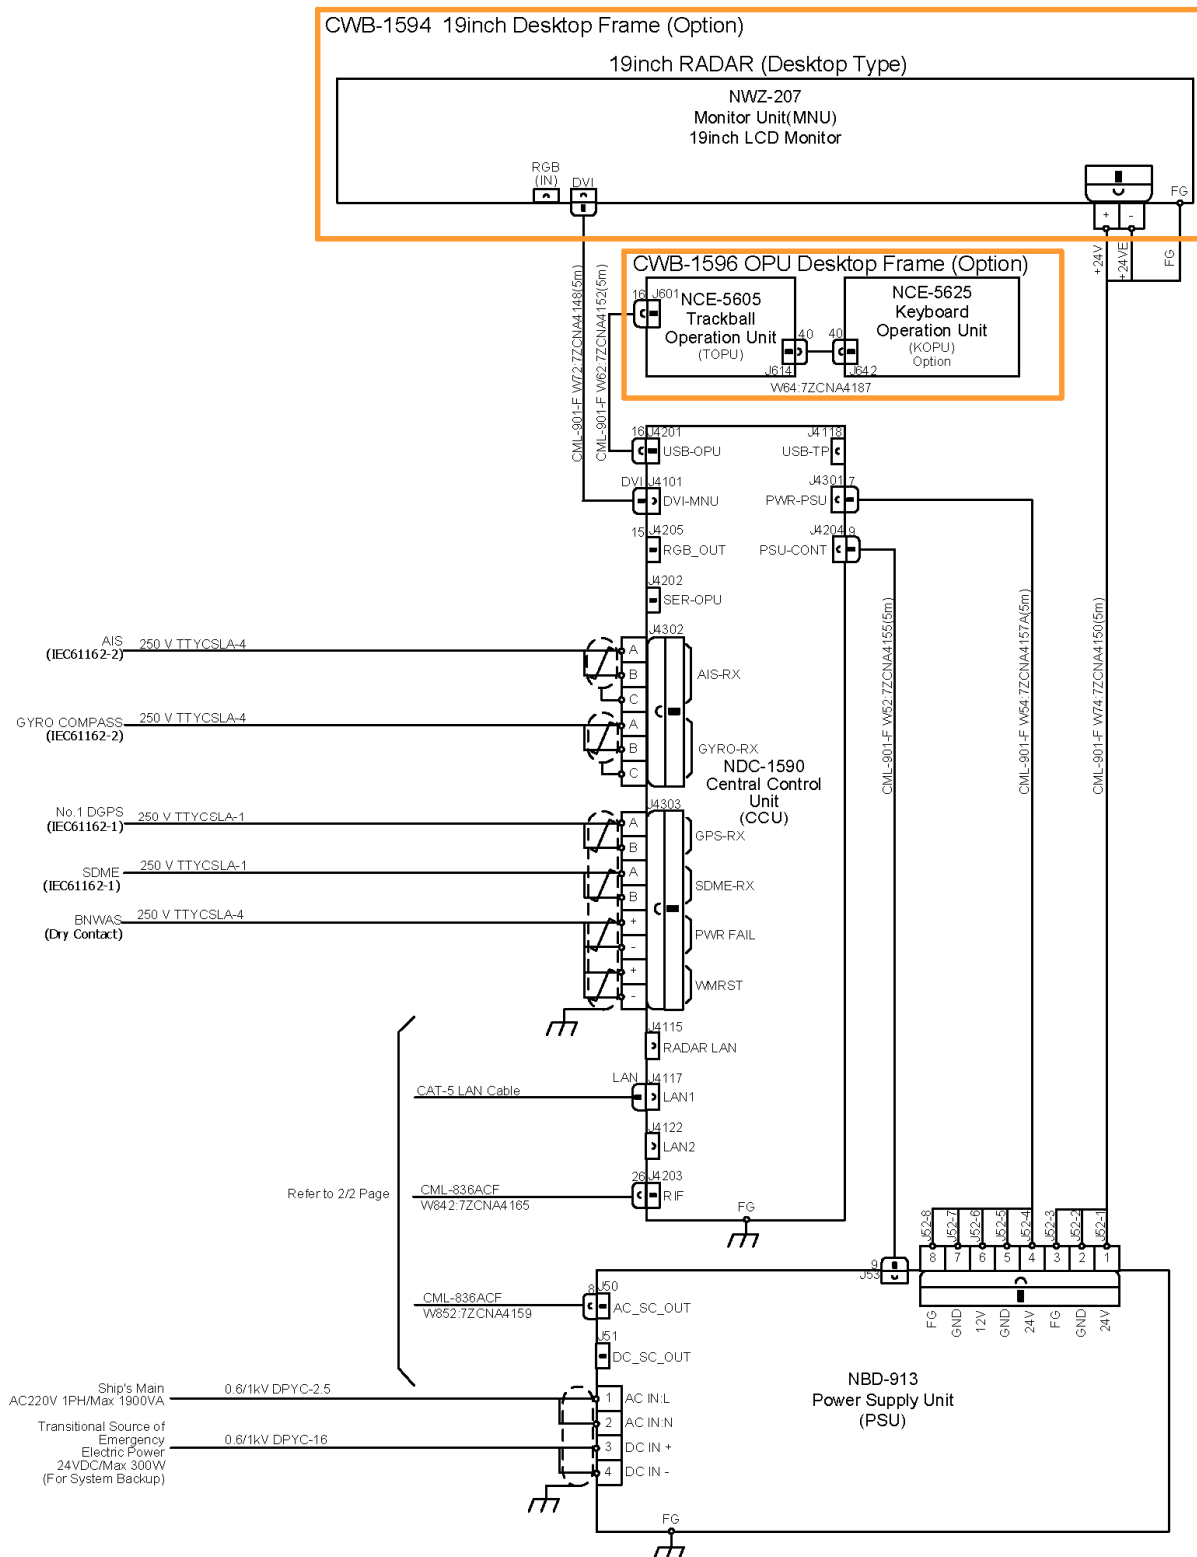


Interconnection Diagram of JMR-7230-S RADAR (1/2)

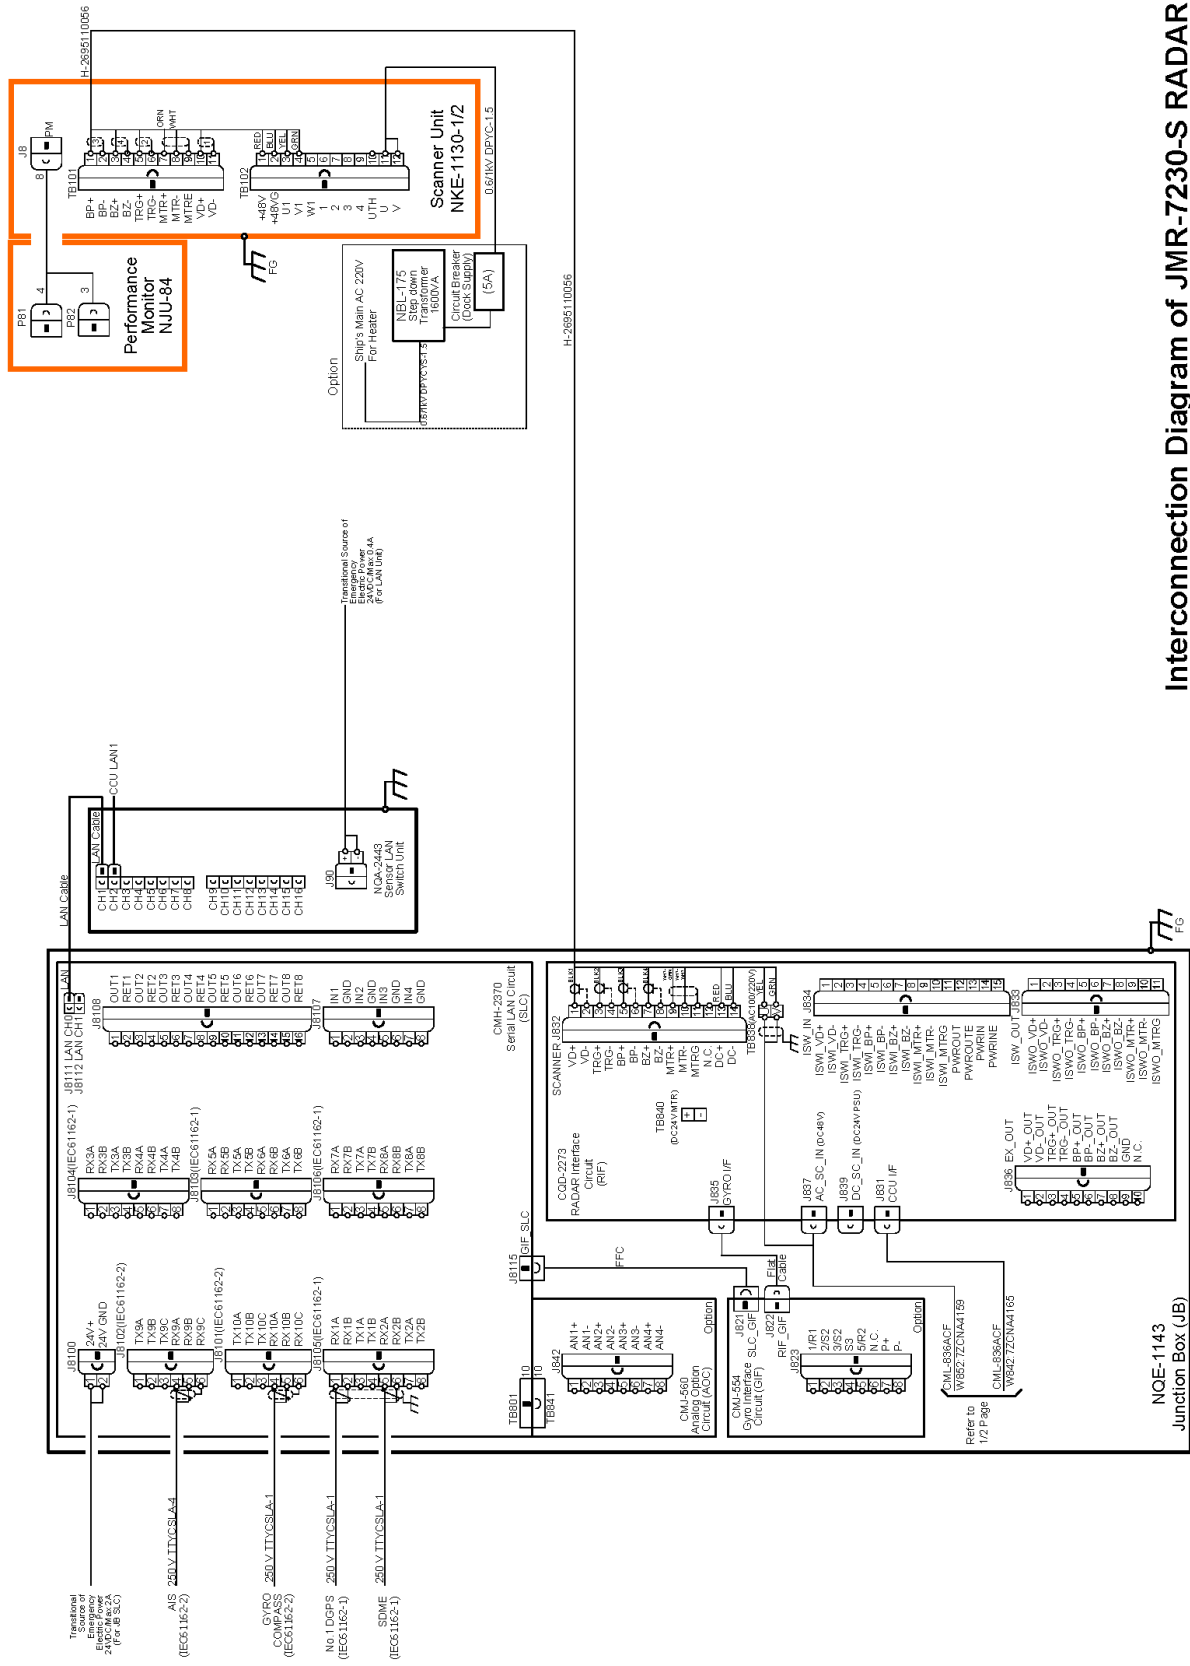


Interconnection Diagram of JMR-7230-S RADAR (2/2)

6.5.16 JMR-7230-S3

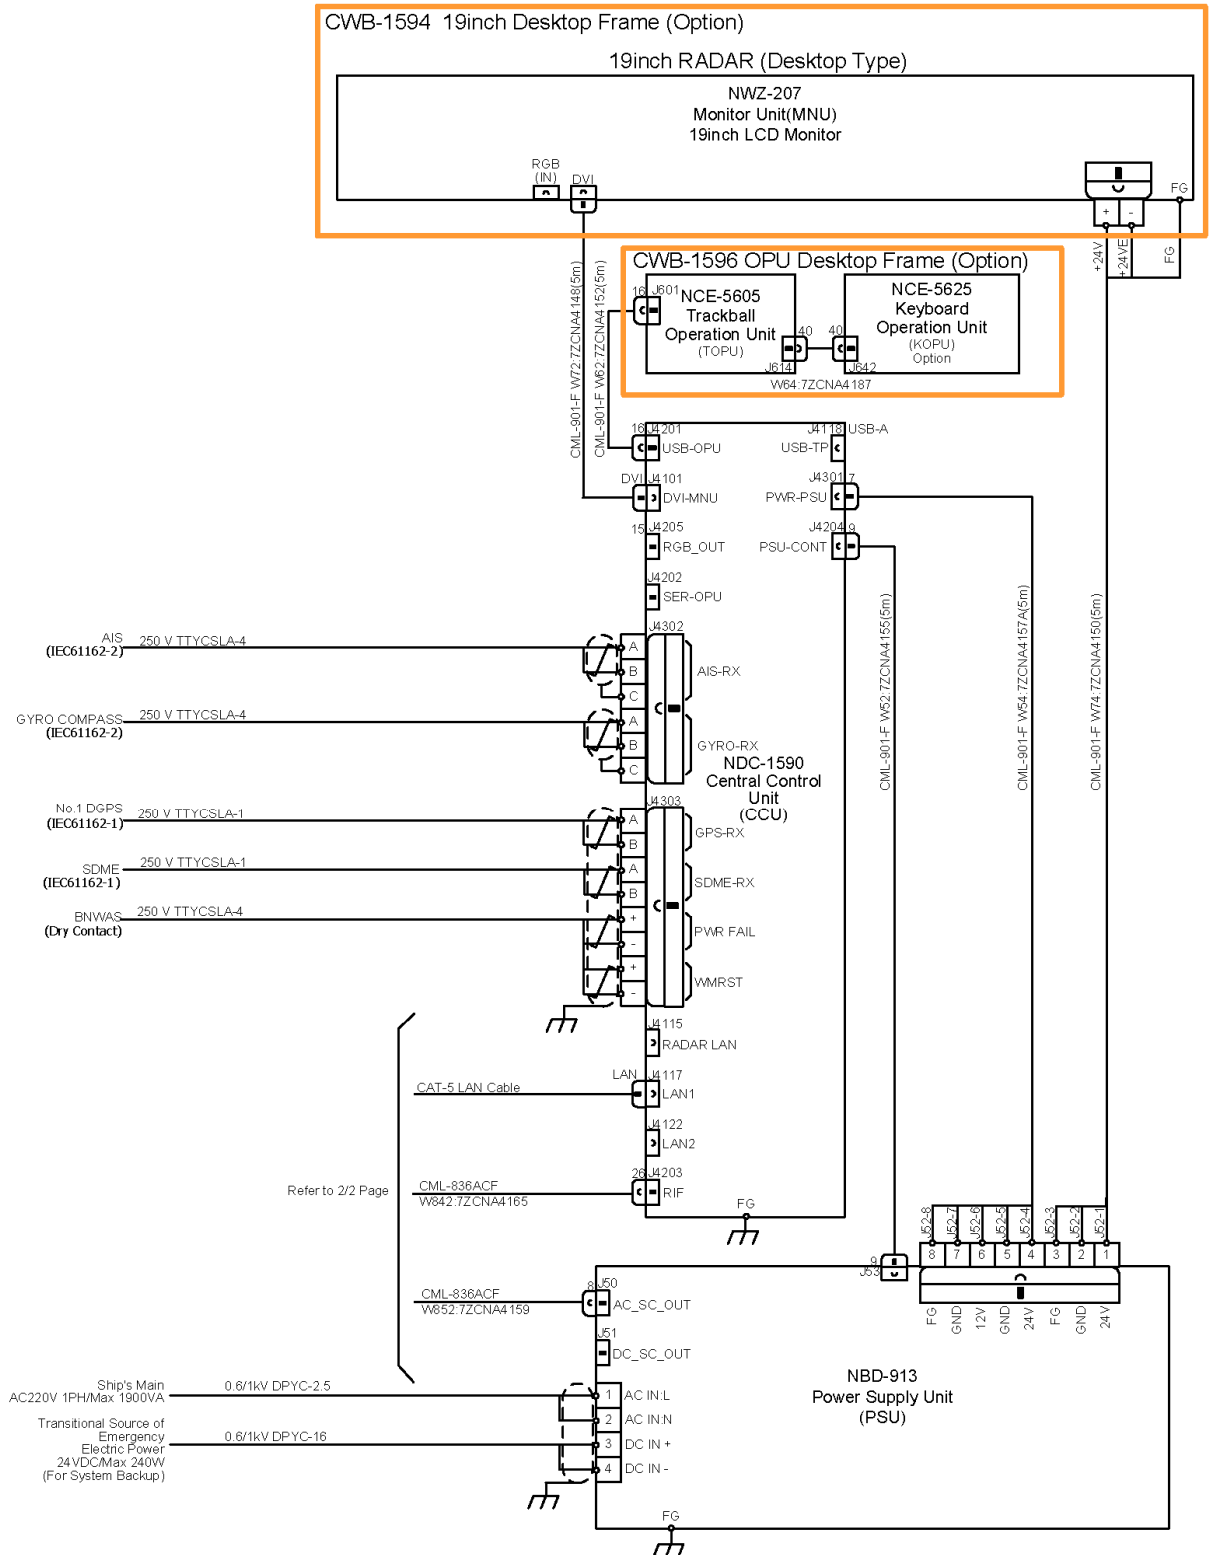


Interconnection Diagram of JMR-7230-S3 RADAR (1/2)


6.5.17 JMR-7272-S

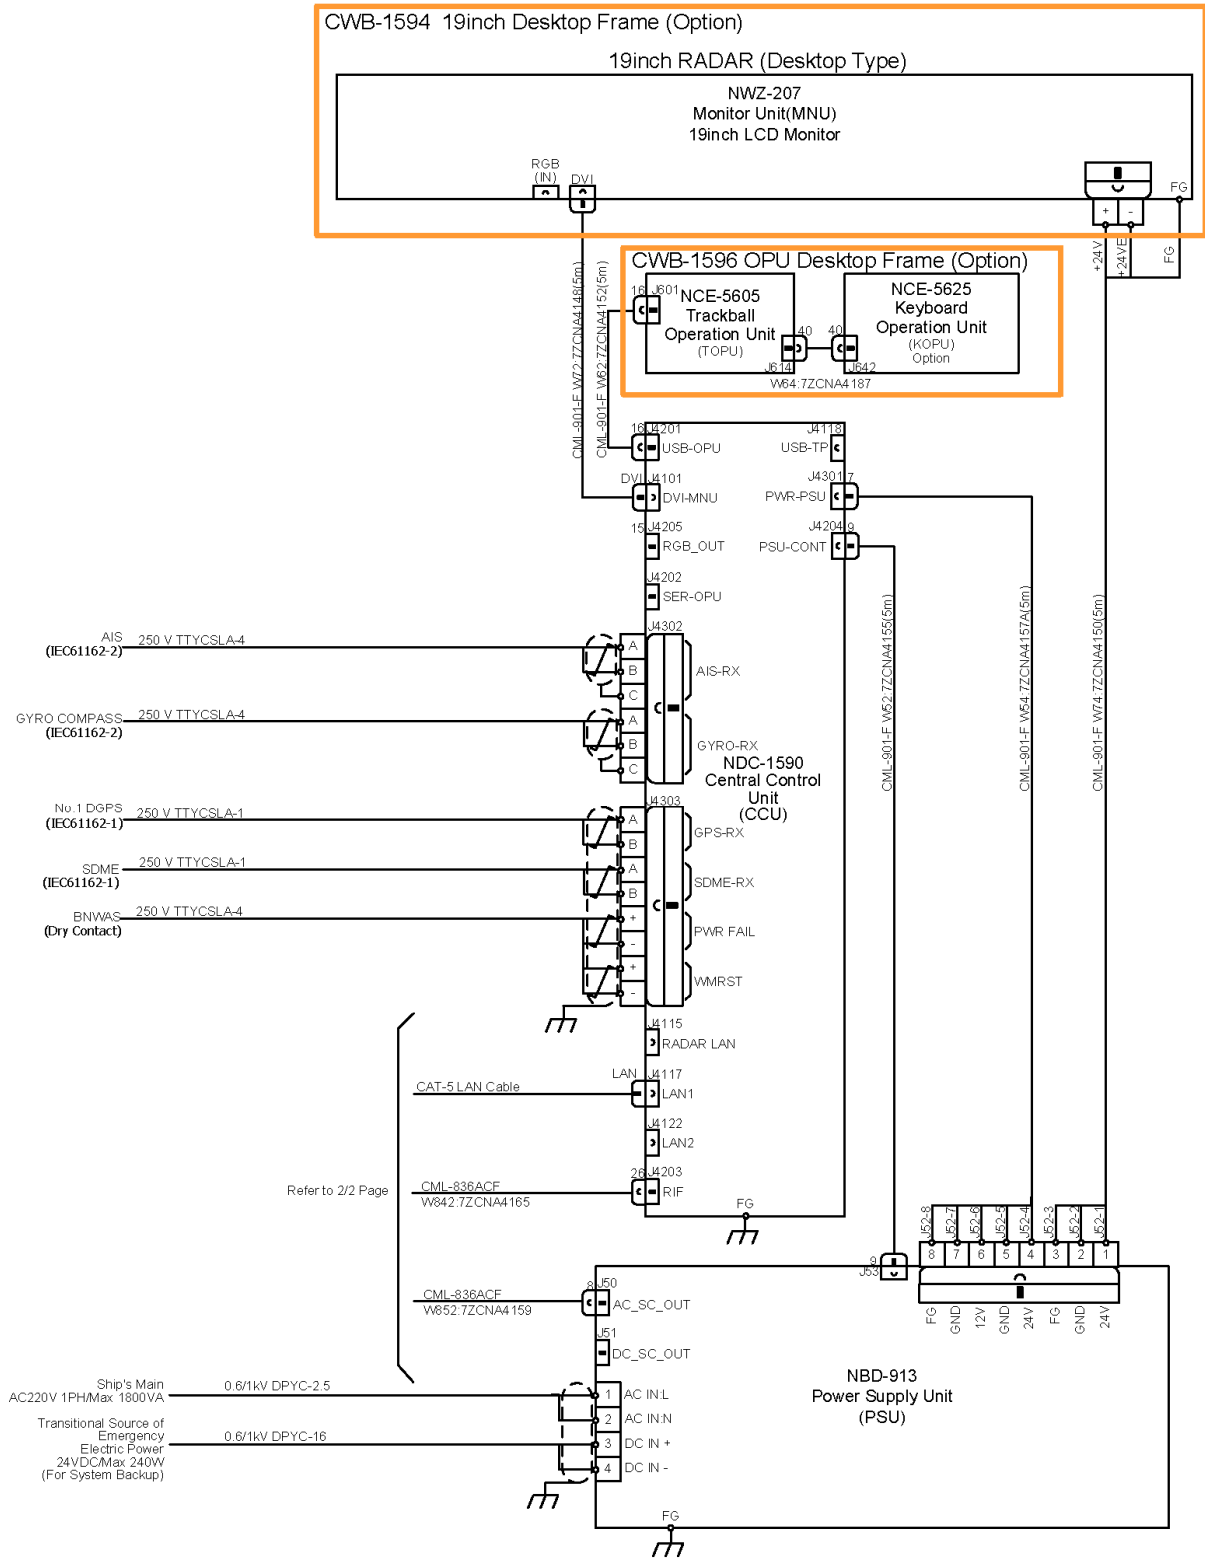


Interconnection Diagram of JMR-7272-S RADAR (1/2)

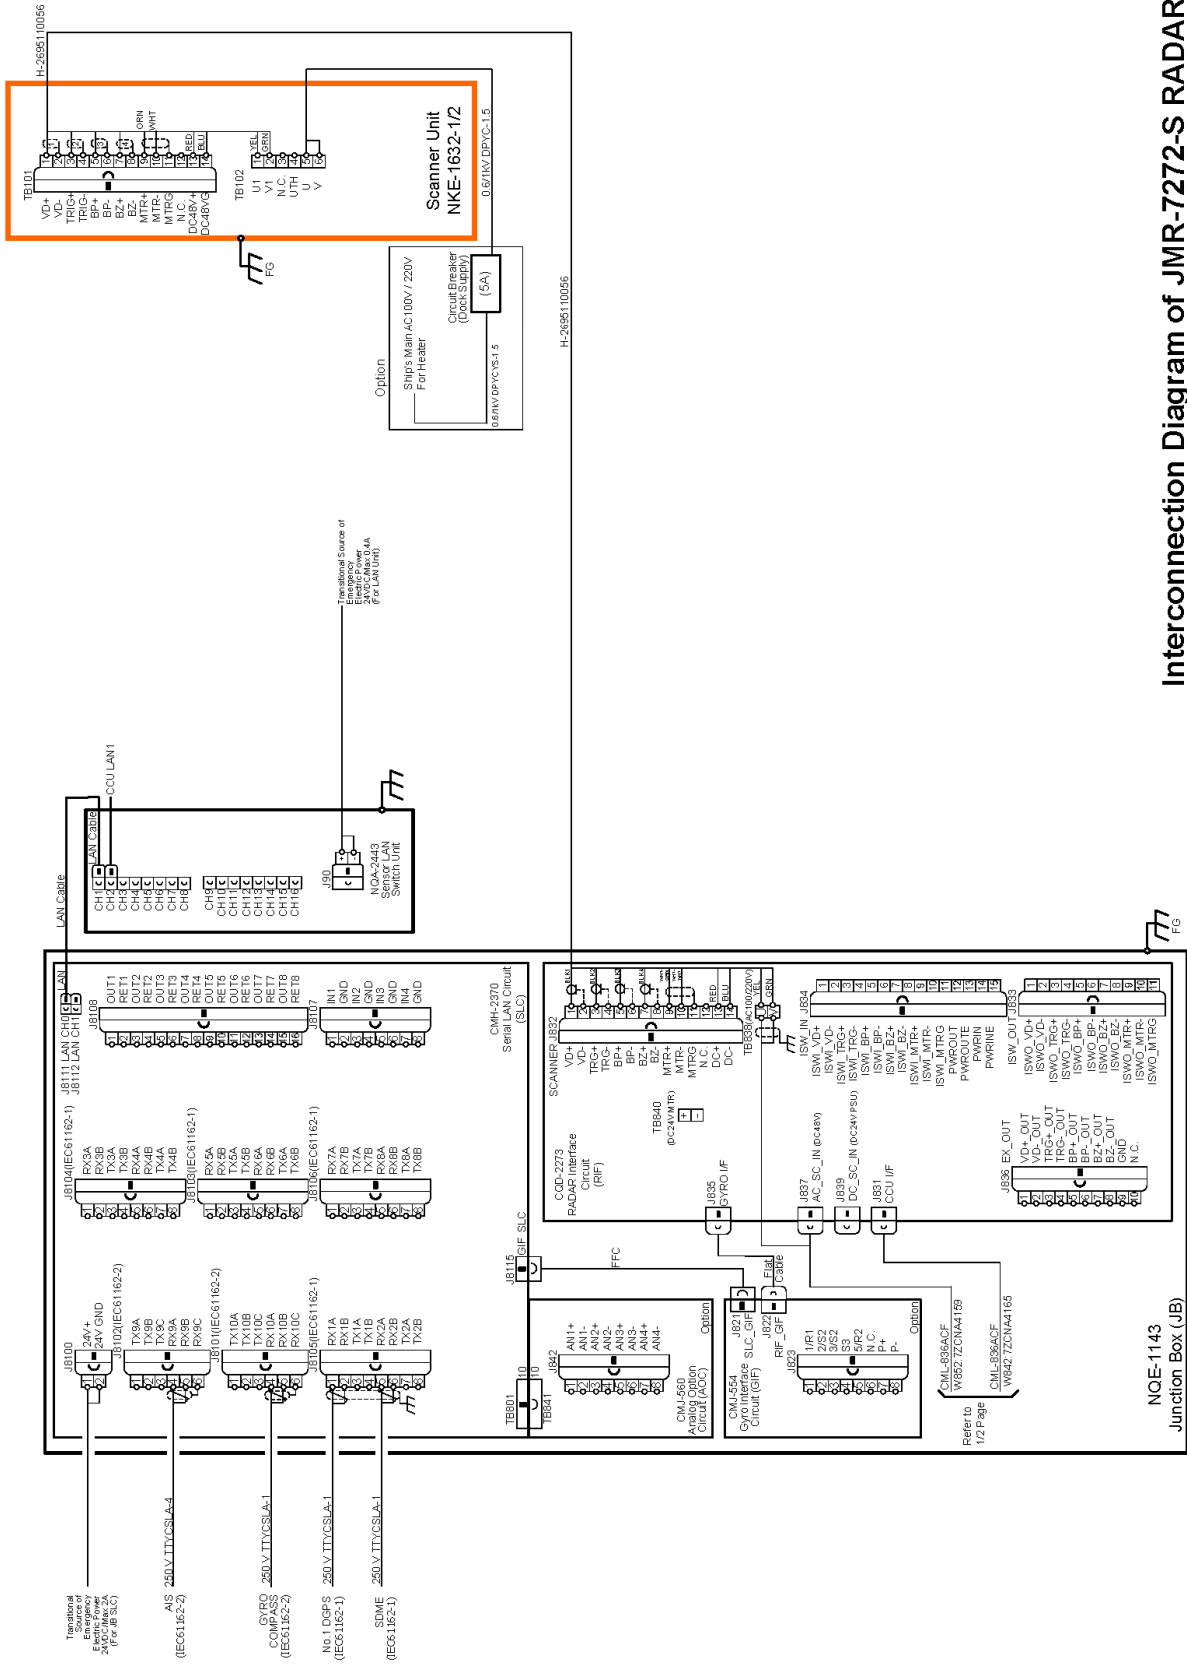

6.5.18 JMR-7282-S/SH

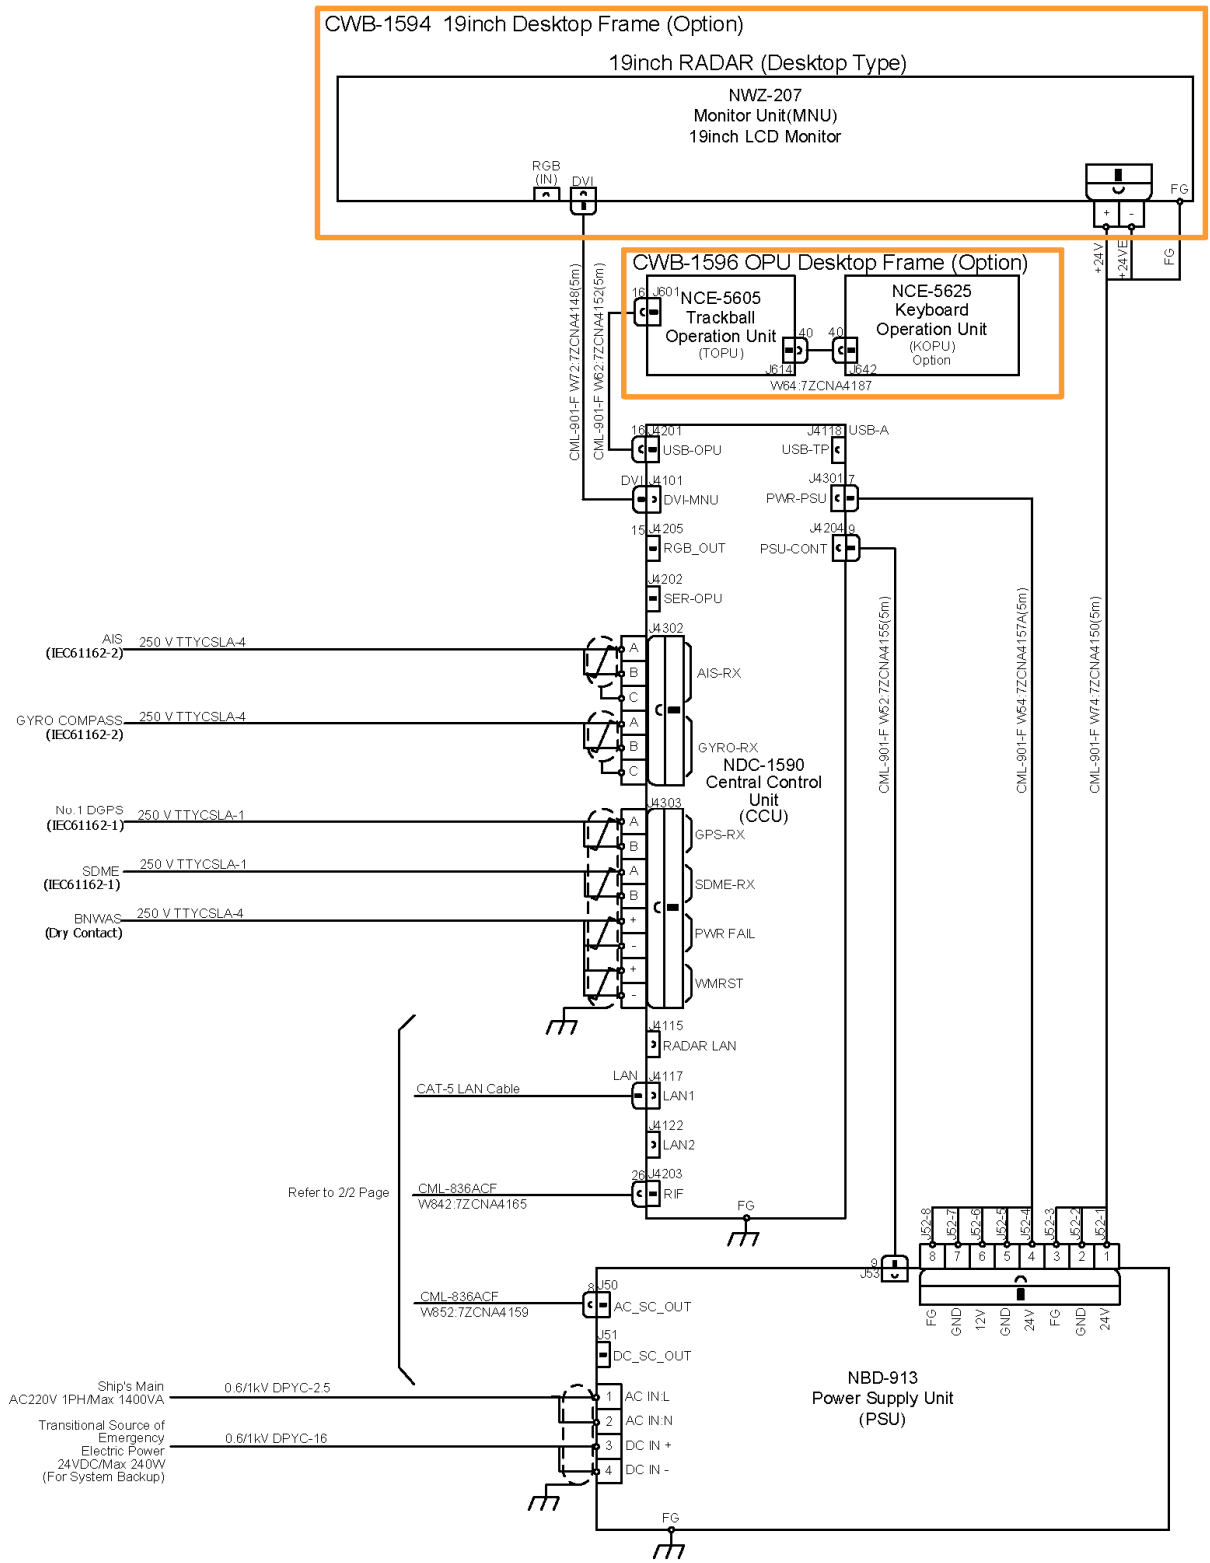


Interconnection Diagram of JMR-7282-S/SH RADAR (1/2)

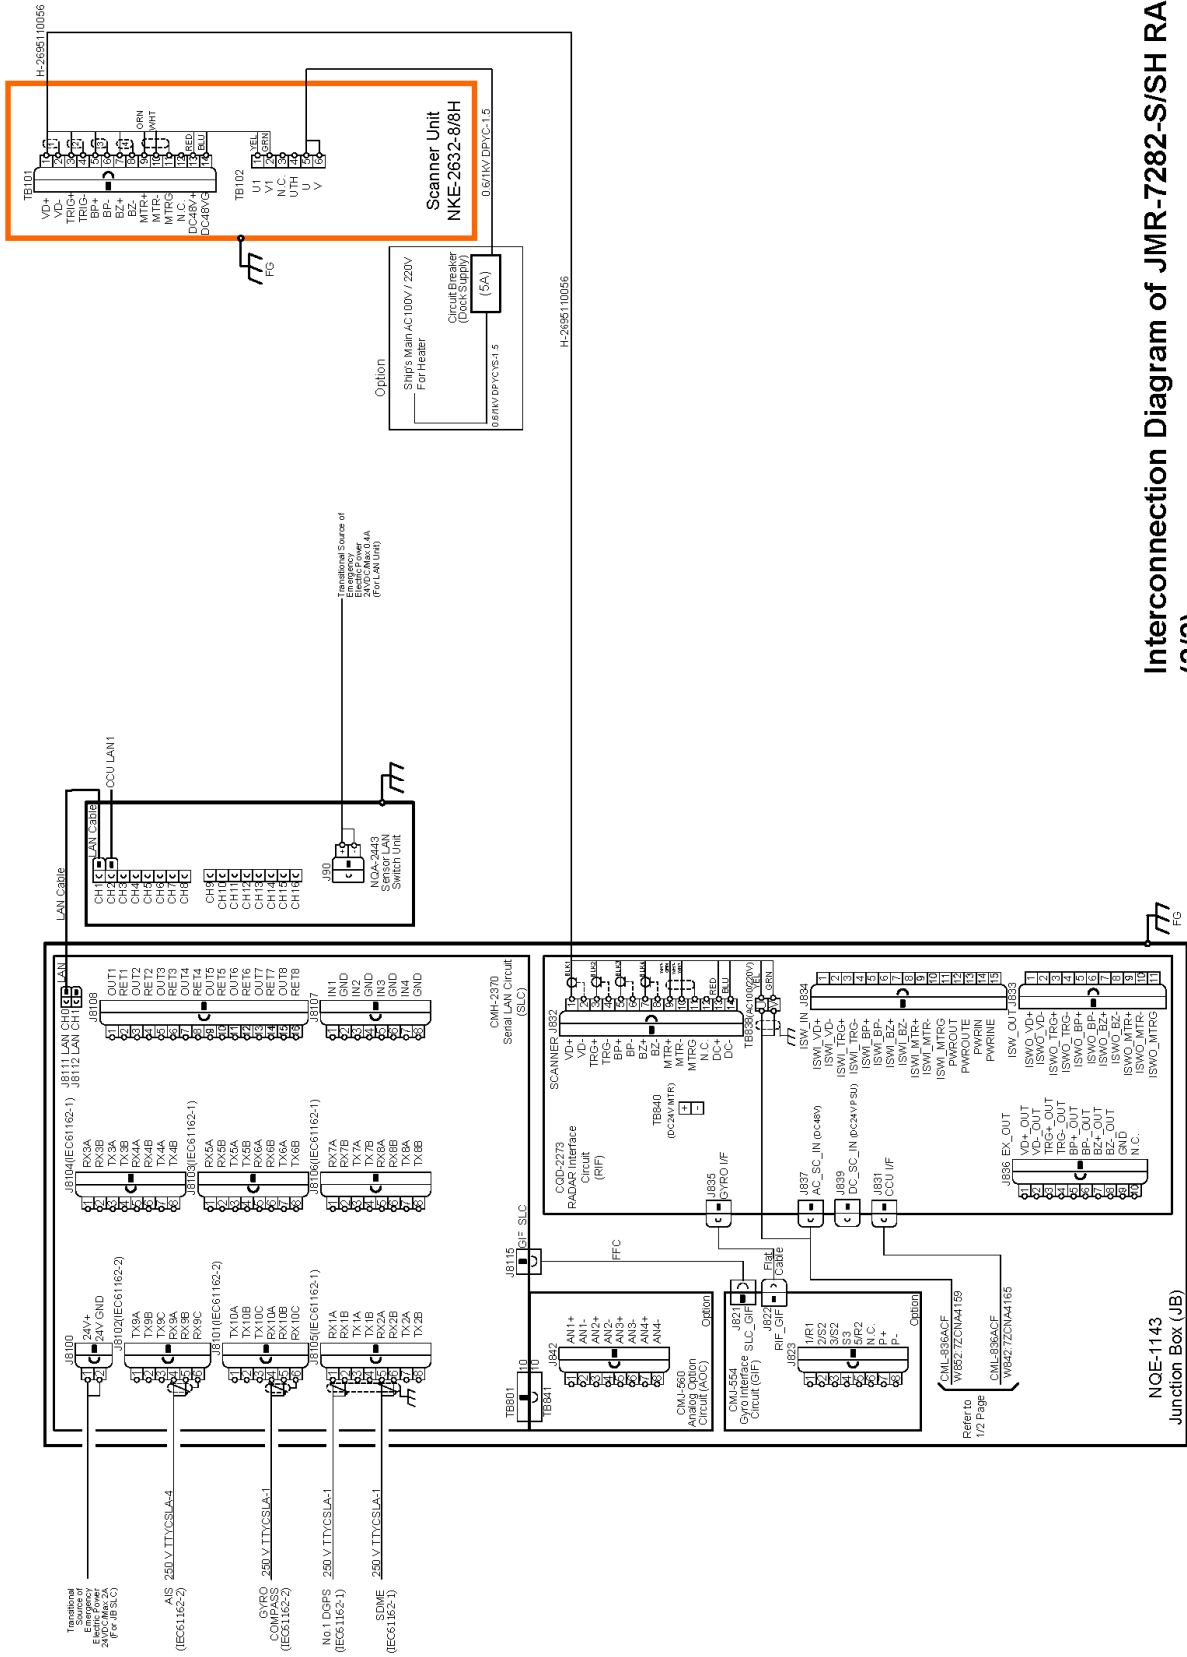


Interconnection Diagram of JMR-7282-S/SH RADAR (2/2)

6.5.19 JAN-7201

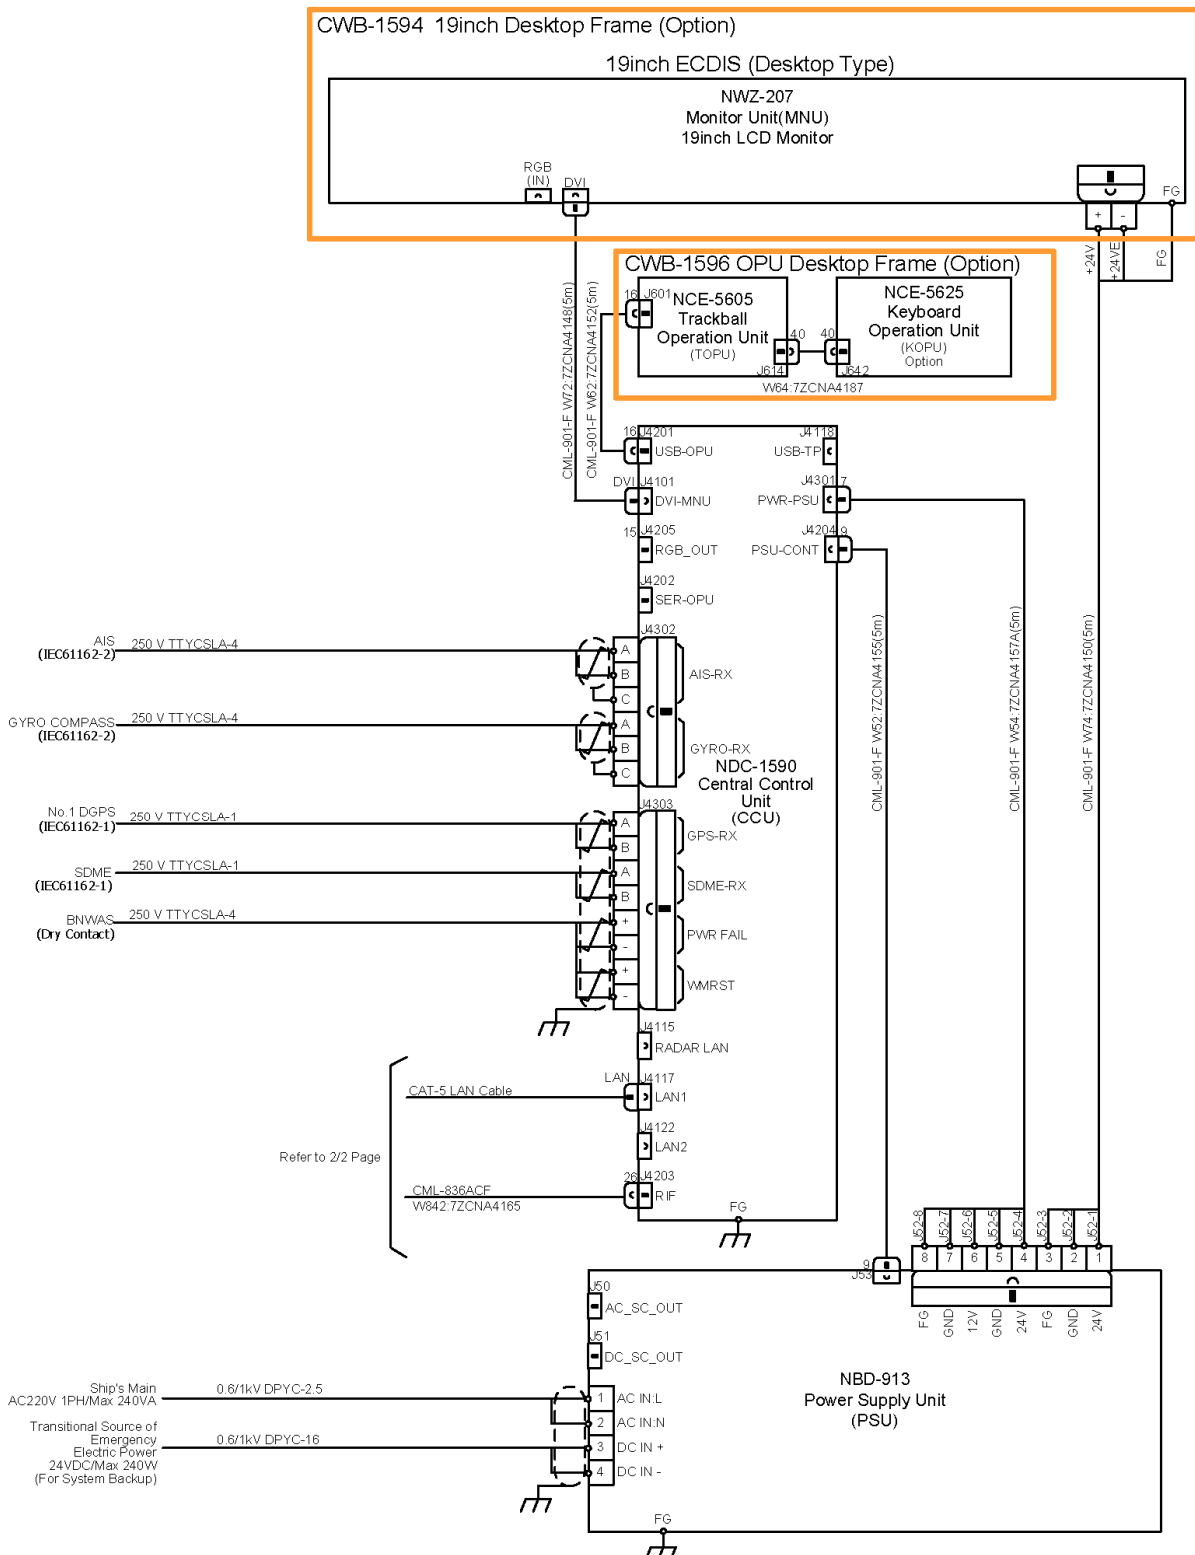


Interconnection Diagram of JAN-7201 ECDIS (1/2)

6.5.20 JAN-7202

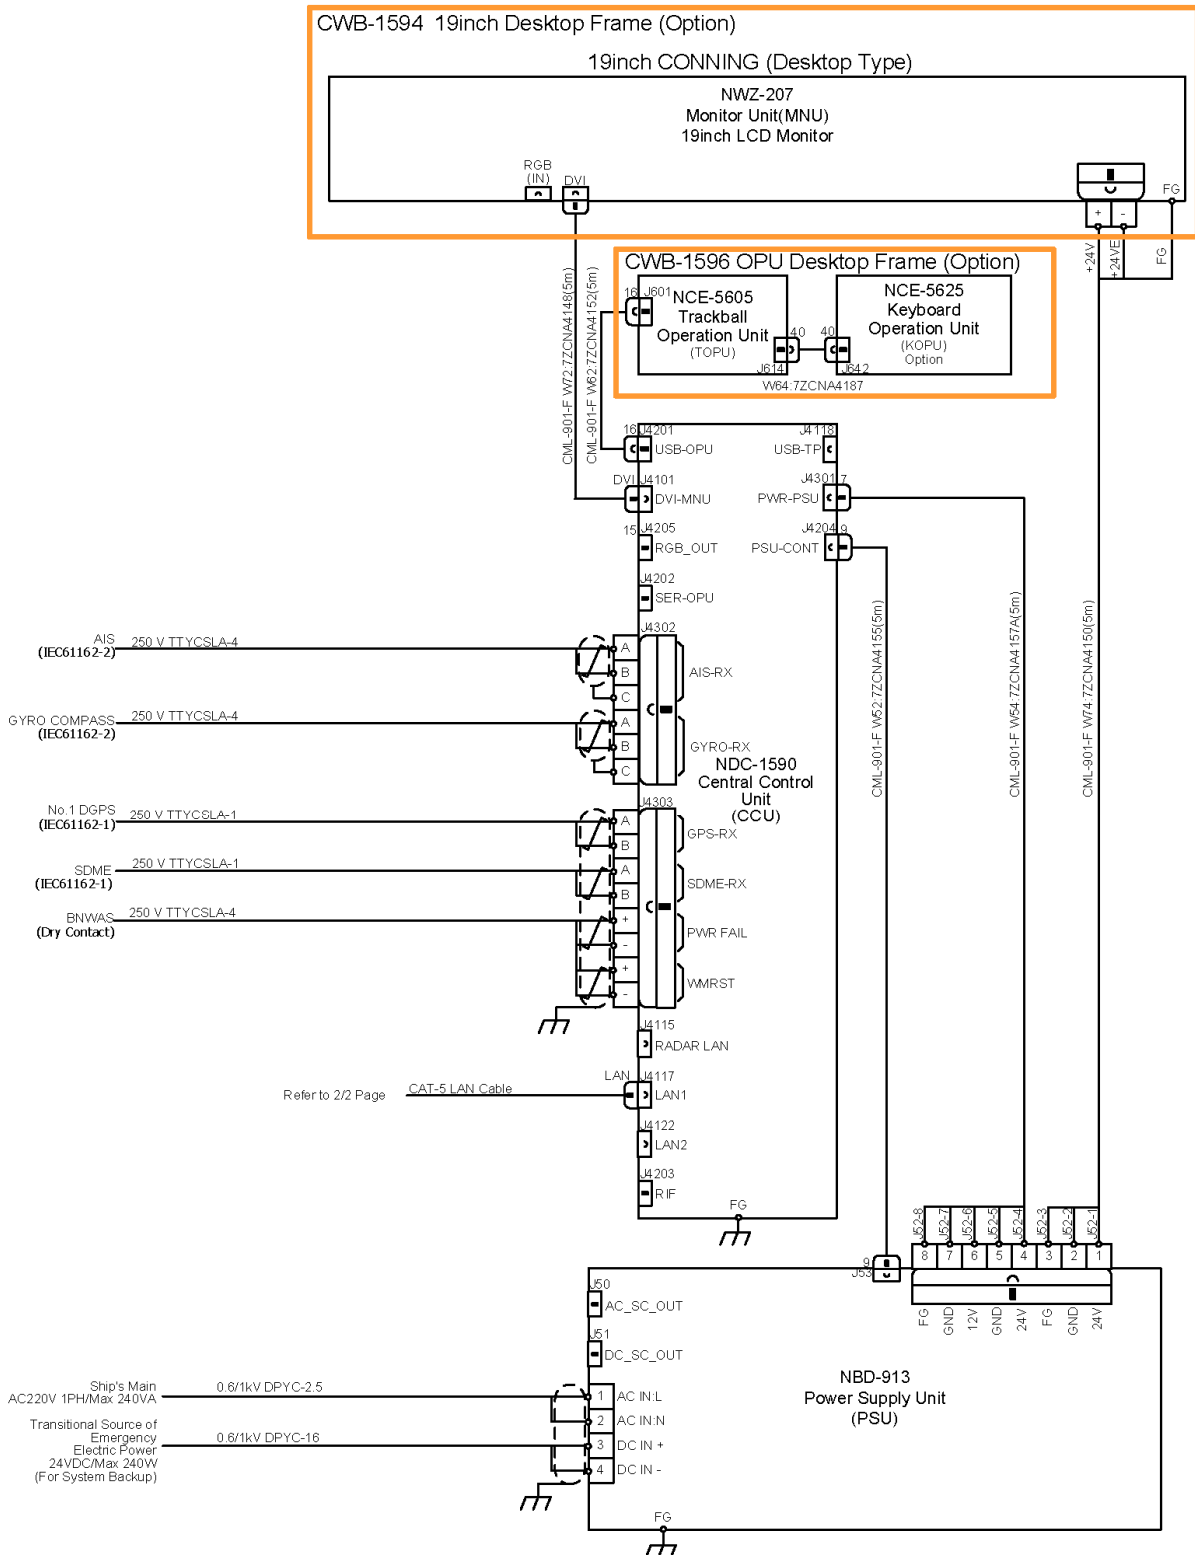


Interconnection Diagram of JAN-7202 CONNING (1/2)

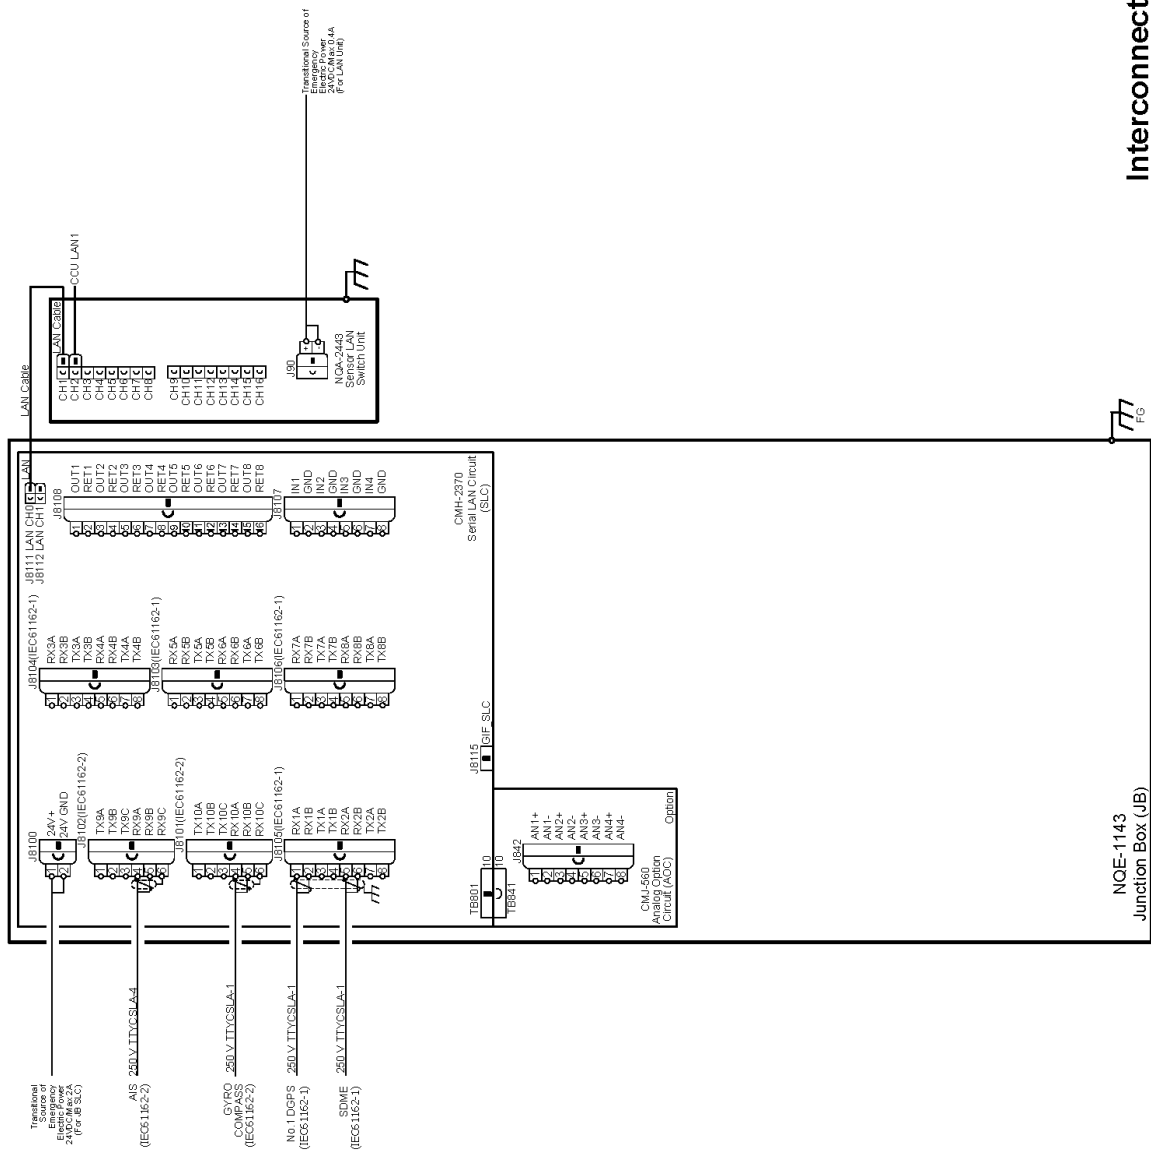

Interconnection Diagram of JAN-7202 CONNING (2/2)

6.6 Scanner Unit Interconnection Unit


6.6.1 NKE-1139 (AC110V)

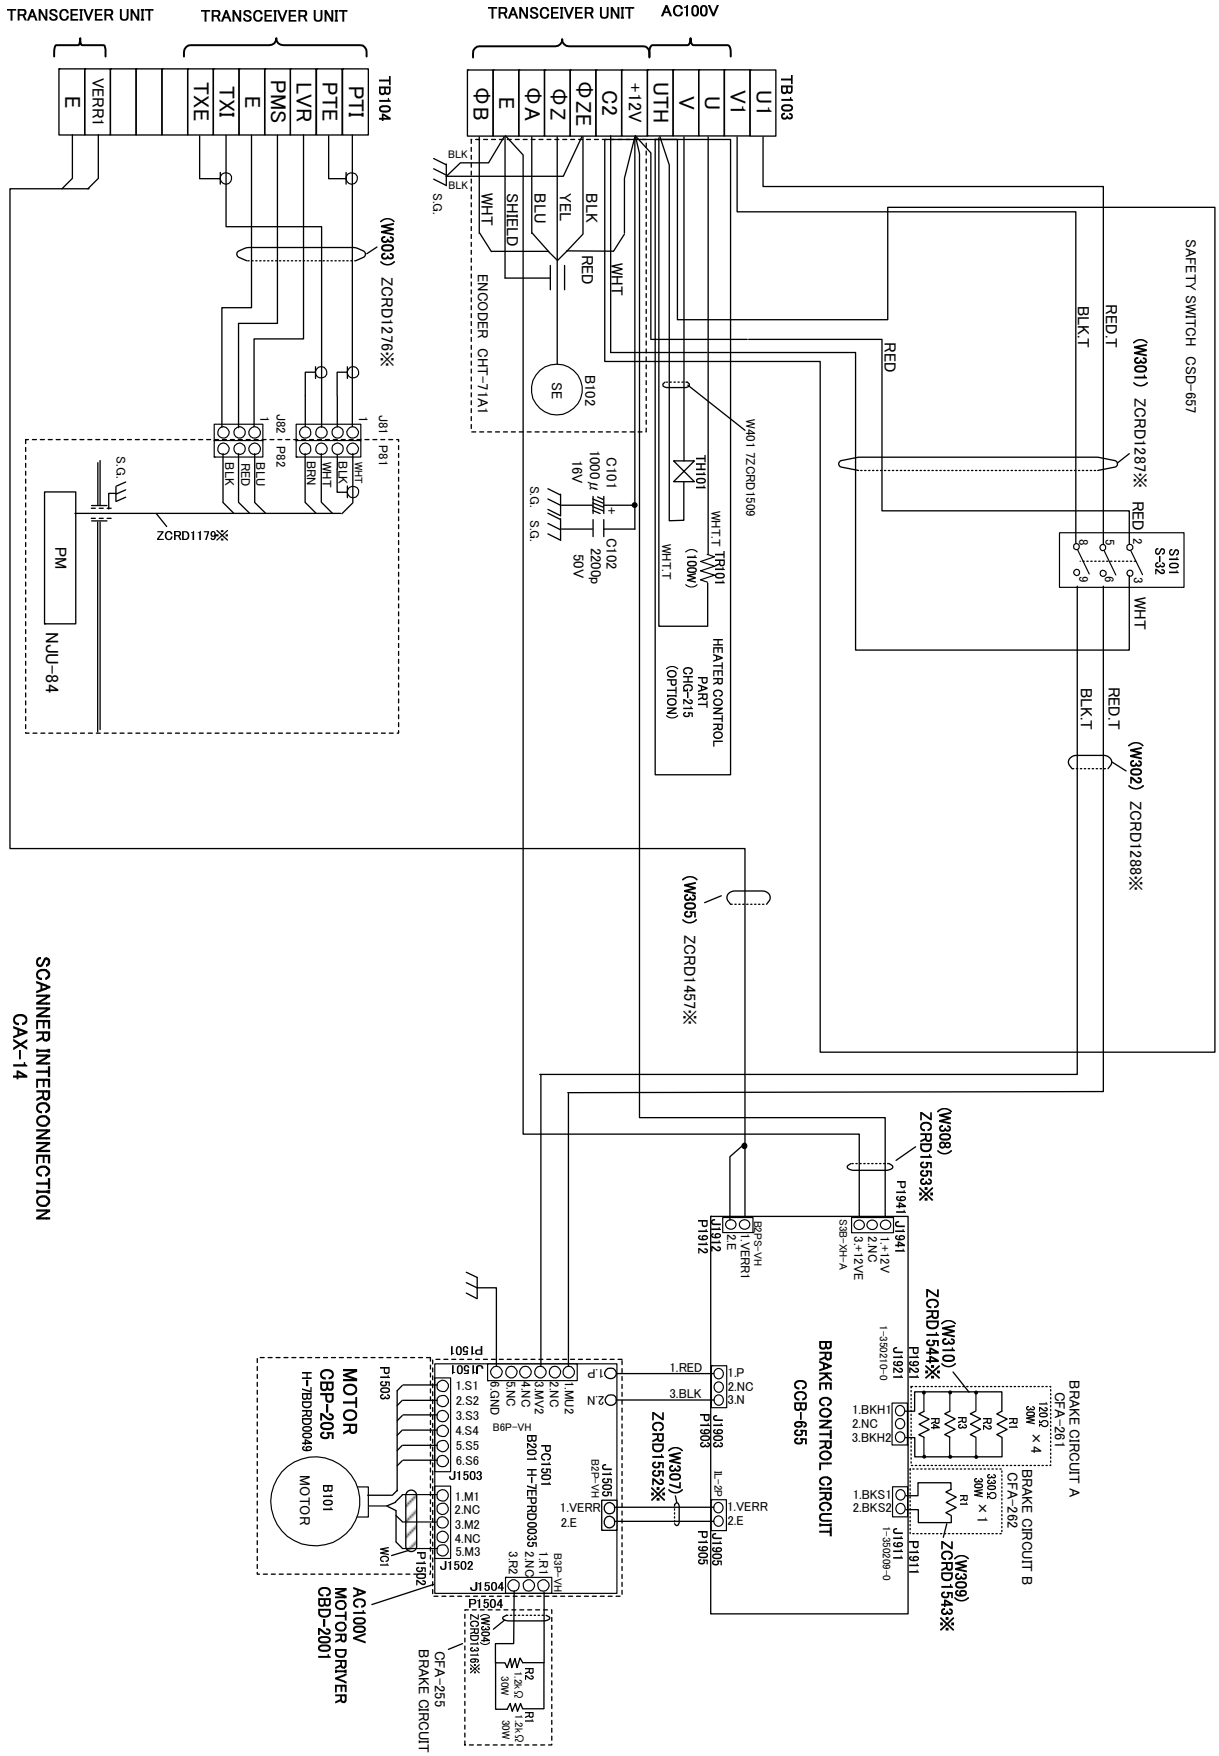

SCANNER INTERCONNECTION
CAX-14


NKE-1139PM (AC100V) 空中機内接続図

6.6.2 NKE-1139 (AC220V)

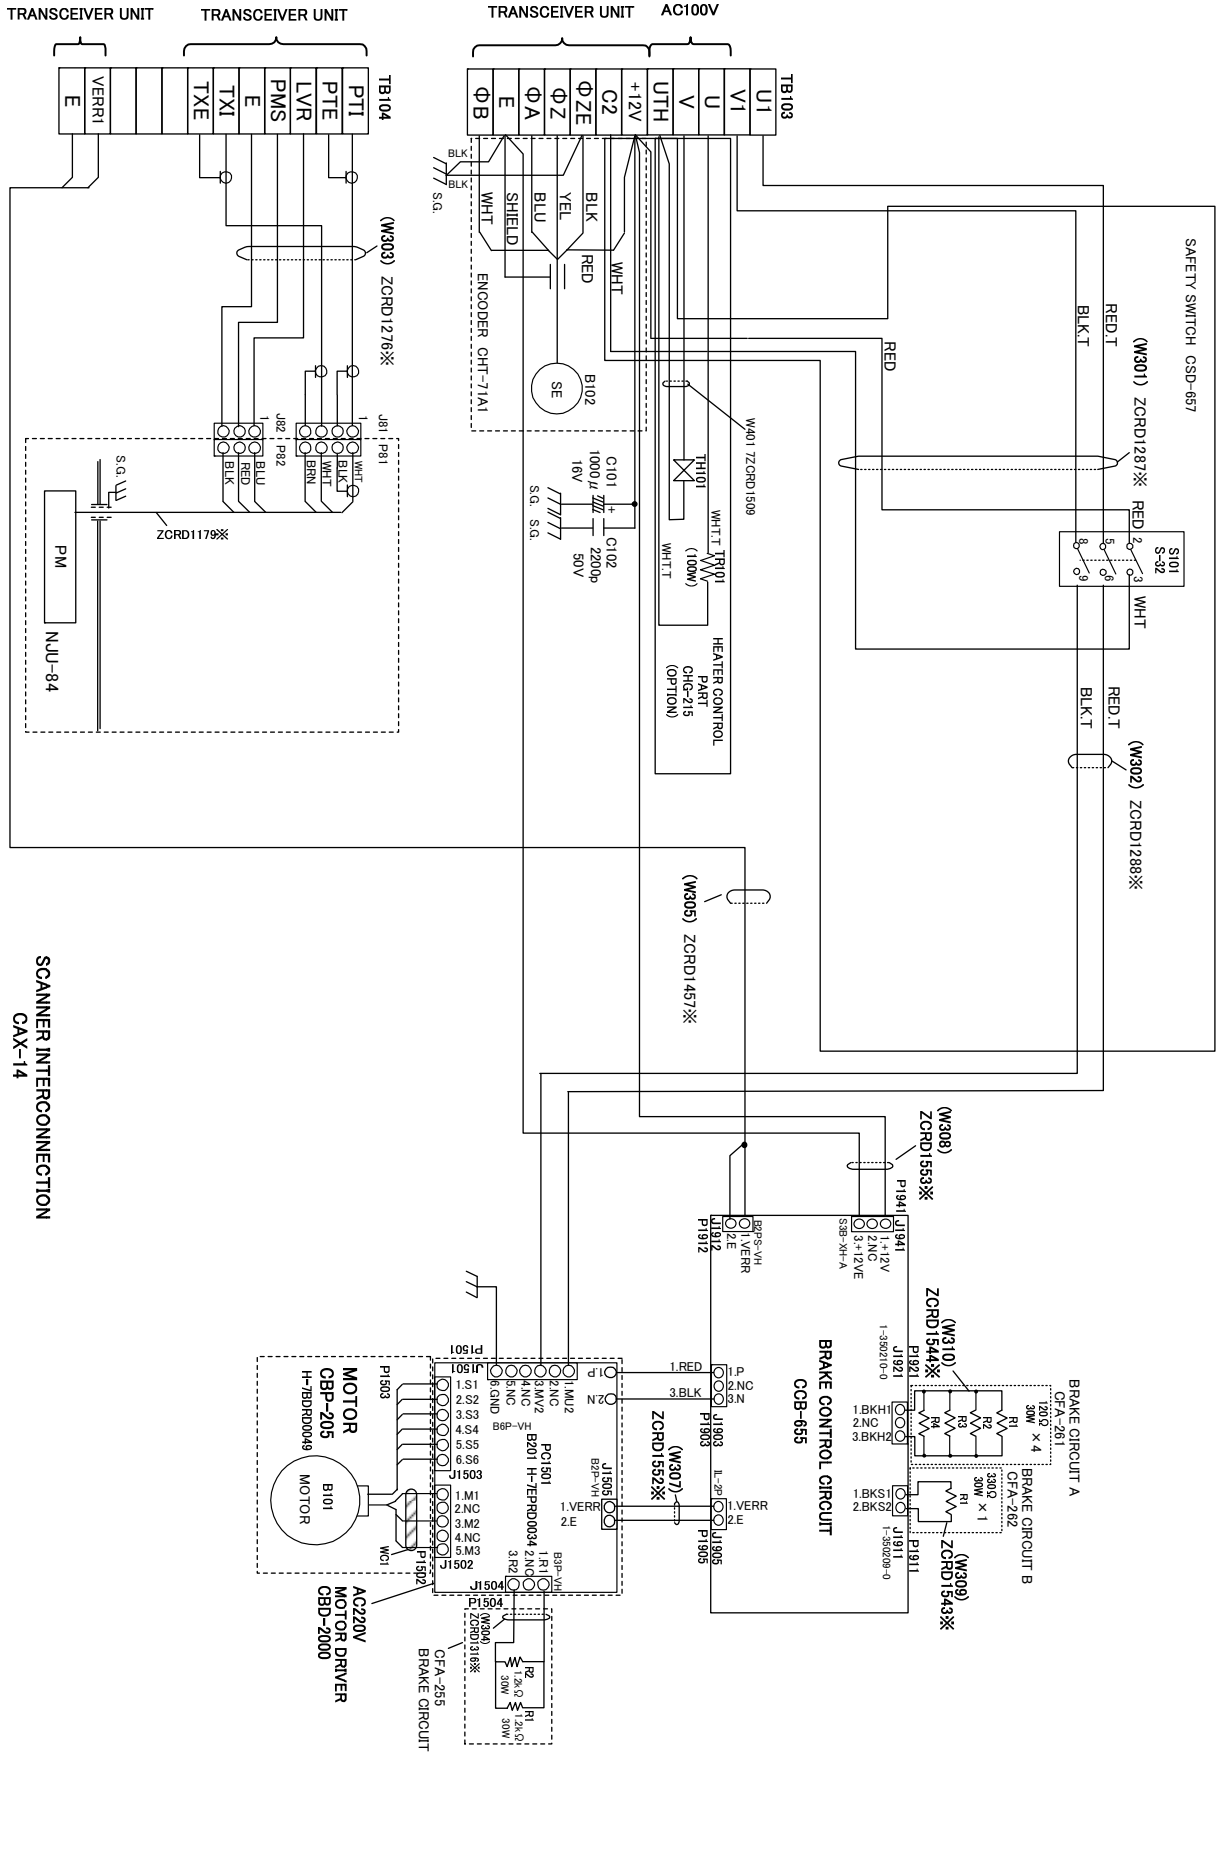


NKE-1139PM (AC220V) 空中機内接続図

6.6.4 NKE-1130 (AC110V)

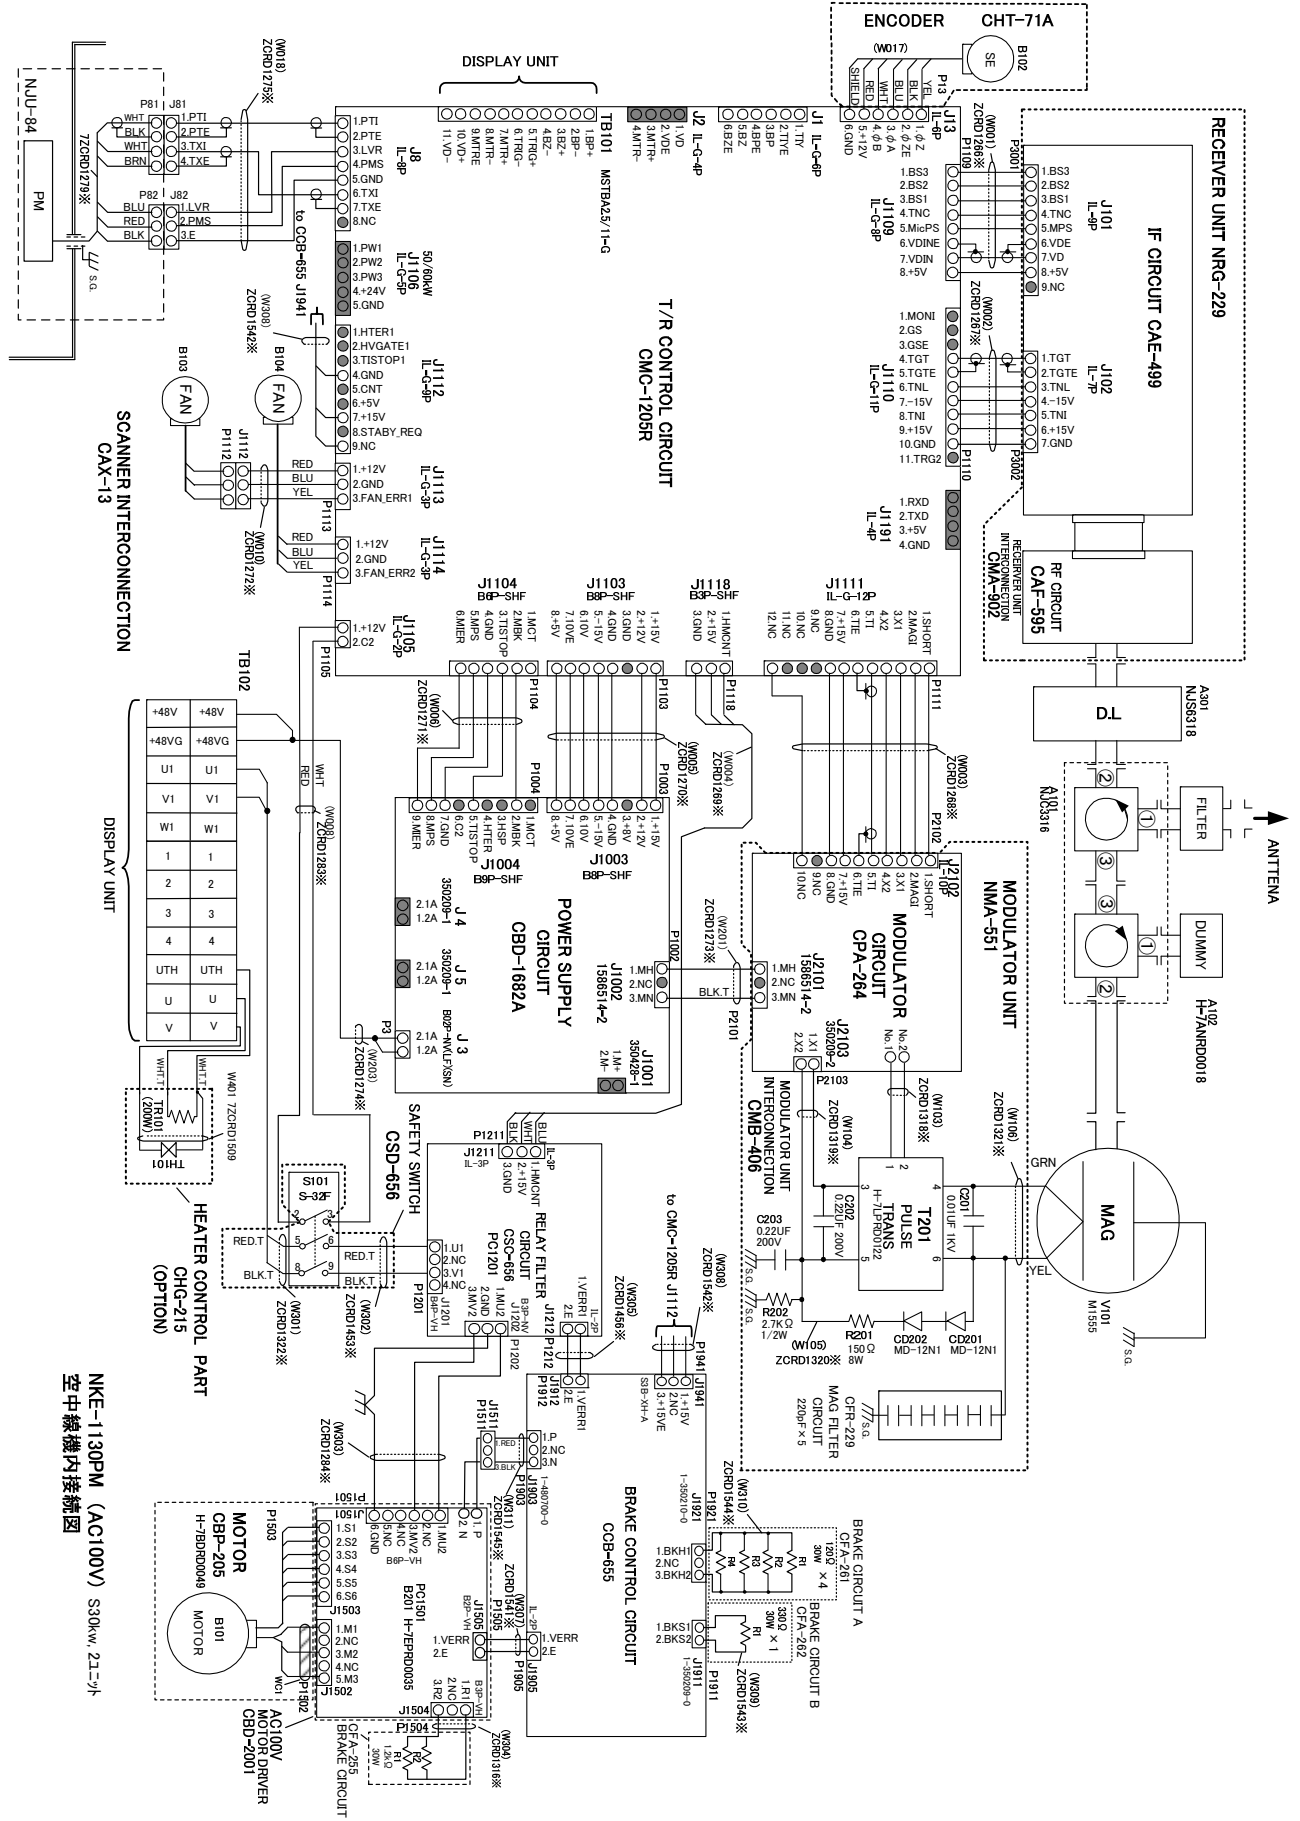


NKE-1130PM (AC100V) S30kW, 2.2h
空中線機内接続図

6.6.5 NKE-1130 (AC220V)

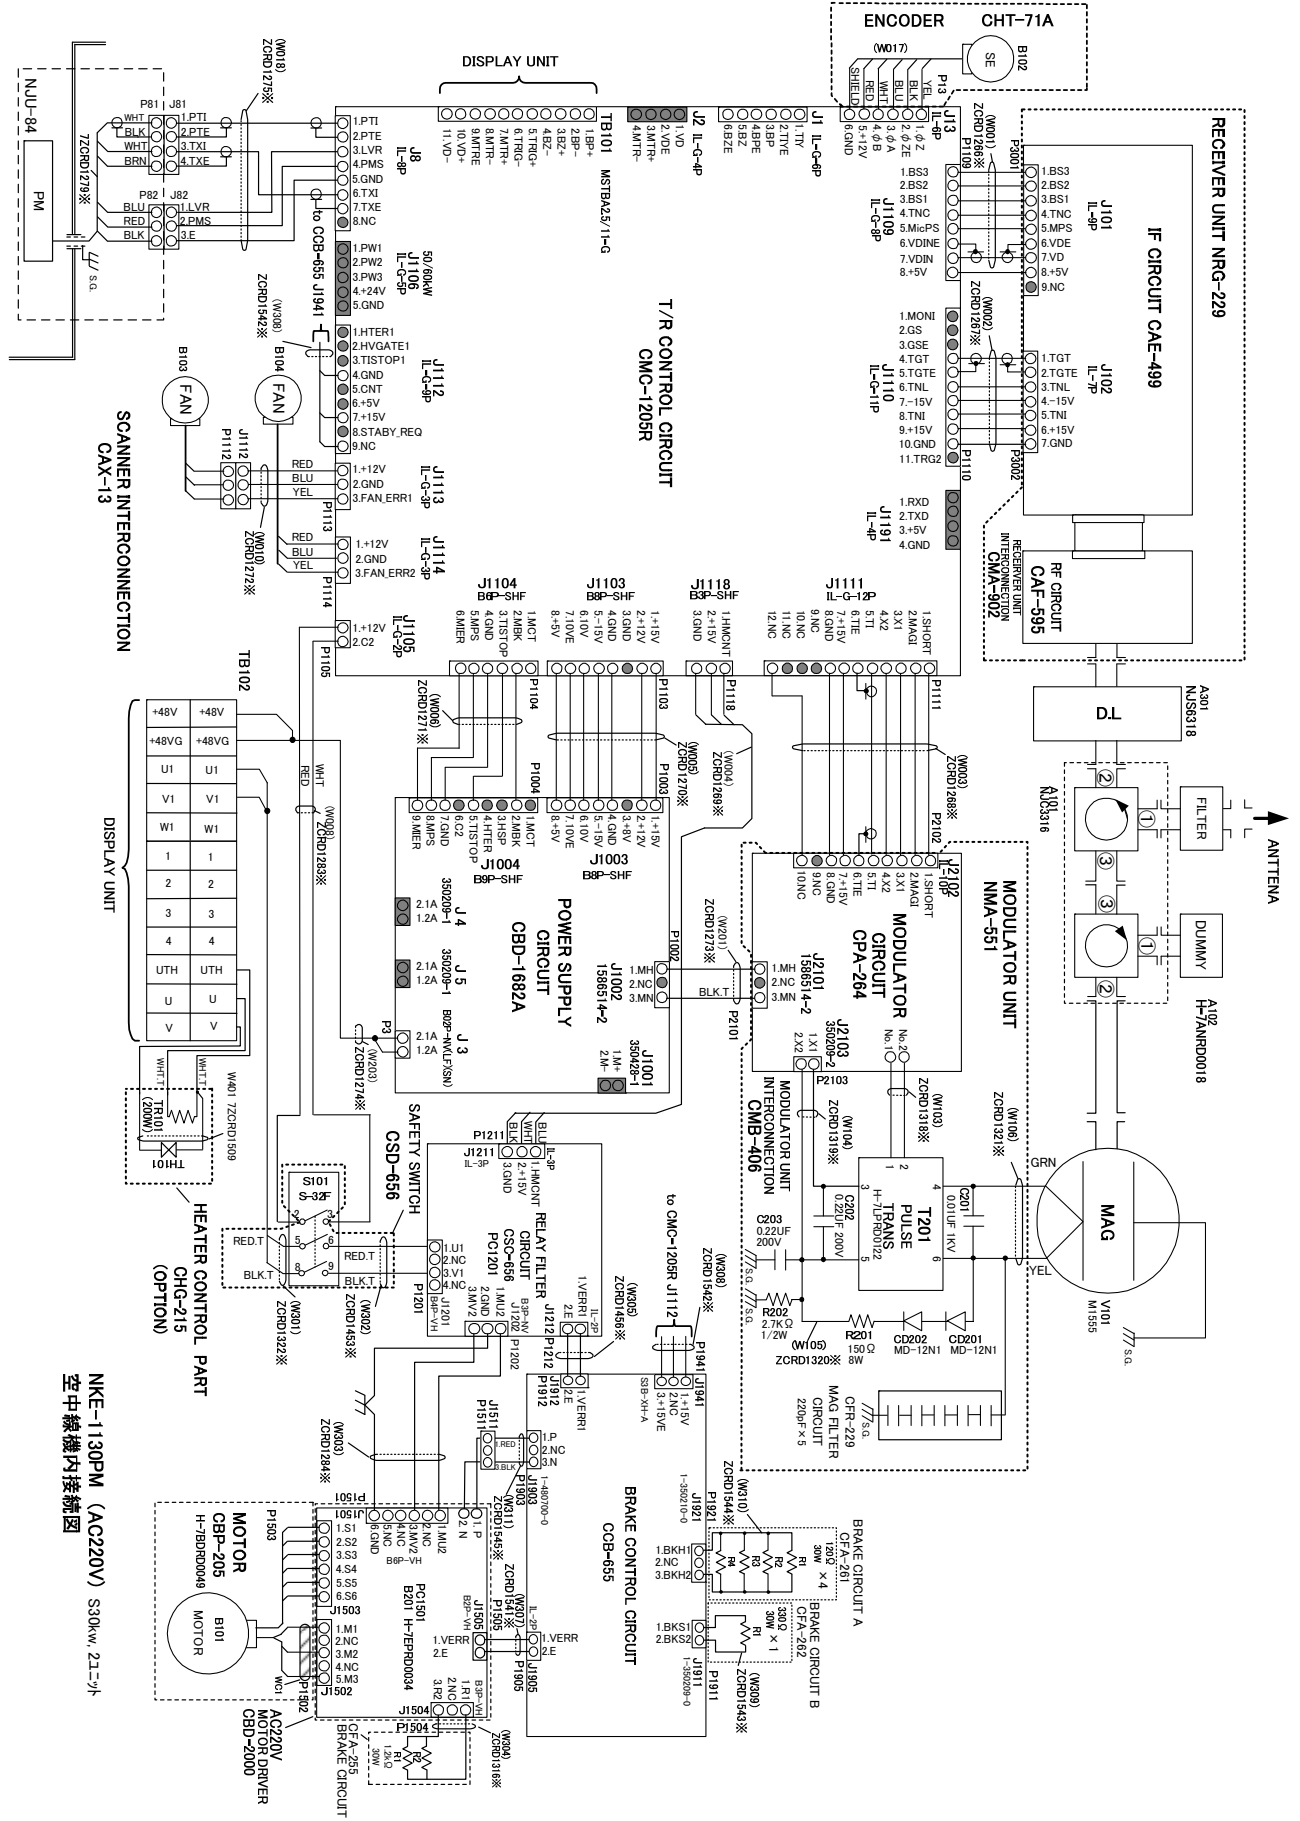


NKE-1130PM (AC220V) S30kW, 22.2h
空中線機内接続図

6.6.6 NKE-1129 (AC110V)

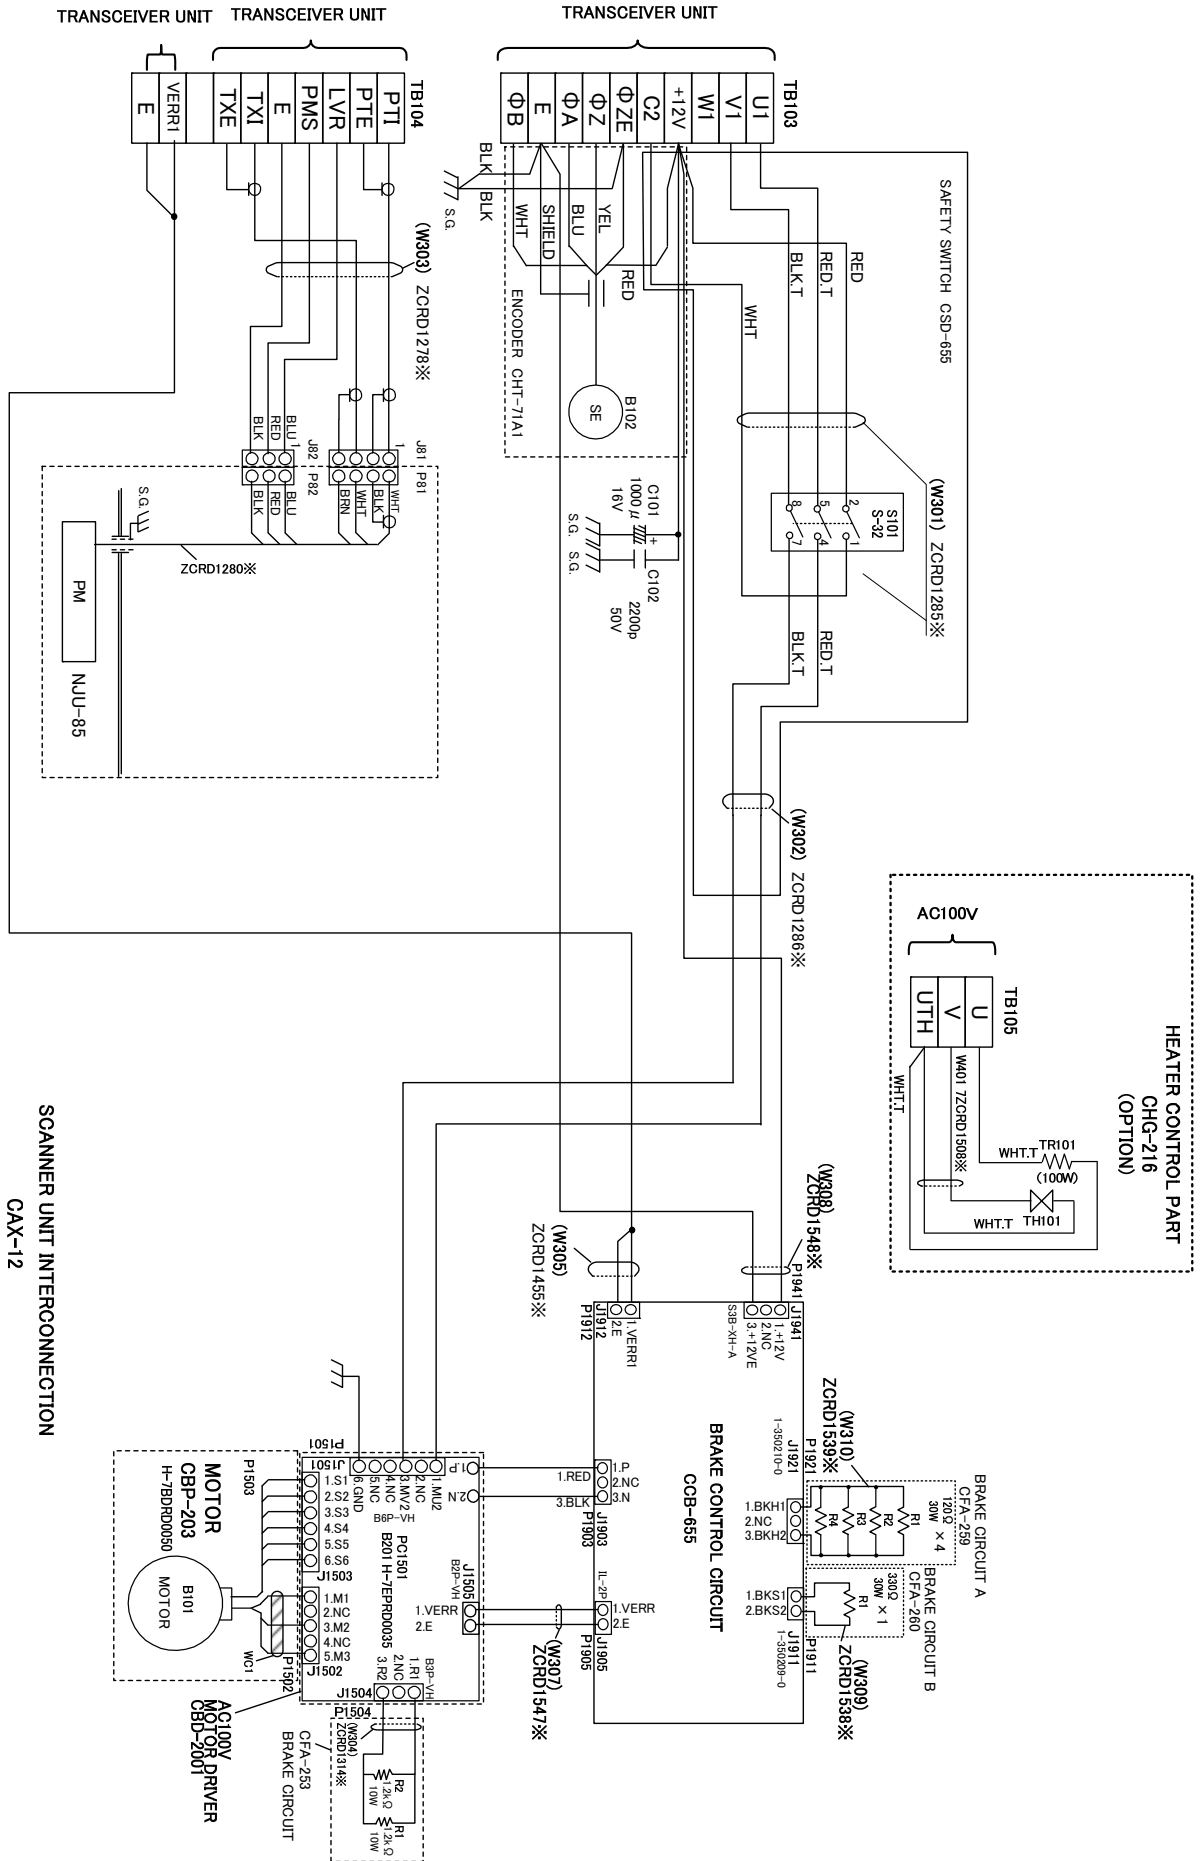


NKE-1129PM (AC100V) 空中線機内接続図

6.6.7 NKE-1129 (AC220V)

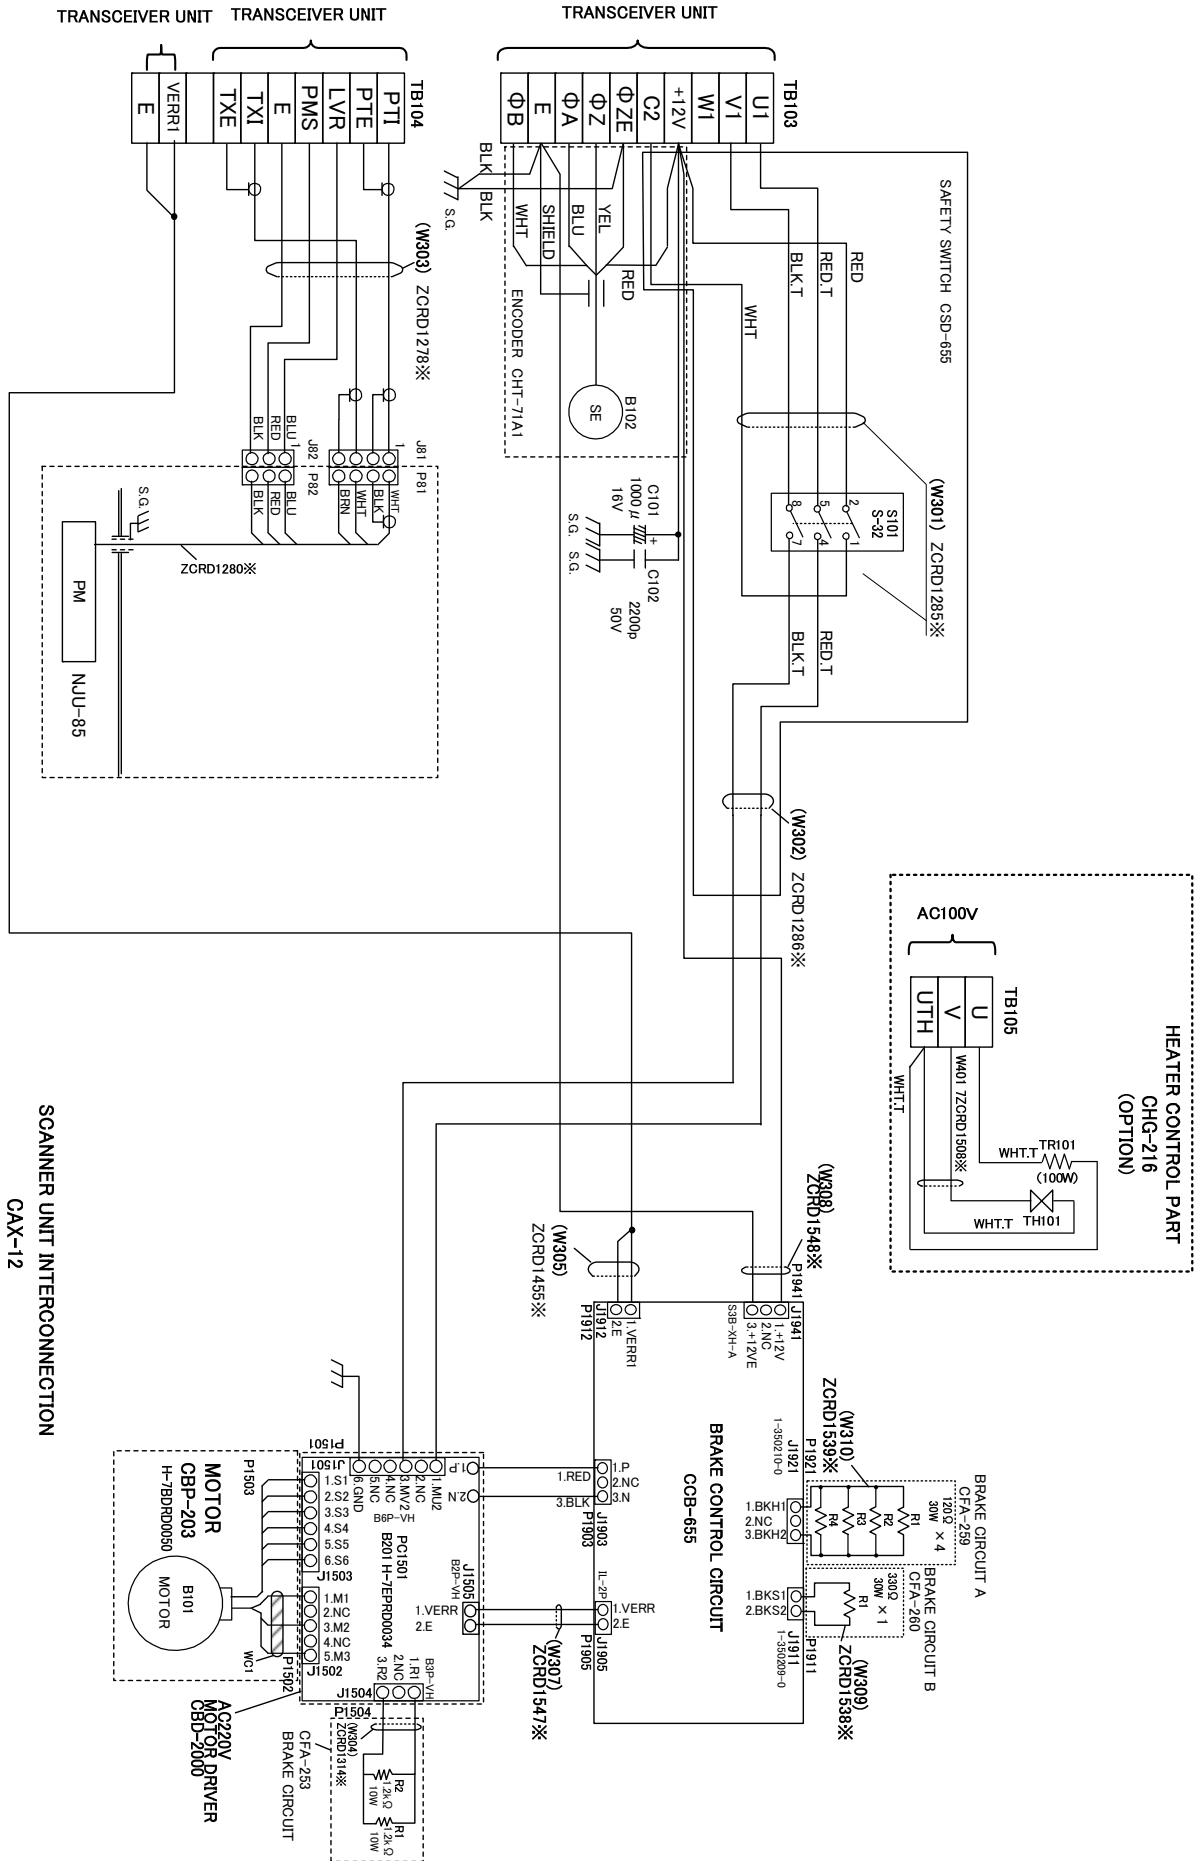


NKE-1129PM (AC220V) 空中線機内接続図


6.6.8 NTG-3225

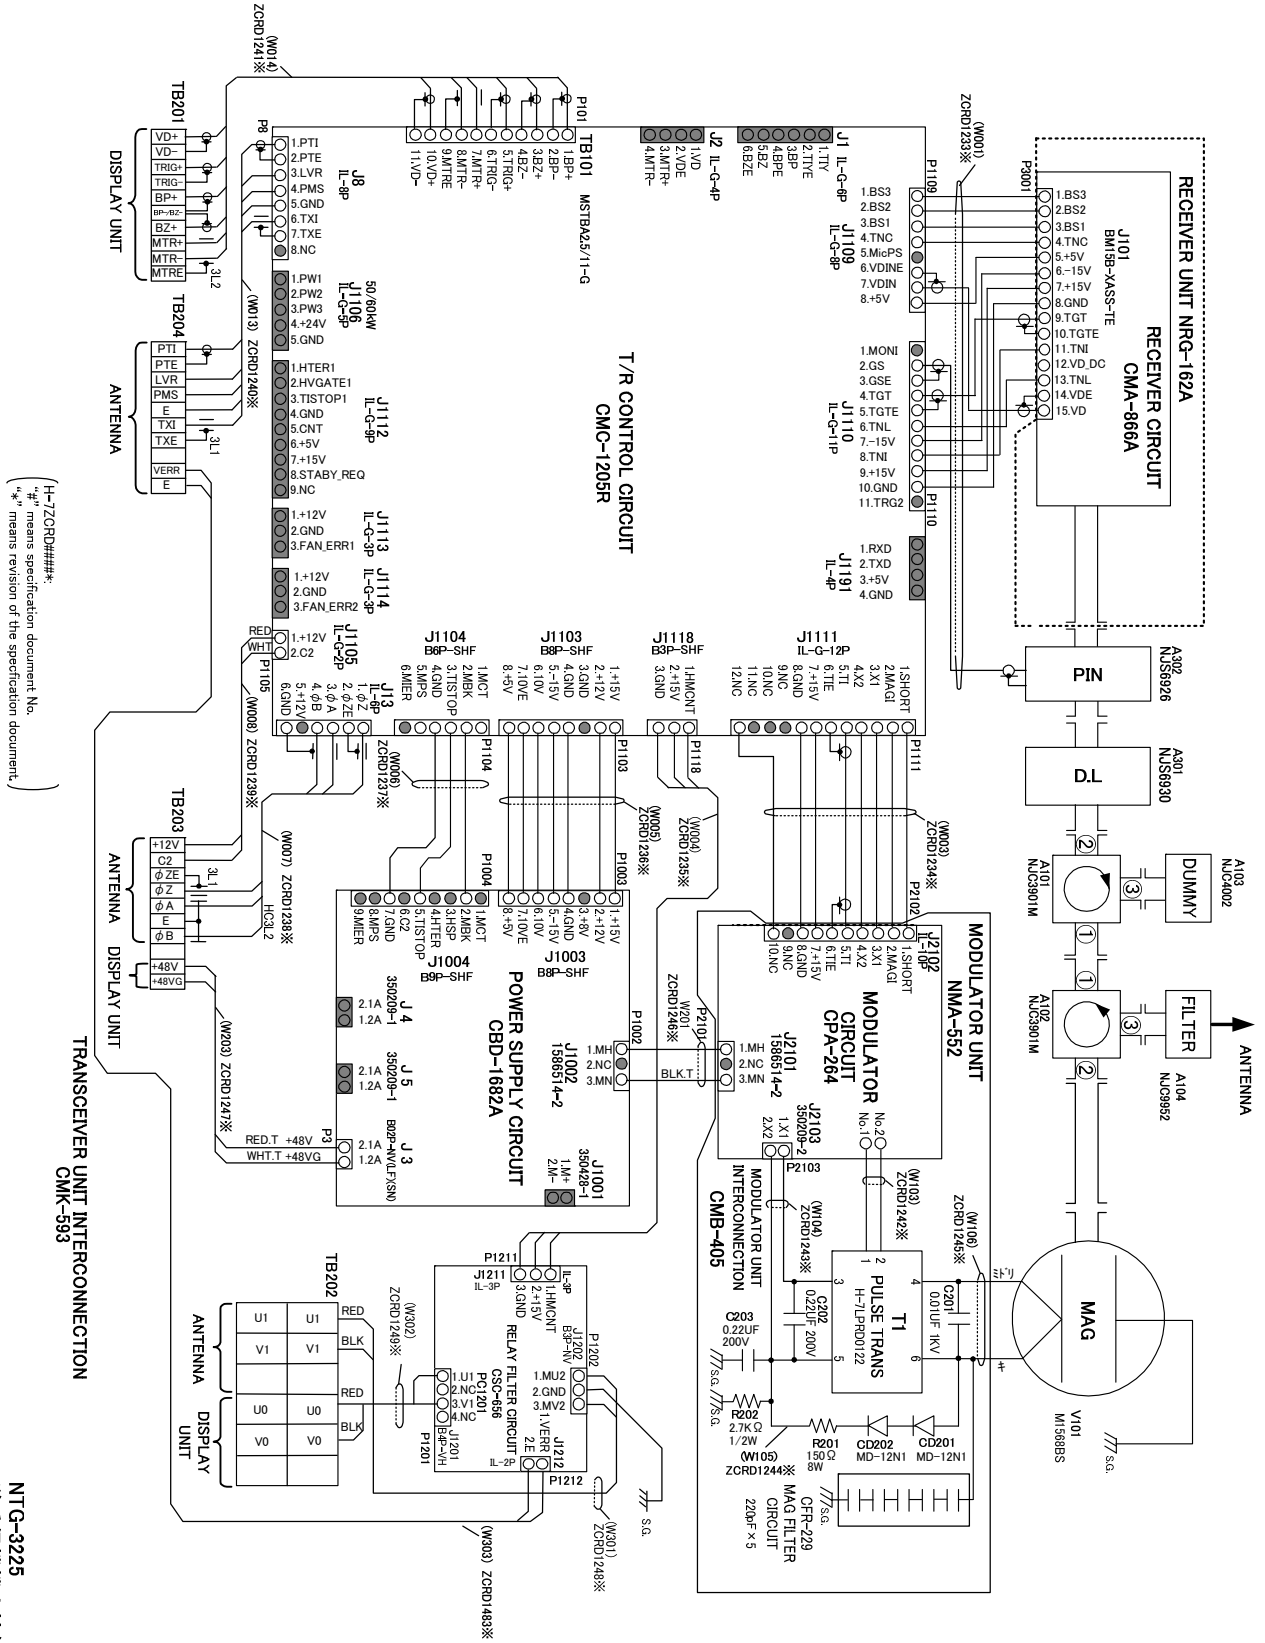

6.6.9 NKE-1125 (AC110V)

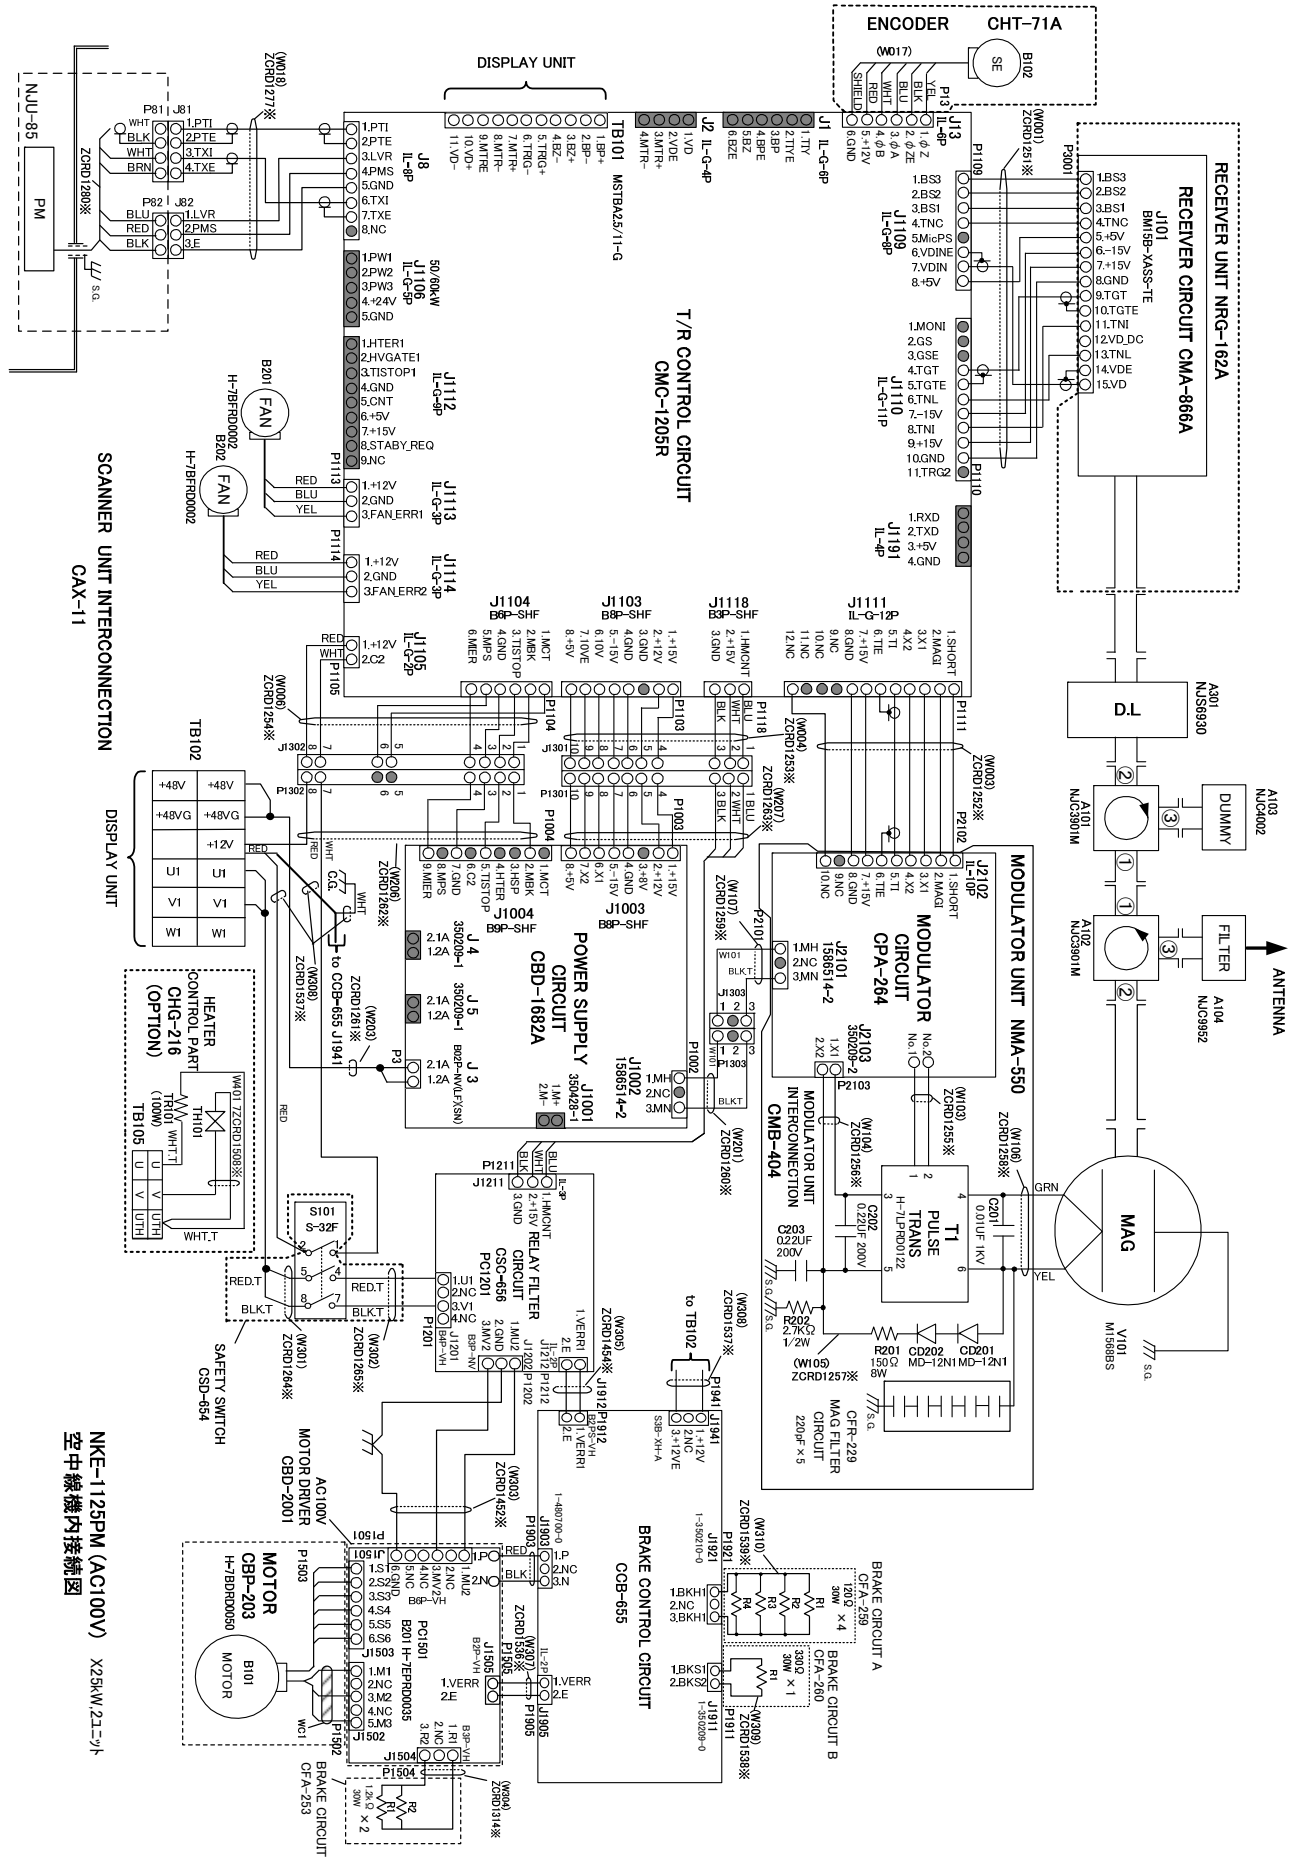

6.6.10 NKE-1125 (AC220V)

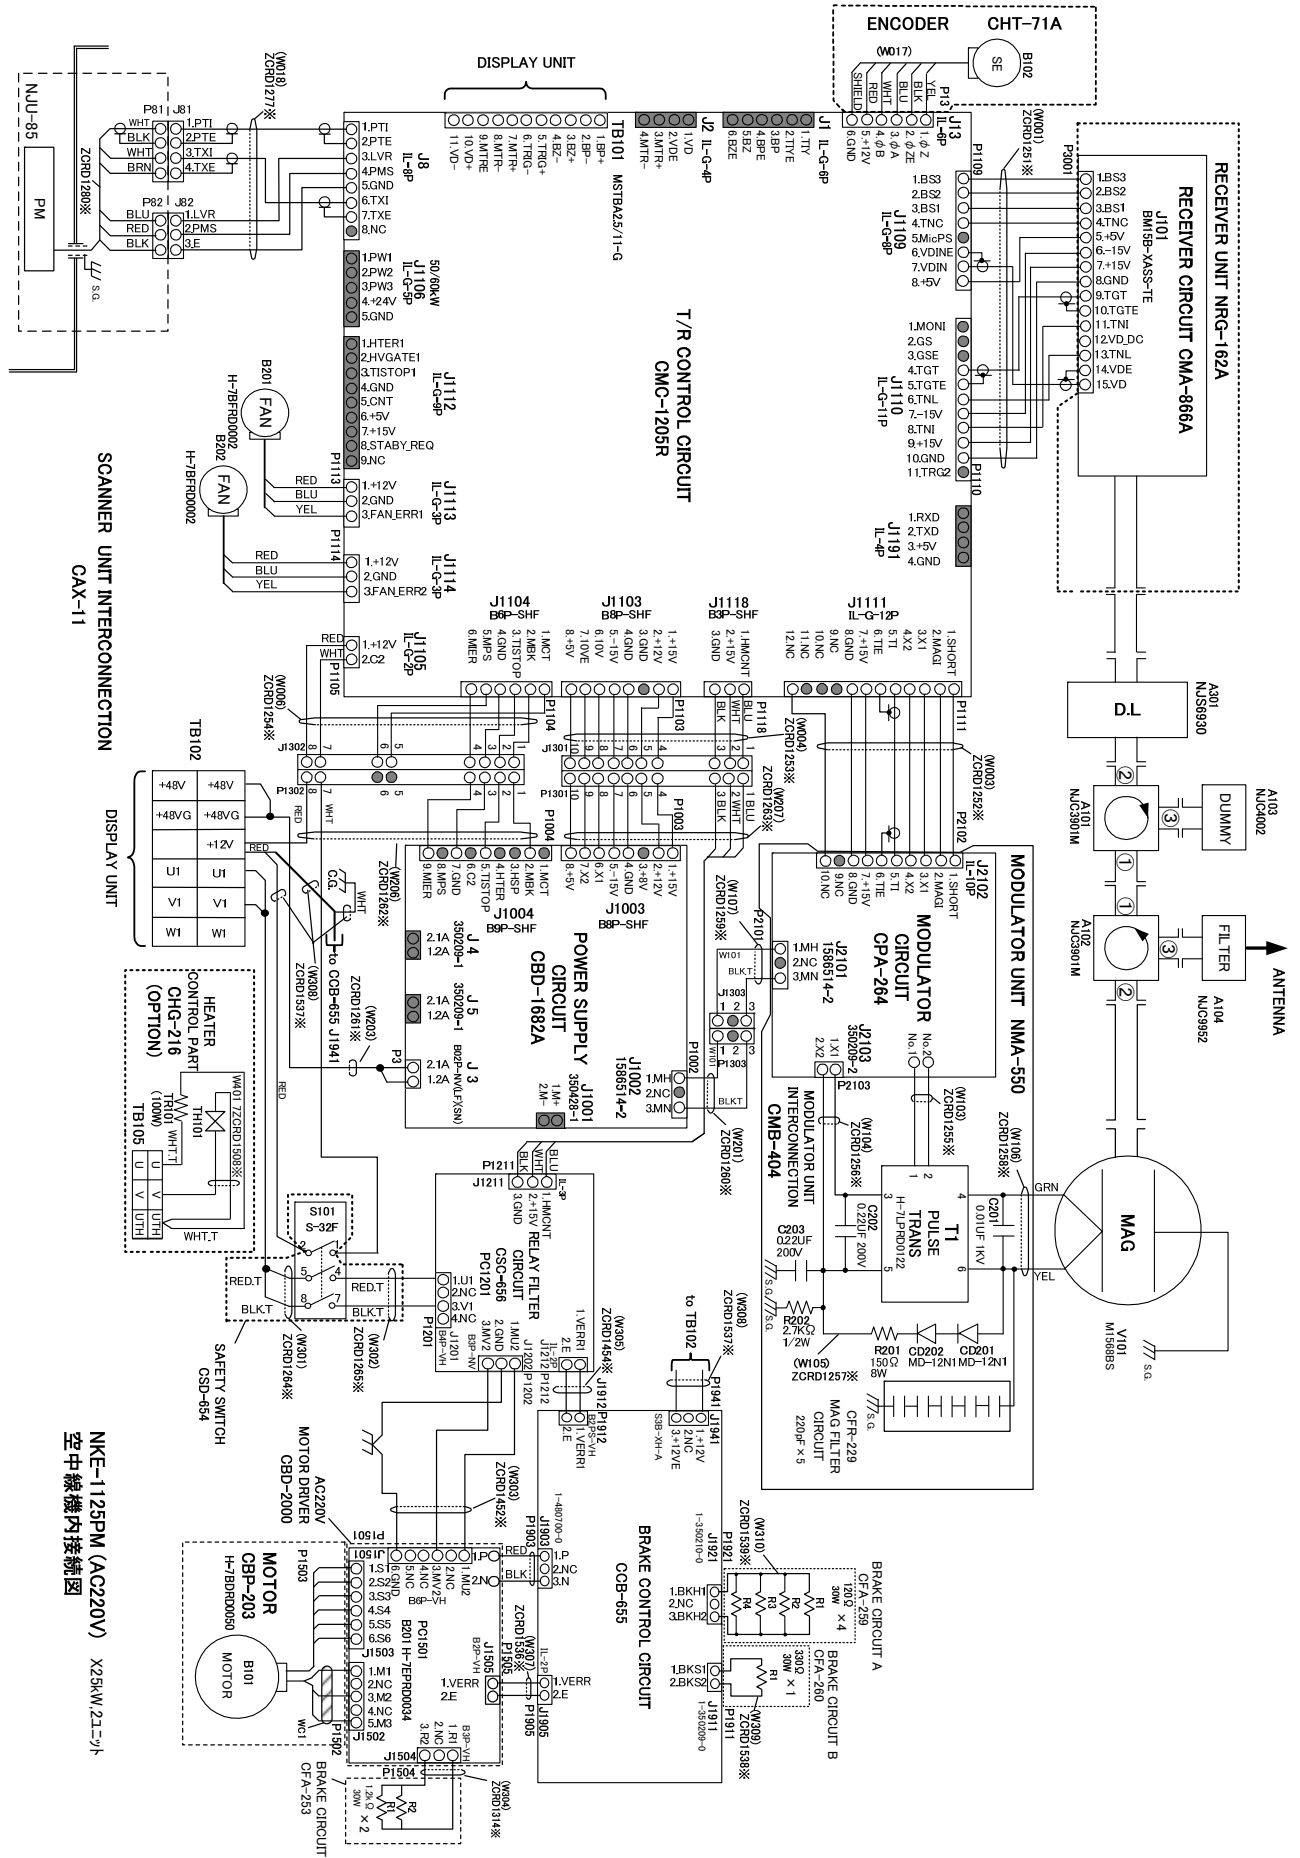

6.6.12 NKE-2103-6/6HS

