

Using the OSD Functions

TV/CATV SELECT TV CATV
AutoScan
Channel Add Delete
V-CHIP Control
↓↑:SELECT ENTER:CONFIRM

TV/CATV SELECT: To select TV signal input is TV or CATV.

AutoScan: To autoscans the TV channel (TV or CATV).

Channel: Add or delete TV channel.

V-CHIP Control: To setting V-Chip condition and password.

Blocking will be Active
Please Enter PIN-Code

MENU:EXIT ENTER:CONFIRM

V-Chip setting: Key in the original password is 1234, and come into V-Chip setting.

Using the OSD Functions

V-CHIP Blocking	ON	OFF
MPAA Rate Blocking	ON	OFF
MPAA Rating		
	X NC17 R PG13 PG G	
	B B U U U U	
TV Rate Blocking		ON OFF
TV Rating	MA 14 PG G Y7 Y	
	ALL B B B U U U	
	D B U	
	L B B U	
	S B B U	
	V B B U U	
NEW PIN-code		
↓↑ :SELECT	ENTER:CONFIRM	

Use remote control ▲, ▼, ◀, ▶ and enter key to setting parental Guide lines.

- Press ▲, ▼, ◀, ▶ key you can see the curse to moving.
- When the text is yellow, press enter key you can setting block or unblock condition.
- New PIN-Code: You can to change password.

Using the OSD Functions

**This program is BLOCKED
by Rating Type**

TV PG

Press MENU to enter PIN Code

When meet V-CHIP signal Active, OSD will show the message as below.

**Blocking is Active, Please
Enter PIN-Code to
temporarily unblock**

MENU:EXIT

ENTER:CONFIRM

If you want to release V-Chip block OSD.

1. Press Menu-Key.
2. Press password from remote control, The V-Chip block OSD will disappear.