 


## Using the OSD Functions

Press menu key it can display OSD Menu.

Video mode (Include-YCbCr, AV)

Picture Menu:

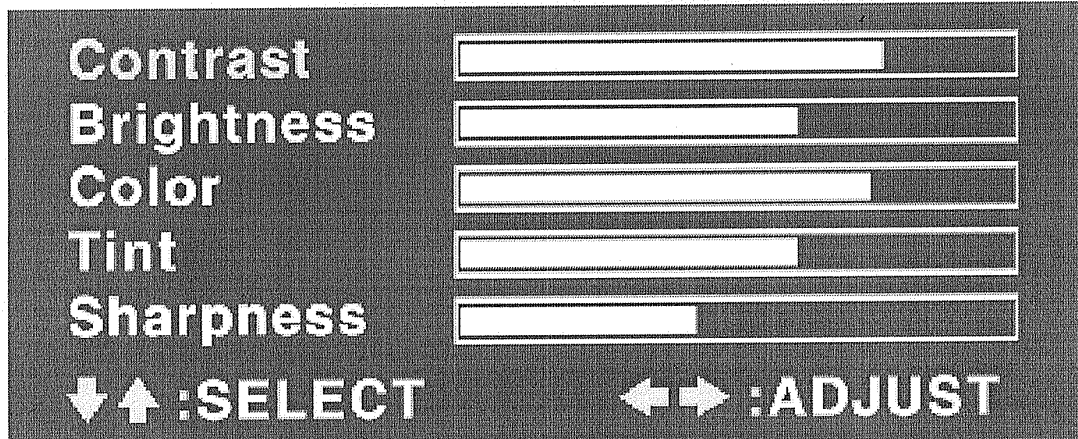

This submenu can to adjust Contrast, Brightness, Color, Tint and sharpness.

 
**Contrast:** To adjust the contrast of the video.

**Brightness:** To adjust the Luminance of the Video.

**Color:** To adjust color saturation.

**Tint:** To adjust the Hue.

**Sharpness:** To adjust the picture sharpness of display.

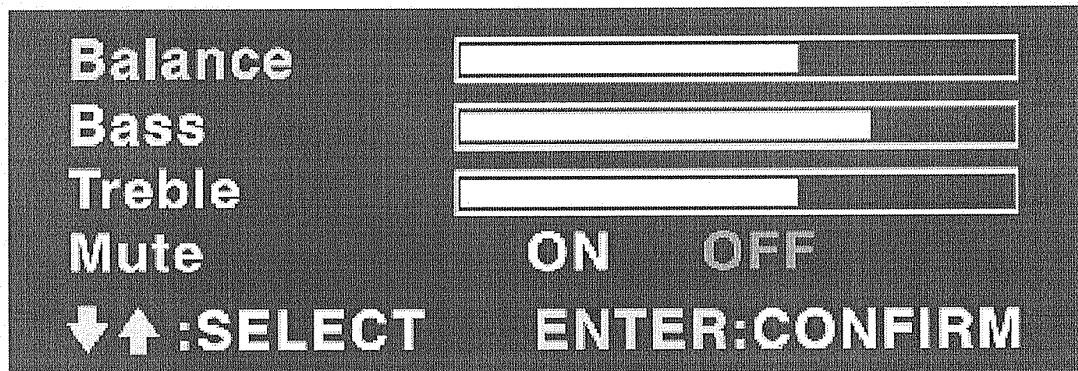

This submenu can to adjust Balance, Bass, Treble, and to mute ON/OFF.


**Balance:** To adjust the left and right audio balance.

**Bass:** To adjust the bass.

**Treble:** To adjust the treble.

**Mute:** To select the Mute ON/OFF.

## Using the OSD Functions

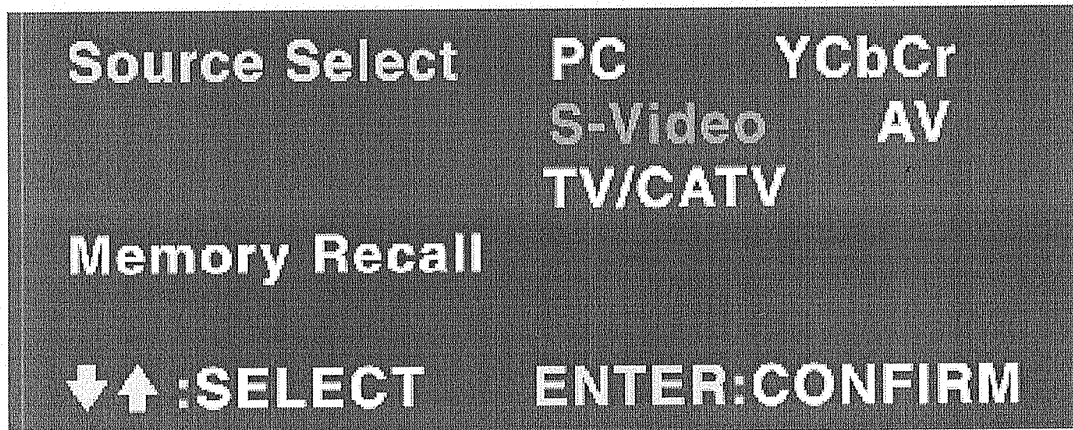 

**Source Select:** To select the source (PC, YCbCr, S-Video, AV).


**Memory Recall:** Recall factory setting condition, about video &Audio setting.

## Using the OSD Functions

 Press menu key it can display OSD Menu.

PC mode

Main Menu:

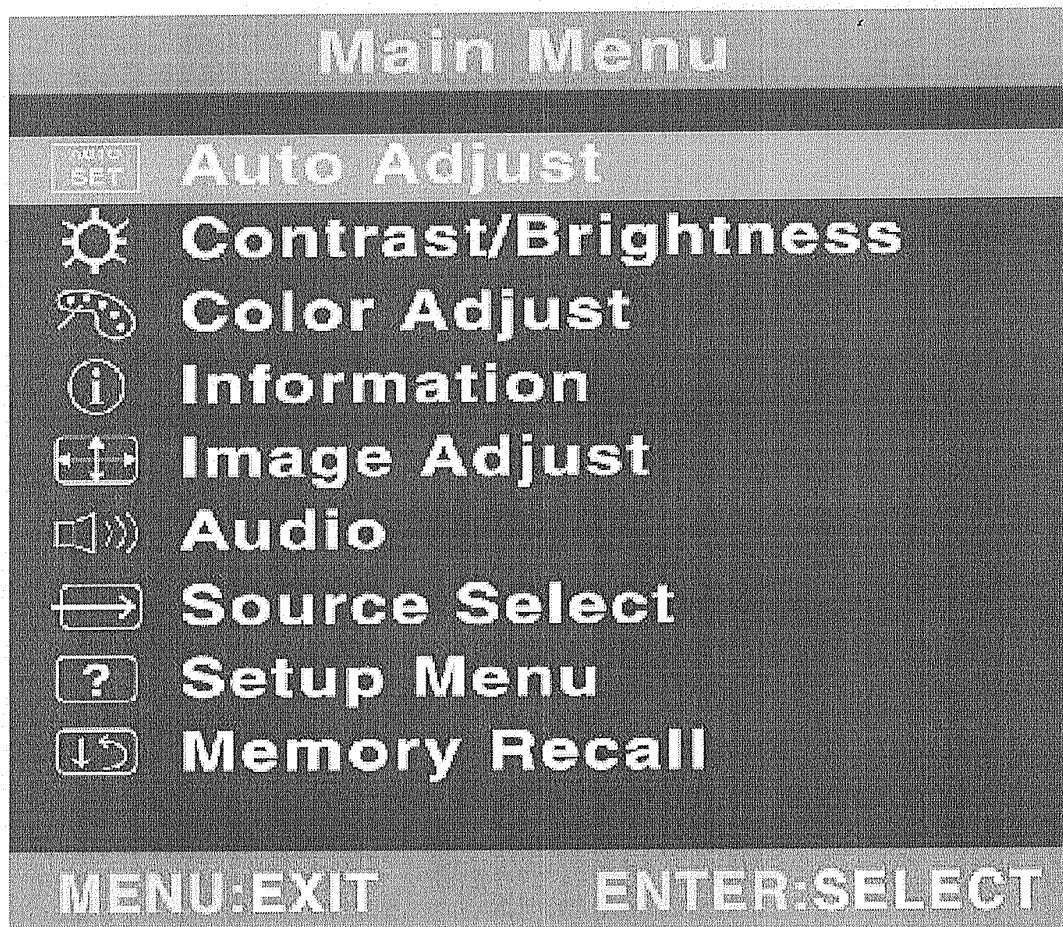

## Adjusting

**Auto Adjust:** Auto adjust picture's horizontal position, vertical position, fine tune and H-Size.

## Memory Recall

**Memory Recall:** Restore default settings of contrast (Max), brightness (Middle), color temperature (preset color), OSD Position (Center), Sharpness (Min) and Volume (Middle).

## Using the OSD Functions

### Contrast



MENU:EXIT

ENTER: 

Contrast: To adjust the contrast of the video.

### Brightness



MENU:EXIT

ENTER: 

Brightness: To adjust the back-light current.

### Color Adjust

 Preset

User Color

MENU:EXIT

ENTER:SELECT

Color Adjust: To select the preset color temperature or user color setting.