 
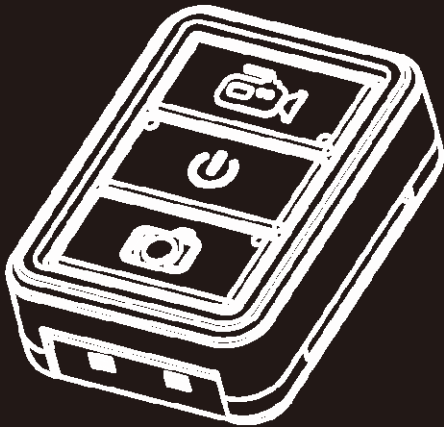 
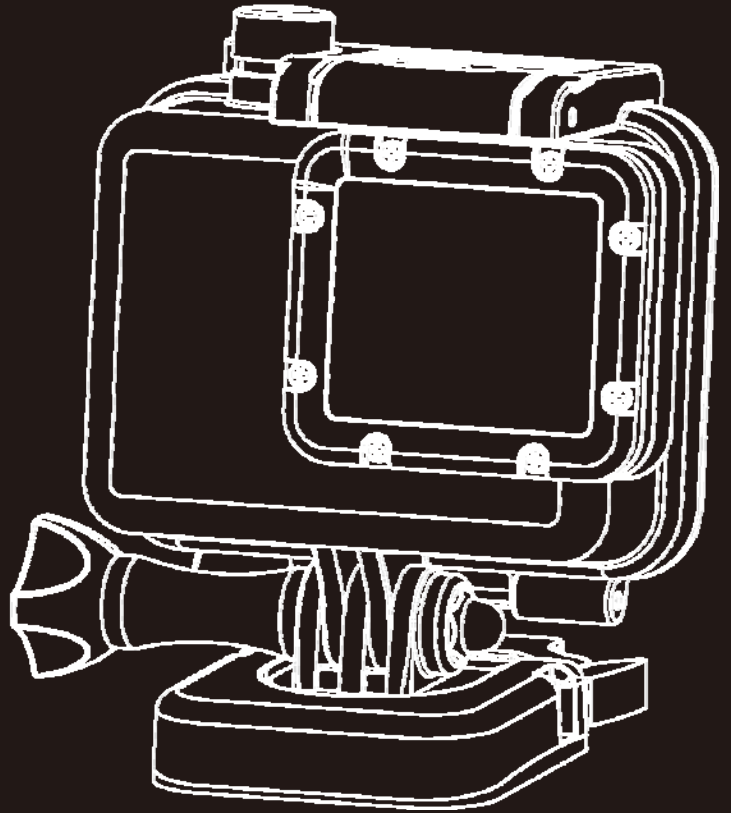 


# EAGLE EYE

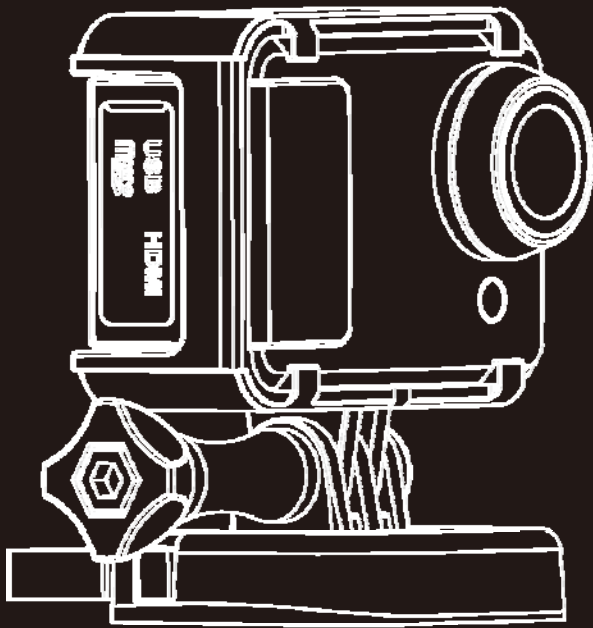

**SmartCam**

User Manual

## Catalog

Main Features .....	3
Install & Use.....	4
Camera Body Instruction .....	4
Remote Controller ( Optional ) .....	5
Install the battery .....	6
Close the battery cover.....	6
Install the Mount .....	7
Install the Waterproof case.....	8
Install the Memory card.....	9
Power charge .....	10
Record & Capture .....	12
Media Playback .....	13
Delete Files .....	15
Connect with TV .....	16
Connect with PC .....	17
System Icons.....	18
Booting Picture .....	18
Icons .....	18
Main Menu .....	19
REC setting .....	19
System Setting.....	19
System Setting .....	20
Fast Setting: .....	20
Date & Time .....	21
Video System.....	22
Wi-Fi.....	23
REC Mode: .....	24
Specifications .....	26
Standard Accessories .....	29

# Main Features

- 480 x 240 , 1.5" TFT LCD Screen Display
- 14MP HD CMOS Image Sensor
- 150° Super Wide angle under 720P; 118° under 1080P
- Full HD 1080P H.264 Video compression to MP4 format
- Waterproof, shockproof, support 50M depth diving
- Wireless RF remote controller
- Support Multi-mode video record and picture shot
- Built in WIFI, real-time video display and setting
- Optional Video resolution

16 : 9 FULL HD 1920 x 1080p	30FPS
4 : 3 FULL HD 1280 x 960p	30FPS
16 : 9 FULL HD 1280 x 720p	60FPS
4 : 3 WVGA 848 x 480	60FPS

 
- Optional Picture resolution :

4608 x 3072	14MP/Piece
3200 x 2400	10MP/Piece
3200 x 2400	8MP /Piece

- Audio & Video playback
- Support 1GB~64GB SDHC TF Storage card
- USB2.0 for data transfer and power charge
- HDMI & RCA Video output

# Install & Use

## Camera Body Instruction

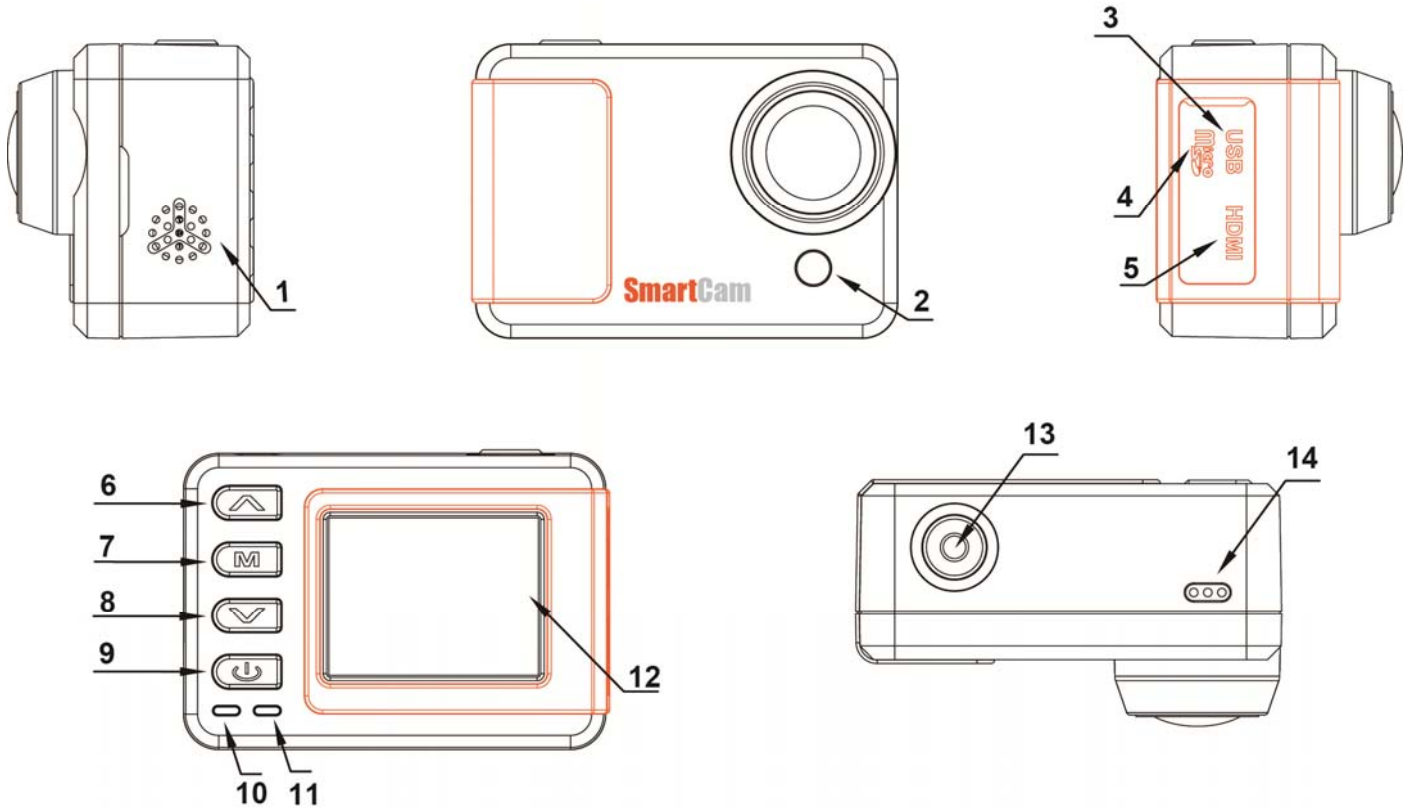

- |                  |                            |
|------------------|----------------------------|
| 1. Speaker       | 9. Power / Picture Shot    |
| 2. REC Indicator | 10. Power charge indicator |
| 3. USB Port      | 11. REC/Remote Indicator   |
| 4. TF card slot  | 12. 1.5" TFT LCD           |
| 5. HDMI Port     | 13. REC/REC Indicator      |
| 6. Up key        | 14. MIC                    |
| 7. Menu          |                            |
| 8. Down Key      |                            |





## Remote Controller (Optional)

 REC button

 Power button

 
 Picture Shot



- ① Press and hold the  button for 3 seconds to Power on the remote controller ( or Power off) , the green indicator will turn on if powered on.
- ② Single press the  twice to power on the camera, the green indicator on remote will flash if camera was powered up successfully, single press the POWER button again to turn off the camera.
- ③ Start video record. Press the  button to start the video record, the indicator will turn on the flash beside, press again to stop and video will be saved automatically, indicator will turn off at the same time.
- ④ Picture Shot. Single press  button to take a picture, the indicator beside will flash once in every successfully shot.

Note: Here has a indicator beside every button, if the indicator was not display or flash as the instruction above, then that means the distance exceeded or the camera was not successfully controlled by the remote.

- ⑤ Open the Remote Mode of camera.  
Press & hold the **MENU** button 2 seconds on the camera to enter the Remote Mode, green indicator of camera will turn on.  
Press & Hold the **MENU** button 2 seconds to exit the Remote Mode after power off the camera, green indicator will turn off.

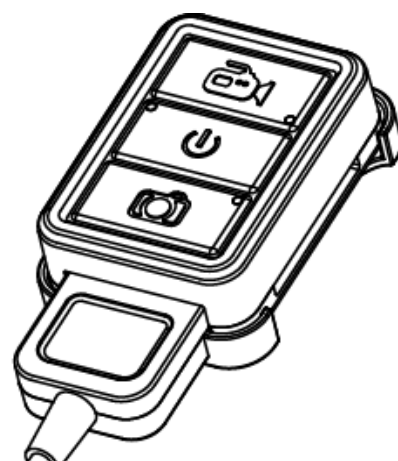


**Charge the Remote Controller:** Place the remote controller to the offered base charger, another USB side to DC 5V, red indicator will turn on beside the POWER button, and will power off after full charged.


## Install the battery

 Please install the battery correctly according to pictures below:


Open the face battery cover

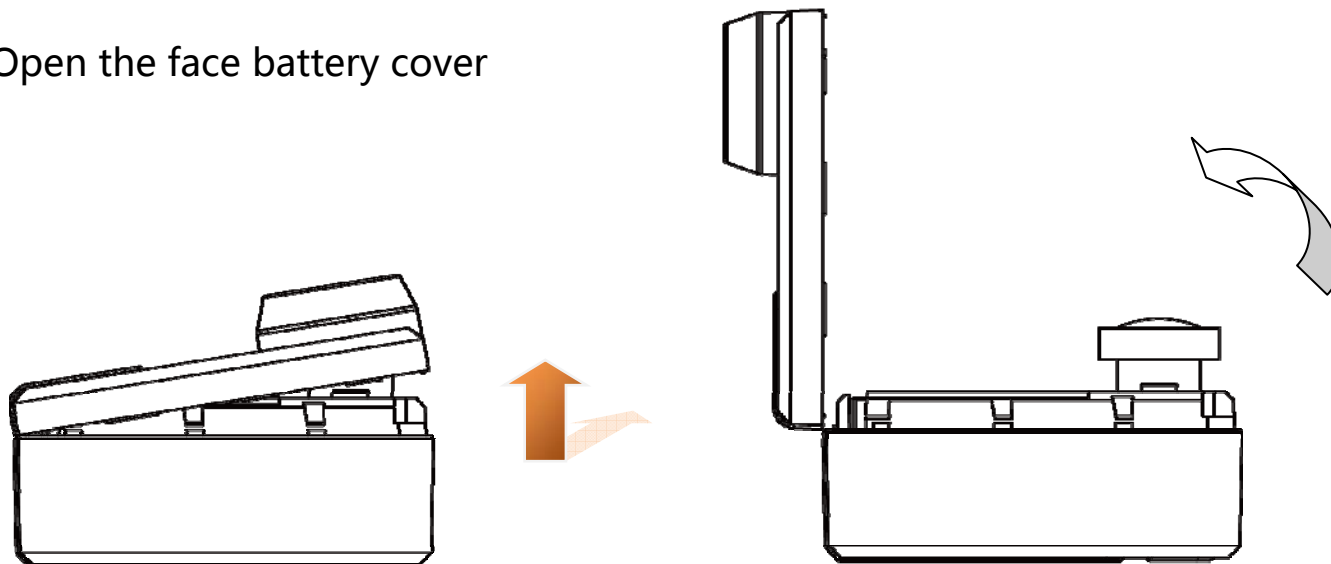

Place the battery ( Character side up )

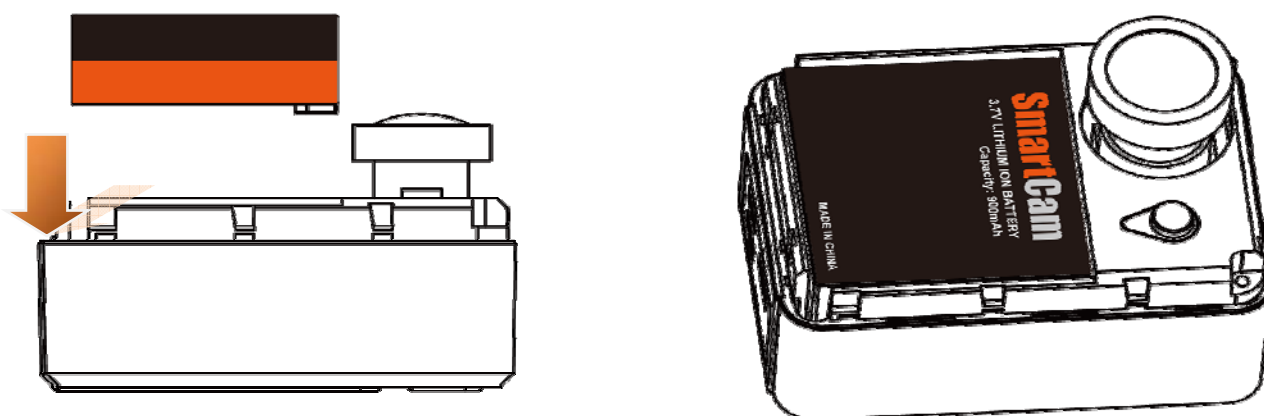 


Close the battery cover


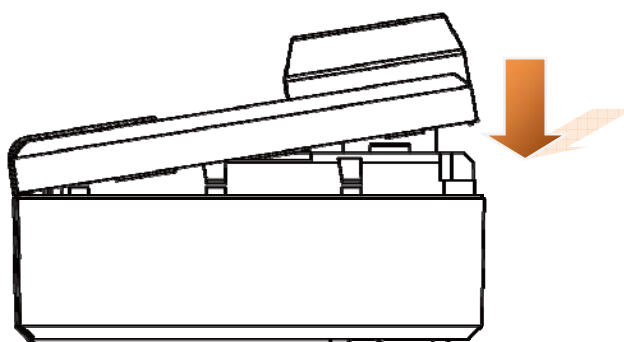 


## Install the Mount


 
Pull the both arms towards to outside like below, place the camera into it.

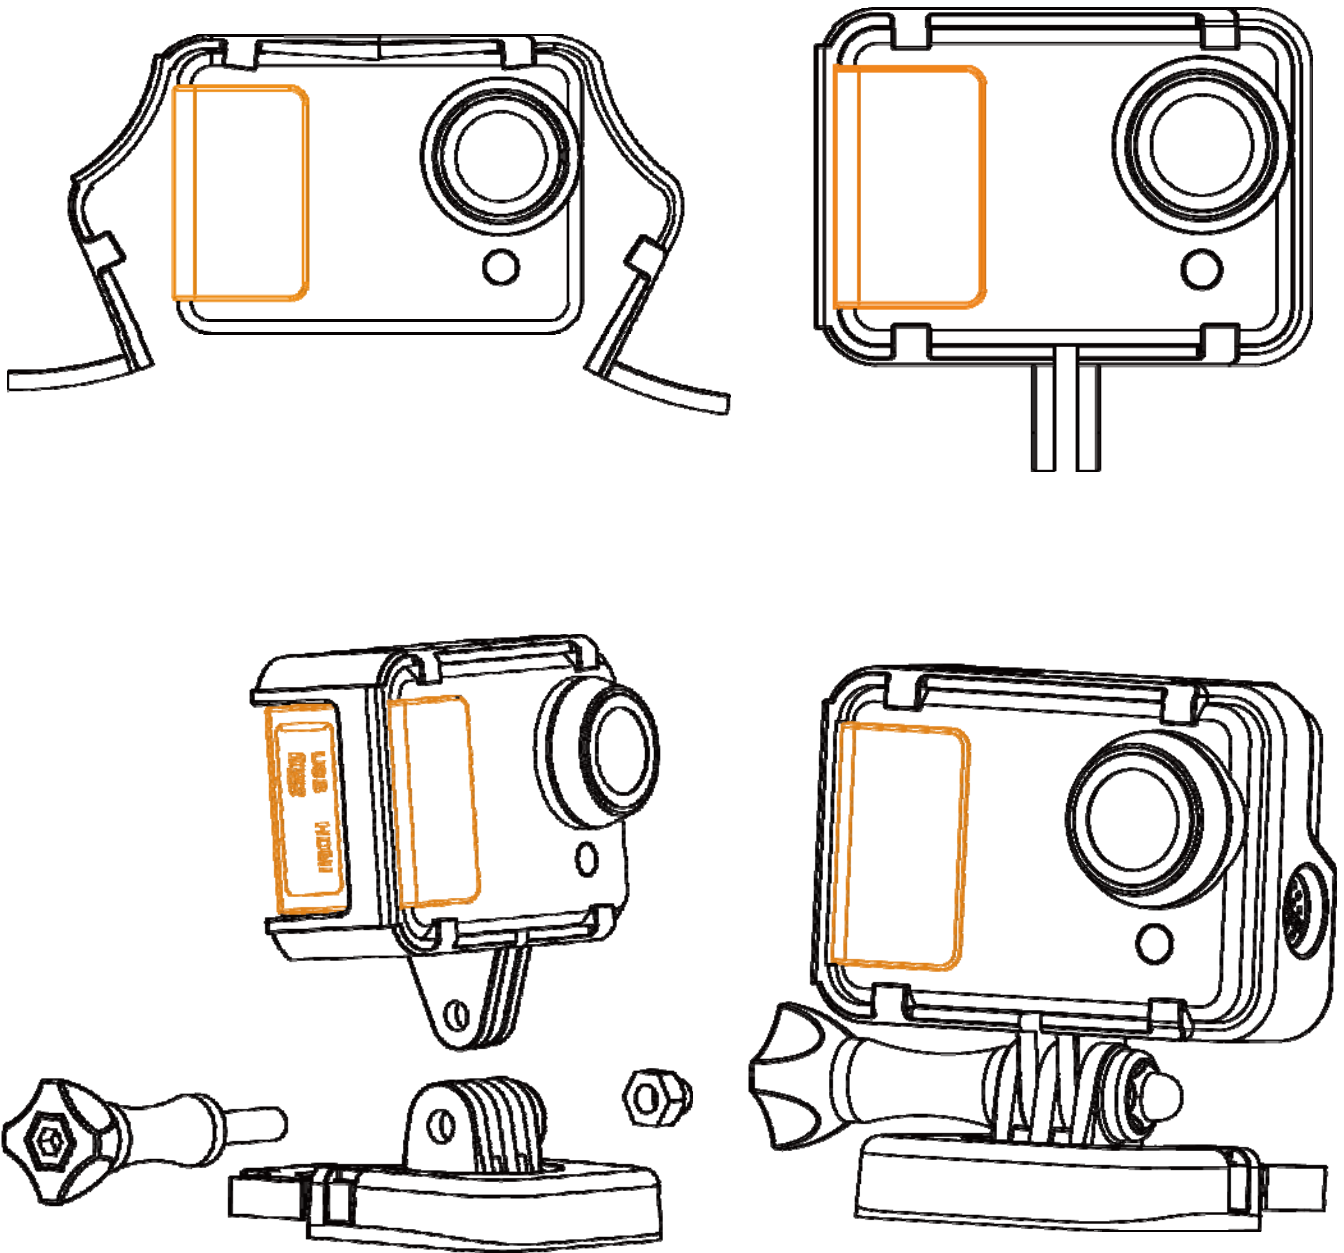

## Install the Waterproof case

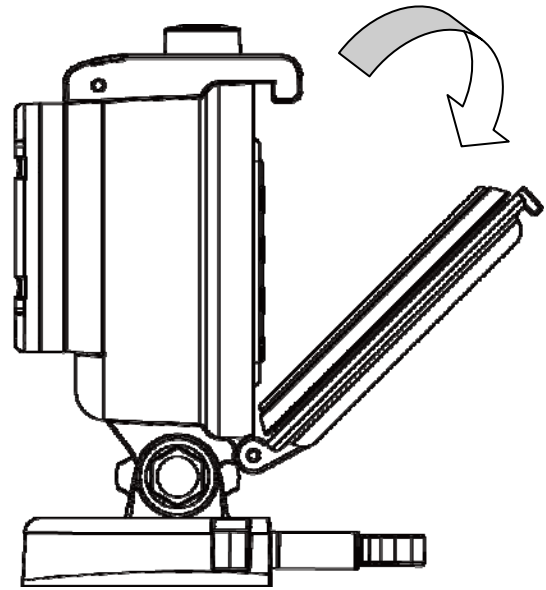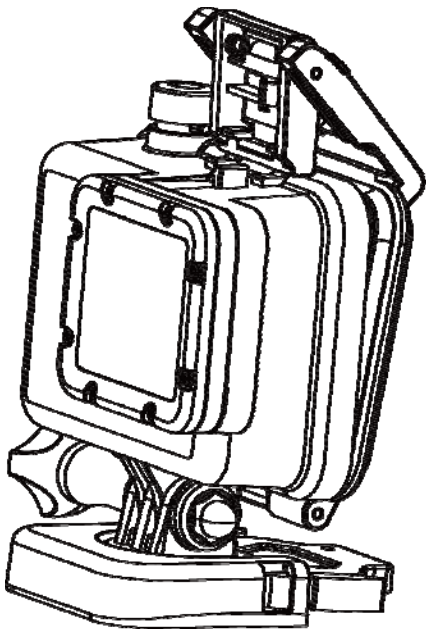  

Close the back door

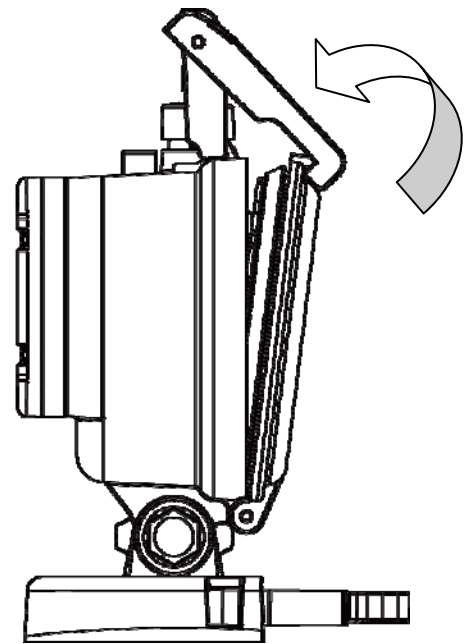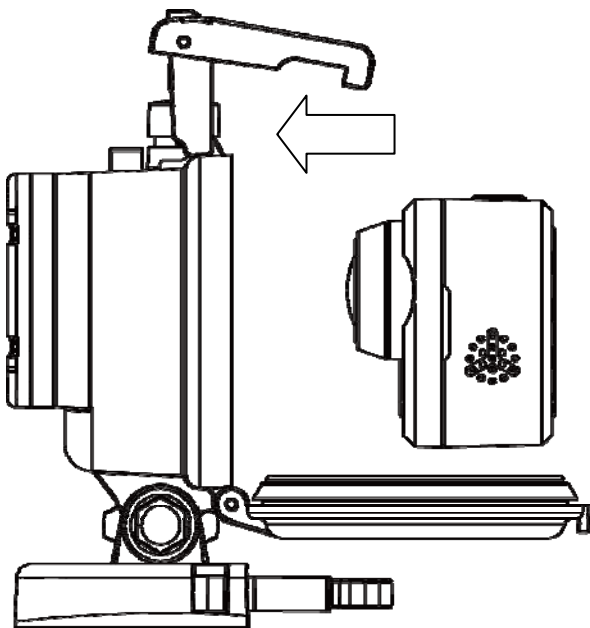  


### Note:

Could use the **REC** button to power on and start the video record directly. Press and hold the **REC** button for 3 seconds, the camera will power on the start video record directly, single press **REC** button to stop/start video record, and hold the **REC** button 3 seconds again, the camera will save the video and power OFF.




## Install the Memory card

 a , Please install the memory card correctly as picture below:

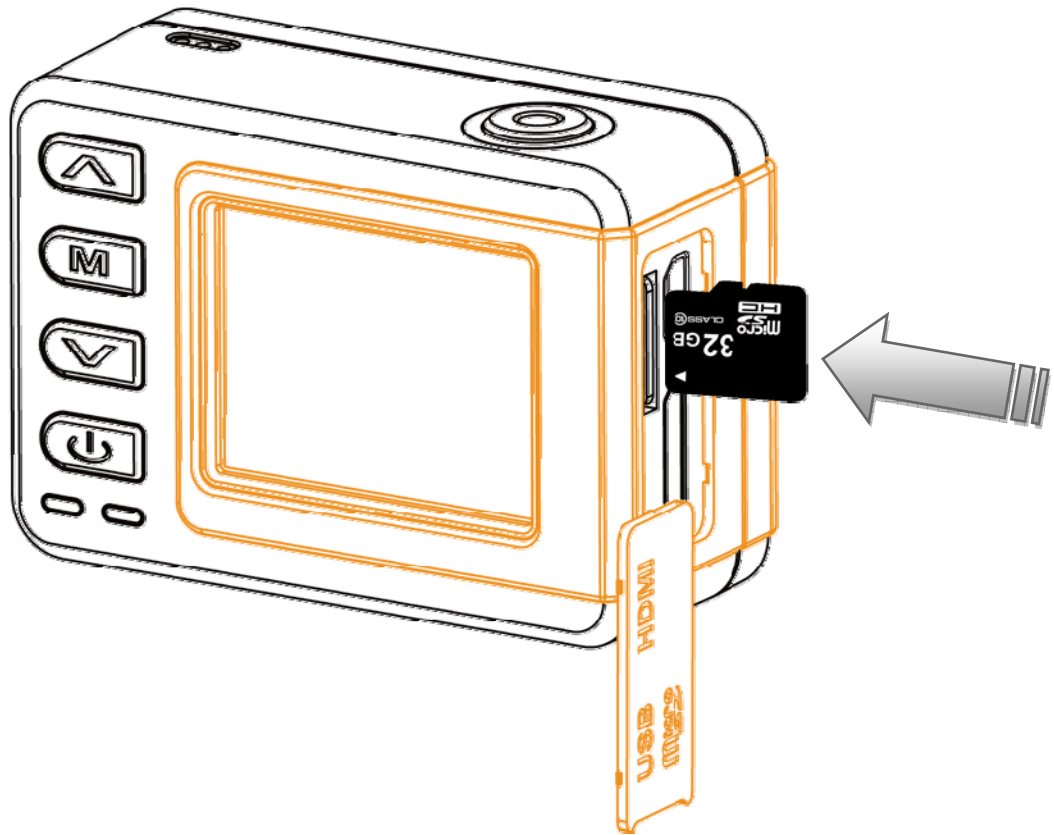

b , Camera does not built in storage, support 1~32GB SDHC TF card.


c , Available storage volume could be seen on the screen.

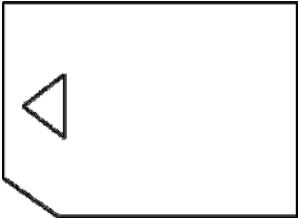	No memory card icon displayed on the screen if valid TF card detected.
	Left corner will show the icon if valid TF card detected, and volume numbers will display

### Note:

 Please format the storage card before using for regular work.

## Power charge

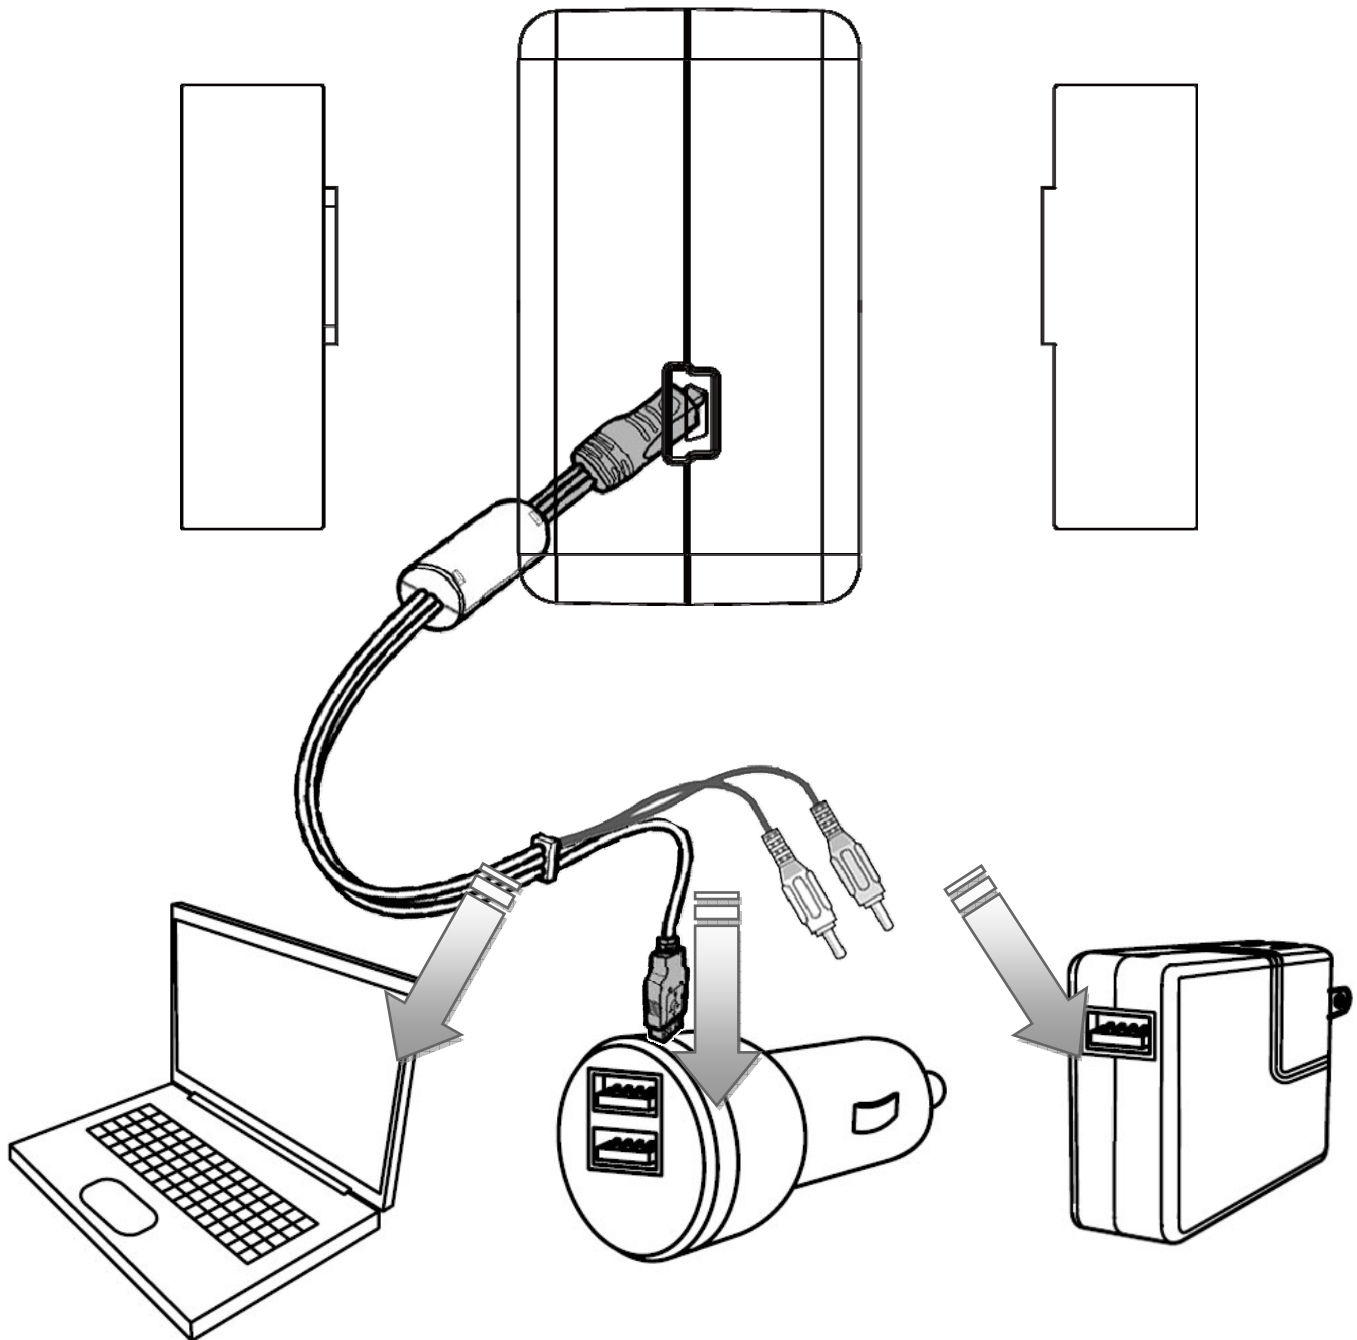





- ① Put the battery into the charger, use the offered USB cable connect with 3<sup>rd</sup> party 5V charger or PC to do the power charge.
- ② The red LED indicator of charger will turn on if power connected, means in normal charging.
- ③ LED indicator will turn OFF if fully charged.

## Battery fully charging time and usage time

Fully charging time	Standby time	Recording time
Approximately 2 Hours	Approximately 3.5 Hours	Approximately 110 minutes

## Battery Icon

	Full power		75% power
	35% power		Low power

### Note:

 
a ,Please do not keep the battery in the camera if long time aside.

b ,Please do not use up the power completely.


c ,Please fully charge the battery on first time use, it will help to extend the battery life.

## Record & Capture

- ① Press **Power** button to turn on the camera, press **REC** button to start video record, when the red icon displayed on the left corner of screen, that means the camera is doing normally record.

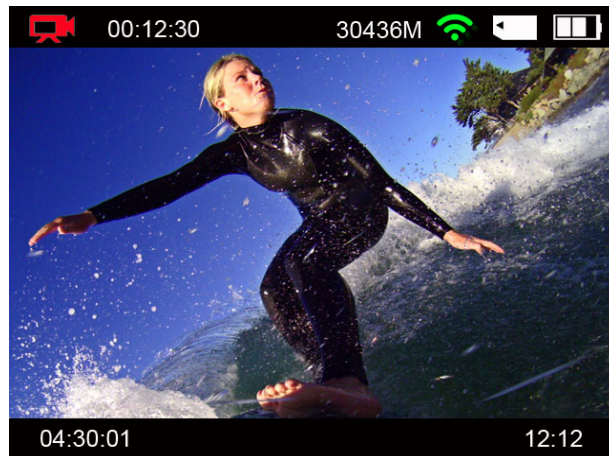

- ② Camera could start video record immediately if Wi-Fi turned OFF, but if Wi-Fi turned ON, camera will only available to start video record after Wi-Fi boot up completely, more details please check the Wi-Fi setting page.
- ③ Press **POWER** button to turn on the camera, press **POWER** button again to start taking picture. If here has record icon on the screen, that means camera under recording state, means not if no such icon.

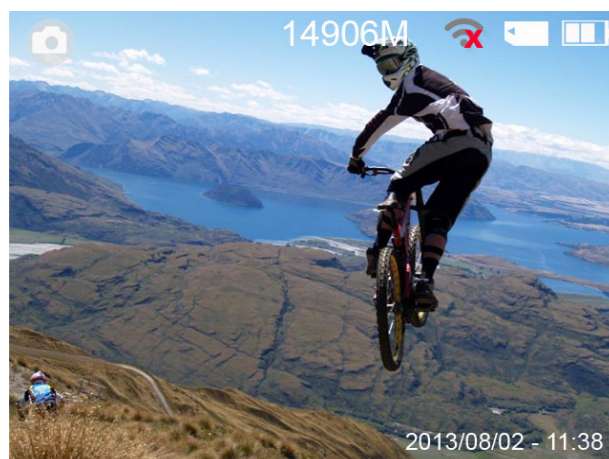 

Camera is not available to take picture if placed in the waterproof case, please use the remote controller to do this.

Remote to take picture or record video, please check the Remote Controller instruction.


Picture taking function is not effected whatever the Wi-Fi is opened or not.

## Media Playback

 Press **MENU** button to enter the main menu, use **< & >** button to select the video folder like below:



Press **REC** button to enter the folder, the video files display like below:

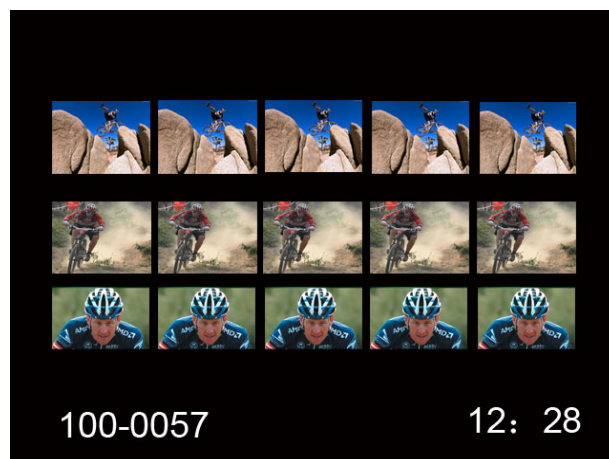

Use **< & >** to select the video, press **REC** button to confirm, press **REC** button again to play the video.




About how to delete the files, please turn to page 16.

## Picture playback

 
Press **MENU** button to enter the main menu, use **< & >** button to select the picture folder like below.



Press **REC** button to enter the folder, the picture files display like below:

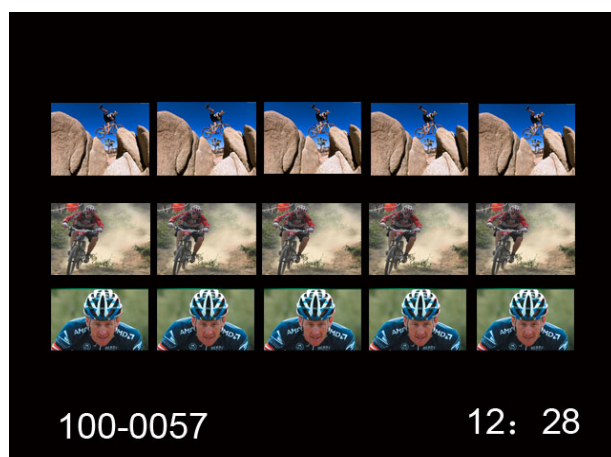


 Use **< & >** to select the picture, press **REC** button to confirm, press **REC** button again to play the picture.

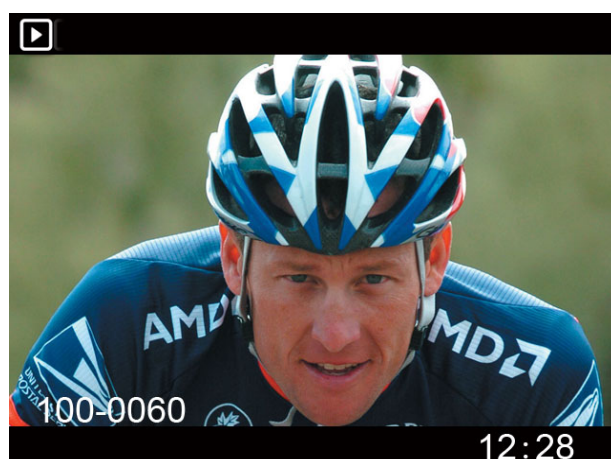


## Delete Files

 Under playback or browse mode, press and hold the **MENU** button for 2 seconds, the delete option menu will appear.

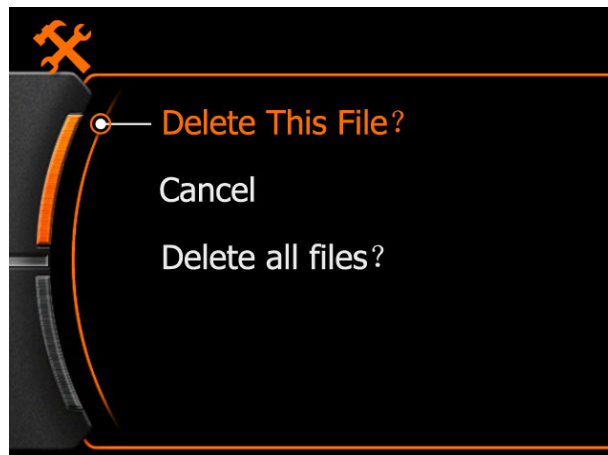

 Use < **&** > button to select suitable option, press **REC** button to confirm.

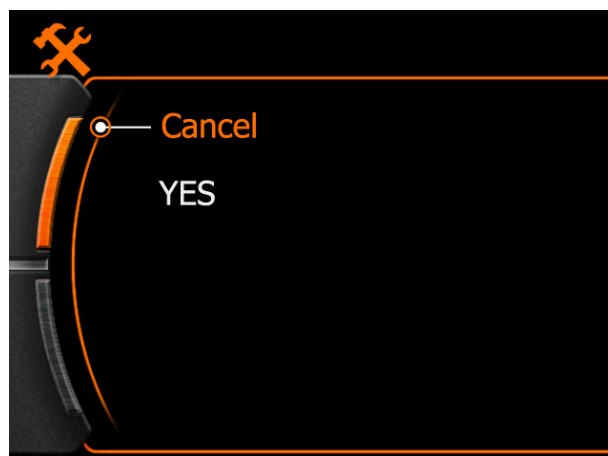

**Yes** : Confirm to delete

**Cancel** : Drop current operation

Press REC button to confirm the operation.


### **Note:**

 Please think carefully before use this function, files can not be recovered after deleted, advise to back up files in computer in advance.

## Connect with TV


### A , USB&RCA cable connect with TV

Insert the USB side to camera, insert the RCA head to TV ( Yellow-video; White-Audio), like below:

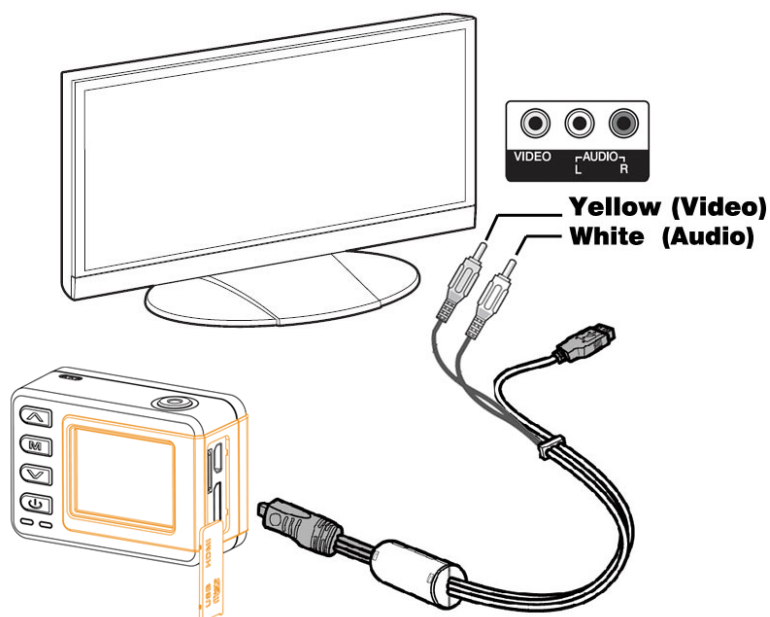

### B , HDMI cable connect with TV

 Insert the Micro-HDMI head to camera, insert the standard HDMI head to TV, like picture below:

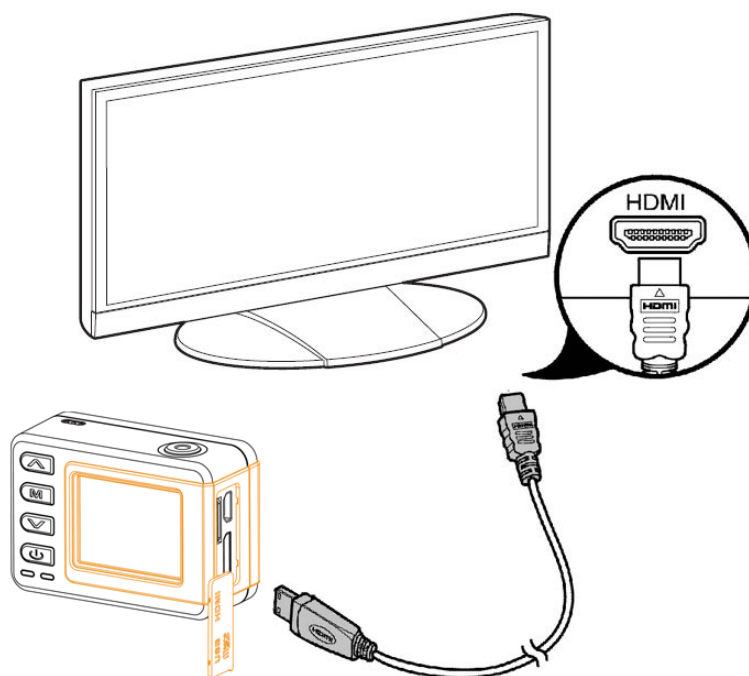


### Note:

The video output resolution is 1080P when play the recorded video clip, the real-time output resolution is 480i.




## Connect with PC

 Camera connect with computer by USB cable, could browse the files in camera or charge the power.

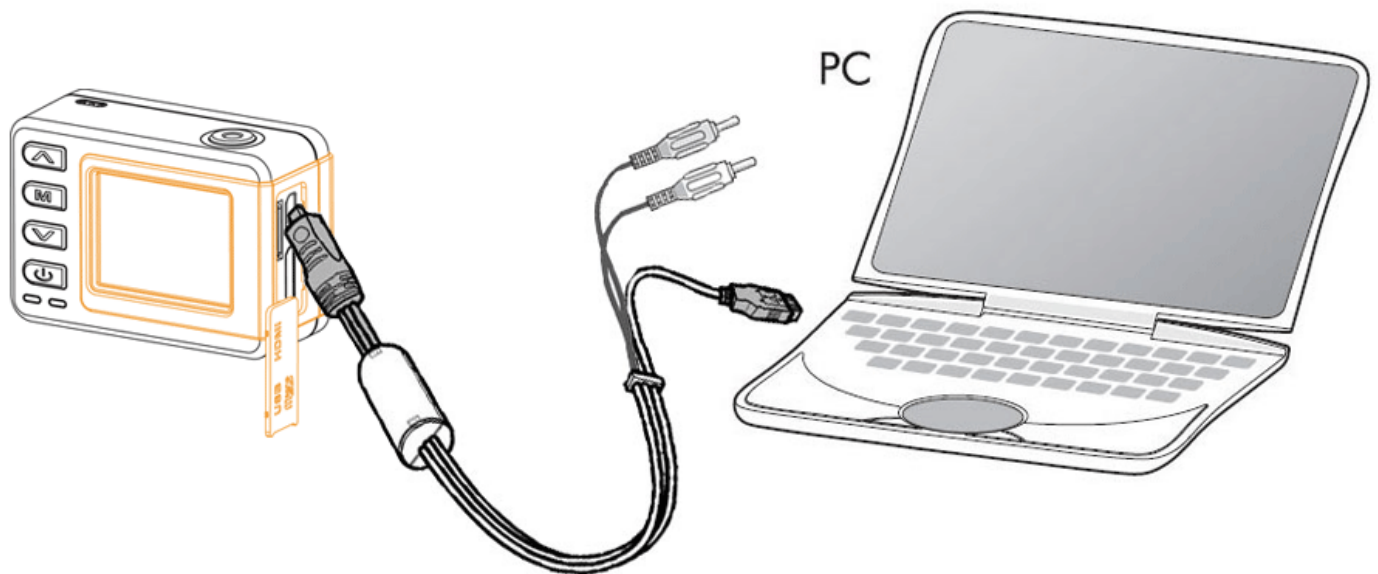

 Power on the camera after connect it with the computer by USB cable, the screen will display connecting graphic like below:

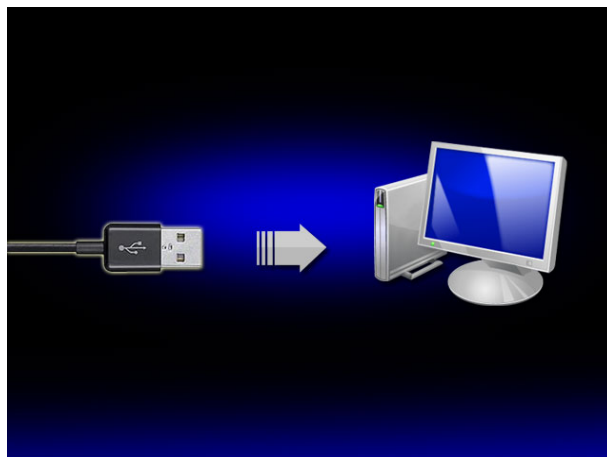

Read the files in the camera under power on state.








Power charge only if camera under power off state.

# System Icons

## Booting Picture



## Icons

1080P/30	Video size and FPS		REC icon
28000M	Available storage		Picture taking mode
00 : 33 : 24	Recorded time		Burst
2010/09/21	Date		TF Card
16 : 18	Time		Battery
	Wi-Fi OFF		Wi-Fi ON

## Main Menu



## Icons



Video folder



Picture folder



REC setting



System Setting

# System Setting

 
## Fast Setting:

Press & Hold the **POWER** button 2 seconds to turn on the camera, press **MENU** to enter the main menu, use **< & >** button to select “System Setting” and press **REC** button to confirm & enter.



## 1 , Language Setting

Press **REC** button to enter language setting, use **< & >** button to select, press **REC** button to confirm and save the setting.

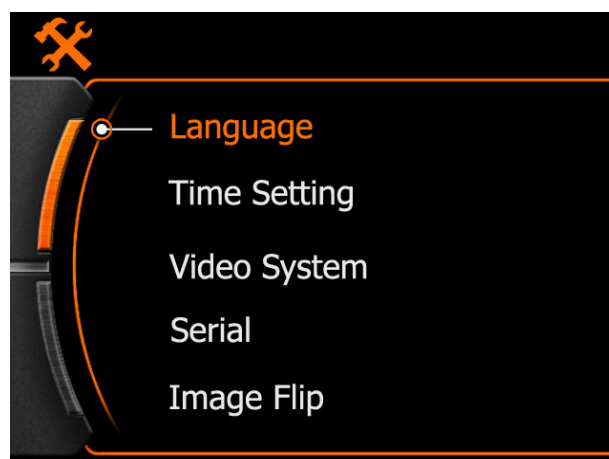



Here has 9 kinds of language in system, please make choice according to need.

## Date & Time

  Use < **&** > button to select and press **REC** button to enter.

Grey background means changeable, use < **&** > button to change numbers, press **REC** button to confirm and turn to next option.


Press **MENU** to save and quit after finish the setting.

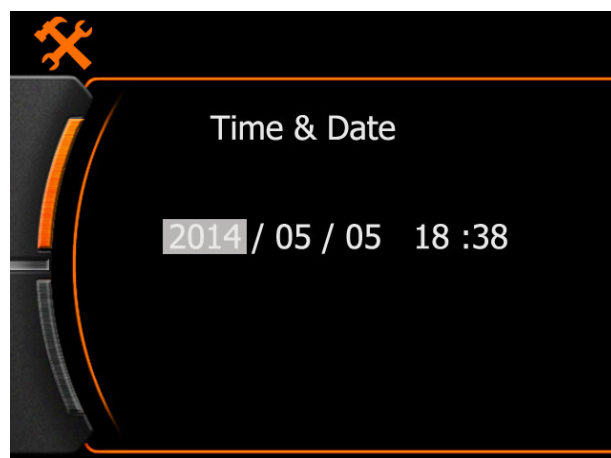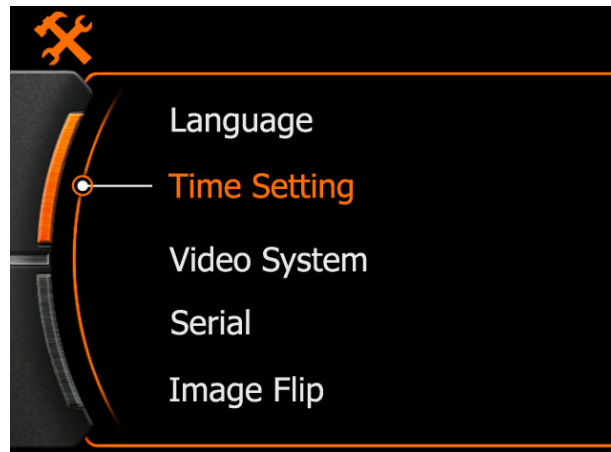

## Video System

Use < **&** > button to select, press **REC** button to enter.

 Use < **&** > button to select suitable system.

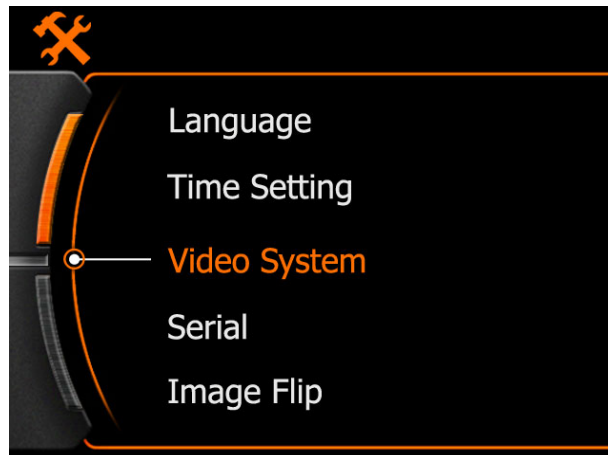

Press **REC** button to confirm choice, and the camera will reboot and back to this setting menu automatically.


Note:

The frame rates are different in different system, consult below:

Resolution	NTSC/FPS	PAL/FPS
1920x1080p 16:9	30fps	25 fps
1280x960 4:3	30 fps	25 fps
1280x720 16:9	60 fps	50 fps
1280x720 16:9	30 fps	25 fps
848x480 16:9	60 fps	50 fps

## Wi-Fi

 Use < **&** > button to select the Wi-Fi setting, press **REC** button to confirm & enter. ( Default is OFF).

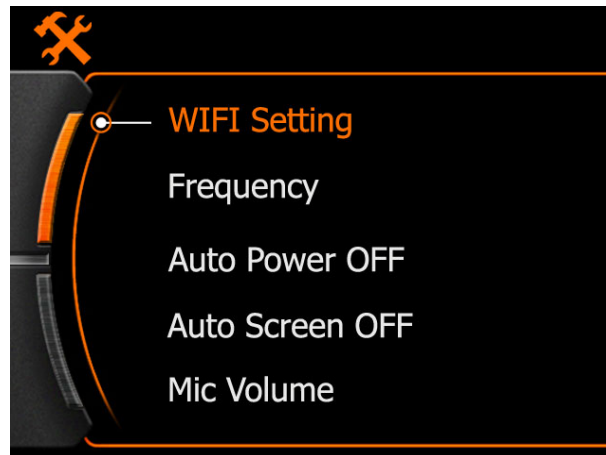

Use < **&** > to select ON, press REC button to save, camera will reboot automatically.

Pair the mobile phone with camera by Wi-Fi , turn on the Wi-Fi.

Android phone: Setting-WLAN-Search Smartcam-connect , Password : 00000000

Apple phone: Setting-Wi-Fi-Search Smartcam-connect , Password: 00000000

After connected successfully, then quit this and open the APP that install in the tablet or mobile phone.

Could preview the pictures that captured by camera, control to take picture or record video, and change the camera settings.

Note:

Wi-Fi OFF : Mobile phone APP will not available to connect the camera.

Wi-Fi ON : After the camera boot or reboot, should wait 30 seconds till the Wi-Fi booted completely , only then the camera will available to record video.



## REC Mode:

  Press **MENU** to enter system menu, press **REC** button to confirm and enter video setting.



### 1 , REC Mode

Press **REC** button to enter REC mode, use **< & >** button to select, press **REC** button to confirm and save the setting.

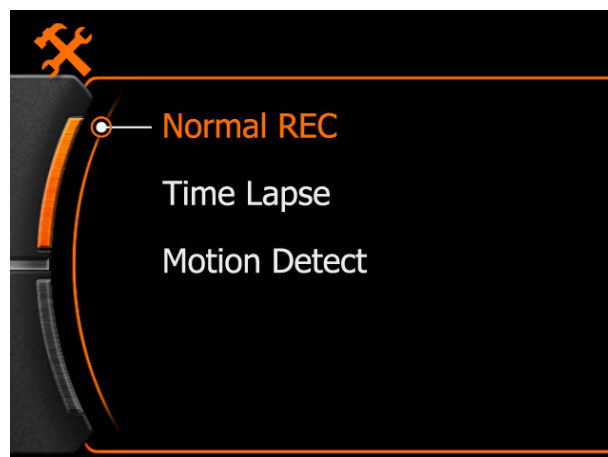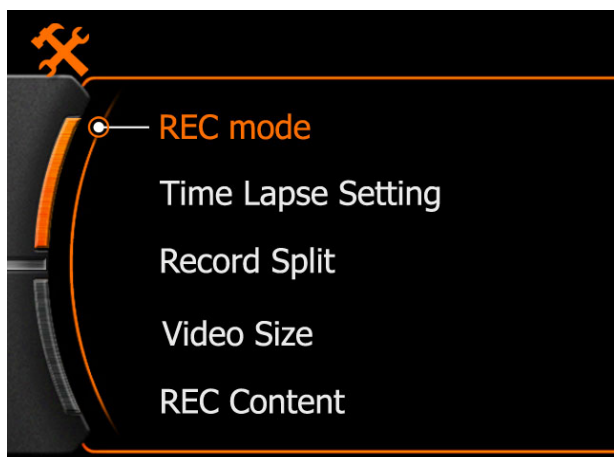

Normal REC : Press **REC** button on camera to start & stop video record



Time Lapse : Time Flies

Motion Detect : Start video record only when movement detected by the lens.



## 2 , Record Split

  Use < & > button to select, press **REC** button to confirm & enter, select “record split” button to save and quit.

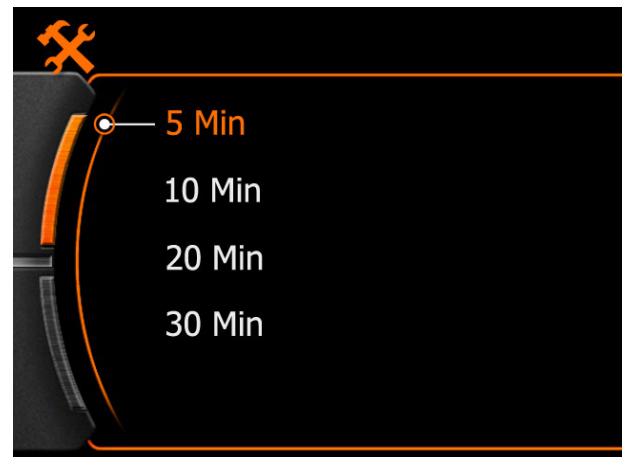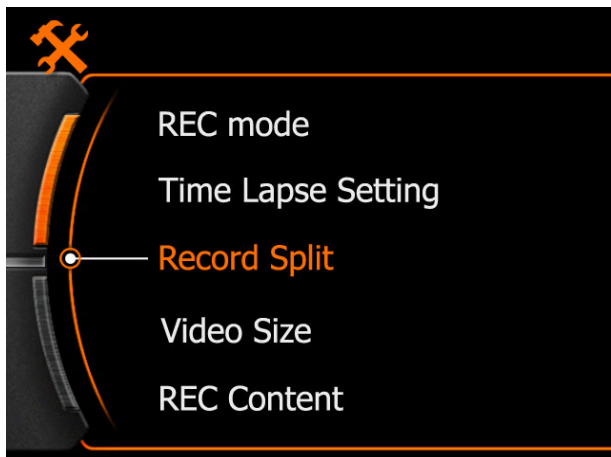



Note:

5Min : Means 5 minutes per footage ; 30Min : Means 30 minutes per footage.

Camera will stop video record while card full.

## 3 , Video Size :

  Use < & > button to select, press **REC** button to confirm & enter.

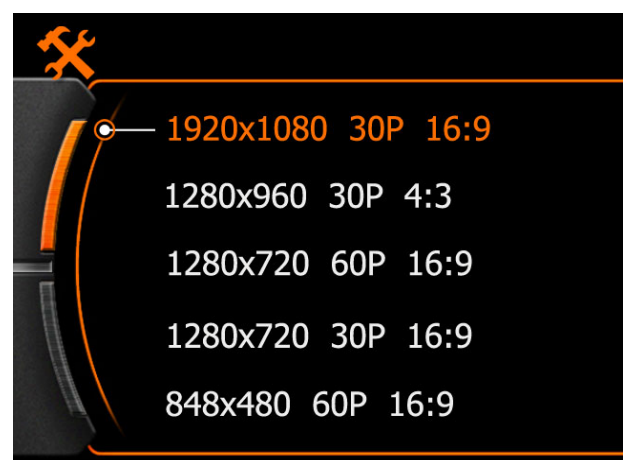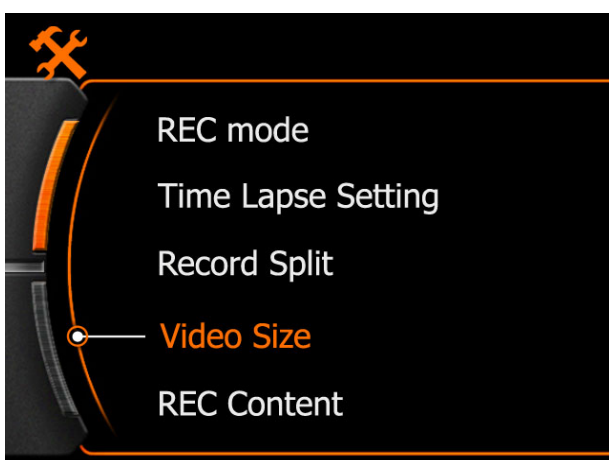

Select suitable video size, press **REC** button to save and quit.


# Specifications

 Basic Spec	Built in Memory		32MB
	Memory Expand		Support 1G-32G SDHC Micro-SD
	LCD	Size	1.5 inch
		Resolution	480x240
	Chipset	DSP	( AMBARELLA ) A5L30
		MCU	( CHIPSIP ) DDR3 CT49248DD486C1
	Sensor	Size	1/2.3" 14MP
		Aperture	F2.8
	Lens	Angle	150°
		Construction	6G+1MG
		Video output	HDMI/USB
	Interface	MIC	Built in
		Audio output	HDMI/USB
		Speaker	8Ω 0.5W built in
		USB	High speed USB2.0
		Type	Rechargeable Li-ion battery
	Battery	Volume	3.7V 900 MAH
		Button	
	Language		繁体中文、 English、 Russian、 Spanish、 Japanese Italian、 Nederlandse、 Deutsch、 French
	Video	Available recording time	100 Minutes

	Optional REC mode	Normal ,Motion detect, Time lapse
	Video Resolution	1080P/30fps、 960p/30fps、 720p/60fps、 480p/60fps
	Video format	MP4 (H.264 MPEG4)
	Time lapse time	Frame per 1 / 10 / 30 Seconds , OFF
	Split video time length	5 / 10 / 20 /30 Minutes
	Optional REC content	Video / Audio
Capture	Picture Size	14MP/10MP/8MP
	Picture mode	Single shot, burst , self-timer
	Burst	3 / 5 / 10 pieces , OFF
	Self-timer	3 / 5 / 10 seconds, OFF
Playback	Video	Loop playback, fast forward, fast reverse,
	Picture	Thumbnail, next, previous
Bidirectional Remote Controller	Frequency	433.92MHz
	Distance	10m
	Sensitivity	-105dBm(50Ω)
	Current & Voltage	20mA@3.7V
	Battery	300mA Li-ion battery
WIFI Spec	Wireless Protocol	IEEE 802.11 b/g/n
	Frequency	2.4GHz~2.4835GHz
	Wireless Mode	Direct
	Real-time video size	WQVGA
App	OS requirements	iOS 6.1or above, Android 4.0 or above

	Supported device	iPhone 4s, iPhone 5, iPhone 5s, iPod touch 4, iPod touch 5 (iPad3, iPad4, iPad mini Samsung Galaxy S3, S4, Note 2, Note 3, or similar mobile phone
	Functions	Real-time transfer, camera control, camera setting, album sync
Dimension	Camera size/weight	60x26x42mm
	Waterproof case	76x43x66mm
	Waterproof depth	50 meters

# Standard Accessories

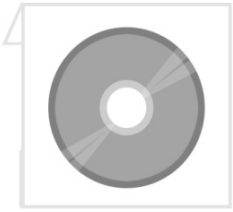

Manual disc



battery



Remote controller



USB cable



battery charger



Head strap



 
Mount protector



Lens protector



Waterproof case protector

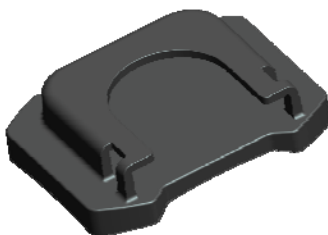

Helmet mount



Bicycle Mount



 
Universal mount



Angle attachment



Basic Mount

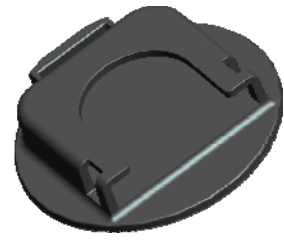

Surfboard Mount

**Note: Camera will lost warranty if disassembled or fall into water.**

## **FCC ID: 2ACRX-EX9**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**EAGLE EYE**



Please Recycle.