



# Instruction Manual

Model: SC213



## General Information

Congratulations on your purchase of JETHRO SC213

Please read this information for better handling the phone, we assume no liability for result from improper handling.

We are constantly trying to improve our products and service. Therefore Jethro reserve the right to modify any of the products changes and improvements described in this document without prior notice.

The contents of this user manual are presented "as is". Jethro takes no guarantee for the accuracy of completeness of the contents of this user manual. There maybe slight variations of the images in the user manual and the phone type, there serve as examples please refer to the phone. Some features are dependent on network operators, for more information please contact your network operator.

Please check the supplied accessories, determine whether the below listed accessories are all available, if one of the component is missing or damaged, please contact your dealer where you purchase the phone.

### Jethro SC213 contents:

- 1 Telephone (*SC213*)
- 1 Charging Station (*SC213*)
- 1 Charger (*SC213*)
- 1 Battery (*SC213*)
- 1 USB Cable (*SC213*)
- 1 User Guide (*SC213*)

**FCC ID: 2AAWJSC213**

## General Information

---

If the font is too small for you to read, please view a larger version user manual on our website.

See the product support page on our website: [www.jethroshop.com](http://www.jethroshop.com)

### Device Code:

With this code, unauthorized persons can prevent using the phone.

The factory default Code is: *0000*

### PIN-Code:

The network operator provides this with the SIM card to prevent the use of the card by unauthorized persons.

You can enable / disable or change the PIN code.

# Table of Contents

My Phone .....	9
LED Description .....	11
Getting Started .....	11
What is a SIM card? .....	12
Inserting the SIM card and Micro SD card .....	12
Inserting the battery .....	14
Charging the battery .....	15
Turning on or off the phone .....	16
Standby .....	16
Screen (Home screen) .....	17
Screen Symbols .....	18
Headset/Bluetooth Modes.....	19
Menu Function .....	19
Quick access functions .....	20
Call Functions .....	20
Call .....	20
Call using the phone book .....	21
Answering a call.....	22
Functions during a call .....	23
Hands-free: .....	24
Menu .....	25
Phonebook .....	26
Access your phone numbers .....	26
New Contact.....	26
Edit a contact .....	27

Delete all contacts from the phonebook or SIM card .....	27
Copy all contacts from the phonebook or SIM card .....	27
Speed Dial .....	28
Direct M1 M2 .....	28
<b>Messages .....</b>	<b>29</b>
Write messages .....	29
Text input .....	29
Inbox .....	30
Draft .....	31
Outbox .....	31
Sent messages .....	30
Voice mail .....	31
SMS settings .....	32
<b>Calls .....</b>	<b>33</b>
Call list .....	33
<b>Extras .....</b>	<b>34</b>
Alarm clock .....	34
Tasks.....	34
Calculator.....	35
Calendar .....	35
Services.....	36
<b>Multimedia .....</b>	<b>36</b>
Camera.....	36
Photograph.....	36
Image settings.....	37
Image Viewer .....	37
FM Radio.....	36

File Manager .....	38
Copy images to your computer .....	39
<b>Settings .....</b>	<b>40</b>
Profile (Sound) .....	40
SOS .....	40
SOS Alarm .....	42
SOS Number .....	42
SOS SMS .....	42
Phone settings .....	42
Time and date .....	43
Language .....	43
Display .....	43
LED Mode: .....	43
LCD backlight: .....	43
Call settings .....	44
Caller ID: .....	44
Call waiting: .....	44
Call forwarding: .....	44
Call barring: .....	44
Line switch: .....	45
Call time reminder: .....	45
Answer mode: .....	45
Advanced settings: .....	45
Last number redial: .....	45
Network settings .....	46
Network selection: .....	46
Security settings .....	46
SIM-Security .....	46
Phone security: .....	47

Connections .....	47
Bluetooth .....	47
Restore factory settings .....	49
Specification .....	49
<b>Troubleshooting .....</b>	<b>50</b>
<b>Battery .....</b>	<b>54</b>
<b>Phone .....</b>	<b>56</b>
<b>Safety instructions. ....</b>	<b>59</b>
Road safety: .....	60
Operating environment: .....	60
Electroinc devices: .....	61
Pacemaker: .....	61
Hearing aids: .....	62
Other medical devices: .....	62
Labelled sites: .....	61
Hazardous locations: .....	63
Vehicles: .....	64
<b>Information .....</b>	<b>64</b>
Information about the certification (FCC): .....	64
Limitation of liability: .....	65
Contact us.....	66



# My phone



Figure SC213

1	Direct dial button M1 M2
2	Left menu key / main menu
3	Green call button / call list <i>Call in standby mode / Ok button</i>
4	* Button <i>Press this key in standby mode to enter the following characters: * /+ /P / W.</i>

5	Speaker
6	Camera button
7	Microphone
8	Right menu button / <i>call in standby mode of the Phonebook</i>
9	Power button (press and hold 3 seconds), ending a call, reject call
10	2-way navigation Arrow button (up): <i>Invoke the SMS Message in standby mode</i> Arrow button (down): <i>Call the photo contacts in standby mode</i>
11	# Key / Pound <i>In the standby mode, by long pressing enable / disable the silent mode.</i> <i>In the edit mode: change the input method</i>
12	Emergency call key button
13	Polyphonic speaker
14	Micro USB charger connection
15	Volume key / Flashlight <i>By long press volume button 19 to activate / deactivate the flashlight</i>
16	Connection for Headset (3.5mm)

## LED description

White LED	Flashlight
Red LED	Low battery (flashing) / charging mode (lights up)
Green LED	Call, missed call or unread message



# Getting started

## What is a SIM card?


Each mobile phone requires a SIM card (subscriber identity module). Without the SIM card you can not make phone calls. The SIM card is a microprocessor which stores their data and contacts. Deal with a map so carefully, and take caution when inserting or removing the card. Keep SIM cards out of the reach of small children.

## Insert the SIM card and micro SD card

1. The phone must be switched off and unplugged from charger.
2. Remove the battery cover on the back of the phone.




3. If the battery in the device, please remove it.
4. See 2 cards holders: top left for the SIM card and the bottom right for the micro SD card.
5. Push the SIM car carefully into the SIM card slot (1). Ensure that the Gold contacts of the card facing down and beveled corner is.
6. Carefully slide the micro SD card into the SD micro SD card holder (2) and then lock them.

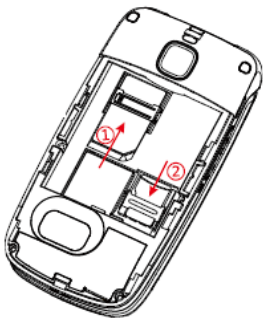

## Insert the battery

1. Align the golden contacts of the battery with corresponding contacts of the phone.
2. Press on the other end of the battery until it locks in place.
3. Slide the battery door so far on the unit up until it clicks into place.

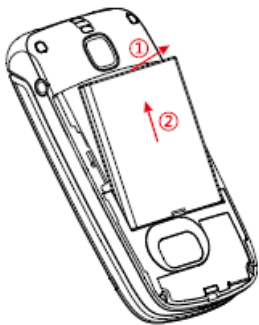

## Charging the battery

There are two ways to charge the battery of the SC213:

A. Charging station

B. Charger

1. Insert the connector of the charger in the phone.
2. Connect the charger to the main socket.
3. Charging the battery can take several hours. If the phone's battery ran out, it may take awhile until the charge indicator appears on the display.
4. If the phone is turned on, charge indicator will appear on the display. The indicator will no longer flash when battery is fully charged.
5. Disconnect the charger from the socket and from the device if charging is not required

*Note: The initial charge for the battery should be at least 12 hours.*

## Turn on or off the phone

Make sure that the SIM card is in the phone and the battery is charge.

1. Press **red button** 2-3 seconds to switch the phone on.
2. The PIN-code is active if the phone asks you the PIN code, please enter it and confirm with **OK**.
3. Please select your language and confirm with **OK**.
4. Press **rote Taste** 2-3 seconds to turn off the phone.

*You can only call emergency number without a valid SIM card.*

*Note: If the PIN code entered incorrectly 3 times, the phone will ask you the PUK code that you have received it together with the SIM card.*

## Standby

If the phone is not used for a short period of time, the telephone will switch to standby mode automatically. Press any key to exit this mode.














## Screen (home screen)

1	2	3
4		
5		
6		
7	8	

1. Signal strength
2. Symbols
3. Battery status
4. Network operators
5. Time
6. Date
7. Menu
8. Phonebook

## Screen symbols



	<p><b>Signal strength:</b> <i>The vertical bars show the strength of the reception of the carrier.</i></p>
	<p><b>New messages</b> <i>This symbol appears when you received a new message.</i> <i>SIM card has an unread message.</i>  <i>This sign blinks when the Inbox is full. You must delete some messages so that you can receive new messages.</i></p>
	<p><b>Headphones</b> <i>This symbol is displayed when a headset is plugged in.</i></p>
	<p><b>Missed calls</b> <i>This sign will be shown if you have missed calls.</i></p>
	<p><b>Incoming call alert</b> <i>Only ringing.</i> <i>Silent mode and vibrate.</i> <i>Vibrate and ring</i></p>
	<p><b>Call forwarding</b> <i>This symbol appears when all calls are forwarded.</i></p>

	<p><b>Alarm clock</b>  <i>This symbol is displayed when the alarm is switched on.</i></p>
	<p><b>Bluetooth</b>  <i>This symbol appears when the Bluetooth is turned on.</i></p>
	<p><b>Battery meter</b>  This character changes color depending on the status of the battery.</p> 

## Headset/Bluetooth mode

When headset is connected (includes a Bluetooth headset), you can answer the call by pressing the key on the headset.

## Menu function

In the home screen, press the left menu button () to enter *main menu*, press the () to access the *contacts*.

## Quick access functions.

Use the 2 key navigation button to enter quick access to following functions:

Button	Function
Arrow key up	<i>SMS messages</i>
Arrow key down	<i>Photo contacts</i>

## Call features

### Call

1. Enter the phone number including the area code, and press the green button. International calls: enter before the area code + sign by pressing of \* and the country (or regional) a preset. (If necessary, omit the 0 before the area code).
2. Press right menu key delete to delete the number to the left of the cursor.
3. Press the green button to call the number.

## Call using the phone book

If contacts in the phonebook is stored, you can make a call using the phone book.

1. To enter the phone book, press *right menu button* in standby mode.
2. Use arrow keys to scroll up and down to the desired telephone number.
3. Press the *green button* to call the number.
4. Press the *red button* to cancel or end the call.

## Call by using the Photo contacts

Press *down arrow key* in standby mode.

Here you have the option to select up to 8 Photo contacts, use the *Arrow keys* to navigate to the photo you want to contact and then press the *Call button* (green button)

The picture appears in the photo contact directory. To assign an image to this contact, perform the following steps:

Create photo contact

1. Press *down arrow key* in standby mode to enter the photo contact menu.
2. Use the arrow keys to scroll.

3. To edit a photo contact, press the *left menu button* (Edit / option), select *Edit* and confirm with the *left menu key* (OK).
4. In the first line, you give a name to the contact.
5. In the second row, enter the telephone number.
6. In the third line, press the *left menu button* "Options" and add a photo.
7. *By file*: Select an image that you already saved.
8. After you edited the contact, press the *right menu button* (Back), to save you confirm with the *left menu key* (Jab).

**Important:** For a photo contact screen, please use the resolution specifically specified "Photo contacts" in the camera settings.

*Note: to store pictures you need a micro SD memory card up to 16 GB. (Not included in the accessories)*

## **Answer a call**

If you receive a call and the phone rings or vibrate, you will see the number of the name on the display.

1. If you want to take the call, press the *green button* and *OK*.
2. You have the possibility to answer the call automatically by flipping open the phone, please refer to the following menu item:  
**Settings-call setting-answer mode:**  
select "**Cover answer**" then press the *right menu button* (Done)
3. If you want to reject the call, press the *red button*.
4. You can switch the incoming call silent by pressing any button.

## Functions during a call

The following functions available by pressing the *Options* Button during a phone call:

*Call hold:*

Place call in the queue.

*End the call\*:*

End call.

*New call:*

To make another call.

*Phone book:*

To enter the phone book.

*Call list:*

Show the call list

*Messages:*

To access the messages.

*Mute:*

To switch microphone off / on

*Key tone:*

Turn the keypad tones on / off.

*Note: The \* marked functions must have SIM card inserted. For more information, please contact the network operator.*

## **Hands-free:**

You can enable / disable the hands-free function during the telephone by pressing the *right menu button*.



# Menu

## **1 Phone book**

- 1 Contacts
- 2 Add new contact
- 3 Speed dial
- 4 Direct dial
- 5 Photo contacts
- 6 Settings

## **2 Releases**

- 1 Write SMS
- 2 Input
- 3 Designs
- 4 Output
- 5 Sent messages
- 6 Delete messages
- 7 SMS settings

## **3 Calls**

- 1 Missed calls
- 2 Dialed calls
- 3 Received calls
- 4 Call logs

## **4 Extras**

- 1 Alarm clock
- 2 Events
- 3 Calculator
- 4 Services

## **5 Multimedia**

- 1 Camera
- 2 Viewing images
- 3 FM radio
- 4 File Manager

## **6 Settings**

- 1 Profiles  
(Sound settings)
- 2 SOS settings
- 3 Phone settings
- 4 Call settings
- 5 Network settings
- 6 Security settings
- 7 Connections
- 8 Factory setting  
restore

# Phonebook

You can store up to 200 phone numbers in your SC213, and save up to 250 phone numbers in your SIM card.

## Access to your phone numbers

You have two ways to get to contacts:

1. Press the *right menu button* in standby mode.
2. Press the left *menu button* in standby mode then select *Phone book* and confirm with *OK*

*Note:*  Symbolizes a SIM card entry

 Symbolizes a phone entry

## New contact

1. Select *Add new contact* in *Phone book* menu.
2. Select memory place: *SIM card* or *Phone*.

*SIM card contact:* It can only store *Name* and *Number*.

*Phone contact:* It can store *Name*, *Number* and *Caller ring tone*.

To save the *Contact*, press *Options* and *Save*.

## **Edit a contact**

1. Choose a name, press *Options* and select *Edit* then confirm with *OK*.
2. After edit the entries, in order to save the changes, press *Options* and select *Save* and confirm with *OK*

## **Delete all contacts from phonebook or SIM card**

1. Select *Main menu – Phone book* and press *OK*
2. Select *Settings* and press *OK*
3. Select *Delete all contact* and press *OK*
4. Select *From SIM* or *From phone* and press *OK*
5. Press *OK* another time to confirm the deletion.

## **Copy all contacts from phonebook or SIM card**

1. Select *Main menu – Phone book* and press *OK*
2. Select *settings* and press *OK*
3. Select *Copy contacts* and press *OK*
4. Select *From Phone* or *From SIM* and press *OK*
5. press *OK* another time to confirm the copying.

## Speed dial

1. Select *Main menu – Phone book* and press *OK*
2. Select *Speed dial* and press *OK*

You can use the *Speed dial* function when speedial is switched on.

Total of 8 numbers can be stored as speed dials. (key #2- key #9)

1. Select *Set number* and press *OK*.
2. Select the desired number (2-9) and press *Options*.
3. To edit, press *Edit*.
4. Select the desired name from the phone book and press *OK* (the desired name must already be saved under *contacts*).

Press the desired speed dial number (2-9) 2 seconds in standby mode and the assigned number will be dialed.

## Direct M1 M2

1. Select *Menu – Phone book* and press *OK*

2. Select *Direct numbers* and press *OK*

Here you can see and edit the *M1* und *M2* Numbers

Press the *M1* or *M2* button in the standby mode to dial the stored phone number.

## Messages

You can send and receive *SMS* messages. however, it may depend on your network operator. Please contact your network operator for more information.

### Write messages

1. Select *Menu, Messages* and press *OK*
2. Press *Write message*

### Text input

The following functions are available:

- Press *0* to add a space
- Press the *\** The button to add special characters, using " " Arrow keys "you can navigate to the desired symbols"
- Press the arrow keys to move the cursor left or right.
- Press the right menu button to delete.
- Press and hold right menu button to

- delete all letters.
- Press the # Button to switch between small, capitalization and word recognition: DE, de, 123 and make sure that the icon top left of the display.

After you the message is complete, press *Options* and select *Send to*.

Here have the possibility that *Send to* one or add more *Contacts*

Other options:


You can see the number of written letters on the right top of the screen.

More options:

*Insert symbol, input method, use details and Save.*

## **Inbox**

In this menu you can read new or already read *messages*.

Depending on the mode, the phone vibrates or rings and the Green LED will flash if you get a new *messages* in standby mode, you can also see this icon  on the screen.

Press the *Option* for following functions:

*Delete, Reply, Call sender, Forward, Advanced and Save.*

*Note: If the message memory is full, 📧 flashes in standby mode, please delete some messages to receive new ones.*

## **Draft**

In *Draft* you will see your saved SMS messages.

## **Outbox**

In *Outbox* store unsent messages.

## **Sent message**

In this menu you can see already sent *messages*.

The following functions are available:

*Forward, delete, use number, copy to SIM or phone\** and *Move to SIM card or the phone\**.

*\*This option is dependent on where the text has been stored.*

## **Voice mail**

The voice message is a network feature. When a voice message is received, the icon of a new message appears on the screen of your phone.

1. Select *Menu, messages* and press *OK*
2. Select *SMS settings* and press *OK*
3. Select *SIM* and press *OK*
4. Select *Voice mail* and press *OK*
5. < Empty > selects 1 and press *Options*.
6. Select *Select* or *Edit*.
7. Choose *Edit* to give your voicemail a *Name* and enter the *Voicemail retrieval number* in *Number*.

In standby mode: Press and hold the number 1 and your phone will call the stored *Voice mail*.

*Note: This service must be supported by the network operator.*

## **SMS Setting**

1 Select *Menu, messages* and press *OK*

2 Select *SMS settings* and press *OK*

You can define SMS settings.

The following functions are available:

### *SIM (profile settings):*

You can make settings include the communication Central number (SMSC) (operator-dependent) and other SMS.



### *Memory status:*

This option displays the SMS memory status of your SIM card and your phone.

### *Save sent messages:*

An or turn off storing the sent messages

### *Preferred store:*

Select the location for the SMS *Phone* or *SIM*

## **Calls**

---

### Call list

Your phone stores list for *Missed calls*, *dialed calls* and *received calls*

The latest entries are top of the list.

With *Options* provide the following functions are available:

*Viewing, call; send SMS to the black list, save in the phone book and Delete.*

### *Delete call logs:*

Can the logs by *Default*, *selected* and *received* singly or also *all* Delete call logs.

# Extras

## Alarm clock

Up to 5 alarm clocks can be made.

To set the alarm:

1. Select an alarm and press Edit. You can set the alarm with follow options: Status on/off (M1 or M2), Time, Repeat as well as the Alarm tone.
2. After the alarm clock is set, press button Save.
3. When the alarm sounds, press Stop to stop this or the Snooze Button. In this case, which is snooze alarm clock and after about 5 minutes sound again.

## Tasks

Here you can enter events.

Add tasks:

Press Add then enter the required details and press save.

In the are you following Options available: Ads delete overdue add, edit, delete, delete all and Display.

## Calculator

With this function, you can use your mobile phone as a calculator. The Calculator controls the basic arithmetic functions.

Features:

- Type the number (1 to 0).
- Press # for a decimal point.
- Use the arrow keys for: +, -
- Use the M1 M2 keys for:  $\times$ ,  $\div$
- Press left menu button for: =
- Press right menu button for delete

Calendar

1 Select Menu, Extras and press OK

2 Select Calendar and press OK

Press down arrow, up arrow, M1 and M2

Keys in the calendar navigate the date.

By pressing the left menu button

(Options), you can view, view all, and  
add

Event, delete event, jump to date, Go to

Today, Go to weekly view and change

Week start.

Services

This is service depends on network operators.

# Multimedia

## Camera

Press the *Camera button!*

## Photograph

Align the camera lens on a position or an object and press the *Camera* button to take a photo. After taking the photo, the picture will be displayed and automatically stored.

*Note: to store pictures you need a micro SD memory card up to 16 GB. (Not included in the accessories)*

**With Options** following options available:

### *Image Viewer:*

Displaying the stored photos (in JPG format). You can view the photos on *Bluetooth* send and receive.

The following functions are available under them *Options* available: *Ads, send, use, rename, delete, memory* and *Image information*.

### *Camera settings:*

Set of *Anti-flickering, scene mode, white balance* and *Delay time*.

### *Image settings:*

Set *Image size*, and *Image quality*.

### *Restore settings:*

Restores the default setting.

The following functions are available in photo mode:

### Image Viewer

Displaying the stored photos in JPG format. You can view the photos and sent via *Bluetooth*.

The following functions are available under *Options*: *View, send, use, rename, delete, sort, storage* and *Image information*.

### FM Radio

With this function, you can hear FM radio.

The following buttons are available in FM mode:

Taste	Functions
M1	Previous channel
M2	Next channel search
Arrow key up / #	Increase volume
Arrow key down / *	Decrease volume

Camera button	Turn on / off
---------------	---------------

The options include:

*Channel list:*

Playback, editing, or delete the stored channels.

*Manual search:*

Manual channel search.

*Automatic search:*

Automatic search.

*Store current channel.*

Stores the transmitter you are listening

## File Manager

1. Select Menu, Multimedia and press OK
2. Select File Manager and press OK

Use the file manager to manage your files and folders in the phone memory and memory card.

Open:

To display the contents in the selected folder.

New Folder:

To create a new folder.

Rename

To rename a folder.

Delete:

To delete a folder.

### Copy images to your computer

To copy the images that you have made with the SC213 camera on the computer, proceed as follows:

1. Connect the phone with the help of the included micro USB cable to the computer.
2. Then a menu will appear on the phone select Mass storage and confirm OK
3. The computer shows the phone as Removable disk detected.
4. Now you can normally edit the data with the help of Windows Explorer or copy to your computer.

Note: The pictures are located in the folder "Photos"

# Settings

## Profiles (sound)

1. Choose menu, settings and press OK
2. Choose profiles and press OK

Display the profile mode list including:

**General, silent, meeting, outdoor.**

Select the mode and call up the option menu:

Enable:

Profile mode.

Edit: Adjust ringer and other desired sounds

Reset: Reset to default settings.

Following sound settings are available:

Signal type, call type, ringtone, ringtone volume, messages, call volume, key tone, keypad volume, power on, power off and System alert (sound system for error messages, weak battery etc.).

## SOS

The SOS function is a simple feature that can save lives in the decisive moment. You can store a total of 5 SOS contacts and SMS. You must save these contacts



first, in case of an emergency when you press the emergency call key on the back of the phone, these numbers will be called in sequence. During the emergency call a warning signal will be issued, so the person knows that it is an emergency and it sends an emergency SMS to all stored numbers! If the first number is not reached, the next number is dialed automatically, etc.

If no emergency number is stored or your phone card is empty or you are in a foreign network (E.g. roaming not enabled), you can still choose 911 or other emergency numbers with the digit keys.

Will be accepted the SOS call switches the hands-free telephone.

Note:

- Want to stop the alarm, must press the right menu button or the SOS button.
- When using a pre-paid SIM card: Make sure you always have sufficient credit on your pre-paid SIM card as private emergency numbers without sufficient balances are not elected.
- Usually the international emergency call 911 can still be called outside of

the network provider's home network.

Note: If you want to store emergency numbers such as rescue, police, fire service etc. as emergency number, you would need to check before this with the respective institution. Assumes no liability for any costs incurred, if you mistakenly call.

## **SOS**

1. Choose *Menu, settings* and press *OK*
2. Choose *SOS* and press *OK*

### *SOS Alarm*

You can turn the *SOS alarm* on and off

### *SOS numbers (contacts)*

You can save up to maximum of 5 *SOS numbers* and its calling order.

### *SOS SMS*

When SOS call started but not accepted, pre-prammed SOS text is sent to the *SOS numbers*. The text can be changed.

## **Phone settings**

- 1 Select *Menu, Settings* and press *OK*
  - 2 Select *Phone settings* and press *OK*
- The following menu items are available:

### *Time & date*

Set *Time zone, date, Time* and *Format*.

### *Language*

In this menu you can set the display language

### *Preferred input method*

In this menu, you can define your preferred input method (*DE, de, 123*).

### *Display*

Wallpaper image:

Choose wallpaper

Display:

Turn the display on / off.

### *LED mode:*

You can turn the LED light on, off or on *Night mode* (off 8:00 pm-08:00 am)

### *LCD backlight:*

Adjust the brightness and illumination time of the display

## Call settings

1. Select *Menu, Settings* and press *OK*
2. Select *Call settings* press *OK*

Depending on the network operator, you may use the following services:

### *Caller ID:*

Here you can set whether suppress your number or is visible to the called party.

### *Call waiting:*

You will be informed during a conversation, when another call comes in. Press the left menu button to receive the call. The first call is in the other direction, if you do not preclude the call - wish to press the **hook** button.

### *Call forwarding:*

With this network service, you can redirect incoming calls to another specify phone number. Multiple calls can be forwarded at the same time.

### *Call barring:*

With this network service, you can restrict your phone calls.

### *Line switch:*

You should use two numbers on one SIM card (operator service) so you can switch this function between the two phone numbers.

### *Call time reminder:*

It sounds a signal tone during the call because you can determine.

### *Answer mode:*

Choose the way that they want to take a call forward

### *Advanced settings:*

#### *Black list:*

In this menu you can add phone numbers in the *Black list* to block incoming call from these numbers.

#### *Last number redial:*

Activates the automatic redial if the calling user is not available.

## **Network settings**

1 Select *Menu, Settings* and press *OK*

2 Select *Network settings* and press *OK*

Depending on the network operator, you can use the following services:

### *Network selection:*

You can choose between automatic or manual *Network selection chooses*.

## **Security settings**

1. Select *Menu, Settings* and press *OK*

2. Select *Phone settings* and press *OK*

The following functions are available:

### *SIM security*

*PIN lock:* You can turn the SIM lock on/off with knowing the current *PIN-Code* of the *SIM card*; you can change the PIN code for the *SIM card* at any time.

*Change PIN/PIN2:* To change the password, enter the current password and then the new password for: *PIN* or *PIN2*

*Note:* 3x failed entering the correct current *SIM PIN-code* will lock *SIM card*, and will be asked for *PUK number* to

*unlock it. Please contact network operator for your PUK number. The SIM card PIN-code is NOT the phone factory default code.*

### *Phone security:*

*Phone lock:* You can turn the phone lock on/off with knowing the current *PIN-Code* of the *Phone*

*Change password:* To change the password, enter the current password and new password then confirm again.

*Note: The factory default code is: 0000.*

## **Connectivity**

1. Select *Menu, Settings* and press *OK*
2. Select *Connectivity* and press *OK*

The following menu item is available:

### **Bluetooth**

With Bluetooth, you can connect your phone to a compatible Bluetooth device. The following functions are available:

#### *Power:*

Press the left menu button the Bluetooth function on / off switch.

#### *Visible:*

You can set your phone so that other Bluetooth devices can detect it.

*My devices:*

In this menu, you can use a connection already detected Bluetooth devices.

*Search audio device:*

In this menu you can here connect to Bluetooth enabled audio accessory – ensure

*My name:*

Change the Bluetooth device name.

*Advanced:*

*In this menu you can choose: Audio path, and my address see the MAC address of your phone.*

*Search the Bluetooth audio device:*

1. Press to start device to search for other Bluetooth *OK*.
2. You select from the desired device and press *Pairing*.
3. Connect to other Bluetooth devices built on do you need a *Password*. Confirm the password with *OK*.

In *Options* you will find the following functions: *Connect, delete, rename, authorize* and *Delete all*



## Restore factory settings

With this function you can reset the phone settings to the factory-set configuration.

You must enter the password to restore factory settings. The default password is: *0000*.

## Specification

Quad-Band network:	GSM 850/900/1800/1900
Battery	Li-ion 800mAh
Size:	101 x 50.5 x 19.5 mm
Standby time:	<250 hours*
Talk time:	<480 minutes*

\* The battery life depends on SIM card, network, applied settings, use and the environment.

# Troubleshooting

If problems or irregularities occur during the use of the phone, read the information in the following table. If a particular problem cannot be solved by the following information, please contact the customer service via email: [Jethro@jethroshop.com](mailto:Jethro@jethroshop.com)

Phone will not turn on:

- Check whether the battery is correctly in the phone.
- Check the battery status, charge 24 h long the battery or swap it if necessary from (6 months warranty).
- Check that the PIN code has been entered correctly.
- If the PIN-code 3 x false the SIM card is blocked and you need the PUK code (please contact your network operator for your PUK code).

SIM card error:

- Dirt on the contact areas of the SIM card? Clean the contact areas of the SIM card. \*Do not use water.
- SIM card is not properly inserted.

Insert the SIM card properly.

- SIM card does not work or is damaged? Let your network operator replace the SIM card.

Network connection cannot be established:

- Poor reception? Embark on an open place or, if you are in an enclosed space, near the window.
- You are out of range of the cellular network. For information about the network coverage, Please contact your network operator.
- SIM card is not valid. Contact your network provider.

Bad voice quality:

- Bad network connection quality on the part of the operator? Press the stop button and select again. You will possibly need to switch to a network connection or phone line with better quality.
- Poor quality of local telephone line? Press the stop button and select again. You will possibly a network connection or phone line with better quality.

- Try to turn volume louder.

Outgoing calls cannot be done:

- Check the phone number and try again.
- Have you activated the function call barring? If yes please disable all.
- Check whether the SIM card in the network is registered.
- Check that is enough credit on your SIM card.

You cannot receive incoming calls:

- Check whether the SIM card in the network is registered.
- Check if the phone is turned on.
- Check the signal strength
- Have you activated the function call barring? If yes please disable all.

Send SMS not working

- Please check the SMSC number (communication Central) under the following menu item:  
"Messages - settings - SMS settings - SIM - SMSC - address": here the communication Central number of your carrier should be.

Display is black or white:

- Check the battery status, charge the battery or replace it.
- Check the background image.
- Did the phone get wet?

Locked:

- Check that if the PIN code has been entered correctly. If the PIN code has been entered incorrectly 3 times, the SIM card will be blocked and you will need the PUK code to unlock it: (please contact your network operator for your PUK code).

Tip: If particular problems could not be solved by the information, please visit our Web site [www.jethroshop.comn](http://www.jethroshop.comn) and choose the product page of your phone and read the FAQ (frequently asked questions) or contact customer service.

Note: Please do not try to repair the phone yourself.

# Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery only reaches its full capacity, after two or three times complete charge cycles! The battery can be charged several hundred times until eventually discharged. When the operating time (talk and standby time) compared to the normal operating time is much shorter, you should buy a new battery. Unplug the charger from the mains and from the device if it is not required. If the battery is completely discharged, it may take a few minutes until the charge indicator in the display appears, or you can make calls.
- Use only batteries and Chargers approved by the phone manufacturer. If you do not use the charger, pull the mains plug out of the socket. Leave the battery no longer than a week in the charger, since an excessive charge may shorten its lifetime.
- A fully charged battery with the time

- discharge itself when not in use.
- Extreme temperatures have a negative influence on the performance of your battery.
- Use the battery only for its intended purpose. Never use damaged Chargers or batteries.
- Do not short-circuit the battery. An accidental short-circuit can occur by a metallic object of the plus and minus pole of the battery is connected directly together. Short-circuiting the terminals may damage the battery or the connecting object.
- Throwing batteries in a fire will cause danger of explosion! Batteries may also explode if they are damaged. Dead batteries must be disposed properly.
- Do not attempt to open the batteries or to destroy. Liquid leaking from a battery, you make sure the battery fluid does not contact your skin or in the eyes. If there was a contact, clean the skin or eyes immediately with water, or consult a doctor
- Dispose of batteries according to the regulatory requirements (E.g. with regard to recycling). Never dispose

- of batteries in the household waste.
- Keep temperatures between 15 ° C and 25 ° C. The phone with a cold or warm battery not may work temporarily, even when the battery is fully charged. The performance is varying especially at temperatures below the freezing point.

## Phone

---

If you follow the suggestions below, you can prevent any warranty obligations, and you can enjoy your product for many years.

- Please use only original accessories or accessories that are approved by the mobile phone manufacturer. The use of accessories without permission can lead to poor performance, damage the phone or harm even your body and interfere with appropriate local telecommunications equipment.
- Please switch off your mobile phone before you clean it. Use for this



purpose damp or antistatic cloth, no chemicals or cleaning lotions, which can damage the phone.

- Because the mobile phone capable of generating electromagnetic fields, you should put never found near magnetic objects, such as a computer or a hard disk.
- Interference is generated using the mobile phone in the vicinity of certain electronic devices such as TV, telephone, radio and computer.
- Never leave your mobile phone in the Sun or in an environment with strong radiation because high temperatures considerably shorten the life of electronic components.
- Keep the phone dry, because liquids may damage the circuit.
- Never somewhere about the phone with strong force and do not drop it. Violent actions of this sort can damage the circuit.
- Please close any incompatible devices on the phone.
- Do not attempt disassemble the phone or its battery.
- Keep the mobile phone with a flammable or explosive material.

- Never try to charge the phone, without previously having inserted the battery.
- Do not paint your phone. By the color, moving parts may stick and prevent the proper operation.
- To disconnect the unit from the mains, pull the power cord from the mains socket. Therefore, you must position the device so that an unhindered access to the mains socket is always ensured; so that you can immediately remove the mains plug in an emergency situation. To prevent fire hazard, disconnect always unplug after each use of the device from the AC outlet.

In the same way, all instructions apply to phone, battery, charger, and all accessories. If any of these items not working properly, take it to your dealer. The staff will assist you and repair or replace the unit if necessary.

# Safety instructions

Read these simple guidelines. Failure to follow of these rules can have dangerous consequences or violate regulations.



**Do Not switch on the phone when the use of the mobile phones is forbidden.**

It may come to errors or could cause hazard.



**Traffic safety**

Never use the phone in your hand while driving



**Switch off in aircraft**

Mobile phones can cause interference in aircraft.



**Switch off in hospitals**

Follow all rules and regulations. Switch off the phone near medical equipment.



### **Turn off at gas stations**

In the vicinity of petrol stations and other places with explosive goods, the mobile phone is switch off.



### **Interference**

Wireless phone can cause errors, which could affect performance.

### **Road safety:**

Never use a phone in your hand while driving a vehicle. Always secure the phone in its holder; place the phone on the passenger seat or in a place where it can break loose in a collision or sudden stop. Remember: road safety always has priority!

### **Operating environment:**

Don't forget to observe the special regulations in an area, and always turn off the phone when the use of mobile phones is prohibited

Or if the phone causes interference or dangerous situations can arise.

Always keep the unit in its normal operating positions.

Parts of the phone are magnetic. Metal parts may be attracted to the phone, and persons with hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder as metal parts may be attracted to the listener. Bring no credit cards or other magnetic data carriers in the vicinity of the phone because it contained data this can be deleted.

### **Electronic devices:**

The most modern electronic equipment is shielded from RF (radio frequency) signals. However, it can happen that certain electronic devices against the RF signals from your mobile phone are shielded.

### **Hearing aids:**

Some digital mobile phones can cause errors with some hearing aids. If such problems you can contact the service provider.

### **Other medical devices:**

Operation of radio transmitting equipment, including cellular phones, can interfere with the function of inadequately

shielded medical devices under certain circumstances. If you need information about the sufficient shielded against external RF energy or have any questions, consult a physician or the manufacturer of the medical device. Switch off your phone in health care facilities when you are prompted by signs, posters or other written arrangements. Hospitals or health care facilities, devices be used under circumstances that could be sensitive to external RF energy.

### **Labelled sites:**

Labeled sites:

Turn off wherever your telephone, where appropriate requests are suspended.

### **Hazardous locations:**

Switch off your phone in hazardous locations, and act according to the directions and instructions. In such places, a spark can trigger an explosion or cause a fire, where you can get hurt or come even to death. We recommend the users turn off the phone at service stations. Users are reminded the need to observe restrictions on the use of radio equipment

in fuel depots (storage and distribution areas), chemical plants or where blasting. Places where explosion hazard exists are often but not always clearly marked. This includes, for example, the below deck on ships; Environments of pipes and tanks in which chemicals are; Vehicles that are powered by liquefied petroleum gas (such as propane or butane); Places where chemicals or particles, such as grain, dust or metal powders, are located in the air; as well as any other place, where usually are advised to turn off your vehicle engine.

### **Vehicles:**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (E.g. electronic fuel injection systems, electronic ABS systems (anti-lock-systems), electronic speed control systems, air bag systems) affect.

For your vehicle information, please contact your vehicle manufacturer or its representative. You should also ask for the manufacturers of devices that were subsequently fitted in your vehicle.

# Information

## Information about the certification (FCC):

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no



guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

### **Limitation of liability:**

- JETHRO declines all responsibility for injury-related, indirect, special, resulting from an accident or unavoidable, as the predictable viewed or not viewed can be.
- We reject all responsibility and liability for losses caused by natural disasters (such as earthquake, flood, etc.) or other incident or accident (including

deliberate or accidental misuse by the manufacturer in the framework of these accidents or other unusual circumstances) that lie outside of our liability.

## More information

If you have any questions or want to get more information about one of our devices in experience, please check our Web site [www.jethroshop.com](http://www.jethroshop.com) or contact us at Email: [Jethro@jethroshop.com](mailto:Jethro@jethroshop.com)

## Contact us :

### Jethro Trading Ltd.

4152 Meridian Street  
STE105 #602

Bellingham, WA  
United States

Toll Free : 1-888-509-6199

Company website :

[www.jethroshop.com](http://www.jethroshop.com)

## FCC ID: 2AAWJSC213

Tested to comply  
with FCC certification



V.3.0