

# AUTOID™ 7 Series



**Seuic**



# Catalogue



## ➤ Basic function

- Appearance introduction
- Input method
- Charging mode
- Use of application center

## ➤ Data collection

- 1D Scanner
- 2D Scanner

## ➤ Wireless communication

- WIFI
- IR
- Bluetooth



400-777-0876



[www.seuic.com](http://www.seuic.com)



# Basic function



400-777-0876

 


[www.seuic.com](http://www.seuic.com)



# Appearance function



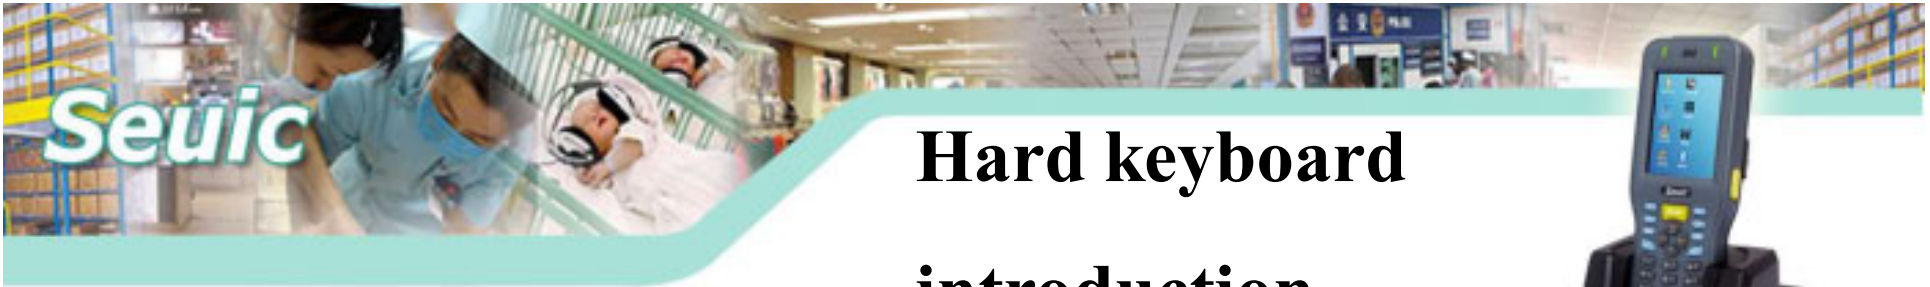


# Hard keyboard introduction



AUTOID™7 400-777-0876

 
AUTOID™7 [www.seuic.com](http://www.seuic.com)

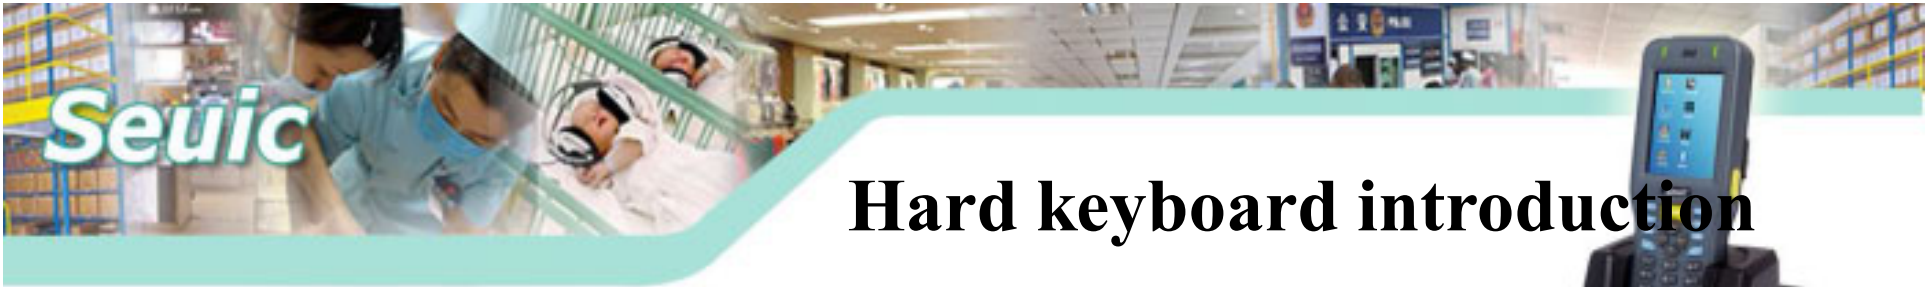

# Hard keyboard introduction



 1. **Restart** :data in RAM is lost, but the install won't be lost

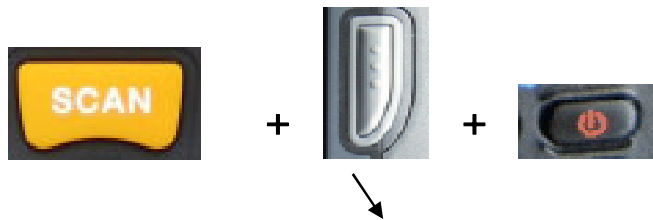

Any one of the side keys

Press the three keys together and then release. You can restart the machine.


2. Recover the device to default setting:all the programs and data will be cleared except the data on user's memory space.

Refer to the guidebook of default setting for details.



### 3. Use of orange key

 
The key is an input method switch key, press the orange function key, enter the text input

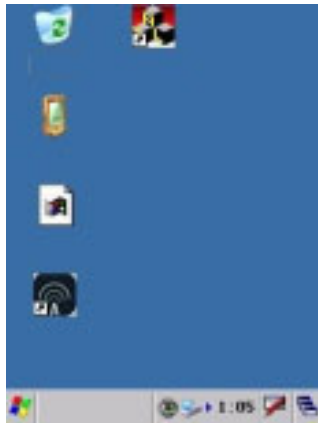


Before pressing the orange key



 After pressing the key

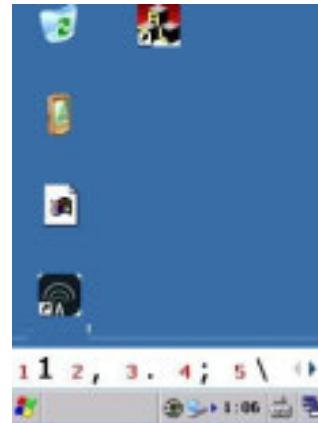

After pressing 1 key

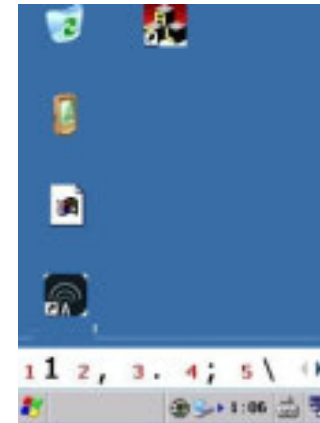 

After pressing 2 key




# Hard keyboard


 
## 3. Blue function key usage

The key function is Fn, press blue key and then press 1, run F1.  
Use the arrow keys with the left and right key to adjust the volume up and down keys to adjust the screen

Fn setting : Click into Set-System, click

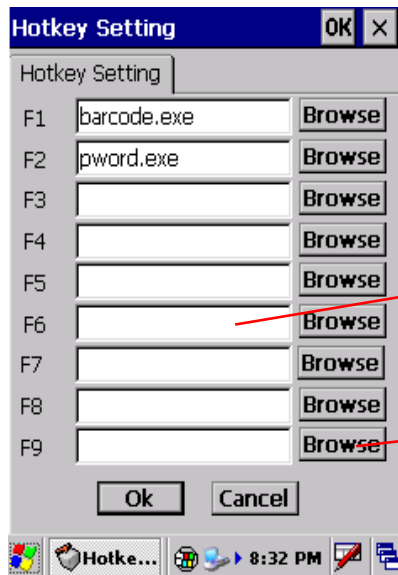


Pressing F1 will execute barcode

Blank means no hotkey

 Scanning can set the hotkey



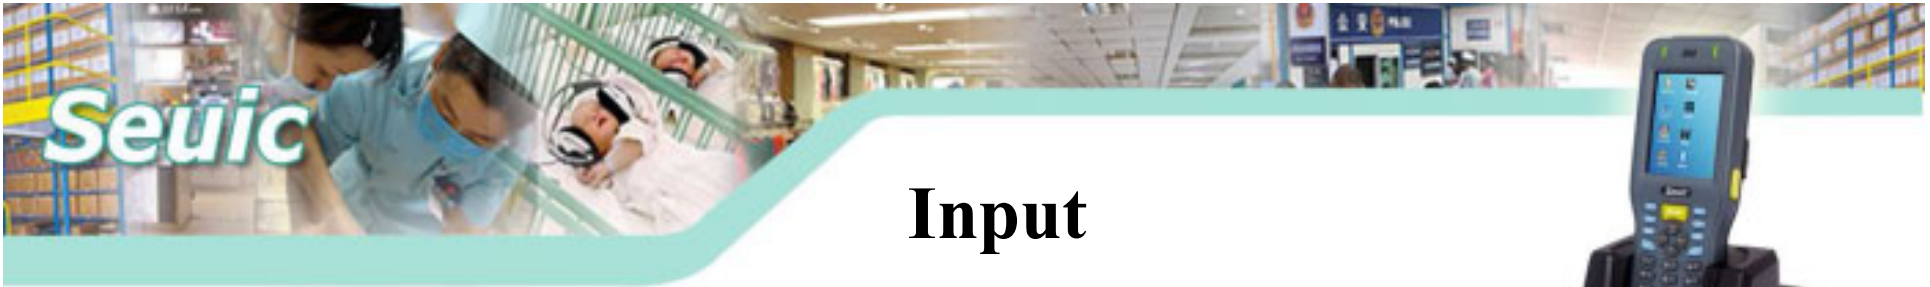


# Input



## 1、 Input

 
There are three input methods, such as keyboard\soft keyboard\hard keyboard

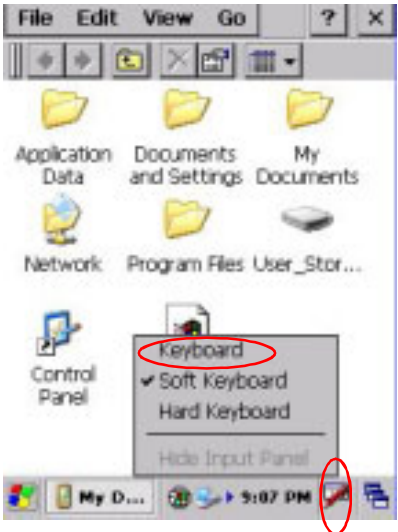



# Battery indicator and charging
 
## 1、Indicator



Full



 
Not full, double click the icon to display the power



Low power



Charging

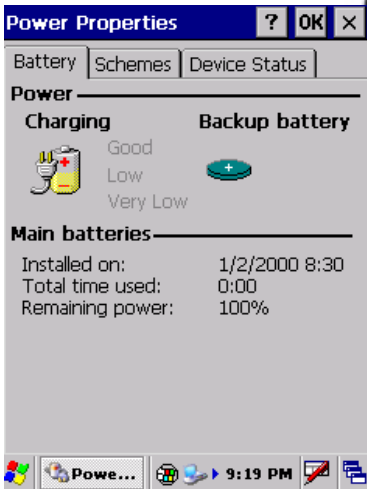

## 2、Charging methods

End plug charging charging time: 2-3h

Base charging charging time: 2-3h

Portable charger charging time: 4-5h





### 3、Cradle introduction

When the PDA is being charged, PDA's red light means charging, green light means full.

When the battery is being charged in cradle compartment, the middle light will turn the red to green light.

Attention:

- 1.The three light-emitting diodes in cradle from left to right are power entry、charging indicator、USB data connection indicator.
- 2.When the battery will charge fully, the charging LED will turn out for a short time.



RS232

USB1.1

Both PDA and battery charging

Optional BT function



# AppCenter



Open the AppCenter ( path: Start-Programs- AppCenter )

You can set the AppCenter. Default password is " seuic "

Setting Help

Admin Setting

Exit

Admin Login

Input Password:

\*\*\*\*\*

Input Panel

1 2 3 4 5 6 7 8 9 0

q w e r t y u i o p

Esc a s d f g h j k l

Tab Shift z x c v b n m ←

Ctrl alt Space . ← ↑

Setting OK X

System Program Option User Program

Internet Explorer Inbox Camera

UHF HF(m1) HF(commc

Barcode 2Dscan SetContr

Setting OK X

System Program Option User Program

Modify Password

Old: [ ]

New: [ ]

Confirm: [ ]

Hide Taskbar  Start Up

Show Power  Show Timer

Show Wifi  Show GPRS

Bitmap size:width<=140 Height<=22

[ ] Browse Del

Setting OK X

System Program Option User Program

Detail Info

Name: [ ]

Path: [ ]

Start Up  Desk Show

Add

Delete

Enter into management setting

Display the opened software

Enter the password

Software authority management

Modify the password

Set boot from the start

AUTOID™7 887

400-777-0876

AUTOID™7 887

www.seuic.com



# Data capture



400-777-0876



 
[www.seuic.com](http://www.seuic.com)




# 1D Scanner



Settings



Click this will close the 1D scanner

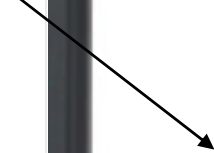 

Hide the 1D scanner






# 1D Scanner



 Setting barcode type  
**Suggest not modify**

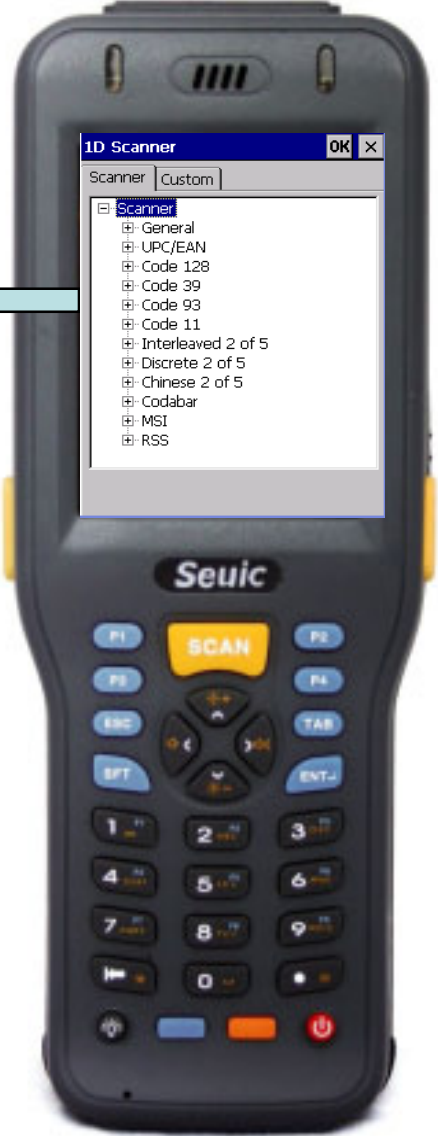

**TOD™7**   
10-777-0876


**AUTOID™7**   
[www.seuic.com](http://www.seuic.com)



# 1D Scanner

 Set remind mode

Set barcode show mode

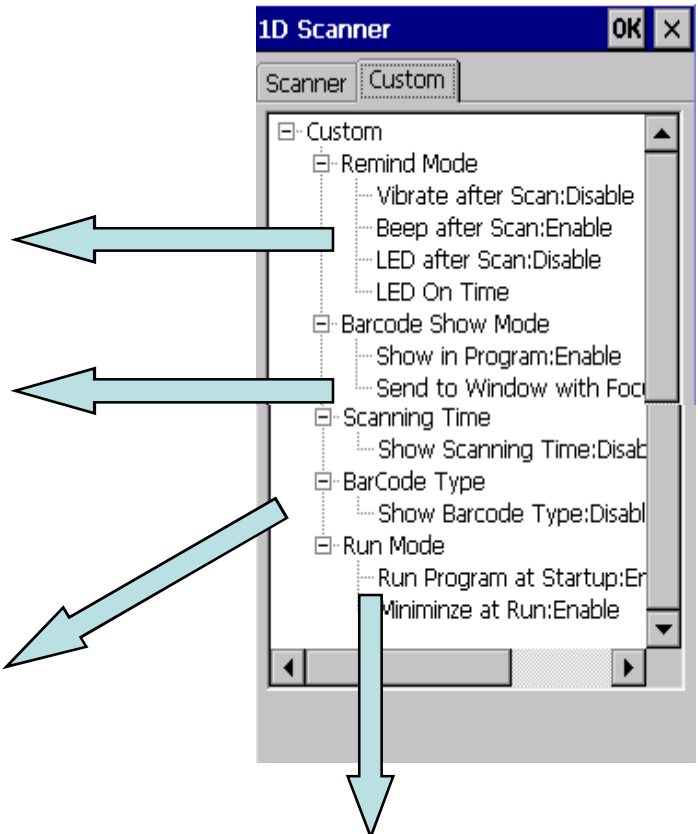

Set run program at startup







 
1D Scanner (Red light)



400-777-0876




[www.seuic.com](http://www.seuic.com)

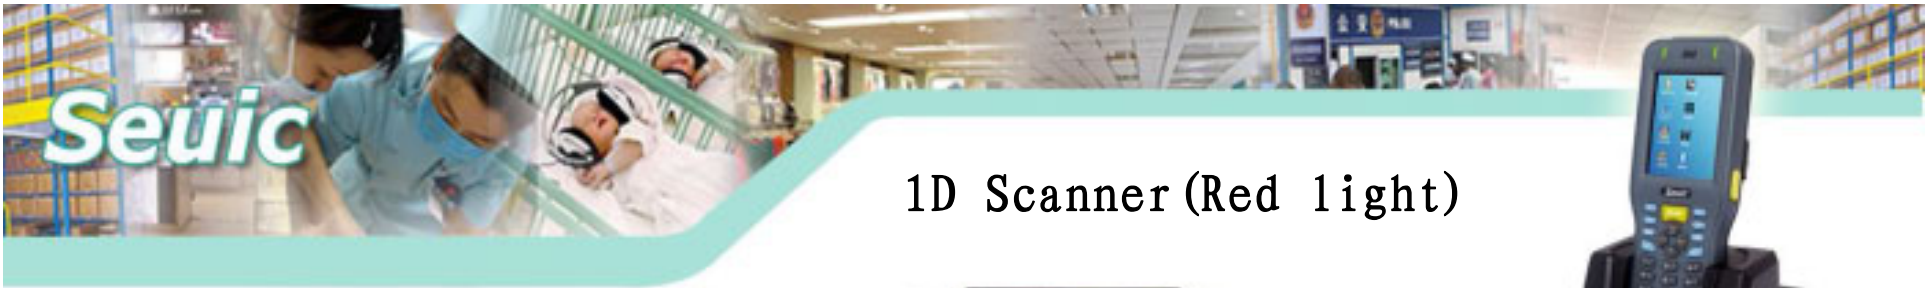


# 1D Scanner (Red light)



 Settings

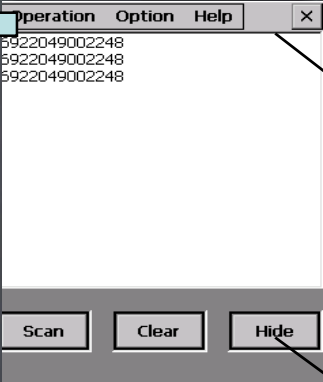


Click this will close the 1D scanner

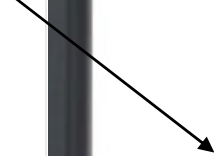 

Hide the 1D scanner



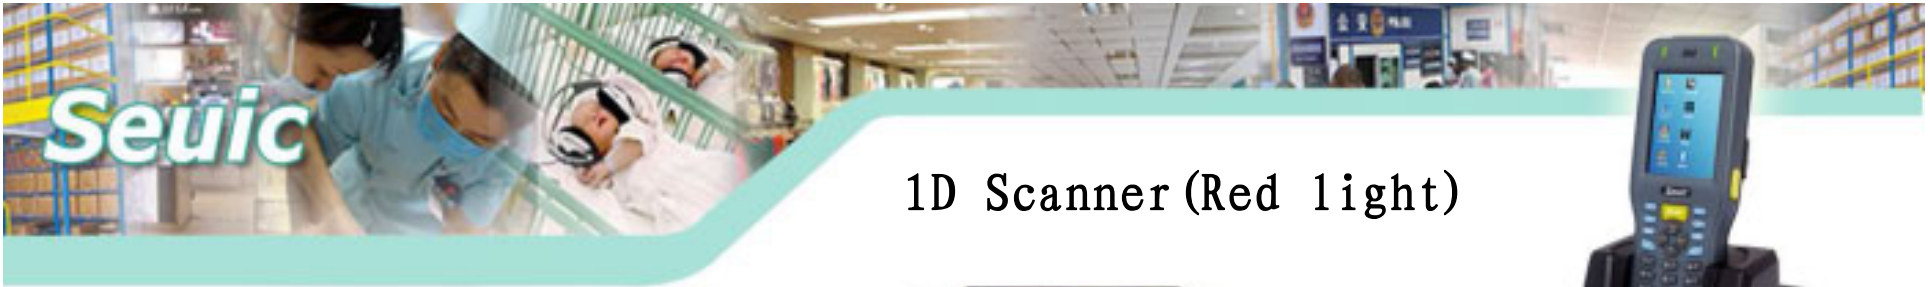 

# 1D Scanner (Red light)



Setting barcode type  
**Suggest not modify**

 


Restore scanner  
factory Settings



**T01D™7 系列**  
10-777-0876



**AUTOID™7 系列**  
[www.seuic.com](http://www.seuic.com)

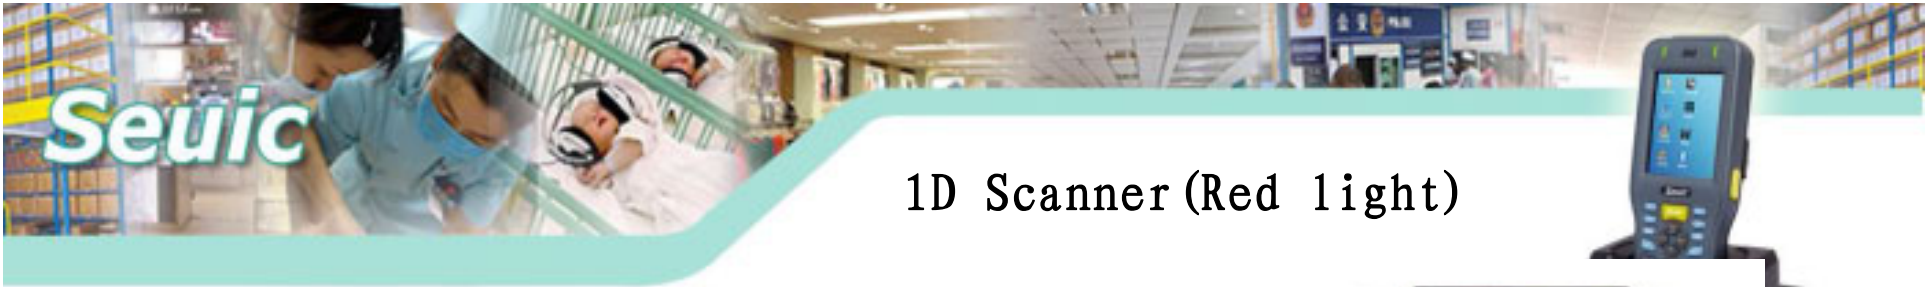

# 1D Scanner (Red light)

Set remind mode

  Set barcode show mode

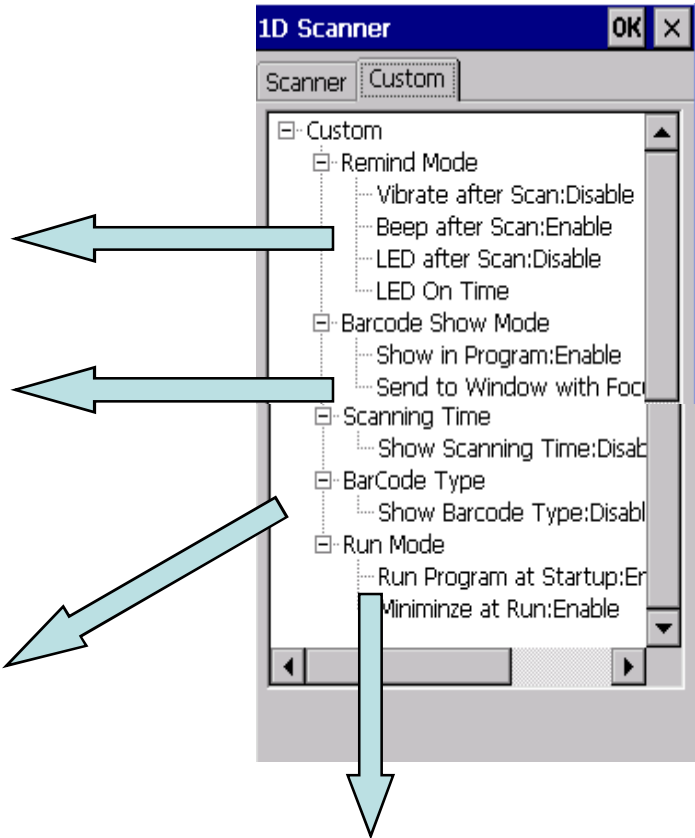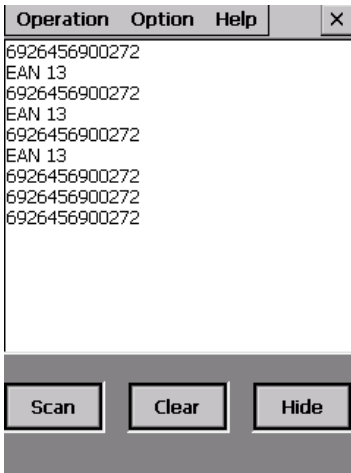

Set run program at startup





## 2D Scanner

AUTOID™7 **RFID**   
400-777-0876

AUTOID™7 **RFID**   
[www.seuic.com](http://www.seuic.com)



# 2D Scanner



Enter into "AppCenter", click  
Start the 2D scanner





# 2D Scanner



Clean the barcode information in the screen



Image capture function can capture black and white pictures

Recover to default settings

Save the modified settings  
Attention: each time modify Parameters, click saving

Hide the 2D software

  Exit

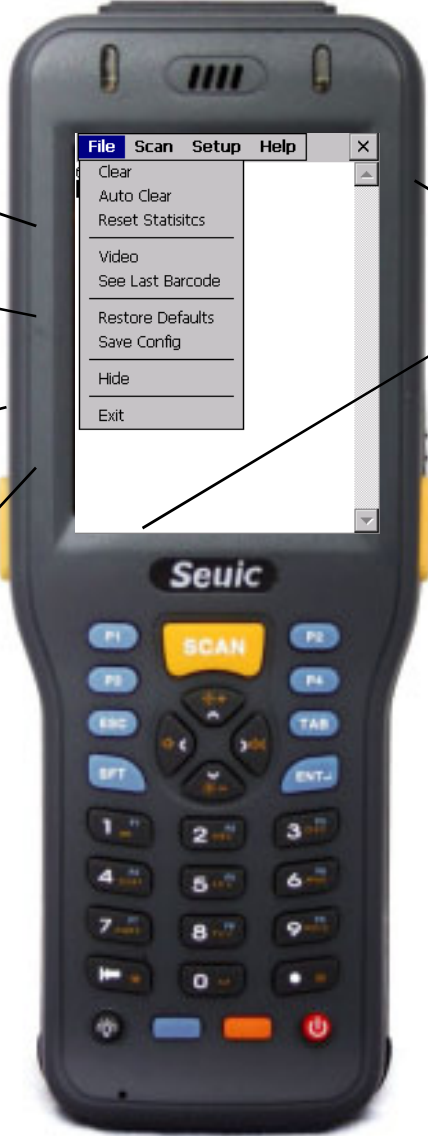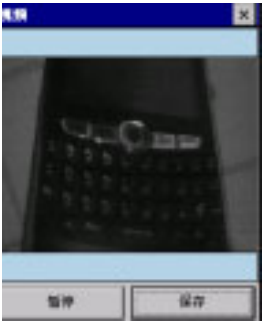



# 2D Scanner



Set automatic and auto scan delay



Set the time interval



If you want to output the code to txt or excel, you need to choose Clipboard or Simulate Key





# 2D Scanner

- 1、 Set scanner light general select Both aimer And LED
- 2、 If code is white, background is black. Please select Enable Colour Reverse
- 3、 Scan mode : general " standard ".

Only Aimer(Green)  
 Only LED(Red)  
 Neither Aimer Nor LED  
 Both Aimer And LED

 
- 4、 Set the scan prompt
- 5、 Display code information

Show CodeType  
 Show Time  
 View Statistics


```

692645690027
692645690027
=====
Barcode type: EAN-13 (including Bookland EAN)
=====
Scan date: 2010-12-16 10:58:31
=====
Scan statistics
Barcode length in bytes: 12
Barcode number in total: 2
The scan time: 589ms
The average scan time: 512ms
Maximum scan time: 589ms
Minimum scan time: 435ms
  
```

- Cancel all display information
- Select all display information
- Reset Statistics can clear it

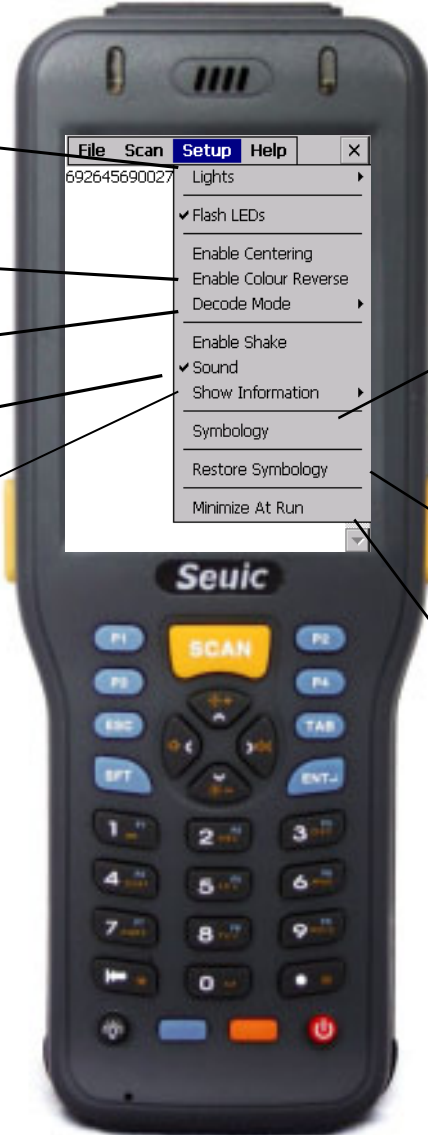

 File Scan Setup Help X  
 692645690027  
 Lights  
 Flash LEDs  
 Enable Centering  
 Enable Colour Reverse  
 Decode Mode  
 Enable Shake  
 Sound  
 Show Information  
 Symbology  
 Restore Symbology  
 Minimize At Run

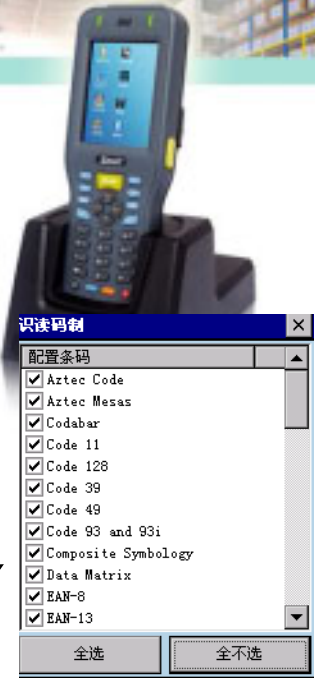

- 6、 Barcode type open or close
- 7、 Barcode configuration recovery
- 8、 Hide the 2D software



# Wireless communication



400-777-0876



 
[www.seuic.com](http://www.seuic.com)



# Wireless technical parameters

## WLAN-----WiFi

- standard: IEEE802.11b/g/n
- Frequency range: 2.4/2.5GHz
- safety: WEP、TKIP、LEAP、PEAP、EAP-TLS、WPA、WPA2、AES

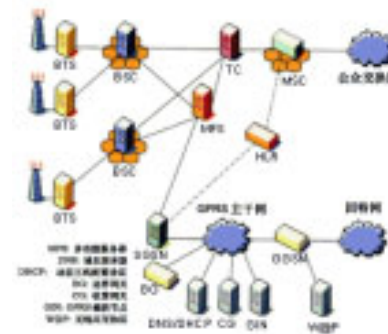

## WPAN-----Bluetooth V2.0+EDR

- Data rate: 3Mbps
- frequency: 2.4GHz
- standard: IEEE802.15.1





**WLAN ---- WIFI**

**AUTOID™7 *RFID***   
400-777-0876

**AUTOID™7 *RFID***   
[www.seuic.com](http://www.seuic.com)



## WiFi

1、 Open hardware: Enter into “wireless manager”, if display “Disable”, means hardware is open.If display “Enable”, click it to open the hardware.

**Attention:** You don't need to do the operation next time you start the PDA.





## WiFi

2、 Set IP address: If you need to set fixed IP, enter into “Control Panel”, click “Network and Dial-up connections”, click “WIFI”.

**Attention:** You don't need to do the operation next time you start the PDA.



 


## WiFi



3. Connect a network: Double click the red circle, click “Wireless information” .

Double click the network you want to Connect, and set the net parameters

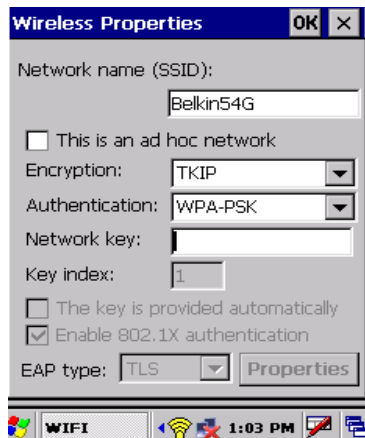

Connect a network ok






## WiFi



 4、Wi-Fi Manager : click red circle icon



,start the Wifi manager



Display the current state and parameters

WiFi icon means:

- No WiFi module.
- WiFi module disable
- No AP signal around
- There is signal around, but not connection
- PDA has connected with AP






## WiFi

 5、Ping test: click“ping” , click “Start” will do the Ping operation.

The more data lost,the worse performance

Attention: Some gateway and AP can't allow to ping operation.

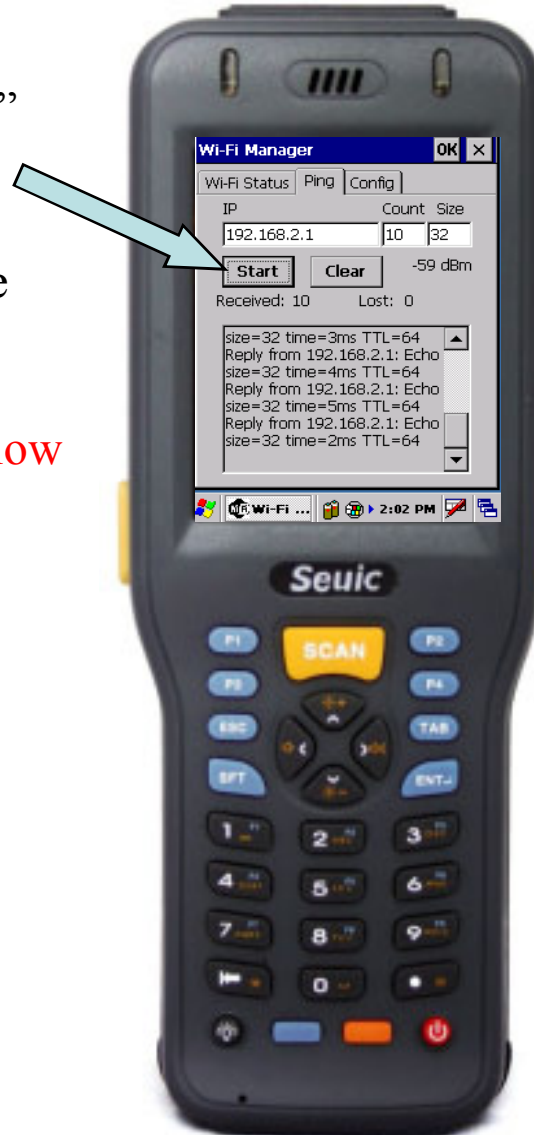

single strength





## WiFi

### 6. WIFI Config : Set Power Save/Roam Trigger/Roam Delta/Roam Period


Power Save: Set power save mode, the more power saving, the worse performance  
Roam Trigger: Setting roaming switching values

 
 




## Infrared (power not control in old version)



- 1、 Click “-“Run”, input “cechat”, click OK
- 2、 Serial Port select COM1, click “file” -“settings”, set the communication protocol. The Baud Rate: 1200 or 2400. The port communication protocol must be the same as the IR device settings. As the below figure

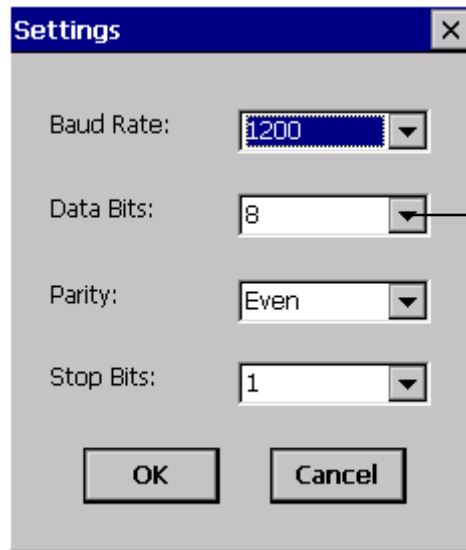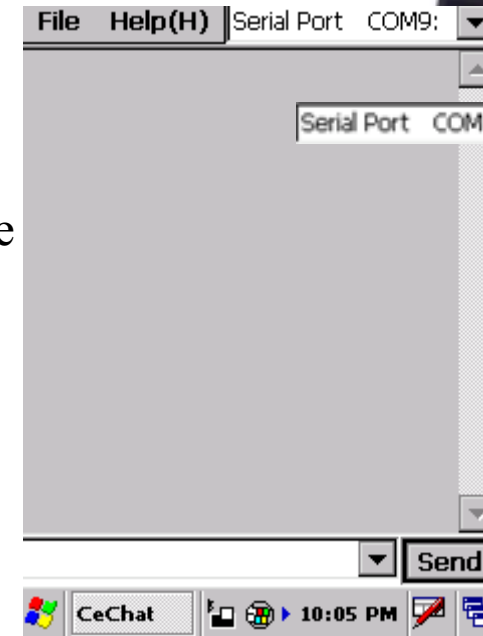

→ Set parameters as you need



Infrared(power control in new version)

**The latest infrared machine is controlled by power in receiving data. So we need two infrared machines to test infrared communication ,which need users to write a demo programe.**

 
The development method of infrared is as follows  
on():open the power control  
off():close the power control  
SetRecvState():set infrared to receive  
SetSendState():set infrared to send



# Bluetooth function



1、Open hardware: Enter into “Wireless Manager”, if display “Disable”, means hardware is open.If display “Enable”, click it to open the hardware.

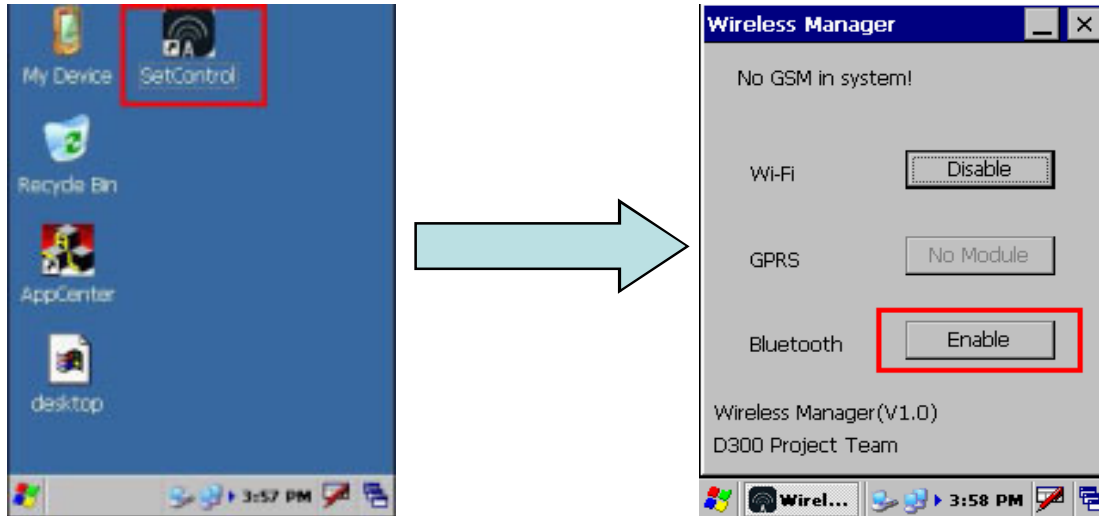

**Attention:** You don't need to do the operation next time you start the PDA.



## Bluetooth function

2、 Enter into Windows file, start the PrintUI software, just as the right Figure. **Attention: just start one PrintUI**

 




## Bluetooth function

### 3. Connect other bluetooth device

Click “Inquiry”, other bluetooth devices around will display in the text box. Select one bluetooth device, click OK

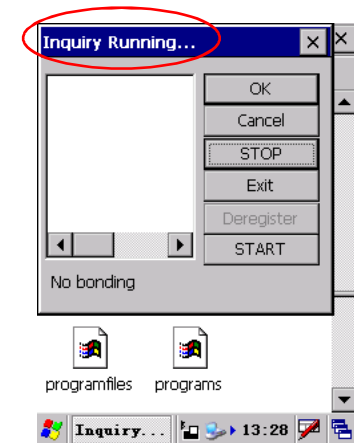




# Bluetooth function

## 4、 Connect bluetooth device

 You need to input the Select Channel number, as the right figure

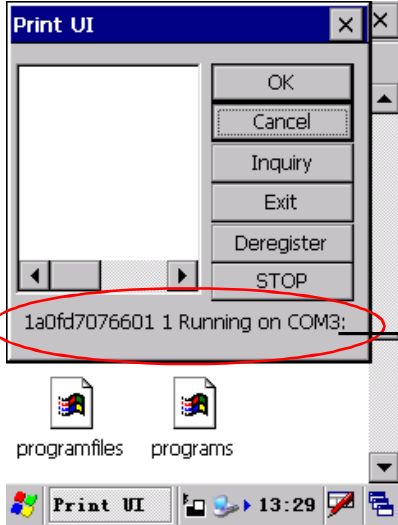

Connect successful







## Bluetooth function

 
5、 send and receive data:

 
You can send and receive data by using cechat.

You should copy the cechat software into PDA, then start cechat. Serial Port select COM3. Then you can send and receive data.

Or: by below pathway:

Start-run input "cechat", then

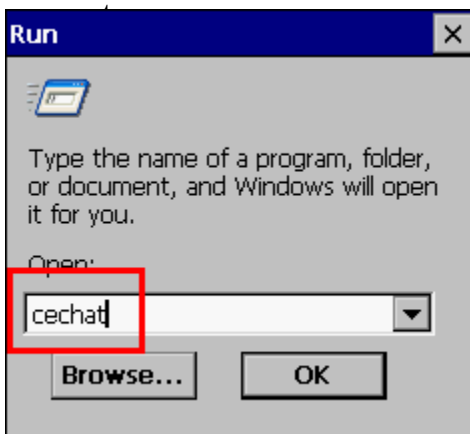

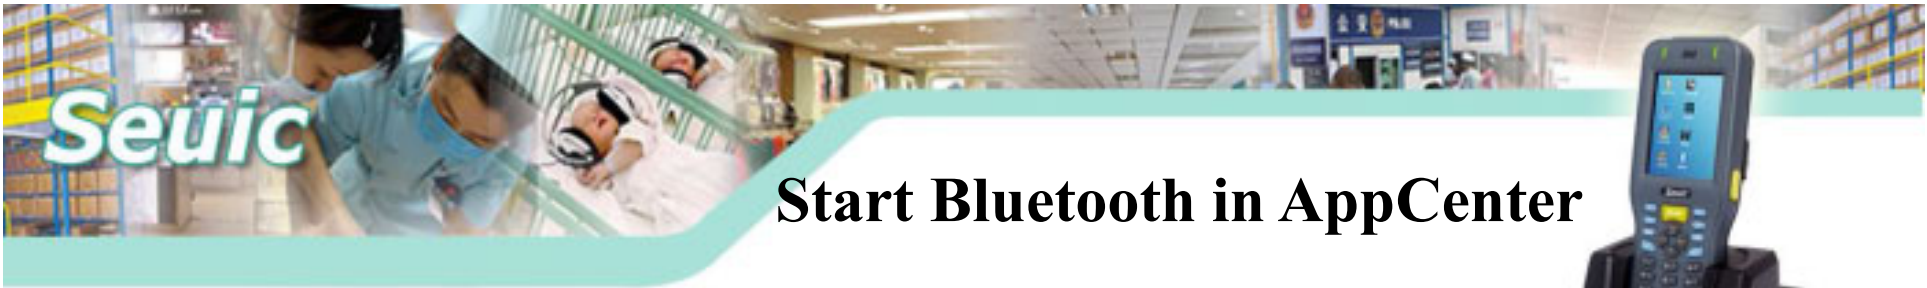

## Start Bluetooth in AppCenter

The sequence of screenshots illustrates the following steps:

- Step 1:** The 'Setting' application is open to the 'User Program' tab. The 'Add' button is highlighted with a red box.
- Step 2:** A file explorer window is open to the '\Windows' directory. The file 'printui.exe' is selected and highlighted with a red box. The 'OK' button in the file explorer is also highlighted with a red box.
- Step 3:** The 'Detail Info' screen for 'printui.exe' is shown. The 'Name' field contains 'printui' and the 'Path' field contains '\\Windows\\printui.exe'. The 'Desk Show' checkbox is checked and highlighted with a red box.
- Step 4:** The 'printui' program is listed in the 'User Program' tab of the 'Setting' application, highlighted with a red box.

At the bottom of the page, there is a footer with the text 'AppCenter' and a status bar showing '18:14'. Below this, there are two teal buttons: '400-777-0876' and 'www.seuic.com'.

1. Enter into application management, choose the third party program management.
2. Click “add” button.
3. Look for “printui” in windows files, click ok.
4. Choose “show on the desk”, click ok.



#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.





*Thank you!*

**Tel: 86-25-52261298**

**Fax: 86-25-52261298-8858**

**URL: [www.seuic.com](http://www.seuic.com)**

**Hotline: 400-777-0876**

**Service mailbox: [AUTOID6@seuic.com](mailto:AUTOID6@seuic.com)**

**Postal: 210006**

**Address: No 23. Wenzhu Road. Yuhuatai  
District. Nanjing. China(210012)**

**Technical support mail: [zoujianjun@seuic.com](mailto:zoujianjun@seuic.com)**



400-777-0876



[www.seuic.com](http://www.seuic.com)