

JME 3127R user guide

1、 Feature

1. 1. Transmission mode: RF
1. 2. Frequency: 2.4G
1. 3. RFchannel quantity: 1
1. 4. Power: 2pcs *7# batteries
1. 5. Modulate mode: GFSK
1. 6. Effective distance: 5m
1. 7. Quantity of connection ID: 256
1. 8. Quantity of button: 22

2、 Use guide

2. 1. First, confirm the receiver has been connected to the computer.
2. 2. Put the batteries into the batteries casket, lock the cover.
2. 3. Need to check and match the code for the first time of usage only, Please match the code as below:
 - A. Press the button on the receiver.
 - B. Press the ID button on the controller within 10 seconds (the ID button is in the middle of the bottom row of the buttons)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.